



CAMARO

CAUTION-ELECTRIC TOY:
 Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CAUTION-SUPERVISION REQUIRED-ELECTRIC TOY-UNPLUG WHEN NOT IN USE.
 INPUT: 120V AC, 60HZ, 10W
 OUTPUT: 12V DC, 0.35A

ATTENTION PARENTS:
 IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

OPERATING INSTRUCTIONS:



BATTERY PACK CARE / CAUTIONS:

1. If battery pack and/or connectors are wet, thoroughly dry before charging.
2. Unplug the battery pack if it is not going to be used for several days.
3. Do not charge battery pack that is hot, wet or shows signs of leakage or corrosion.
4. Do not expose to fire, as explosion may result.
5. Do not disassemble the battery pack.

BATTERY INSTALLATION: THE RECHARGEABLE NI-MH BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 2 HOURS PRIOR TO USE.

1. Plug the wall pack battery charger into wall outlet. (See Diagram 1)
2. Click the battery pack into the charger. Make certain the battery pack is secure in charger.
3. To disconnect, push the button of the charger (See Diagram 1) and simultaneously slide battery pack out.
4. Allow about 2 hours full-charge. The green LED indicator will be flashing continuously when charging is in process.
5. The charging is complete when the green LED indicator stops flashing and stays on. Then unplug the charger and pull apart the battery connectors.
6. After charging for about 2 hours, the battery will be warm. This condition is normal for fully charged batteries.


7. If the speed of the car slows down suddenly, it is time to recharge.
8. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the battery life.

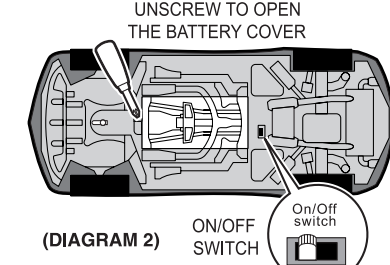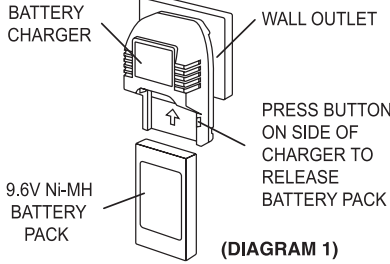

VEHICLE:


- A. Turn over the vehicle and push the ON/OFF to "OFF" position. (See Diagram 2)
- B. Open the battery cover. (See Diagram 3)

- C. Insert the 9.6V Ni-MH battery pack into battery compartment. (See Diagram 3)
- D. Replace the battery cover.

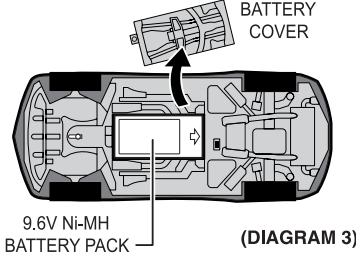

TRANSMITTER:

- A. Unscrew the battery cover at the bottom of the transmitter and place 2 x "AA" batteries inside following the engraved signs (See Diagram 4).
- B. Replace the battery cover.

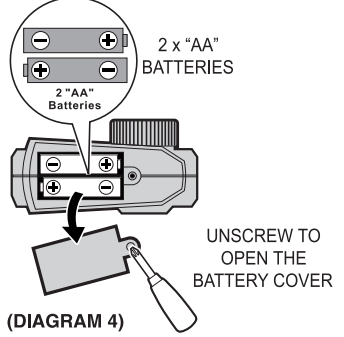


VEHICLE OPERATION:


- A. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram 2)

FORWARD RUNNING (TURBO POWER BOOST)

- B. Pull the trigger backward for forward running. (See Diagram 5)
- C. Pull the trigger to half way for normal speed. (See Diagram 6)
- D. Pull the trigger to full extension for turbo speed. (See Diagram 7) Release the trigger half way to resume normal speed.

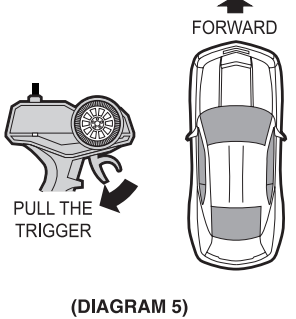


(DIAGRAM 6)

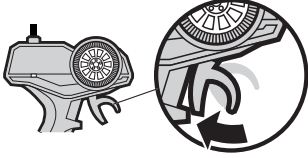


(DIAGRAM 7)

FRONT WHEELS STEERING ADJUSTMENT:


- F. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 9)
- G. If the vehicle runs toward left, turn Steering Alignment Lever towards "R".
- H. If the vehicle runs toward right, turn Steering Alignment Lever towards "L".

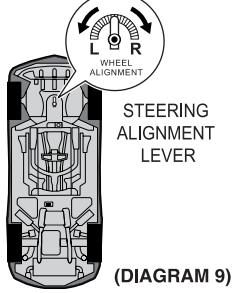

(DIAGRAM 9)

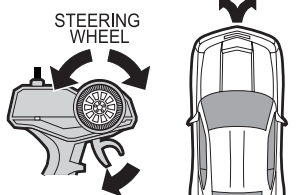


(DIAGRAM 10)

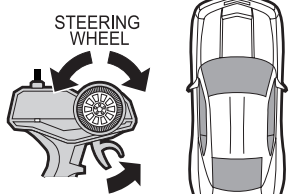

(DIAGRAM 11)

STOP OPERATION:

- K. Release the trigger to stop. (See Diagram 12).

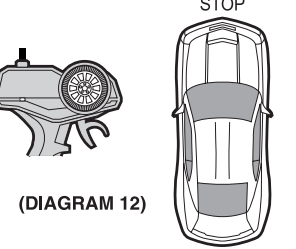


(DIAGRAM 12)

STEERING OPERATION:

- I. To make left or right-hand turns while driving forward, turn the steering wheel to left or right while pulling the trigger of the transmitter back (towards you). (See Diagram 10)
- J. To make left or right-hand turns while driving in reverse, turn the steering wheel to left or right while pushing the trigger of the transmitter forward (away from you). (See Diagram 11)

DRIVING IN REVERSE:

- E. Push the trigger of the transmitter forward (away from you). (See Diagram 8)

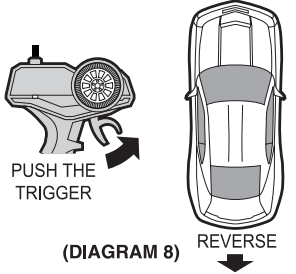

(DIAGRAM 8)

PERFORMANCE TIPS FOR VEHICLE

- Do not drive car on grass, sand or carpet.
- Do not drive car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when they are not in use.

CAUTION-ELECTRIC TOY:
 Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CAUTION- SUPERVISION REQUIRED-ELECTRIC TOY-UNPLUG WHEN NOT IN USE.

INPUT: 120V AC, 60HZ, 10W
 OUTPUT: 12V DC, 0.35A

www.toysrus.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT
 If you experience any problems or issues with this item, do not take it back to the store where you purchased. Please email service@scientific.com.hk and we will be happy to assist you in resolving any issues you may have. We thank you for your purchase.

6+ **Toysrus**
 CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

INCLUDED
 9.6V x1
 AA x 2

CAUTION:
 Remove all tags, twist-ties and plastic loops before giving toy to child.

INPUT: 120V AC, 60HZ, 10W
 OUTPUT: 12V DC, 0.35A

Contents and colors may vary.
 Do not mix old and new batteries.
 Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

WCC IS A MARK OF (EST UNE MARQUE DE/ ES UNA MARCA DE) GEOFFREY, LLC, A SUBSIDIARY OF (UNE FILIALE DE/UNA SUBSIDIARIA DE) TOYS'R'US, INC. © 2013 GEOFFREY, LLC
 MADE IN CHINA (FABRIQUÉE EN CHINE/FABRICADO EN CHINA)
 DISTRIBUTED IN THE UNITED STATES BY (DISTRIBUÉE AUX ÉTATS-UNIS PAR/DISTRIBUIDO EN LOS ESTADOS UNIDOS POR) TOYS'R'US, INC., WAYNE, NJ 07470
 IMPORTED BY (IMPORTÉ PAR/IMPORTADO EM) TOYS'R'US (CANADA) LTD. (LTÉE), 2777 LANGSTAFF ROAD, CONCORD, ON L4K 4M5
 DISTRIBUTED IN AUSTRALIA BY (DISTRIBUÉE EN AUSTRALIE PAR/ DISTRIBUIDO EN AUSTRALIA POR) TOYS'R'US (AUSTRALIA (AUSTRALIE)) PTY LTD.(LTÉE), REGENTS PARK NSW 2143
 www.toysrus.com