

OPERATING INSTRUCTION

ATTENTION PARENTS:

1. IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIAL HAZARDOUS PARTS BE REPAIRED OR REPLACED.
2. CHILDREN SHOULD BE MADE AWARE OF POTENTIAL DANGER ASSOCIATED WITH PLAYING NEAR WATER.

CONTENTS:

This package contains:

- 1 boat
- 1 plastic tube for the antenna cable
- 1 transmitter
- 1 Battery Clip to insert 5 X "AA" batteries

BATTERY CARE/CAUTIONS:

(FOR MAXIMUM PERFORMANCE, USE ALKALINE BATTERIES)

1. Remember to take out all batteries from the boat and transmitter after playing.
2. Do not mix old and new batteries.
3. Do not recharge non-rechargeable batteries.
4. Do not use the 5 x "AA" battery clip with a charger.
5. Do not mix alkaline, standard (carbon-zinc), or rechargeable (NiCd or NiMH) batteries.

BATTERY INSTALLATION:

BOAT:

1. Locate the latch at the back of the boat. Release the latch and lift up the boat top to reveal the battery compartment. (see Diagram 1)
2. Release the 2 latches on either side of the battery compartment to unlock the cover and remove it. (see Diagram 2)
3. Insert 5 AA batteries into the battery clip according to polarity (+) or (-). (see Diagram 3)
4. Insert the battery clip loaded with batteries following the "Arrow" sign. Make sure that the polarity (+) or (-) is correct and that the metal contacts on the side of the battery clip touch the metal contacts in the battery compartment. (see Diagram 4)
5. Replace the battery cover and fasten the latches securely.
6. Replace the boat top and fasten the rear latch securely.

BATTERY INSTALLATION:

TRANSMITTER:

1. Locate and release the battery compartment cover at the back of the transmitter following the "Arrow". (see Diagram 5)
2. Follow the engraved polarity (+) or (-) signs and insert the 9V battery into the battery compartment.
3. Replace the battery cover.

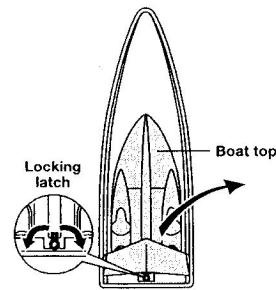


DIAGRAM 1

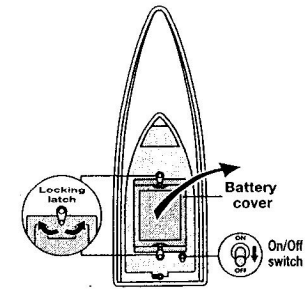


DIAGRAM 2

 


DIAGRAM 3

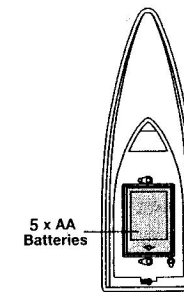


DIAGRAM 4

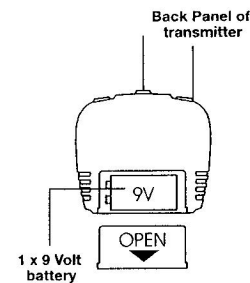


DIAGRAM 5

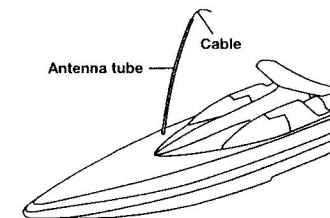


DIAGRAM 6

HOW TO PLAY:

1. Route the cable through the antenna tube provided and plug into the boat securely. (see Diagram 6)
2. Release the rear latch of the boat and lift up boat top.
3. Push the power button to "ON" position to turn on boat. (see Diagram 7)
4. Replace boat top and securely fasten rear latch.
5. Place the boat in water.

BOAT OPERATION:

6. Push the transmitter driving control stick forward to move the boat forward. (see Diagram 8)
7. Pull the transmitter driving control stick backward to move the boat in reverse. (see Diagram 9)
8. To turn the boat to either right or left, turn the steering control stick left or right and push the driving control stick forward or backward simultaneously. (see Diagram 10)
9. Release both control sticks and the boat will come to a stop. (see Diagram 11)

PERFORMANCE TIPS / CAUTIONS:

1. Operate your boat in calm and clear water only.
2. Do not operate your boat in salt water as this can damage your boat permanently.
3. Do not expose the transmitter to moisture or water.
4. Do not expose the boat to water unless the battery compartment cover is securely closed and latched.
5. Bring the boat back to the water edge when it is running out of battery or starts to slow down.
6. Note that the approximate operation range averages 20 meters.
7. Do not pick up your boat while it is in motion.
8. The propeller rotates at high speed. Keep fingers, hair and clothing clear of the propeller while the propeller is spinning.
9. After playing, drain the water out of the hull by pulling out the two plugs located at either side of the back of the boat. Replace the plugs before using again.
10. Do not operate near swimmers.
11. Stay away from water edge when operating
12. Dry the boat with a dry, clean cloth before storing.
13. To be operated under adult supervision.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

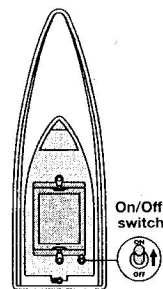


DIAGRAM 7

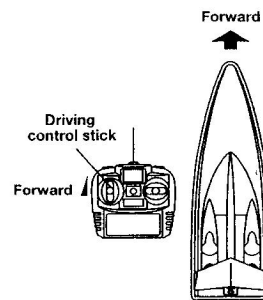


DIAGRAM 8

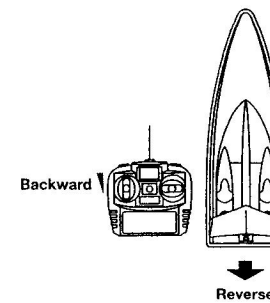


DIAGRAM 9

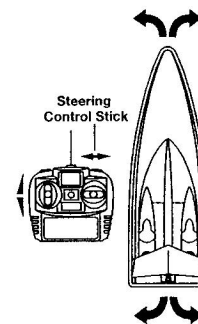


DIAGRAM 10

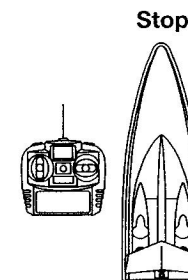


DIAGRAM 11

© 2003 SCIENTIFIC TOYS LTD.
CHAI WAN, HONG KONG.
PRINTED IN CHINA

O.I.NO. 2898