



# FIRE TRUCK 4x4

## OPERATING INSTRUCTIONS:

### BATTERY LOADING:

(FOR MAXIMUM PERFORMANCE, USE ALKALINE BATTERIES)

Remember to take out all batteries from the vehicle and transmitter after playing.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (nickel metal hydride) batteries.

### HOW TO INSTALL BATTERIES IN VEHICLE

1. Push the ON/OFF switch to "OFF" position on the underside of the vehicle. (See Diagram 1)
2. Open the battery cover.
3. Insert 5 AA batteries by matching the (+) and (-) signs as indicated in the battery compartment. (See Diagram 1)
4. Replace the battery cover.

### HOW TO INSTALL BATTERY IN TRANSMITTER

1. Slide to open the battery cover at the back of the transmitter and put 2 AA batteries inside following the engraved signs. (See Diagram 2)
2. Replace the battery cover.

NOTE: REMOVE BATTERY AFTER YOU HAVE FINISHED USING YOUR VEHICLE.

### HOW TO PLAY

1. Build up antenna by passing the cable through the antenna tube provided and plug into the vehicle tightly. Otherwise, the vehicle will not work. (See Diagram 3)
2. Push the ON/OFF switch to the "ON" position (either ON with sound or ON without sound) of the vehicle. (See Diagram 1)

### FORWARD RUNNING

3. Push the Driving Control Stick forward for forward running. (See Diagram 4).

### REVERSE RUNNING

4. Pull the Driving Control Stick backward for reverse running. (See Diagram 5)

### FRONT WHEELS STEERING ADJUSTMENT

5. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 6)
6. If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R".
7. If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".

### STEERING OPERATION

8. Turn the Steering Control Stick to the left or right while pushing the Driving Stick forward at the same time, the car will turn left or right and run forward. (See Diagram 7)
9. Turn the Steering Control Stick to the left or right while pulling the Driving Stick backward at the same time, the car will turn left or right and run backward. (See Diagram 8)

### STOP OPERATION

10. Release both Control Sticks, the vehicle will stop. (See Diagram 9)

### PERFORMANCE TIPS:

- Don't go through water.
- Use fresh alkaline batteries.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is OFF when not in use.
- Don't bend antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in building will affect the operation of your vehicle.
- Don't leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.

### ATTENTION PARENTS:

IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

### IMPORTANT

If you experience any problems or issues with this item, do not take it back to the store where you purchased. Please email [service@scientific.com.hk](mailto:service@scientific.com.hk) and we will be happy to assist you in resolving any issues you may have. We thank you for your purchase.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



6+

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

AX7

NOT INCLUDED

Contents and colors may vary.

Batteries are demonstration purposes only. They should be replaced upon purchase for optimal performance.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

FAST LANE IS A MARK OF (EST UNE MARQUE DE/ ES UNA MARCA DE) GEOFFREY, LLC, A SUBSIDIARY OF (UNE FILIALE DE/UNA SUBSIDIARIA DE) TOYS'R'US, INC. © 2015 GEOFFREY, LLC  
MADE IN CHINA (FABRIQUÉE EN CHINE/FABRICADO EN CHINA)  
DISTRIBUTED IN THE UNITED STATES BY (DISTRIBUÉE AUX ÉTATS-UNIS PAR/DISTRIBUIDO EN LOS ESTADOS UNIDOS POR) TOYS'R'US, INC., WAYNE, NJ 07470  
IMPORTED BY (IMPORTÉ PAR/IMPORTADO EM) TOYS'R'US (CANADA) LTD. (LTÉE), 2777 LANGSTAFF ROAD, CONCORD, ON L4K 4M5  
DISTRIBUTED IN AUSTRALIA BY (DISTRIBUÉE EN AUSTRALIE PAR/ DISTRIBUIDO EN AUSTRALIA POR) TOYS'R'US (AUSTRALIA (AUSTRALIE)) PTY LTD.(LTÉE), REGENTS PARK NSW 2143  
[www.toysrus.com](http://www.toysrus.com) [www.toysrus.ca](http://www.toysrus.ca)

