

B/O - WIRELESS REMOTE CONTROL TRAIN SET

MODEL NO. BY3E888

Set Contains:

- | | |
|---|-----------------------|
| 1 Locomotive with sound, lights and smoke | 1 Gondola |
| 1 Coal Tender | 1 Caboose |
| 1 Oil Tanker | 1 Box Car |
| 7 Track Signs | 1 Handset Transmitter |
| 12 Curved Tracks | 10 Straight Tracks |
| 1 Operating Instruction Sheet | |

Battery Loading:

(FOR MAXIMUM PERFORMANCE, USE ALKALINE BATTERIES)

Remember to take out all batteries from the coal tender after playing

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.
- Replace with all new batteries if train slows down or if there is sound distortion.

How to Install Battery:

FOR COAL TENDER:

1. Push the "OPEN" knob to release the battery case cover that is in the coal of the tender. (See Diagram 1)
2. Lift the coal lid upward, then pull out to open the battery case. (See Diagram 2)
3. Install six new C size alkaline batteries as indicated inside following the (+) (-) polarity. (See Diagram 3)
4. Replace the coal lid and press downward to lock it. (See Diagram 4)

FOR HANDSET TRANSMITTER:

1. Slide open the battery case cover at the back of the transmitter and put 1 x 9 volt battery inside. (See Diagram 5)
2. Close the battery case cover.

*NOTE: REMOVE ALL BATTERIES AFTER YOU HAVE FINISHED PLAYING YOUR TRAIN SET. (ESPECIALLY FOR HANDSET TRANSMITTER)

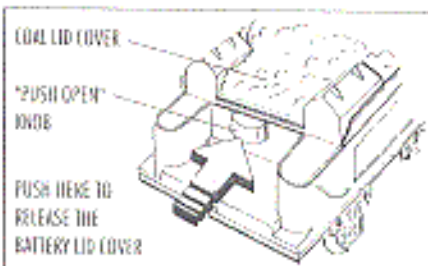


DIAGRAM 1

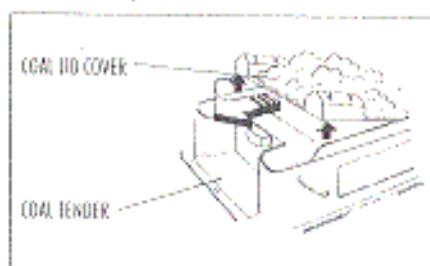


DIAGRAM 2

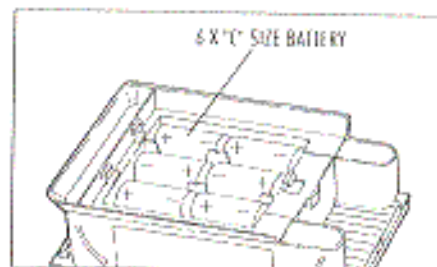


DIAGRAM 3

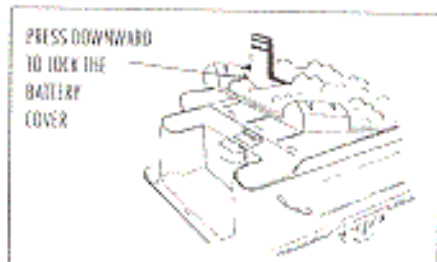


DIAGRAM 4

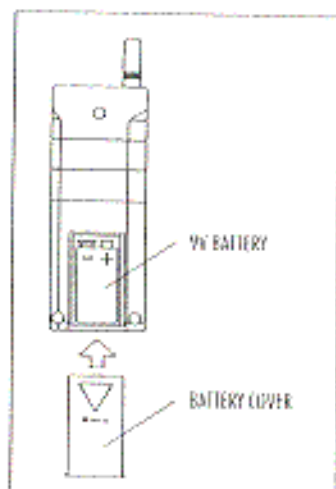


DIAGRAM 5

Assembly of Tracks:

1. Assemble the sections of tracks by snapping the pins of one section into the end of the rails of the next section. (See Diagram 6)
2. Follow the top plan layout for the tracks as shown in Diagram 7 and 8 to assemble.

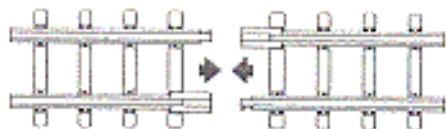


DIAGRAM 6



DIAGRAM 7



DIAGRAM 8

SCIENTIFIC TOYS, LTD.
FCC ID: BY3E888
EXHIBIT #: 6A

Operation of Train:

1. Make sure all wheels of the train set are on the tracks.
2. Pull the train forward and backward to check the connection of the locking joints. [See Diagram 9]
3. Plug the power supply connector of the coal tender into the socket of the locomotive as shown in Diagram 10
4. LED of the transmitter will lights up when installing battery inside (See Diagram 12)
5. Turn the bell in clockwise direction to activate the train. (See Diagram 11) Also, the headlights will be on while the train is in "POWER ON" position.
6. Press the forward button of transmitter to start. The train will go forward. (See Diagram 12)
7. Press the stop button of transmitter to make the train stop. (See Diagram 12)
8. Press the reverse button of the transmitter and the train will go backward. [See Diagram 12]
9. Press the sound button of the transmitter for toggle ON/OFF of train sounds. [See Diagram 12]
10. Additional forward button locates on the steam whistle of locomotive to make the train go forward.
11. The train is running with smoke and lights.
12. Replace the batteries if the headlights become dim.
13. To replenish smoking device, take out the screw and drop a few drops of household oil in the indicated hole of the chimney. (See Diagram 13)

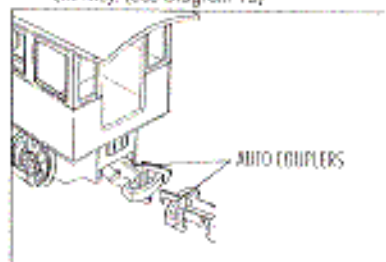


DIAGRAM 9

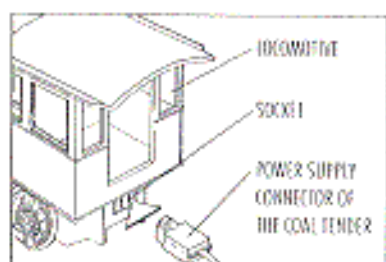


DIAGRAM 10

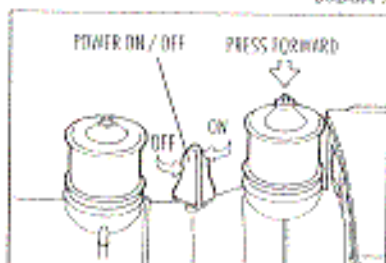


DIAGRAM 11

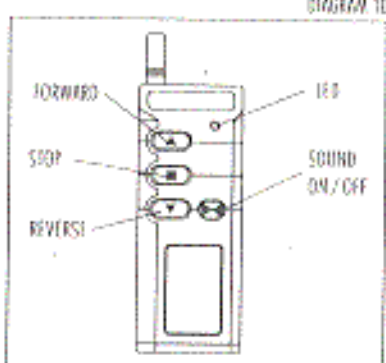


DIAGRAM 12

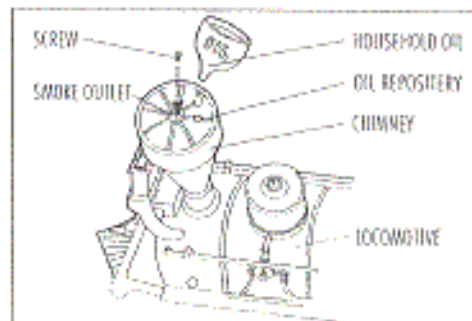


DIAGRAM 13

Hints for Better Performance:

- DO NOT run the train before reading the operating instructions.
- DO NOT operate unless all wheels are on the tracks.
- DO NOT forget to lubricate the locomotive wheels and cars after running for an extended period of time.
- DO NOT forget to keep locomotive wheels and tracks clean and free of oil and dirt.
- IF THE TRAIN FAILS TO OPERATE OR BEGINS TO SLOW DOWN:
 - Replace the batteries.
 - Check positioning of batteries.
 - Adjust metal contacts to assure proper contact with batteries.

Care of Locomotive, Cars and Tracks:

1. Lubricate car wheels with a few drops of household oil.
2. After oiling, wipe the wheels with a dry cloth to remove dirt and oil. As surface of wheels must be clean and dry to run properly.
3. Be sure that each wheel run freely and free of dirt.
4. Keep the track clean by wiping the rails with a dry cloth to remove any oil or dirt. This provides better traction and assures more efficient operation.

NOTES: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S WARRANTY.

© 1997 SCIENTIFIC TOYS, LTD.
 CHAI WAN, HONG KONG
 PRINTED IN HONG KONG
 O.T.No. 1284

SCIENTIFIC TOYS, LTD.
 FCC ID: BY3E888
 EXHIBIT #: _____ 68