 
 


## SPOT LIGHT



Spot light is on when robot moves.



 
If the spot light is out of order, unscrew to open the case cover and replace the light bulb (8V base type E10).

## PULSE INDICATOR




Pulse indicator flashes when robot moves.

## CONTROLLER

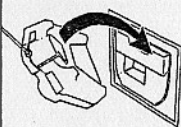

The controller can be stored in the controller holder at the back of the robot.

## TRANSMIT YOUR VOICE THROUGH THE ROBOT

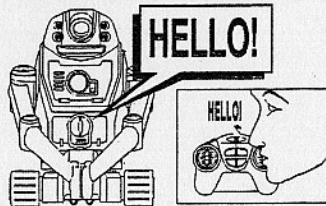 


SOUND button

MICROPHONE

Press and hold the SOUND button to talk into the microphone and your voice will be transmitted through the robot. Release the sound button to deactivate the microphone.

## TRAY

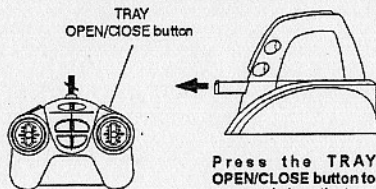 

TRAY OPEN/CLOSE button

Press the TRAY OPEN/CLOSE button to open and close the tray.

## HINTS FOR BETTER PERFORMANCE

| TROUBLE   | REASON                                     | INSTRUCTION  |
|---|--|--|
| • When robot runs in opposite direction from your command | • Insufficient battery contact             | • Re-insert the battery pack again                                   |
| • When robot does not operate properly or does not move   | • Insufficient battery contact due to rust | • Remove rust with sand paper or a clean cloth and re-insert battery |
| • When robot goes too slow                                | • Batteries too weak                       | • Recharge the battery pack  |
| • When flashing light goes dim                            | • Batteries too weak                       | • Recharge the battery pack  |

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## OPERATION INSTRUCTIONS

### Battery charging

1. Plug the wall pack battery charger into wall outlet.
2. Connect the cables leading from the battery pack and the charger together by snapping the jack and the socket together tightly. Charge at least 4 hours. (See Diagram 1)
3. To disconnect the cables, press down on the clip and pull apart. (See Diagram 1)
4. After charging, the battery will be warm. This condition is normal for fully charged batteries.
5. If the speed of the robot slows down suddenly, it is time to recharge.
6. After each use, the battery pack will be hot! Allow the battery pack to cool for at least 20 minutes before recharging. Recharging a warm or hot battery pack will greatly shorten the useful life of the battery.



DIAGRAM 1

### Battery pack care

- Make sure the battery pack and connectors of the charger are dry before recharging.
- Battery packs can be charged for much longer periods without harm. However we recommend unplugging the battery pack if the battery pack will not be used for several days.

### Cautions

- Do not charge the battery pack that is hot, wet or shows leakage or corrosion.
- May explode if disposed of in fire!
- Do not disassemble the battery pack.