

SLIDE TO OPEN

DIAGRAM 5

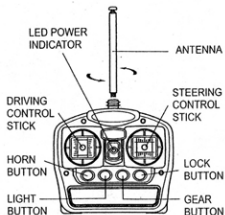


DIAGRAM 6

DRIVING FORWARD

D. Push the *DRIVING CONTROL* stick forward (away from you). (See Diagram 8)

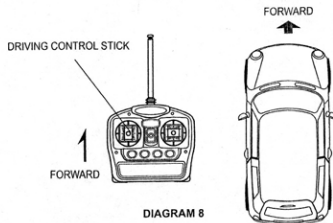


DIAGRAM 8

Battery Installation: Transmitter

- Slide to open the battery compartment cover at the back of the Remote Control unit and insert four AA batteries according to the diagram in the battery compartment securely. (See Diagram 5)
- Replace the battery compartment cover.

Vehicle Operation

- Screw the antenna onto the top of the transmitter and extend it to full length. (See Diagram 6)
- Pass the cable of the vehicle through the antenna tube provided and insert the tube into the vehicle tightly. (See Diagram 7)
- Slide the ON/OFF switch to the "ON" position (See Diagram 2)

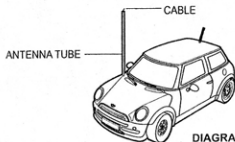


DIAGRAM 7

DRIVING IN REVERSE

E. Pull the *DRIVING CONTROL* stick back (towards you). (See Diagram 9)

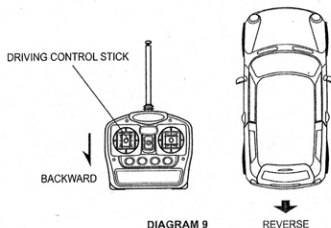


DIAGRAM 9