



► **MOUSE UNIT (BOTTOM SIDE)**

- 1. Ball cover : open to clean ball and roller when movement is not correct
- 2. Battery cover : open to put or replace batteries (check correct direction)
- 3. Fools : 2 fools let user move mouse smoothly and softly

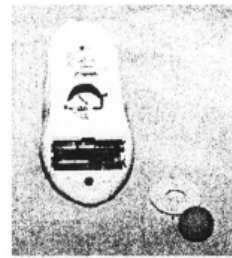

► **MOUSE KEYBOARD UNIT (BOTTOM SIDE)**

- 1. LEG :
there is 2 LEGS to adjust angle of keyboard, so user can fix it to favorite angle
- 2. Battery cover : open to put or replace batteries (check correct direction)

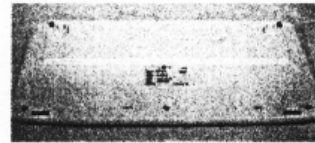

● **Installation of receiver unit**

WM-200

1. Turn the power off of your IBM compatible PC
2. Plug connector of receiver unit into PS/2 port(keyboard and mouse is very similar, so be careful not to plug in wrong position)
3. Turn the power on of your PC.
4. lamp on receiver unit blink for some seconds (blinking time is differ from the system)
5. 'WING MOUSE' is automatically detected by the system.
6. Put 2 AAA batteries in 'WING MOUSE'. If mouse does not work, remove batteries and put again after 10 seconds. If it does not work after 2 or 3 times trial, check battery.
7. After Windows®boot, movement of mouse s can be easily checked by the lamp of receiver unit.

WS-200

1. Turn the power off of your IBM compatible PC(if you must plug during power-on, you must plug mouse cable first)
2. Plug connector of receiver unit into PS/2 port(keyboard and mouse is very similar, so be careful not to plug in wrong position)

3. Turn the power on of your PC.
4. LED lamp on receiver unit blink for some seconds (blinking time is differ from the system)
5. 'WING MOUSE' and 'WING–KEYBOARD' is automatically detected by the system.
6. Put 2 AAA batteries in 'WING MOUSE'. If mouse does not work, remove batteries and put again after 10 seconds.
If it does not work after 2 or 3 times trial, check battery.
7. Put 2 AA batteries in 'WING KEYBOARD'. If keyboard does not work, remove batteries and put again after 10 seconds.
If it does not work after 2 or 3 times trial, check battery.
8. After Windows[®] boot, movement of mouse and key press can be easily checked by the LED lamp of receiver unit.

● Caution when using 'WING MOUSE'

1. Don't let receiver unit on the floor. Cable can be damaged or some water or dust can damage receiver unit.
2. When using mouse on steel desk, RF antenna sensitivity can be reduced.
3. Use mouse pad for smooth movement and to protect mouse from dust.
4. Place receiver unit as close as possible to the mouse.(within 6 feet)

● Cleaning mouse ball

For smooth and correct movement and for long life, cleaning is important like car.

1. Open ball cover from bottom side of mouse
2. Take out ball from mouse
3. Remove dust from ball with velvet or soft cloth
4. Remove dust from roller with thin alcoholic cotton stick
(do not use benzene, thinner, acetone)
5. Put ball in mouse and close ball cover
6. Remove dust from foot with soft tooth brush



● Before you think It is out of order !!

1. System can not find mouse device

- ☞ Check receiver cable connected to system correctly (keyboard and mouse connector is very similar)
- ☞ Check receiver unit LED lamp blink when PC power on

2. Mouse cursor does not move


- ☞ Check whether battery direction correct
- ☞ Replace batteries with new one
- ☞ Move receiver unit closer to mouse (RF sensitivity can be influenced by circumstances)



3. Mouse cursor movement is not correct

- ☞ Clean mouse ball and roller
- ☞ Replace batteries with new one

4. Keyboard does not work

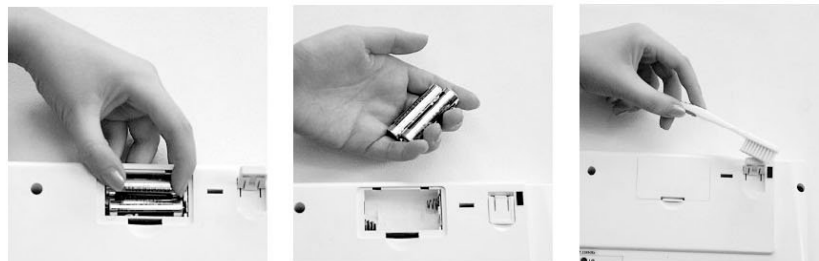

- ☞ Check whether battery direction correct
- ☞ Replace batteries with new one
- ☞ Move receiver unit closer to keyboard (RF sensitivity can be influenced by circumstances)

For more technical questions contact
<http://www.wingmouse.com>

Research, development & selling company

 **WING COM CO.,LTD**

951-25, Bongchunbon-Dong,
Kwanak-gu, Seoul, Korea 150-069
TEL : + 8 2 - 2 - 8 7 4 - 1 8 1 1
FAX : + 8 2 - 2 - 8 7 4 - 1 8 1 3
E-MAIL : trade@wingmouse.com
URL : <http://www.wingmouse.com>

Manufacturing company

 **SEJIN CO.,LTD**

60-19, Kasan-Dong, Keumchon-ku,
Seoul, Korea 153-023
TEL : +82-2 - 8 6 6 - 3 3 3 3
FAX : +82-2- 8 6 6 - 8 5 6 7