► MOUSE UNIT (BOTTOM SIDE)


- 1. Ball cover : open to clean ball and roller when movement is not correct
- 2. Battery cover: open to put or replace batteries (check correct direction)
- 3. Foots: 2 foots let user move mouse smoothly and softly



- 1. LEG:

there is 2 LEGS to adjust angle of keyboard, so user can fix it to favorite angle

 2. Battery cover: open to put or replace batteries (check correct direction)

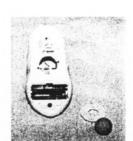



Installation of receiver unit

WM - 200

- 1. Turn the power off of your IBM compatible PC
- 2. Plug connector of receiver unit into PS/2 port(keyboard and mouse is very similar, so be careful not to plug in wrong position)
- 3. Turn the power on of your PC.
- 4. lamp on receiver unit blink for some seconds (blinking time is differ from the system)
- 5. 'WING MOUSE' is automatically detected by the system.
- 6. Put 2 AAA batteries in 'WING MOUSE'. If mouse does not work, remove batteries and put again after 10 seconds. If it does not work after 2 or 3 times trial, check battery.
- 7. After Windows®boot, movement of mouse s can be easily checked by the lamp of receiver unit.

WS-200

- Turn the power off of your IBM compatible PC(if you must plug during power—on, you must plug mouse cable first)
- 2. Plug connector of receiver unit into PS/2 port(keyboard and mouse is very similar, so be careful not to plug in wrong position)

- 3. Turn the power on of your PC.
- 4. LED lamp on receiver unit blink for some seconds (blinking time is differ from the system)
- 5. 'WING MOUSE' and 'WING-KEYBOARD' is automatically detected by the system.
- 6. Put 2 AAA batteries in 'WING MOUSE'. If mouse does not work, remove batteries and put again after 10 seconds.

 If it does not work after 2 or 3 times trial, check battery.
- 7. Put 2 AA batteries in 'WING KEYBOARD'. If keyboard does not work, remove batteries and put again after 10 seconds.

 If it does not work after 2 or 3 times trial, check battery.
- 8. After Windows ® boot, movement of mouse and key press can be easily checked by the LED lamp of receiver unit.

Caution when using 'WING MOUSE'

- 1. Don't let receiver unit on the floor. Cable can be damaged or some water or dust can damage receiver unit.
- 2. When using mouse on steel desk, RF antenna sensitivity can be reduced.
- 3. Use mouse pad for smooth movement and to protect mouse from dust.
- 4. Place receiver unit as close as possible to the mouse. (within 6 feets)

Cleaning mouse ball

For smooth and correct movement and for long life, cleaning is important like car.

- 1. Open ball cover from bottom side of mouse
- 2. Take out ball from mouse
- 3. Remove dust from ball with velvet or soft cloth
- 4. Remove dust from roller with thin alcoholic cotton stick (do not use benzene, thinner, acetone)
- 5. Put ball in mouse and close ball cover
- 6. Remove dust from foot with soft tooth brush









Before you think it is out of order !!

1. System can not find mouse device

- Check receiver cable connected to system correctly (keyboard and mouse connector is very similar)
- Check receiver unit LED lamp blink when PC power on

2. Mouse cursor does not move

- Check whether battery direction correct
- Replace batteries with new one
- Move receiver unit closer to mouse (RF sensitivity can be influenced by circumstances)



3. Mouse cursor movement is not correct

- © Clean mouse ball and roller
- Replace batteries with new one

4. Keyboard does not work







- Check whether battery direction correct
- Replace batteries with new one
- Move receiver unit closer to keyboard (RF sensitivity can be influenced by circumstances)

For more technical questions contact http://www.wingmouse.com

Research, development & selling company

例WING COM CO.,LTD

951-25, Bongchunbon-Dong, Kwanak-gu, Seoul, Korea 150-069

TEL: +82-2-874-1811 FAX: +82-2-874-1813 E-MAIL: trade@wingmouse.com URL: http://www.wingmouse.com

Manufacturing company

SEJIN CO.,LTD

60–19, Kasan-Dong, Keumchon-ku, Seoul, Korea 153–023

TEL: +82-2 - 8 6 6 - 3 3 3 3 FAX: +82-2-8 6 6 - 8 5 6 7