

 
Quick Start Guide

Before using your Android tablet, please read this

Charge the tablet

Your tablet hasn't been charged yet. Fully charge the battery (8 hours or more) before first use and whenever it is depleted to prolong battery life. Please use the supplied power adapter only. The battery reaches its maximum capacity after a few full charging and discharging cycles.

Get to know your tablet

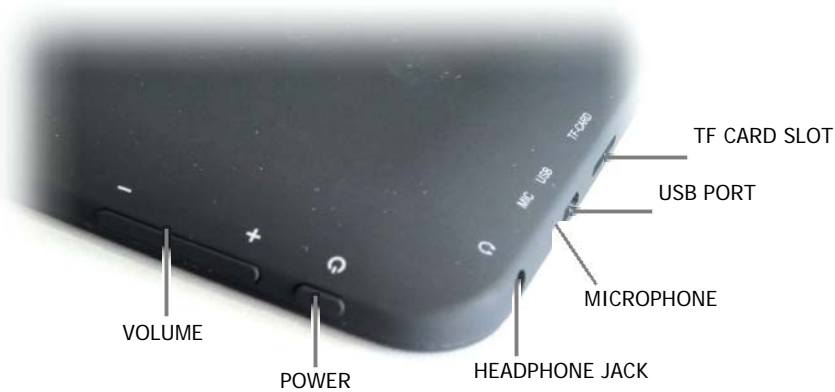

Power button

The power button turns your tablet on/off. It is also used to put the tablet into sleep mode or wake it up from sleep mode.

Volume key

Press this button to increase or decrease the system volume.

Webcam

Use the built-in camera for picture taking, video recording, video conferencing, and other interactive applications.

Touch screen panel

The touch screen panel allows you to operate your tablet using multi-touch technology.

Headphone jack

The stereo jack (3.5mm) connects the tablet's audio out signal to amplified speakers or headphones. Using this jack automatically disables the built-in speaker.

Microphone

The built-in mono microphone can be used for video conferencing, voice narrations, or simple audio recordings.

TF card slot


Insert TF (micro SD) card here for storing files.

USB port

Plug charger here to charge the battery or USB cable to connect the tablet to a computer.

Unlocking your tablet


After you turn on the device, you will see the Lock key symbol appear on the screen, tap and drag towards the Unlock icon.

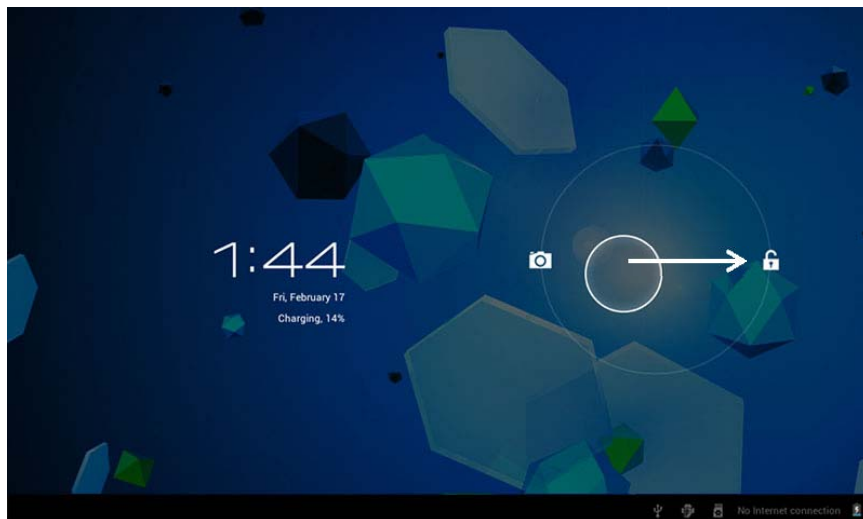

Home screen

Your Home screen is where you make the tablet your own. You can add your favorite applications, shortcuts, folders and widgets so they're always just a tap away.

Smoothly switch between screens by simply swiping your finger left or right.

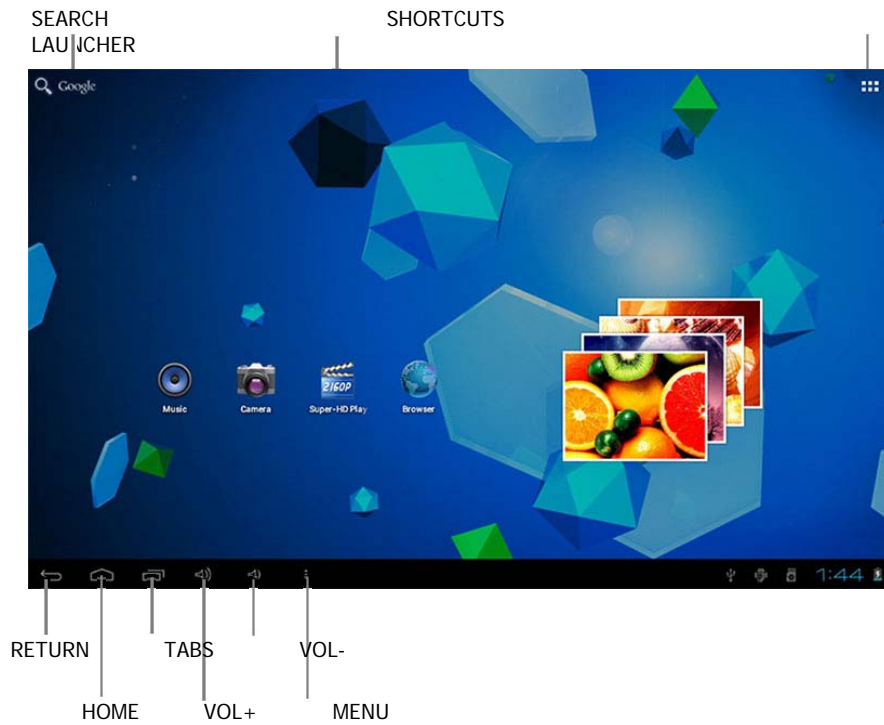

Home

Return to Home screen.

Search

You can search for information on the tablet and on the Web by using Google Search.

Return

Return to the previous screen.

Menu

Display additional options for the current app or task.

Launcher

Open the Apps menu.

Tabs

Switch to recently opened application tabs.

Personalize your tablet

Customize your tablet just the way you want it. You can change the wallpaper, skin, widgets, apps, or shortcuts.

From the Home screen, just press MENU and then tap **Wallpaper**.

Rearranging icons

To move an app or shortcut on the Home screen, press and hold its icon and drag it. When you drag it to a slot that's occupied by another icon, the occupant automatically moves away to give room.

 
Lock Screen

When your tablet becomes idle, it turns the display off and goes to sleep mode to save battery power. Simply press POWER to turn the display back on.

Connect to the Internet

Using Wi-Fi

To use Wi-Fi, you need access to a wireless access point or "hotspot". The availability and strength of the Wi-Fi signal will vary depending on objects, such as buildings or simply a wall between rooms, the Wi-Fi signal has to pass through.

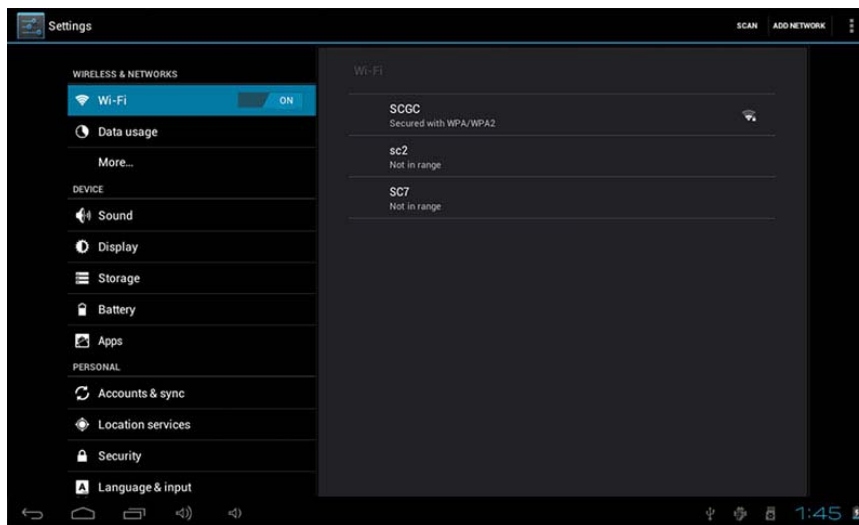

1. From the Home screen, press LAUNCHER and then tap **Settings**.
2. Go to **Wireless & networks**, and then tap **Wi-Fi** switch to turn Wi-Fi on.
3. Choose a Wi-Fi network to connect to.

Internet browsing

Enjoy fast browsing on your tablet. From the Home screen, tap **Browser** to open the web browser.


Using the camera

Capture those priceless moments and share them to your loved ones. From the Home screen, tap **Camera** to turn on the built-in camera. You can capture both still images and video.

USB connection

You can connect your device to your computer, use it as a removable disk and open any files saved on your device.

When the screen below appears, tap **Turn on USB storage** to connect with computer.

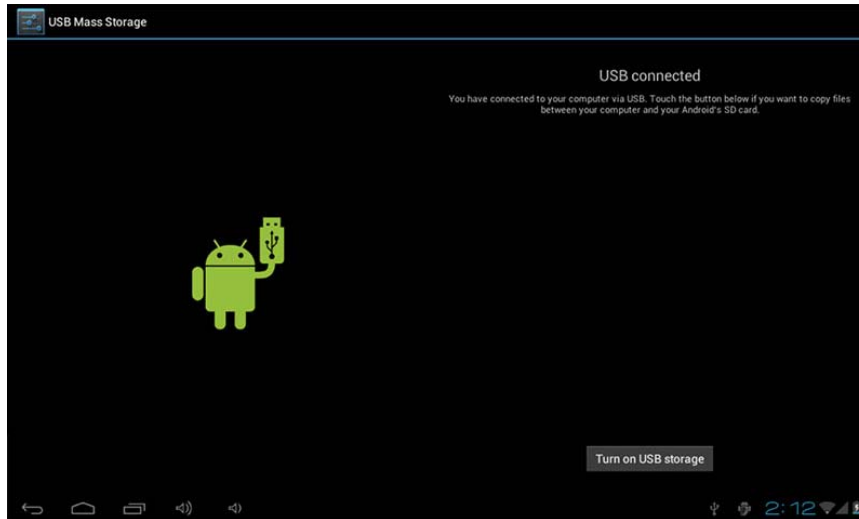

Settings

Settings on your tablet

Control and customize tablet settings on the Settings screen. From the Home screen, press **MENU** and then tap **Settings**.

Wireless & networks	Set up wireless connections, such as Wi-Fi, data connection, and Bluetooth, enable Airplane mode, and more
Data usage	Show data usage and set data limit.
Sound	Choose sounds to use for notifications. Adjust media playback volume.
Display	Set up display settings such as automatic screen orientation, brightness, screen timeout, and more.
Storage	Check the available space in the internal storage and your storage card. Erase the internal storage or storage card content. From this screen, be sure to unmount your storage card before you remove it from the tablet.
Location services	Select the sources to use when determining your location.
Security	Set a screen lock or password; or manage the credential storage.
Battery	Show battery information.

Apps	Manage running applications, install or uninstall programs, set low memory notification, and more.
Accounts & sync	Manage synchronization and other settings for your accounts.
Language & input	Set the operating system language and region. You can also set onscreen keyboard options.
Backup & reset	Choose to automatically back up some settings (e.g. Wi-Fi passwords or Bookmarks) to Google servers using your Google Account so you can restore them when needed. You can also do a factory data reset.
Date & time	Set the date and time, time zone, and date or time format.
Accessibility	Set font size, auto rotate feature, and more.
Developer options	Show pointer location, screen updates, CPU usage, and more.
About tablet	View different information about the tablet, such as the battery level, hardware and software information, and more.

Additional info

Battery saving tips

- Adjust the Backlight to be less bright.
Go into **Settings > Display > Brightness** to turn down the brightness to the lowest acceptable level.
- Disable the Wi-Fi when you don't need it.
Go into **Settings > Wireless & networks > Wi-Fi** to toggle the Wi-Fi on or off.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.