

EV-F318
Wireless Key

Operating Instruction

Congratulation on the purchase of the EV-F318, the newest 4 button wireless key. This key will allow you to arm and disarm, as well as other keypad functions with the convenience of wireless portability. Together with your installer, you can decide which functions you wish to have accessible from your portable key.

To activate, press and hold the appropriate button for approximately 1 second. The LED located between buttons 1 and 2 will confirm that a signal has been sent to the control panel receiver. 4 button delay time is programmable.

Please discuss with your Installer in order to program the best possible combination to suit your needs.

To replace batteries in the transmitter, use a small flat blade screwdriver remove the back cover in an upward movement, take out old batteries and replace with new one ensuring correct polarity.

SPEC.:


Working voltage : 6 Volt

Working temperature : -20 ~ +60

Frequency : 318mhz

Remote range : 50 meter

ASK transmittion

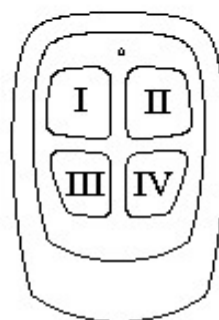

Federal Communications Commission (FCC) Statement

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Caution:

1. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
3. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.