

REPLACING THE BATTERY

Open the case using a flathead screwdriver. (+) should be facing up. . Re-assembly by pressing the board into place firmly and re-attach with the screw. Snap case back together.



FCC Compliance

This device complies with Part 15 FCC Rules. Operation complies with the following 2 conditions (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation

MODEL	SW-NAP-PAN
FCC ID	QNP-PAN319
FREQUENCY	319.5 MHz
WARRANTY	Limited Life Time
BATTERY	CR2032 Replace with Panasonic
MANUAL PART #	200-10002 Rev A



SW-NAP-PAN

Single Button Panic

NAPCO COMPATIBLE

INSTALLATION MANUAL

TECHNICAL SUPPORT

Secure Wireless 866-908-Tech
www.mysecurewireless.com

The other accessories can be used with the standard case bottom that is on the remote when taken out of the box.

1. Open the case with a flathead screw driver
2. Choose NECK-STRAP or WRIST-STRAP case
3. Attach the new bottom case by pressing together firmly



For **WRIST-STRAP** or **NECK-STRAP**:

The SW-NAP-PAN is equipped with an accessory pack to allow for a variety of uses for the SW-NAP-PAN.

USING PANIC ACCESSORIES

A - *0	C - *2	E - *4
B - *1	D - *3	F - *5

Alpha Chart

Note : Panic trouble must reset at keypad after disarm

1. **ENTER** Panel Programming
2. **SELECT** Zone #
3. **ENTER** 6 Digit Id Number (located on back of unit)
4. **ENTER** Check sum (0-9 ; A-F) (located on back on unit. Digit that follows " ; " on the Serial ID
5. **ENTER** Point "3" – for Panic
6. Push On/Off to Save

For a detail programming guide, the instruction manual should be consulted for that panel. The below guide should only be used as a reference and not as a replacement for using the programming instructions.

KEYFOB ENROLLMENT PROGRAMMING