

Note to Installer

Removing the 3-Second Delay on the Panic (🚨) Key

Changing the programming will affect operation. **This should be done by the installer.**

- Press and hold all 4 buttons simultaneously until the LED begins to flash.
- Press the Away key (🚶).
- These are toggle features, to return to default, repeat the steps above.

Compatibility

The WS4969 is compatible with the following receivers: PC4164-433, PC5102-433, PC5132-433, RF5108-433, RF5501-433, NT9005 and the NT9010.

How to Enroll the WS4969

This section describes how to set up and program your remote, this should be done by the installer. The following outlines the basic steps for programming and enrolling this device on PowerSeries receivers. For additional options, or for other receivers, please refer to the specific receiver Installation Manual.

Step 1 - Program Electronic Serial Number (ESN)

Section [804], subsections [41] - [56]

[41] Key #1 [] [] [] [] [] [] [] [] ... [56] Key #16 [] [] [] [] [] [] [] []

Enter the 6 digit ESN located on the back of the unit.

Step 2 - Program Function Buttons

Section [804], subsections [59]-[60]

Section [804], subsections [61]-[68] (RF5501-433 v5.0 Receiver)*

[59] Partition 1 Wireless Key Options * [61] Partition 1 Wireless Key Options (RF5501-433)

0	3	Button 1 Stay Arming
0	4	Button 2 Away Arming
2	7	Button 3 Disarm
3	0	Button 4 Panic

0	3	Button 1 Stay Arming
0	4	Button 2 Away Arming
2	7	Button 3 Disarm
3	0	Button 4 Panic

Specifications

- 32° to 120°F (0-49°C)
- 5-93% RH
- Water Resistant

This manual shall be used in conjunction with the Installation Manual of the alarm control panel.

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved by Digital Security Controls could void your authority to use this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC: 160A-WS4969 The term 'IC:' before the radio certification number only signifies that Industry Canada technical specifications were met.



29007172R001

DSC

©2005 Digital Security Controls, Toronto, Canada
Technical Support: 1-800-387-3630 • www.dsc.com
Printed in Taiwan

WS4969 Wireless Key

Operating Instructions

The WS4969 is a four-button wireless key. This key allows you to arm, disarm and also offers other functions with the convenience of wireless portability. Together with your installer, you can decide which functions you wish to have accessible from your portable key.

To activate, press and hold the appropriate button for approximately 1 second*. The LED located between buttons 1 and 2 will confirm that a signal has been sent to the control panel receiver.

*False Alarm Prevention

By default, the 🚨 key is a panic key. It will require the user to press and hold for approximately 3 seconds. This was designed to reduce the possibility of a false alarm.

NOTE: Signals will not be received if the key is not within the range of the wireless receiver.

The default functions are as follows:



Stay Arming

Press this button to arm your system in the Stay mode. All perimeter zones will be armed, such as all window and door contacts, but the interior zones will remain inactive, allowing you to stay on the premises without setting off an alarm.



Away Arming

Press this button to arm your system in the Away mode. Both the interior and exterior zones will be armed, allowing you to exit the premises.



Disarm

Press this button to disarm your system. You do not have to enter your access code when you use the key to disarm the system.



Panic

Press this button to notify your central monitoring station of a situation requiring the police, such as a break-in.



Flashlight

Press and hold the centre button to activate the flashlight.



Other options are available. Please discuss all WS4969 options with your installer in order to program the best possible combination to suit your needs.

Replacing the Batteries

Battery life depends on use of the flashlight feature. The battery should last 3 to 6 years with normal operation and usage. During each button press the key will send the status of its battery to the control panel receiver. If the battery is low the trouble light on the controls panel's keypad will turn ON.

To replace the battery, remove the screw located on the back of the unit. Replace both batteries with Panasonic CR-2032 lithium batteries (see diagram).

NOTE: The polarity of the battery must be observed, as shown in the diagram above. Improper handling of lithium batteries may result in heat generation, explosion or fire, which may lead to personal injuries.

WARNING: DANGER OF EXPLOSION IF BATTERIES ARE INSTALLED INCORRECTLY. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. Keep away from small children. If batteries are swallowed, promptly see a doctor. Disposal of used batteries must be made in accordance with the waste recovery and recycling regulations in your area. Do not try to recharge these batteries.

