



# QUICK START GUIDE


## RIDGE<sub>2.0</sub>

1 of 6


Model **14-500T**

START HERE


### 1 Carefully unpack box.

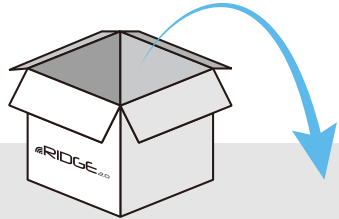

### 2 Make sure you have all items shown here. (Screwdriver not shown)

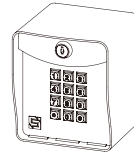

Keypad Unit

 

Receiver



9-V Battery



Key



Carriage Bolt  
( 4x )



Hex Nut  
( 4x )



Hole Plug





Adhesive  
Mounting Pad

## What's what?

Important components labeled

### 9-V Battery

Must be installed before use

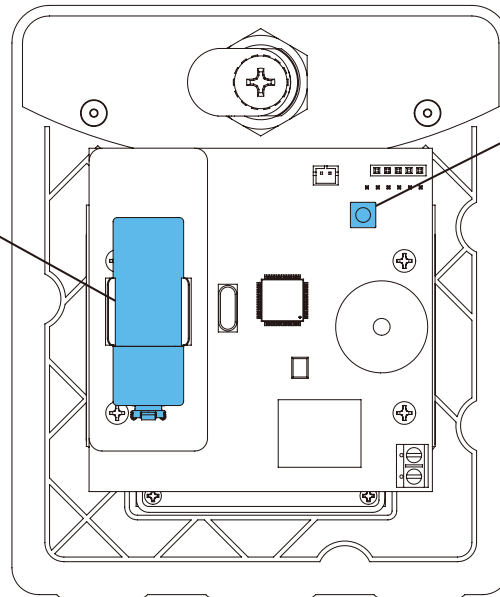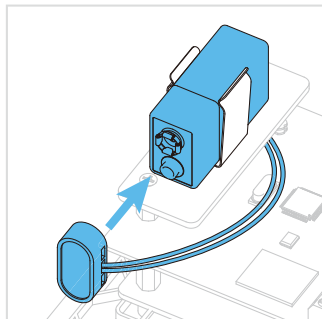

### Keypad Unit

Back of front panel shown.  
Internal wiring not shown for clarity.

### Reset Button


For performing reset procedures  
on keypad

### Connection Terminals

For wiring to compatible  
AC/DC power source and  
gate operator or door opener

### Relay Status LED

Indicates whether relay is  
active or inactive  
(Relay is active when lit)

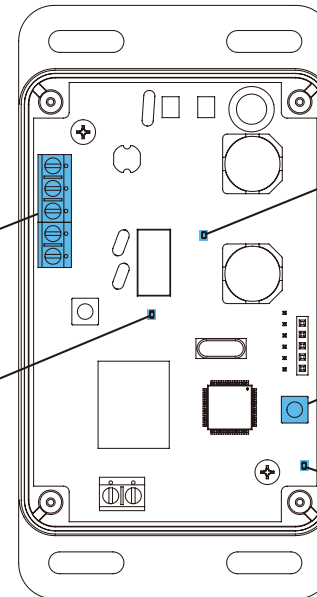

### Power LED

Indicates whether or not unit has power

### Programming Button

For pairing receiver to keypad

### Programming LED

Indicates status of pairing process

### Receiver


Shown with cover removed.  
Internal wiring not shown for clarity.

# QUICK START GUIDE


**RIDGE<sub>2.0</sub>**

Model **14-500T**

- 3** Unlock and remove front panel of keypad unit; then using included carriage bolts and hex nuts, attach unit to pedestal as shown.

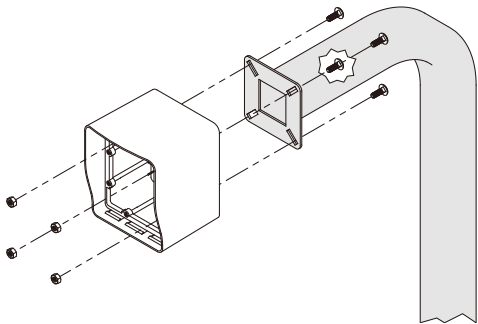

- 4** Using Tek screws, zip ties, or included adhesive mounting pad, attach receiver to inside wall or other surface of gate operator.

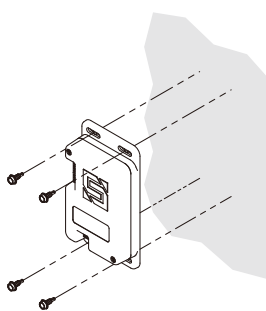

## CAUTION!

The receiver is not weatherproof and must be mounted inside a weatherproof enclosure. Internal components can be damaged if exposed to the elements.

**Failure to comply will VOID WARRANTY.**



## WARNING!


**AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!**  
**ALWAYS CHECK** that the **GATE PATH IS CLEAR BEFORE OPERATING!**  
**REVERSING** or other **SAFETY DEVICES SHOULD ALWAYS BE USED!**

### 5a Connect receiver

Gate Operator Timer-to-Close  
**OFF**

#### Ridge Receiver

#### Gate Operator / Door Opener

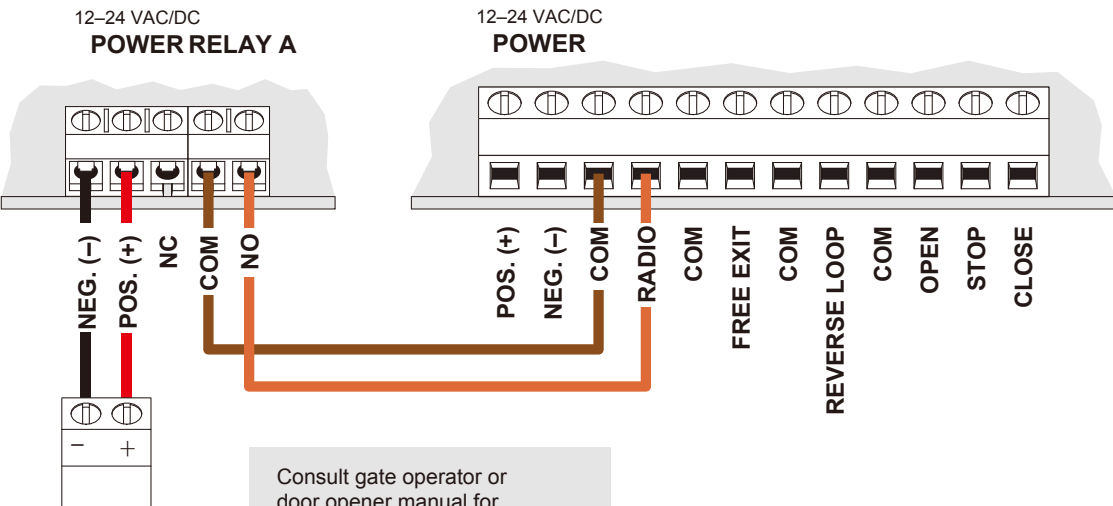

**12-24-VAC/DC Power Source (Not Included)**


Consult gate operator or door opener manual for exact connections.  
 Terminals vary widely across manufacturers and models.

### 5b Connect receiver

Gate Operator Timer-to-Close  
**ON**

#### Ridge Receiver

#### Gate Operator / Door Opener

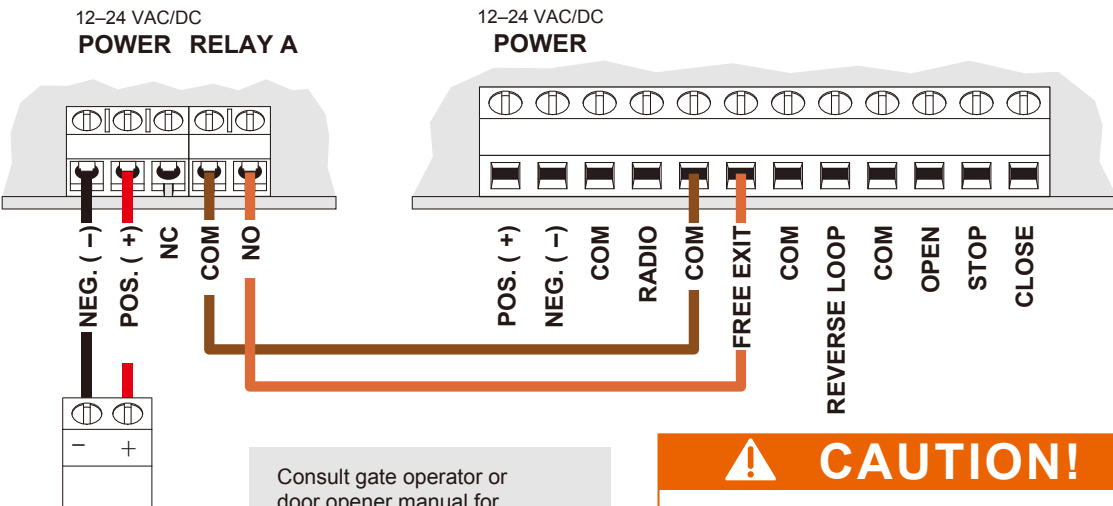

**12-24-VAC/DC Power Source (Not Included)**

Consult gate operator or door opener manual for exact connections.  
 Terminals vary widely across manufacturers and models.




## CAUTION!

A closing gate can cause injury to persons or damage to property.  
**ALWAYS USE SAFETY DEVICES!**

OR

## Model 14-500T

- 6a** Remove receiver cover; then hold down Programming button on circuit board for 3 seconds and let go.

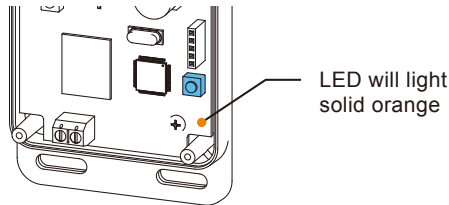

- 6b** Pair keypad unit with receiver by entering sequence below on keypad. (Make sure 9-V battery is connected on keypad unit)



1 2 5 1 → 9 → ? \*

**Master Code**  
(can be changed)

**Channel**  
(1 for A, 2 for B)

NOTE: Green arrow indicates “good” tone on keypad unit.

- 6c** While pairing, keypad unit will beep and flash. Once receiver LED goes out and “good” tone is heard on keypad unit, pairing is complete.

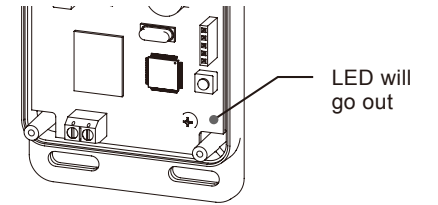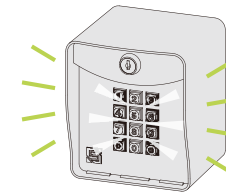

- 7** Add Access Code(s) to Channel A.  
(To add multiple codes, enter each of them before pressing pound key)

1 2 5 1 → 1 → ? ? ? ? → #


**Master Code**  
(can be changed)

**Sub Mode**

**Access Code(s)**  
(4 digits; numbers only)

NOTE: The Master Code is for programming only and will not trigger the relay.

- 8** Make sure gate path is clear; then enter access code on keypad and confirm gate opens.  
(If keypad locks up, repeat Step 6 )

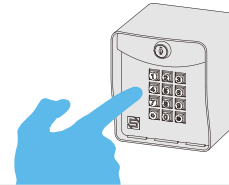

## INSTALLATION COMPLETE!

Your system is ready to use.

## A1 Additional programming

### Delete Code(s)

(To delete multiple codes, enter each of them before pressing pound key)

1 2 5 1 → 2 → ? ? ? ? → #

**Master Code**  
(can be changed)

**Sub Mode**

**Code(s) to Be Deleted**  
(4 digits; numbers only)

### Set Unique Keypad ID

(Allows multiple keypad units and receivers to be used. If Keypad ID is changed, keypad unit and receiver must be paired again.)

1 2 5 1 → 9 → 5 → ? ? ? ? → #

**Master Code**  
(can be changed)


**Sub Mode**

**Unique Keypad ID**  
(4 digits; numbers only)


NOTE: Green arrow indicates “good” tone on keypad unit.  
Always wait for good tone before moving on.

## A2 Additional programming (continued)


### Change Master Code

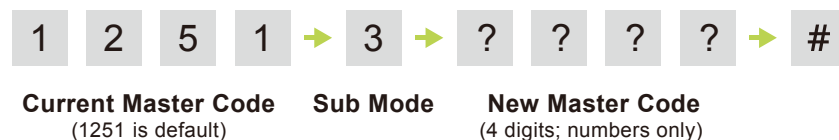

### Add Latch Code

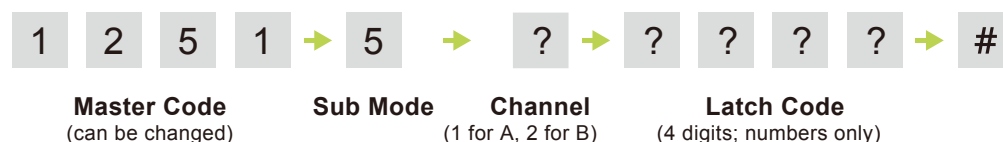


### Add One-Time-Use Code (Channel A ONLY)

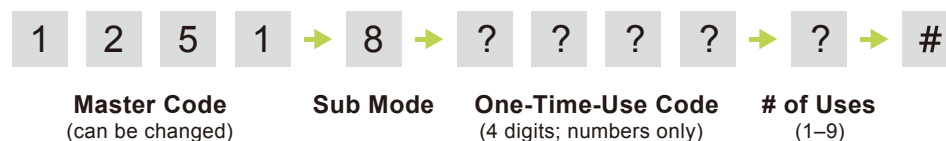


### Add Access Code(s) to Channel B

(To add multiple codes, enter each of them before pressing pound key)

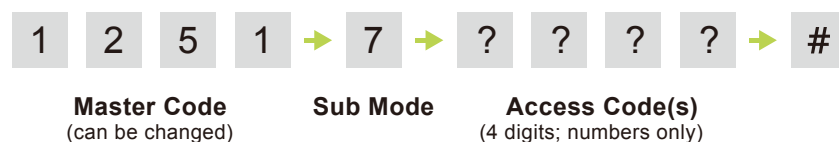

### Delete All Codes (Cannot Be Undone)

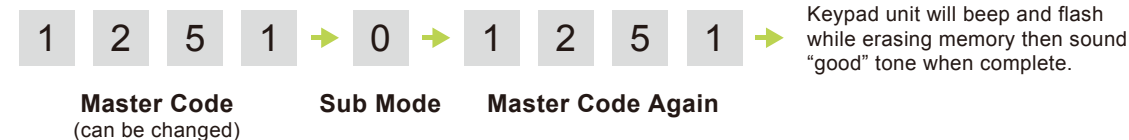


### Set Relay Output Time




### Configure Three Strikes, You’re Out

(This feature is designed to deter unauthorized users who enter an incorrect code three times in a row. When this happens, the keypad unit will sound an alarm for 30 seconds, and then it will go into a period of lockdown for a full 90 seconds.)

#### Check Status

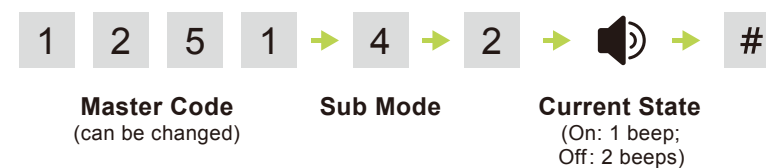

#### Toggle On or Off

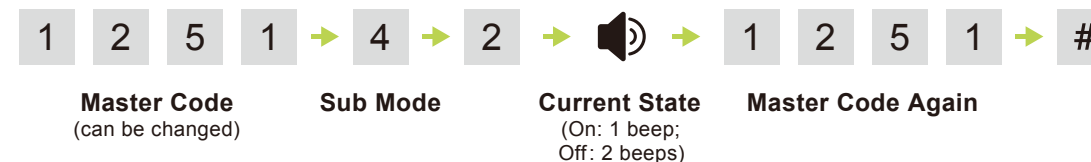

NOTE: Green arrow indicates “good” tone on keypad unit.  
Always wait for good tone before moving on.



## Programming Sub Modes

- |          |                                       |          |                                   |
|----------|---------------------------------------|----------|-----------------------------------|
| <b>1</b> | Add Access Code(s) to Channel A       | <b>8</b> | Add One-Time-Use Code (Channel A) |
| <b>2</b> | Delete Code(s)                        | <b>9</b> | Pairing and Setting Keypad ID     |
| <b>3</b> | Change Master Code                    | <b>0</b> | Delete All Codes                  |
| <b>4</b> | Configure “Three Strikes, You’re Out” |          |                                   |
| <b>5</b> | Add Latch Code                        |          |                                   |
| <b>6</b> | Set Relay Output Time                 |          |                                   |
| <b>7</b> | Add Access Code(s) to Channel B       |          |                                   |

## Things to Know

### The Star Key (\*)

The star key deletes your current entry.  
If you happen to make a mistake keying in a code, simply press the star key to delete the entire entry and start over.

### The Pound Key (#)

The pound key is good for one thing and one thing only: exiting Programming Mode. Whenever you’re in Programming Mode, simply press the pound key to get out.

### Reset Procedures

If for some reason the Master Code is forgotten or the unit needs to be reset to factory defaults, two reset procedures are available: Master Reset and Unit Reset .

These procedures can be found in Section B .

## B Reset Procedures

**NOTE: If an error is made during these procedures, an “error” tone will sound and you must start again from the beginning.**

### Master Reset

(Used if the Master Code is unknown, if the Latch Code is unknown and the unit is in Latch Mode, or if the Sleep Code is unknown and the unit is in Sleep Mode. All other codes will be retained after completing this procedure.)

**Step 1 - Remove front panel of keypad unit.**

**Step 2 - Disconnect battery.**

**Step 3 - Press and hold Reset Button; reconnect battery; then release Reset Button.**  
Unit will sound one (1) tone. Release Reset Button after you hear tone.

**Step 4 - Press Star key (\*) on keypad three (3) times and wait up to 30 seconds.**

**Step 5 - Reattach front panel onto keypad unit.**

The Master Code is now reset to default ( 1251 ).

### Unit Reset

(Used to reset unit to factory default settings. The Master Code will be retained.)

**CAUTION: FOLLOWING THIS PROCEDURE WILL DELETE ALL CODES BUT MASTER CODE!**

**Step 1 - Remove front panel of keypad unit.**

**Step 2 - Disconnect battery.**

**Step 3 - Press and hold Reset Button; reconnect battery; then release Reset Button.**  
Unit will sound one (1) tone. Release Reset Button after you hear tone.

**Step 4 - Enter Pound (#) Star (\*) Pound (#) on keypad.** (Unit will sound “good” tone.)


**Step 5 - Enter 1251 (Master Code) on keypad.** (Unit will beep continuously.)

**Step 6 - While unit is beeping, disconnect and reconnect battery.**  
Unit will then go through power-up procedure.

**Step 7 - Reattach front panel onto keypad unit.**

The unit is now reset to factory default settings. Follow **Master Reset** to reset Master Code.

Notes

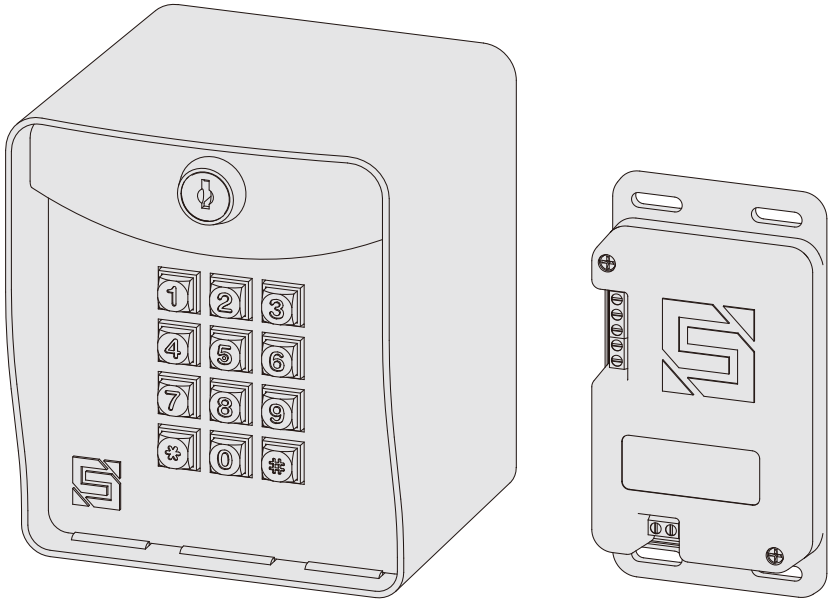

Ridge 2.0  
14-500



NEED HELP

Call (972) 474-6390  
Email [techsupport@securitybrandsinc.com](mailto:techsupport@securitybrandsinc.com)  
We are available Mon–Fri / 8am–5pm Central

**FCC Statement:**  
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.