
Intelli-M System Installation Guide

## CRK

## **CRK Reader - Typical Connection**

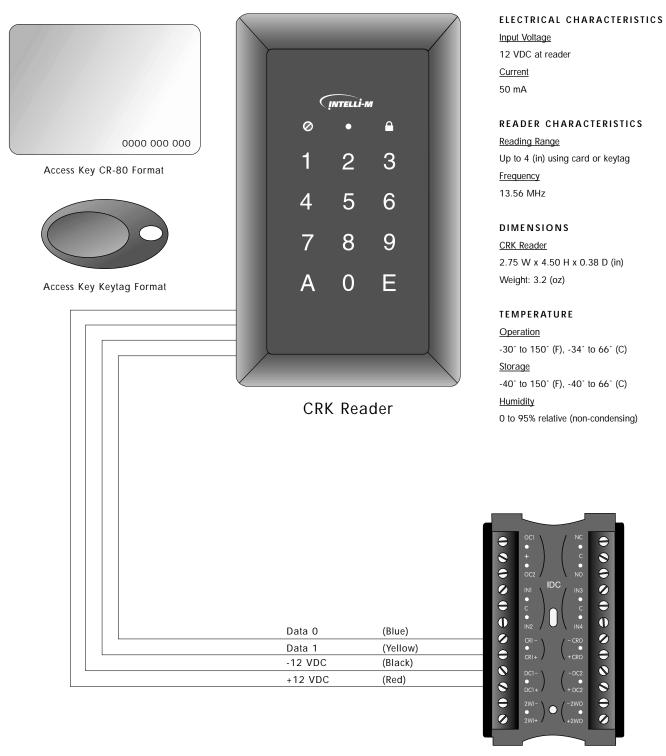

IDC • Integrated Door Controller

Intelli-M System Installation Guide