

**BV150**  
Bluetooth Speaker

**Content**

1. Notes
2. Product packing content
3. Features
4. Parameters
5. Buttons & Slots
6. Power on/off
7. Pair to other Bluetooth devices
8. Micro SD music playback
9. Card reader/Charging mode
10. FAQ
11. Warranty Card

 
**Notes**

- Please use and store this product at room temperature
- Do not expose this product to rain or wet conditions
- Do not throw and drop this product to avoid product damage
- Do not self-dismantling, repair and transform the product
- Do not use chemical solvent cleaning the product
- Please don't arbitrarily discarded or placed the lithium battery in the fire in order to avoid the risk of explosion
- Long time high volume may cause hearing impairment, please adjust the volume appropriately when listening, especially for long time listening.


- ①. Note: Improper battery replacement may cause explosion, only replace with same or equivalent battery
- ②. Don't expose the battery to sunlight, fire or excessive heat

1

**Packing content**

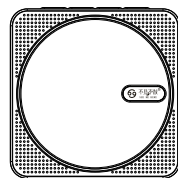


1 Speaker unit: 1pc

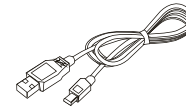 

2 USB charging /data cable 1pc



 3 Rope: 1Pc

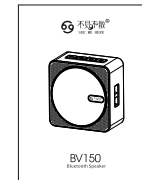

4 User manual/Warranty card 1pc

**Features**

- ⊙ Playback music via Bluetooth connection
- ⊙ Playback music from the micro SD card
- ⊙ With card reader function
- ⊙ Support Bluetooth one button reconnection
- ⊙ Support mp3, WMA, WAV format audio files playback

2

**Parameters**

Appearance	
External interfaces	Micro USB interface, Micro SD card slot
Product size	W80×D80×H37 (mm)
Speaker net Weight	203.8g (Including battery inside)
Basic parameters	
Product type	Bluetooth speaker
Speaker driver	Inside magnetic trumpet
Volume control mode	Buttons
Bluetooth Version	Bluetooth 4.2+EDR
Storage type	Micro SD card (MAX 32G)
Power supply	Built-in 600mAh rechargeable lithium battery
Technical parameters	
Output power	3W THD = 10%
Frequency response	100Hz-20KHz
USB specification	USB2.0, compatible with USB1.1
Charging time	DC5V=500mA around 2 hours
Audio play time	Around 6 hours at Mid-volume
Functions	
File format	MP3, WMA, WAV
Micro SD card playback	Support
Bluetooth playback	Support
Card reader	Support
Bluetooth Reconnection	Bluetooth one button reconnection

 
3

**Buttons & Slots**

**Buttons Instruction**

**Previous/Vol-** : Short press to previous song, press and hold to decrease the volume.

**Next/Vol+** : Press to next song, press and hold to increase the volume.

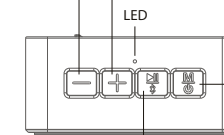

**Power key:**  
Press and hold 2 seconds to power on /off  
Short press to switch the mode when the speaker is powered on.

**Pause /Play:**

 
**Short press** : Pause/play. Press and hold to disconnect the Bluetooth device when the Bluetooth paired , short press to reconnect the Bluetooth device when the Bluetooth disconnected.

**Micro SD slot :**

Insert micro SD to play music from the card or start up card reader function when connect to computer.

**Reset hole :**

If the speaker halted, press this hole with steel sticker to restart the speaker.

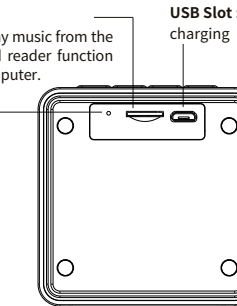

4

**Power on /off**

**1 Press and hold 2 seconds to power on /off**

Press and hold 2 seconds to power on voice prompt ring, blue LED light up and flashing, the speaker is on, press and hold 2 seconds to power off voice prompt ring, the blue LED light goes out, the speaker is off.

**Pair to other Bluetooth devices**

**1 Bluetooth connect**

Turn on the Bluetooth function of other Bluetooth devices, and start to scan the speaker, when "BV150" appears in the list, press to connect.

**2 Bluetooth connected and playback**

After connecting successfully, the beeps up, LED light continuous blue, you can select music from the Bluetooth devices and play, the LED light continuous blue when the speaker playback.

1.If necessary, please input "0000" and press to pair.

2.The speaker can reconnect the last paired device(if this device's Bluetooth is on) when power on, no need to scan and pair again.

**3 Disconnct Bluetooth device**

If the speaker connected the device, press and hold to disconnect the Bluetooth, and then the speaker is discoverable for Bluetooth scanning, the blue LED light flashing fast, disconnecting beeps up.

**4 Bluetooth device reconnect**

If the Bluetooth device disconnected, and need to reconnect, you just need to short press to reconnect the last connected playback device, and play the recent files, the LED light continuous blue, the LED light slowly flash when pause.

5

**Micro SD music playback**

**1 Insert micro SD card and power on**

 
Insert micro SD card stored music files into the micro SD slot, press and hold power button to power on the speaker, voice prompt up.

**2 Switch to micro SD card music play mode**

Press to exchange to micro SD card music playback, the speaker will play the audio files stored in micro SD card, the LED light continuous blue, the LED light slowly flash when pause.

**Kind reminder :** The default mode is Bluetooth mode, so if want to play music stored in micro SD, need to exchange to micro SD mode, if the speaker is on, insert micro SD card, then the speaker play the music stored in micro SD directly.

**Card reader/Charging mode**

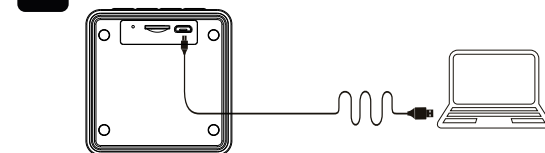

**1 Copy files**

First, when the speaker is off, insert micro SD card, connect the speaker to computer by using the USB data transfer cable which includes in the accessory, then power on the speaker, and enter card reader mode, and then can copy the files and store in micro SD card. Press to exit card reader mode and enter Bluetooth mode.

6

**2 Speaker charging**

Charging the speaker by using the data cable which includes in accessory to connect computer. Also can use USB adapter (over DC 5V=1A) to charge the speaker. The LED light continuous red when charging, the red LED light goes out when charging completed.

**Kind reminder :**

If no use the speaker for a long time, please charge it first.

The speaker will power off in 10 minutes automatically, if no Bluetooth connection, no micro SD card inserted or micro SD card playback pause.

**FAQ**

Problems	Settlement
Failed to connect many times	1.Restart the speaker 2.If needed, please input passcode "0000"
discontinuities appears when playback	1.check if the Bluetooth device is out of the valid distance, or there is block between speaker and Bluetooth devices.
Micro SD card error Format error	1.Check if the Micro SD card format right (the speaker supported micro SD format is FAT 32) 2.Check the files stored in Micro SD card are Mp3, WMA, WAV
No sound when play	1.Check the speaker's volume 2.Check if the speaker is on mute or pause
Can not power on	1.Please reset the speaker by pressing the reset hole

7

**Warranty Card**

Please fill up this "warranty card" after purchasing this product

Date of purchase: \_\_\_\_\_

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone: \_\_\_\_\_

Authorized dealer stamp: \_\_\_\_\_

Dealer address: \_\_\_\_\_

Dealer: \_\_\_\_\_

Phone: \_\_\_\_\_

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCCID:2ABNJ-BV150