

Preface

Dear Users :

Welcome to purchase “SeeMeHere”’s product ,please read this user manual carefully before using it .Thanks , Let’s enjoy music together !

The “SeeMeHere” keeps the final right of interpretation of this manual .



Logo:

Model: BV210

Warnings

- Please use and store this product at room temperature
- Do not expose this product to rain or wet conditions
- Do not throw and drop this product to avoid product damage
- Do not self-dismantling ,repair and transform the product
- Do not use chemical solvent cleaning the product
- Please don’t arbitrarily discarded or placed the lithium battery in the fire in order to avoid the risk of explosion

Packing Content :

1. Bluetooth speaker 1pc
2. USB cable 1pc
3. 3.5mm audio cable 1pc
4. hook 1pc
5. user manual 1pc

Features

- With wireless Bluetooth technology
- Support one button Bluetooth reconnection
- With built-in Mic ,support handfree function
- Play main APE/FLAC MP3/WMA/WAV format audio files stored in TF card
- Support Line in , with built in card reader to exchange data directly
- Automatic shutdown after suspension without operation for 5 minutes
- Built in efficient li-on battery ,USB charging is available
- With voice broadcast ,support the phone ring

Technique Parameters

Interfaces	Micro USB port
	TF card slot

Product size	W93.8*D83*H40mm
Product weight	218g(Including battery)
Speaker type	Bluetooth Speaker
Speaker structure	Single track+ Low frequency radiator
Functions	Bluetooth wireless connection, Handfree function ,Voice prompt ,TF card music play, AUX Input, Card reader ,USB Charging
Supported cards	Max. 32GB TF card
Power supply	Built-in 800 mAh li-on battery DC 5V—500mA USB charging
Loudspeaker	1.5inch
Output power	3W 4 Ω
Frequency Response	80Hz~18KHz
Wireless connection	Bluetooth 2.1+EDR
USB	USB2.0 Compatible with USB1.1
File formats	APE、FLAC、WAV、WMA、MP3
Bit Rate	MP3: 8Kbps-320Kbps
	WMA: 32Kbps—384Kbps
	APE: 600Kbps—1000Kbps
	FLAC: 600Kbps—1000Kbps
	WAV: 32Kbps—1000Kbps

Key Functions

- Prev / Volume-** : Short press to previous song , long press to decrease the volume
- Next/Volume+**: Short press to next song . long press to increase the volume
- Power button** : Pressing 3 second to power on or power off
Play/ Pause : Short press to play or pause music play
Call answer button :Short press to answer the call, short press again to hang up the call
- Mode key**: Exchange model among Bluetooth mode ,TF Card music mode and Line in mode
Bluetooth disconnected or reconnected : Short press two times to open or shut down the voice prompt; long press to disconnect under bluetooth connection mode.
- Reset button** : Press to reset the device.
- TF card slot**: Insert TF card
Micro USB port :Data exchange / Charging port /Line-in port

Main Function Operation Instruction :

Bluetooth Connection :

- Press 3 seconds to power on :
Power on: After “Ding-dong” , there is an another voice prompt “Bluetooth mode”, and then blue indicator flashing
- Bluetooth Connection :
Open the Bluetooth function of mobile phone , MID and other music players with Bluetooth

function ,and search the devices , when you find the “BV210” ,click to connect

3. Connected and play

The speaker says, “Connected” ,and the blue indicator always light up, and then you can enjoy the music with this speaker .

Bluetooth signal valid distance 10M

1. If need password , please input “0000” and confirm to connect
2. The Bluetooth can reconnect the last paired device automatically

TF Card music play

1. Insert TF card and power on
2. Short press M button to exchange to TF card music play mode ,the speaker will say”TF card mode “,and then the speaker play the music stored in TF card .

Kind reminder : If the speaker is on , when you insert the TF , it will switch to TF card music automatically

Handfree Function :

1.The speaker connected with a mobile phone , when the call coming , short press to answer the phone , short press again to hang up the phone , long press M to reject the call .

Under line-in mode

Power one the speaker , after “Ding-dong” , the speaker says” Bluetooth Mode “ , short press to switch to line in mode , connect the speaker to the music player to play music stored in other players .

Card reader Mode

1. Under power off condition

When the speaker is off , connect the speaker to the computer through the attached USB cable (speaker’s micro SD port)and insert the TF card ,the speaker says”card reader mode “and the user can edit the files stored in TF card

Charging

The user can choose DC5V-500mA USB adaptor to charge the device

Connect the speaker(micro USB port) to the computer through attached USB cable , and then the speaker is charging , when the charging completed , red indicator lights off.

Speaker power supply voice prompt :

Battery low :speaker will prompt “Di,Di “ every 30 seconds

FAQ

Questions	Settlement
Fail to Bluetooth connect	1.Restart the speaker
	2.If need password , please input “0000”
Music Play Break	Please check the Bluetooth connection valid distance or if something cut off the signal
TF card music play wrong	1. Check if the TF card format right (the speaker just can support FAT 32 format TF card)
	2.Check if the music file format store in TF card right ,the speaker just can support APE、FLAC、WAV、WMA、MP3 format files
No Sound	1.Check the volume the speaker
	2.Check if the speaker is in mute or pause
Line-in no sound	Check if the audio cable connect right
Fail to power on	Check if the batter is low
Speaker halt	Reset the speaker

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user’s authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used

in portable exposure condition without restriction.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Warranty Card

Please fill up this "Warranty Card" after purchasing this product .

Date of purchase :-----

Name:-----

Address:-----

Telephone:----- Zip code:-----

Authorized dealer stamp:-----

Dealer Address:-----

Phone:----- Zip Code :-----