

Remote Control Used Instructions

- 1、 The remote control by 3 v button cell supply, transmission frequency of 433.92 MHz.
- 2、 The remote control and alarm ball bubble are used together, itself does not have what function, And alarm ball bubble used together with the functions as follows:
Alarm ball bubble electrify default is white light illumination condition,
When you press the remote controller R button: the ball bubble white light → red light bulb flash + alarm sound
Then press W button: the ball bubble red light flash + alarm sound → white light
- 3、 Real product photo show:



- 4、 Manufacturer:
address: 5/6th Floor block 27,Lianchuang Technical Zone, bulan road,
Longgang district, Shenzhen,China
phone: +86-0755-89509951
fax: +86-0755-28445133

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.