



**SRH**

**Handset Based Console (HBC)**



**Standard Console (SRG)**

<b>Switch On</b>	Press the Mode Key.
<b>Switch Off</b>	Press & Hold the Mode Key.
<b>Volume Adjust</b>	Rotate the Navi-knob™ or press + and – Navi-keys.
<b>Emergency Call</b>	Press and hold the Emergency Key.
<b>Change Talkgroup</b>	Press the Mode Key once, and then rotate the Navi-knob™ or use the Navi-keys to choose from the list of talkgroups in the current folder, or dial the number of the talkgroup using the keypad. Wait or press the PTT to activate the new talkgroup.
<b>Change Folder</b>	Press the Mode Key once, and then use the Up and Down Navigation Keys to select a talkgroup folder. Then change the talkgroup as explained above.
<b>Talkgroup Call</b>	Press the PTT.
<b>Radio Call to Individual</b>	Dial the radio number and select  (using Up/Down Navigation Keys), then press PTT to start the call.
<b>Telephone Call</b>	Dial the required number and select  (using Up/Down Navigation Keys), and then press the Green Telephone Key to start the call. To end the call press the Red Telephone Key.
<b>Send Status</b>	Press the Mode Button twice and then rotate the Navi-knob™ or press the Navi-keys to select a status value. Press PTT twice to send to the currently active talkgroup. These messages can also be accessed from the menu structure.

## Menu Access

From the default screen:

- Press the Down Navigation Key once to see the menus available;
- Press the Left or Right Navigation Key to move across and select the menus;

- Press the Down Navigation Key to enter menu;
- Press the Left or Right Navigation Key to move across the cards within the menu.

Press and hold the Up Navigation Key to exit the menus and return to the default screen. Alternatively, do nothing and the default screen will reappear after a timeout.

### Activating Menu Options

Some menu cards allow you to alter settings within the radio by checking or unchecking a checkbox. Press the Green Telephone Key to activate a function and ‘check’ its checkbox. Press the Red Telephone Key to deactivate a function and ‘uncheck’ its checkbox. In the Network Selection Menu only one Network can be activated, so the previous network is deactivated automatically.

### Entering Text

Within menu cards that allow text entry, e.g. to send message;

- Press and hold the Down Navigation Key to start editing;
- Enter or edit your text as required from the keypad;
- Press the Green Telephone Key to action your changes or the Red Telephone Key to exit.











### Activating Soft key Functions











Press and hold the required soft key.

















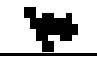








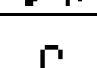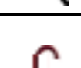

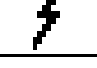








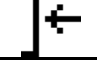



(A list of soft key functions may be displayed on the Help key if programmed.)

















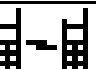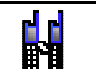
















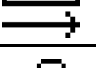


Some soft keys are a “toggle” function, requiring no further action. Some are navigation keys requiring a second action.

### Icons

Description	Icon	
Half duplex call		
Broadcast call		
Telephone type call dialling mode		
Transmit Inhibit		
Emergency call		

Description	Icon	
DMO Gateway		
Signal strength		
DMO Repeater found		
Battery		
Keypad Locked		

Description	Icon	
New message		
Missed Call		
Low battery		
Lone Worker		
Covert Operation		
Calls not encrypted		
Power from charger		
Paging Alert		
Press '+' Navi-key or turn Navi-knob™ clockwise to move cursor		
Communication mismatch		
DMO Repeater		
Privacy Mode		
Group Focus		
GPS		
TETRA type dialling mode		
Incoming Call		
Folders		
External Alerts		
Function is activated		
Lone Worker Alarm		

Description	Icon	
Volume level meter		
Packet Data session		
Scanning		
Radio Settings		
WAP		
Calls are E2E encrypted		
Telephone style call		
Messages		
Press '-' Navi-key or turn Navi-knob™ anticlockwise to move cursor		
Status Messages		
Directory		
Call History		
Message Store		
GPS disabled		
Radio Information		
Outgoing Call		
Network Selection		
Short Data Applications		
Function not activated	