

OPERATING DRONE

1 Pre Flight Checklist

1. Read all warnings and instructions.
2. Install remote batteries, page 3.
3. Make sure that drone and remote are powered off.
4. Install drone holder.
5. Charge batteries, page 3.

2 Choose a location

Slide drone switch to ON.

Place drone on a flat even surface.

For ease of control, the red lights should be toward you.

Turn remote ON. The status LED will light.

The drone's lights will flicker rapidly during the auto-pairing process and then remain on once it has paired.

3 Pairing Drone

Always turn off remote prior to retrieving or picking up drone. This will help you avoid accidentally activating propellers.

6

OPERATING DRONE

TAKE OFF AND LAND

TAKE-OFF
Press and release thumbstick. Drone will rise and auto-hover.

LANDING
Bring drone to 10" of ground. Press and release thumbstick and drone will land.

CLIMB/DIVE

CLIMB
Press and hold thumbstick while raising hand. Drone will climb.

DIVE
Press and hold thumbstick while lowering hand. Drone will descend.

When first using drone, use small hand movements to control it.

7

OPERATING DRONE

DIRECTION

Turn Left and Right

SPIN COUNTER-CLOCKWISE
Push the thumbstick backward.

SPIN CLOCKWISE
Push the thumbstick forward.

Forward and Backward

Sideways

8

ADVANCED MODES

STUNT

Hover the drone to at least above 10 ft.

Push and hold the thumbstick up.

While still holding the thumbstick up, move your hand in the direction that you want the drone to flip.

360

AUTO-ORIENTATION

When drone is in Auto-Orientation mode, the drone will orient to the user (remote), no matter what direction the drone is facing.

Press the thumbstick down and release.

The drone's lights will blink steadily while in auto-orientation mode.

To turn off Auto-Orientation mode, push the thumbstick down and release. The drone's lights will stop blinking and remain on.

9

TIPS & TROUBLESHOOTING

TIPS

- Do not crash drone into sand or dirt. Drone gears may become clogged.
- When first learning to fly, practice lifting off and hovering.
- Stay several feet from walls and buildings.
- Always press throttle all the way down after crashing or when something gets stuck in propellers.
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLE SHOOTING

When remote switch is turned on, the remote light does not illuminate:

- 1) Check that batteries in the remote are installed correctly OR
- 2) Replace with new batteries.

During flight, the Remote Power LED is flashing:

- 1) Remote batteries are low. Land the drone immediately.
- 2) Replace old batteries.

Drone and remote properly pair, but the drone will not lift-off:

- 1) Drone battery needs charging. Use the USB Charge Cable to connect the drone to power source.

After trimming the drone, flight is very unstable and it cannot fly properly:

- 1) One or more blades are most likely damaged. Replace with the proper number replacement blade and try flying again (page 3).
- 2) Press the thumbstick down for 5 seconds to reset the gyroscope.
- 3) Turn off the drone and remote, then repeat the pairing process (page 6).

Remote and drone cannot be paired:

- 1) Remote must be within 12 feet of drone.

Note: If there is more than one unpaired drone within 12 feet, one must be successfully paired before others may be paired.

10

SHARPER IMAGE

14+

STUNT DRONE WITH HAND CONTROL

Printed in China

BC **CHOKING HAZARD - SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.**

GETTING TO KNOW YOUR DRONE

PLEASE READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO USE. KEEP THIS DOCUMENT AS IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR DRONE.

CHARGING

- Drone must be charged before each use (USB Charge Cable included)
- Indicator light will turn off once fully charged
- Install batteries in remote

PAIRING

Before each flight pair the remote with the drone:

1. Turn your drone on and place on a flat, level surface
2. Turn on the remote.
3. Steady lit lights on the drone confirm pairing
4. Repeat steps 1 and 2 if necessary.

IMPORTANT!
After a hard landing, turn drone and remote off. Then, repeat pairing!

DIRECTIONAL LIGHTS

- White lights indicate the front of the drone
- Red lights indicate the back of the drone
- Not applicable in auto-orientation mode

REMOTE CONTROL

The drone is controlled by the movement of the hand wearing the controller. Practice flying in an area free of obstruction. Fly below 10 feet until control is mastered.

- The controller is designed for the right hand
- Use small movements for maximum control
- The thumbstick toggles take-off and landing, altitude changes, & special flight modes.

1

GENERAL WARNINGS

READ ALL WARNINGS AND PRECAUTIONS BEFORE USE.

SAFETY WARNINGS:

- Not recommended for children under 14 years of age. As with all electrical products, precaution should be observed during handling and use to reduce the risk of electrical shock.
- Adult supervision is required at all times.
- Before each use, an adult should review the product and battery to determine that no damage or hazards exist.
- DO NOT TOUCH SPINNING PROPELLERS.**
- Do not allow anything to intentionally make contact in any way with spinning propellers.
- Prevent contact with spinning blades by turning off remote prior to handling drone.
- Use caution and pay attention to your surroundings while operating drone.**
- Do not fly drone into animals, people, or inanimate objects.**
- Keep drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and/or any type of severe weather.
- Do not land drone on wet surfaces.
- Never touch or allow others to touch drone while it is flying.
- Always turn drone off when it is not in use.
- Always fly drone in large open areas.
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY
RECYCLING INFORMATION IS AVAILABLE AT WWW.MERCHSOURCE.COM

FAA WARNING
This drone weighs 0.08 lbs. As of November 2017, the Federal Aviation Administration (FAA) requires registration of unmanned aircrafts weighing more than .55lbs. Visit www.faa.gov/uas/registration for more information. Ongoing compliance with Federal, state and local laws regarding operation is an owner's sole responsibility.

2

WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2018 Sharper Image. Sharper Image® name and logo are registered trademarks. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

PATENT PENDING
Printed in China

QUESTIONS OR CONCERNS?
PLEASE GIVE US A CALL... WE'RE HERE TO HELP

CUSTOMER SERVICE (800) 374-2744

Before calling please locate the 10-digit code printed on the back of your remote

WARNING: ONLY USE PROVIDED USB CABLE FOR CHARGING

3

CONTENTS

INSIDE THE BOX

Lunar 5" Drone

Drone Controller

USB Charge Cable

Battery Cover

Replacement Propellers

Pull firmly to remove broken propeller. Replace with a new one. Push firmly and carefully.

Each blade has a number on it. Match the blades with the corresponding number on the drone.

4

CHARGING/BATTERY

REMOTE

Open battery cover and install 3 "AAA" 1.5V batteries as shown.

RECHARGEABLE BATTERY WARNING: (REPLACEABLE BATTERY)

- Do not disassemble, crush, incinerate or short circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, or other approved chargers.
- Do not charge battery in a fire or hot area.
- Adult supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Remove battery from charger immediately if you smell or hear off-normal noise.
- When fully charged, remove the battery from the charger and store in a cool, dry place.
- Do not touch the battery terminals or other parts, use in the event of such damage, they must not be used until the damage has been repaired.
- Remove batteries if removed before storing.
- Recycle or dispose of battery according to federal, state, and local laws.
- Cells or batteries should not be disassembled, crushed, punctured, opened, or otherwise modified.
- Seek medical advice immediately if a child or battery has been swallowed. Rinse mouth with water for at least 15 minutes and seek medical advice.
- Do not use the battery if it is damaged, swollen, or leaking.
- Store cells and batteries in their original packaging and away from metal objects which may short circuit them.
- Do not store or subject the cell or battery to strong mechanical shock.
- Keep cells and batteries cool and dry both during use and storage. Wipe metal terminals with a soft, dry cloth if the terminals are dry.
- Charge cells or batteries before use.
- Do not use, or after prolonged periods of storage, if they are necessary to charge and discharge the cell or battery, use and then store before attempting to use them again.
- It is the user's responsibility to ensure compliance with relevant local, state and federal laws.
- Refer original product literature for future reference.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc, or rechargeable batteries.
- Always batteries are recharged, use only the specified charger.
- Always use the correct polarity.
- Always use the correct polarity.
- Do not charge with non-rechargeable batteries.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in the bathroom, near liquids or salt.
- Remove batteries if removed before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.

DRONE

Turn off the drone before charging.

Connect the Battery Charger to the charge port on the drone.

Connect connector to power source.

Charge time is approximately 45 minutes.

Note: The USB charging cable will light up while the battery is charging and will turn off when the battery is fully charged.

5

OVERVIEW

White Lights (Front)

Propeller 2

Propeller 1

Propeller 1

Propeller 2

Battery Compartment

ON/OFF switch

Red Light (Back)

Light indicates remote is on

ON/OFF remote switch (on other side)

Hand Strap

Thumbstick

- Press and Release = Auto Take Off/Landing
- Press and Hold = Drone Climb
- Lower Hand = Drone Descend
- Forward = Spin Drone Clockwise
- Backward = Spin Drone Counterclockwise
- Up and Hold + Hand Motion = 360° flip in direction of hand motion
- Down and Release = Auto Orientation On/Off
- Down and Brief Hold = Reset Gyroscope

5