

Operating instruction

MINI JUMPING TRICYCLE

PATENT PENDING: 200430012879.9

NO.WD3168-0008

ILLUSTRATION

Remote controller

*Raceway: 5

*Frequency: 27MHz,35MHz,
40MHz,49MHz.


*Battery: four 1.5-volt batteries

Vehicle:

*Suitable for any stunt action, and the most excited action is jump (Jumping-Tricycle).

The jump height is higher than 15cm when the battery is fully charged.

*Before start playing, please position the power switch to "on", after finish playing, please position the power switch to "off"

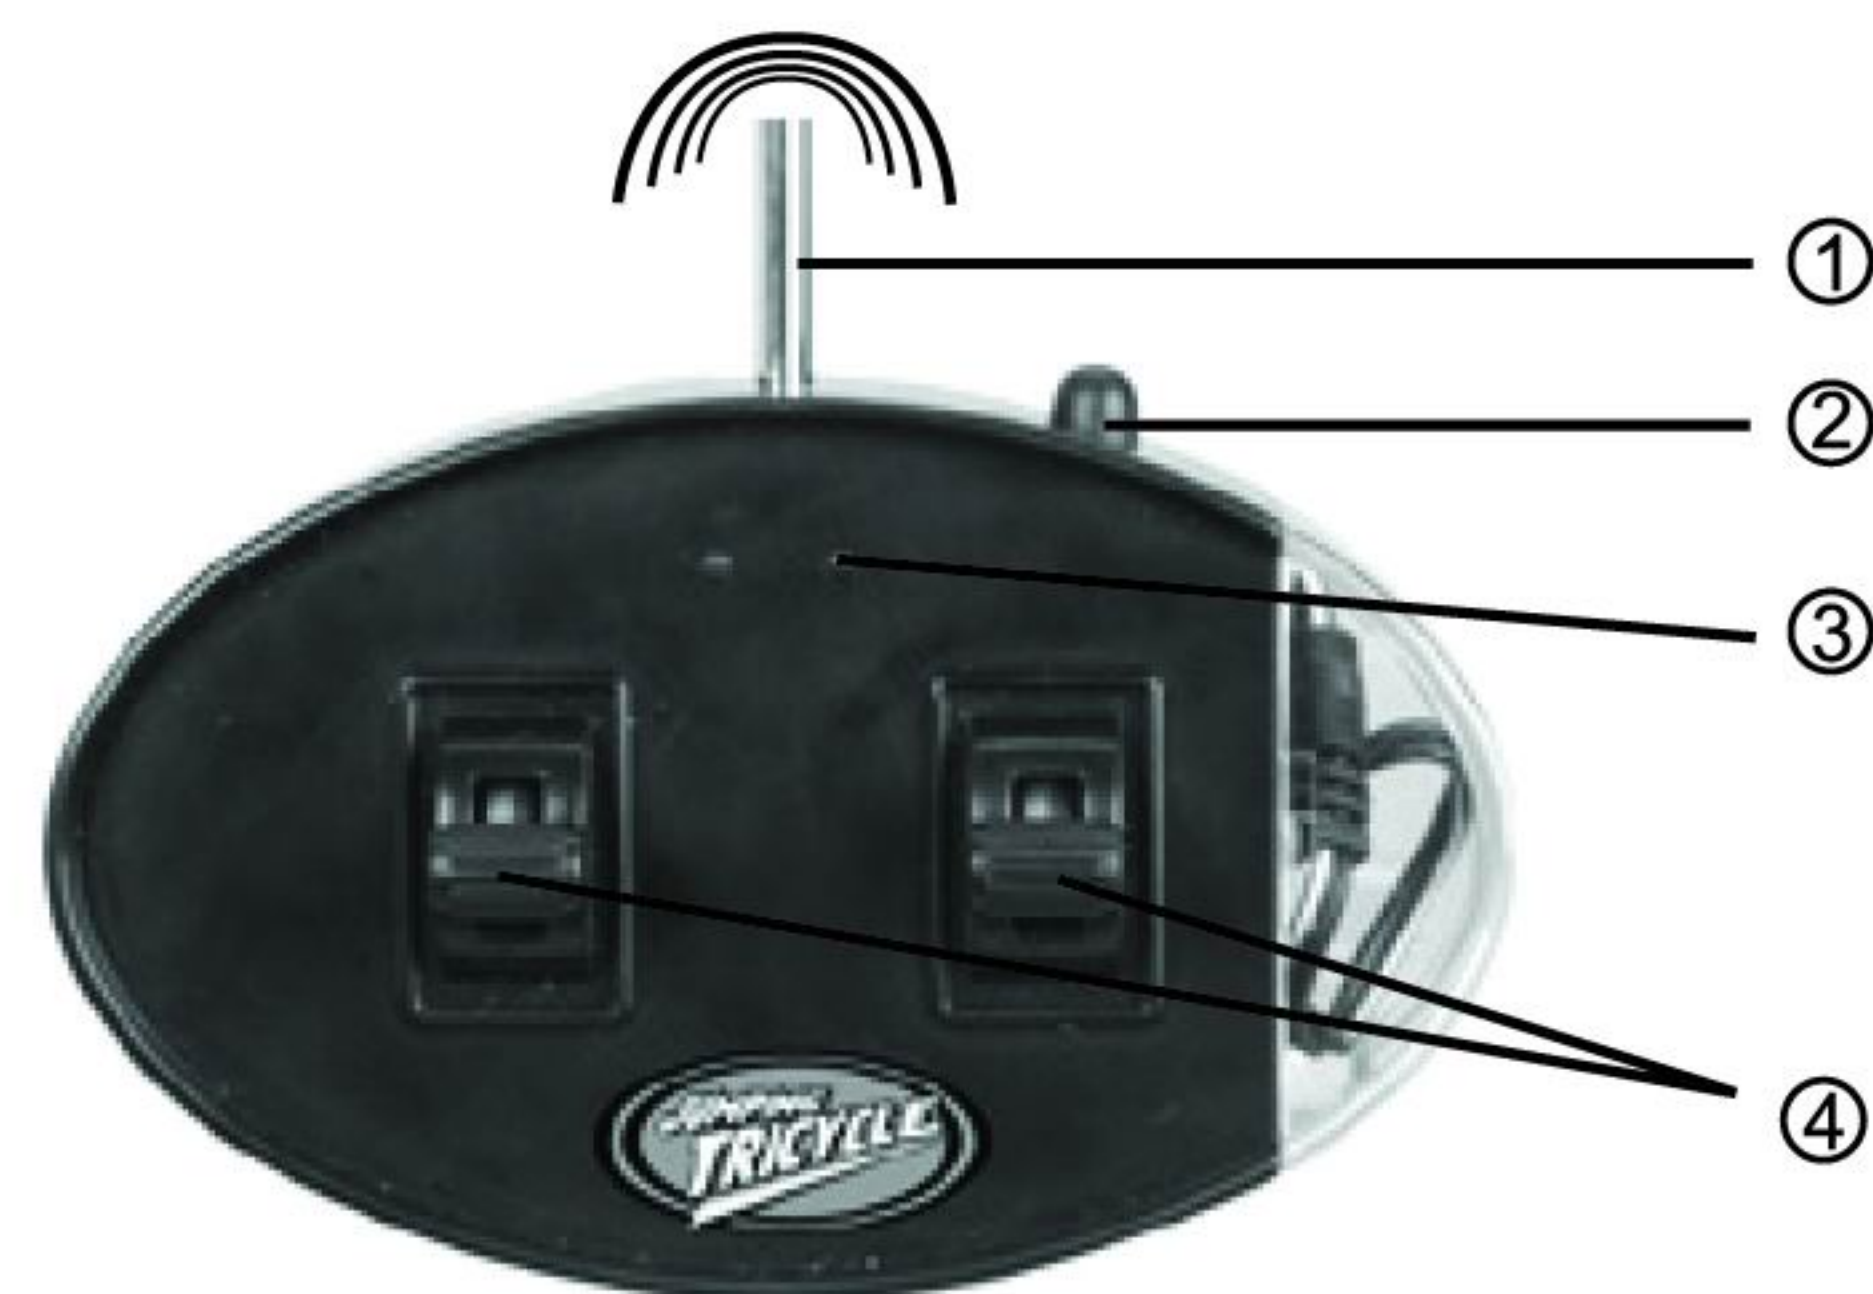

Charging

1. Plug the Battery plug into ⑦ in the car.

2. Suitable charging time is less than 4 minutes.



Attentions

*Charge the battery with the configured charger, it may damage the vehicle circuit if charges with other chargers.

*Forbidden used by children not more than 3 years old.

*When the drive switch is on, avoid wheel touching with your finger, hair and clothes to avoid hurt.

*Avoid catching the driving vehicle.

*The controller and vehicle should keep away from any heat source (i.e.: electric cooker, gas furnace or strong sunshine).

*Do not play in dangerous places. (Like street, steep gradient and etc.)




*Keep away from water, do not use in the open-air place when raining.

*Do not use in sandlot.

*Avoid crushing any barrier, especially person, glass and etc.

*Children are forbidden to disassemble the controller and vehicle.

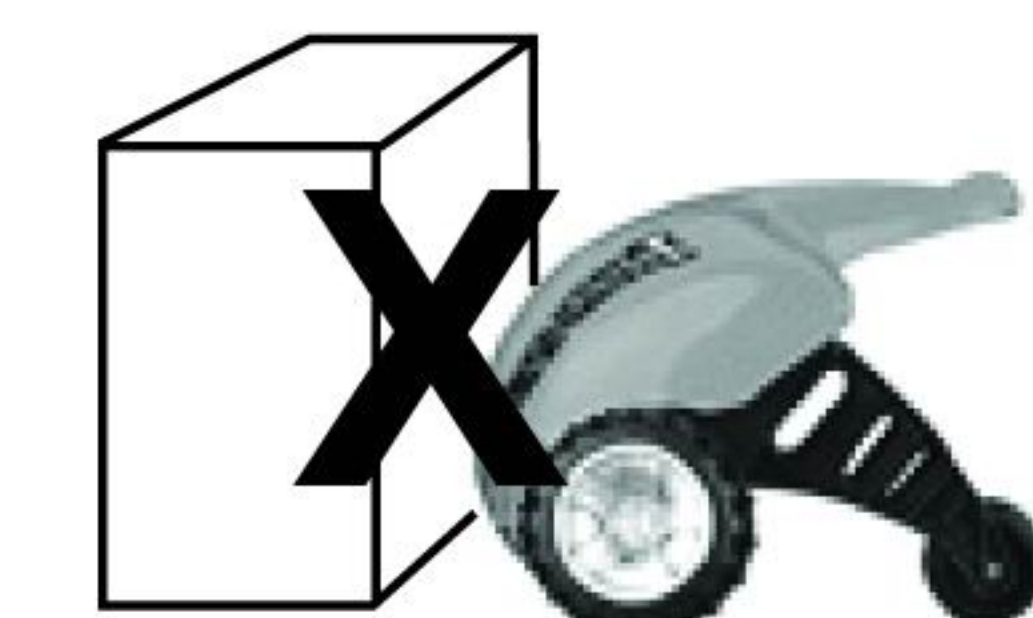

1. Antenna

2. Jump button

3. Indicator light

4. Control lever

5. 1.5 volt battery

6. Battery cover

7. Power input socket

8. Power switch


WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.




Operation

- 1. Fully extend antenna.
- 2. Turn on the switch of vehicle.(Move to "ON")
- 3. Move the control lever of the controller to make the vehicle to drive and do any stunt action, and the most excited action is jump, also called "Jumping-Tricycle".


① Go forward (in high speed, be careful of crushing others).

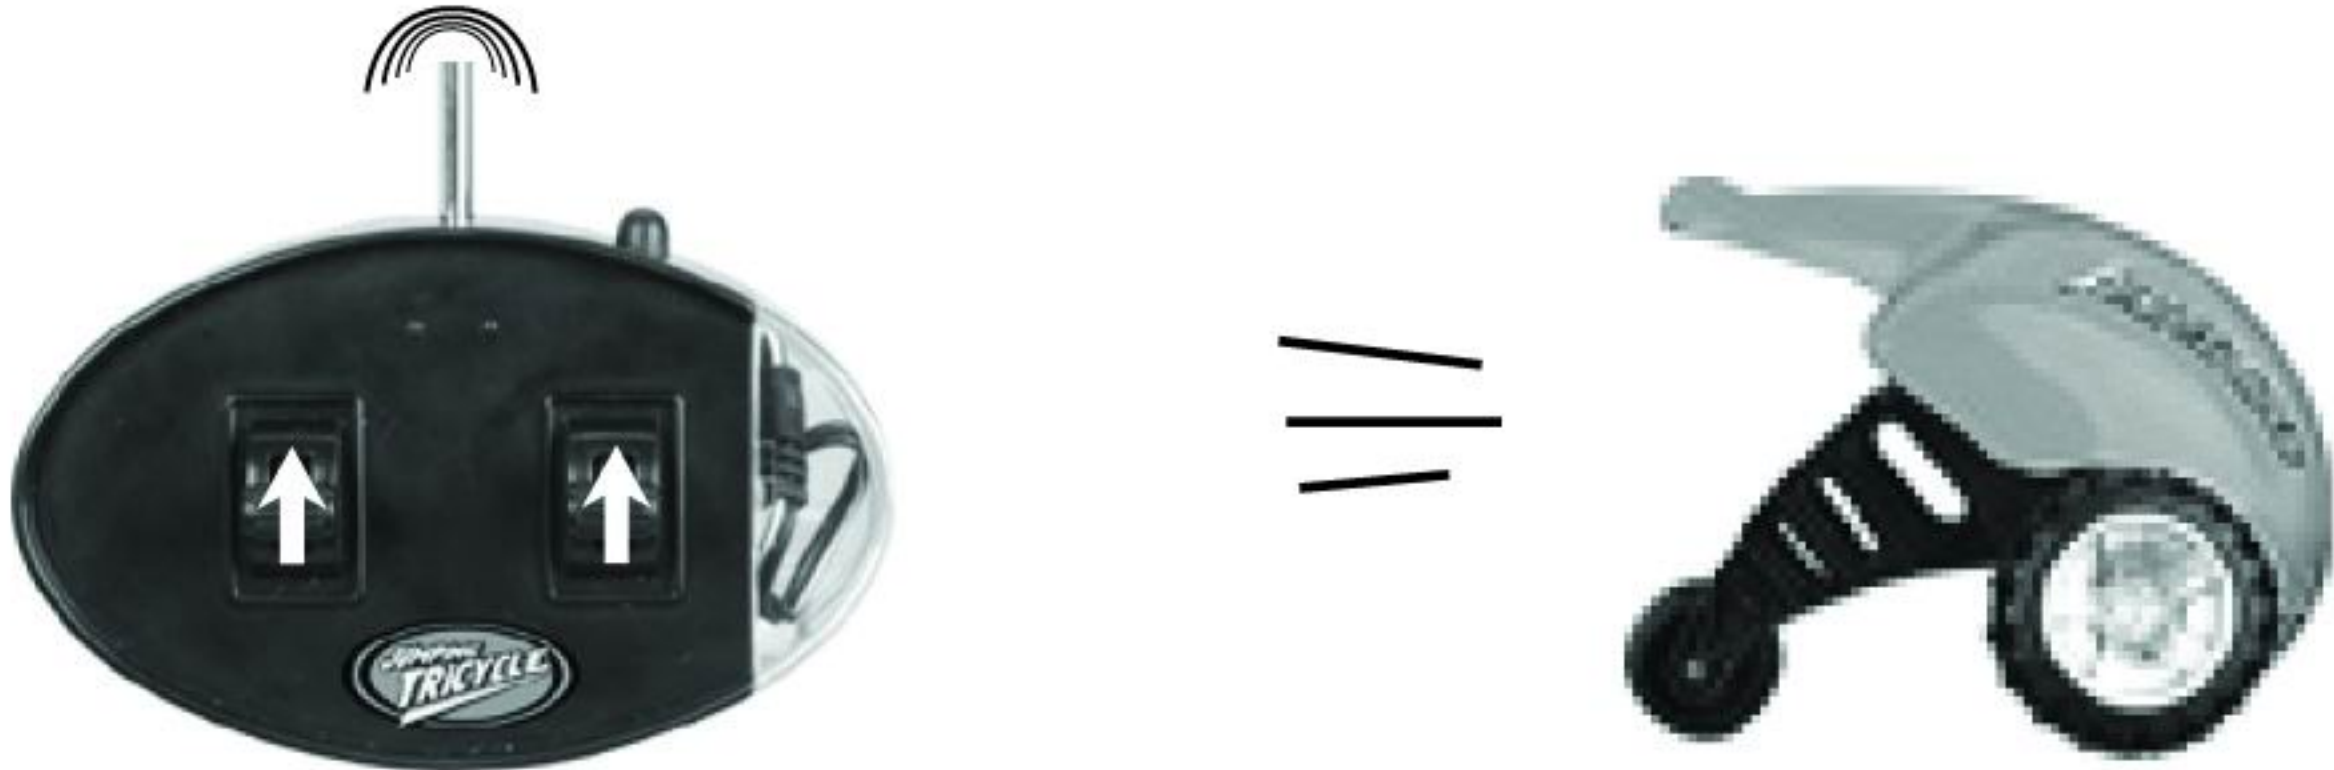


② Small radius turning forward.




③ Small radius turning backward.

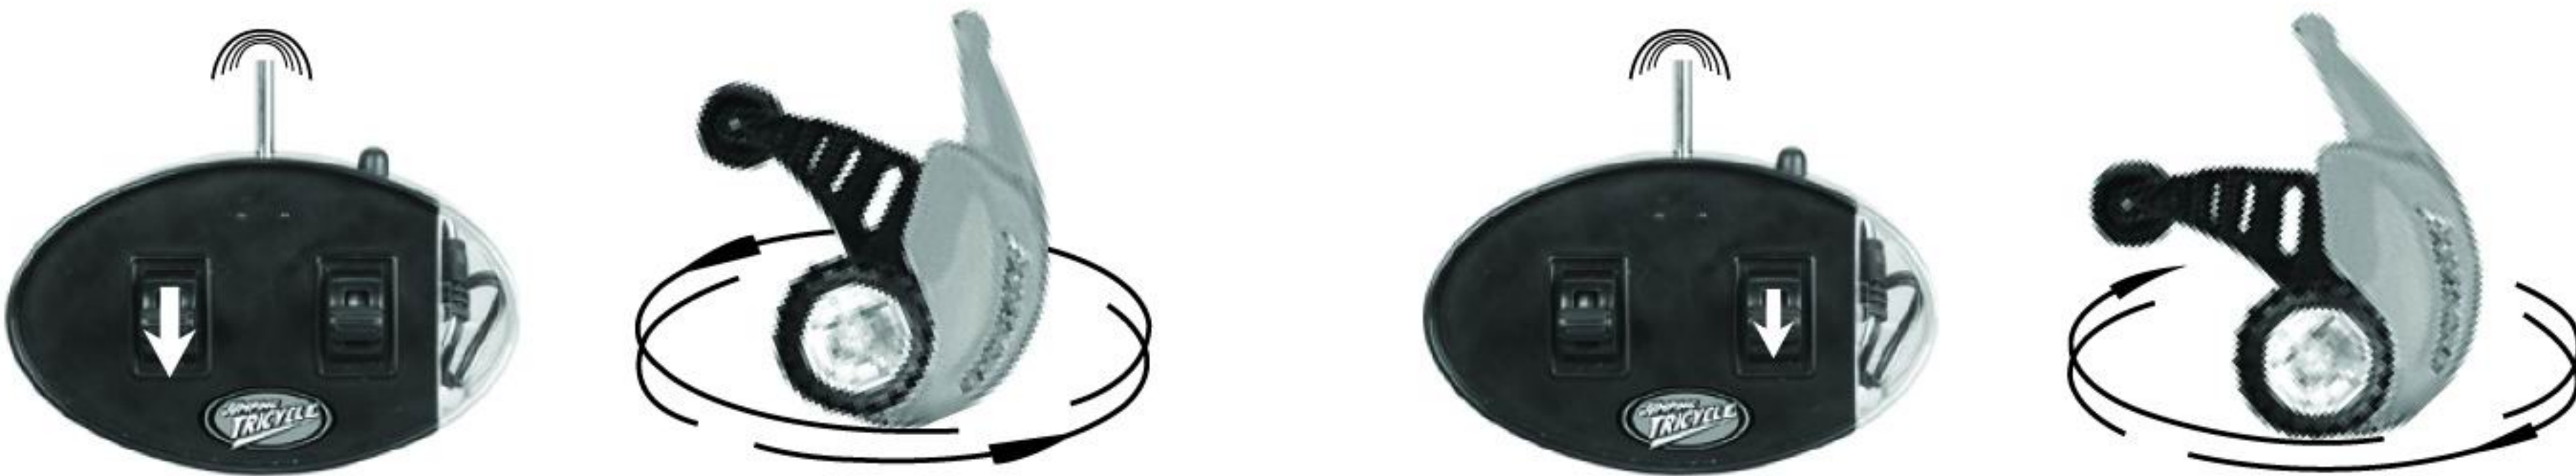


④ High-speed right rotation,like a top standing-up and spinning.




⑤ High-speed left rotation, like a top standing-up and spinning.




⑥ Jump (Jumping-Tricycle)

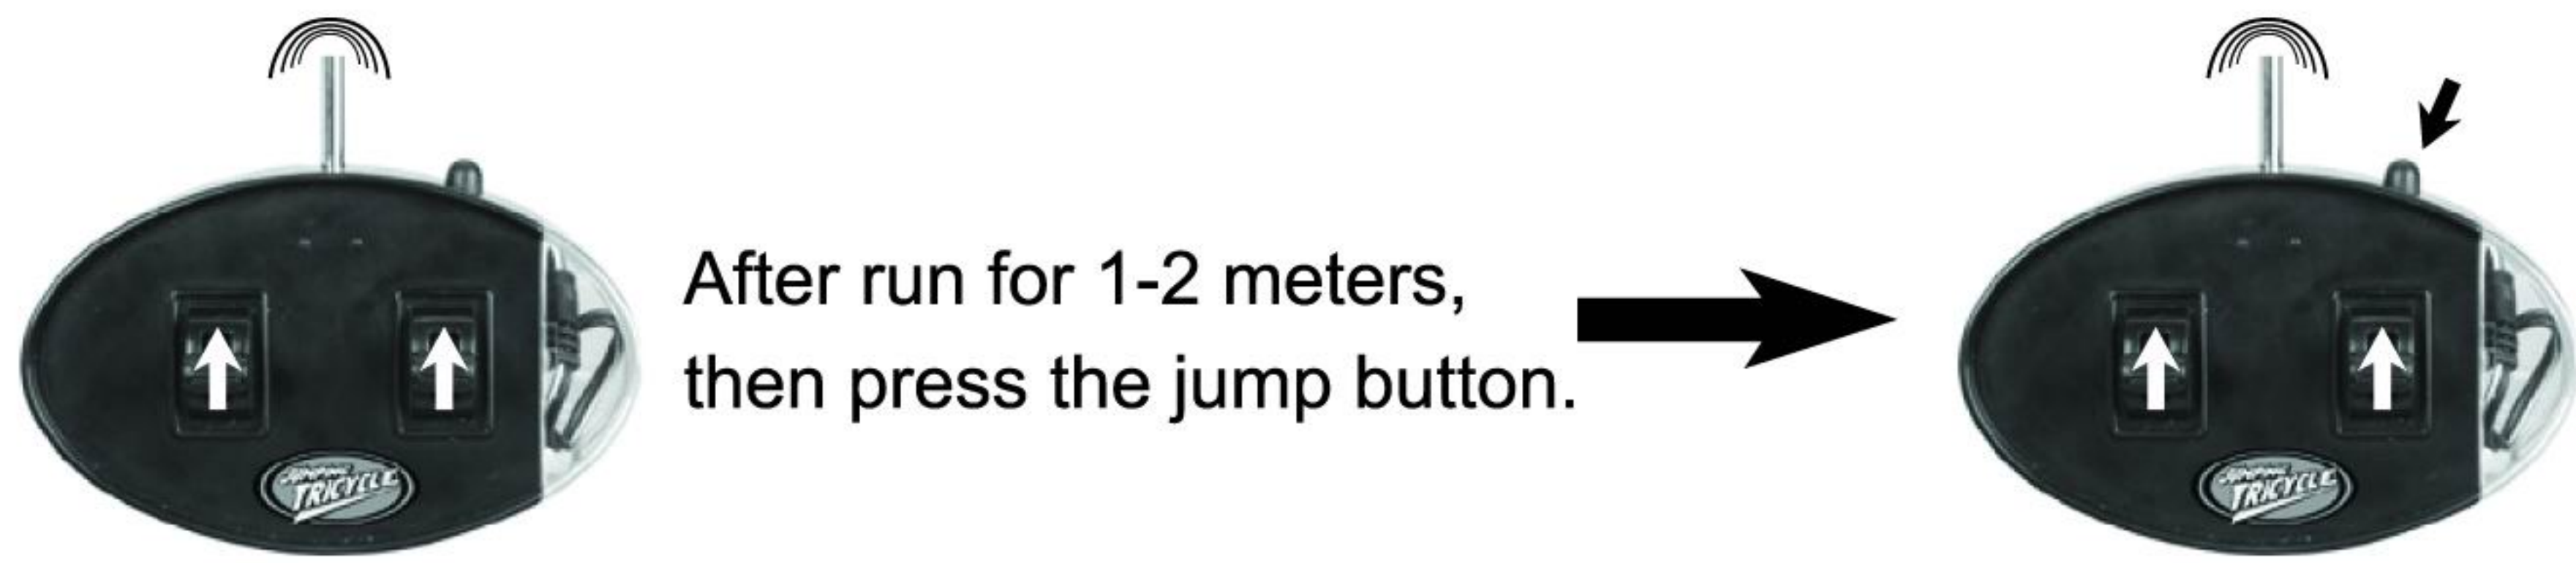


After run for 1-2 meters, then press the jump button.

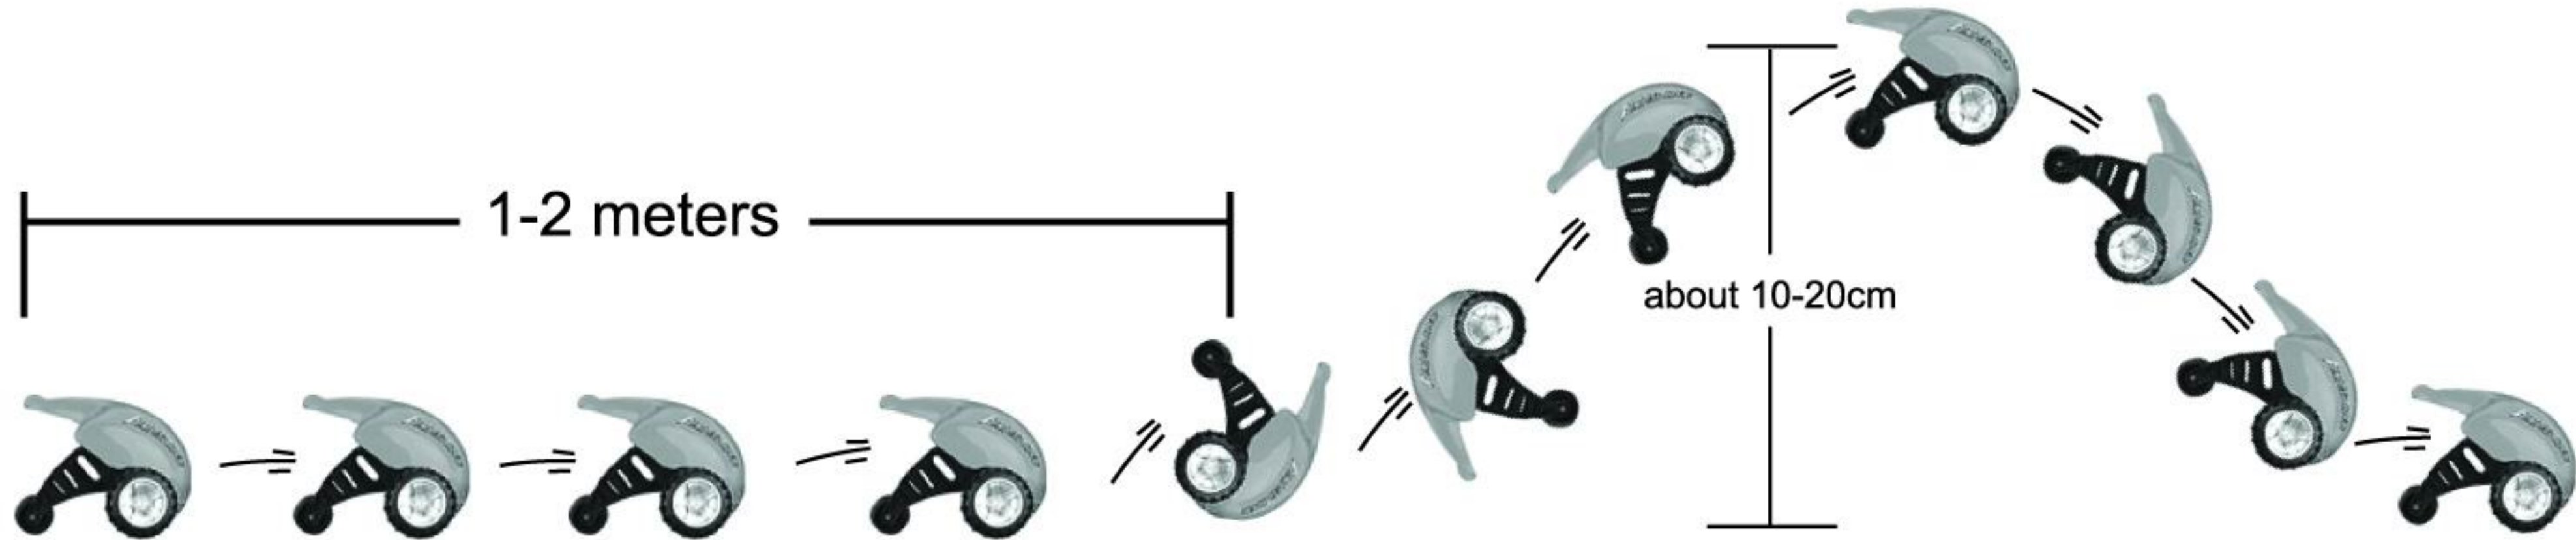

⑦ Make the tumbled vehicle return to standing up position (when the fore left wheel touch the ground).

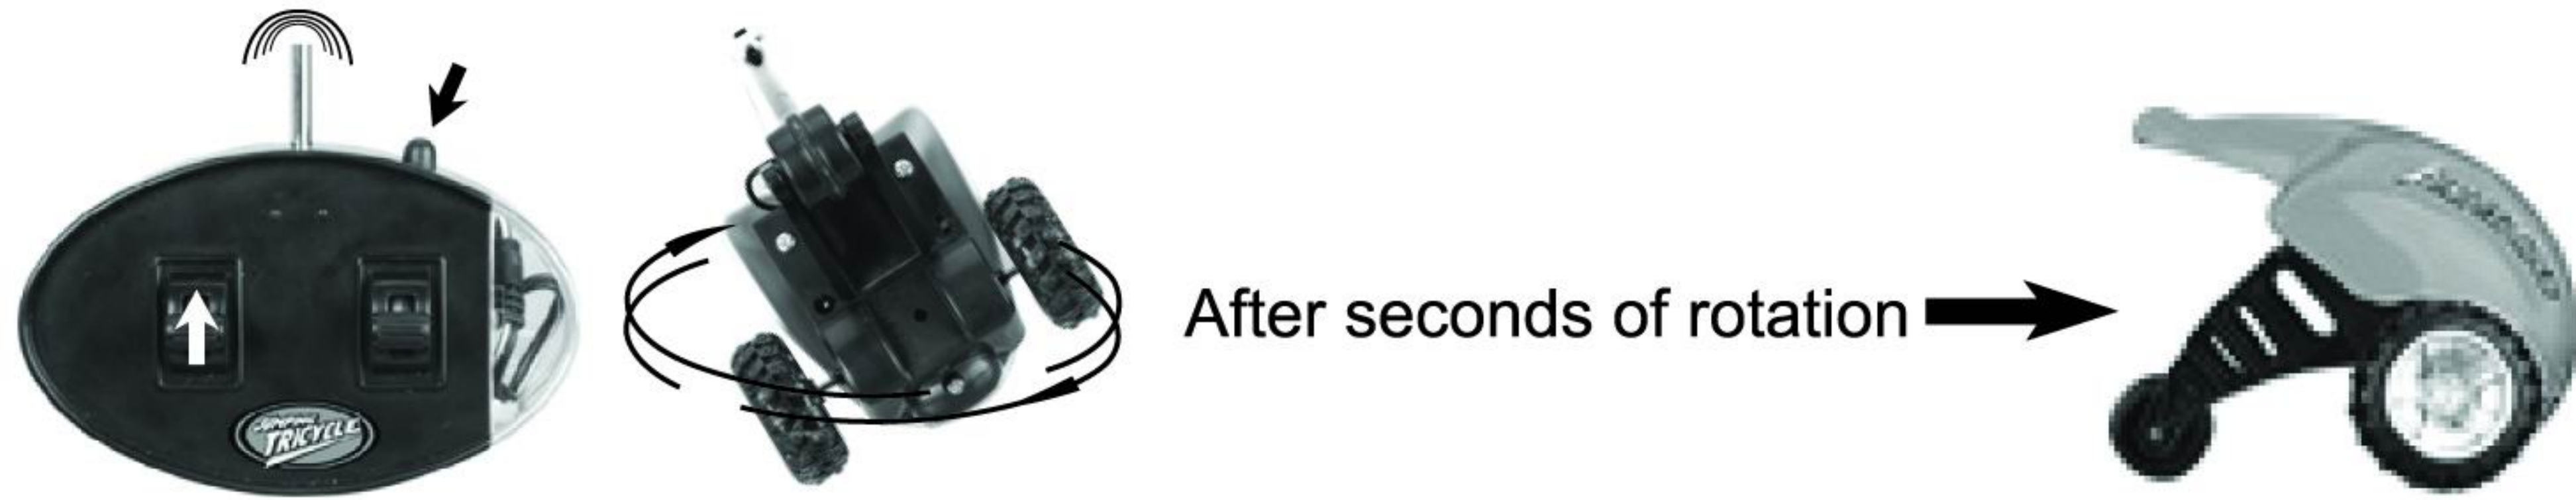

⑧ Make the tumbled vehicle return to standing up position (when the fore right wheel touch the ground)

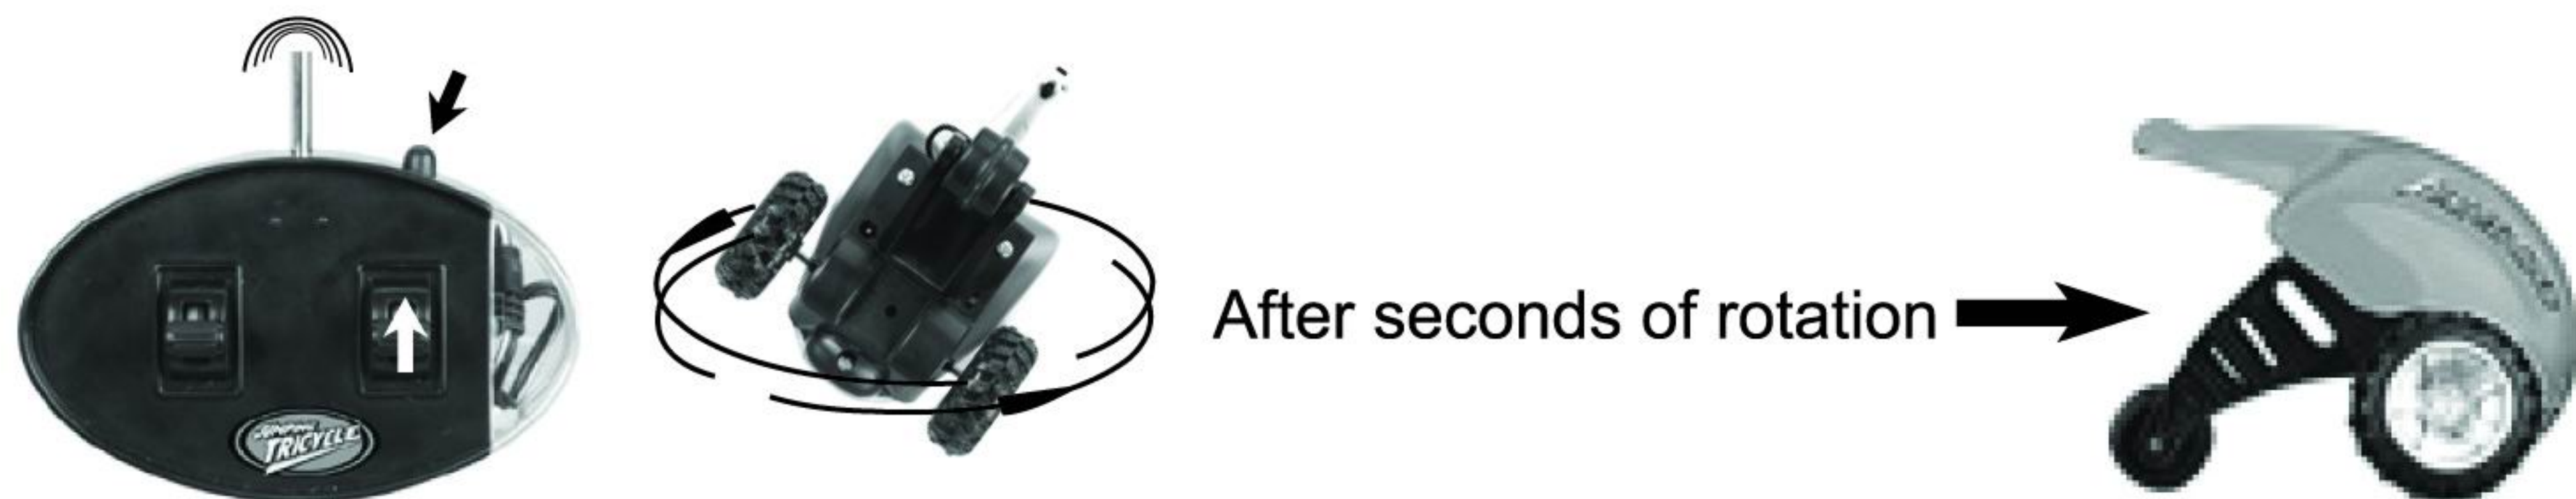

Attentions

- 1. In case of low speed, low jump and cannot stand after tumble,this is because of insufficient power. you should charge the battery.
- 2. Turn off the power switch on the vehicle after playing otherwise the electricity of the internal battery would be exhausted.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.