

Section 1: Getting Started	5	Browser	23
Understanding this User Manual	5	Navigating the Web	23
Special Text	5	Entering text in a field	24
Activating your device	6	Using Browser Windows	24
Battery	6	Entering a URL	25
Battery Indicator	7	Copying a hyperlink or URL	25
Charging the Battery	7	Using Bookmarks	26
Turning Your Device On and Off	8	Browser Menu	28
Set-up Wizard	8	Browser Settings	28
Your Google Account	9		
Memory Card	9	Section 6: Pictures and Video 22	30
Securing Your Device	10	Camera	30
		Taking Pictures	30
Section 2: Understanding Your Device	11	Gallery	31
Features	11	Viewing Videos	31
Front /Side/Top/Back View	11	Viewing Pictures	31
Home Screen	13		
Navigating Your Device	14	Section 7: Connections	33
Notification Panel	16	Wi-Fi	33
Status Bar	17	Configuring Wi-Fi Settings	33
		Turning Wi-Fi On/Off	33
Section 3: Setting Accounts	18	Scanning and Connecting to a Wi-Fi Network	34
Accounts	18	Adding a Wi-Fi Network Manually	34
		Bluetooth	34
Section 4: Entering Text	19	Configuring Bluetooth Settings	34
Virtual QWERTY Keyboard	19	Pairing with a Bluetooth Device	35
Changing the Input Method	19	Tethering	36
Email	20		
Account Settings	22	Section 8: Applications and Widgets	39
		Camera	39
Section 5: Web and Social Networking	23	Email	39
		Gallery	39
		Market	40
		Music Player	40

Turning Your Device On and Off

Turning Your Device On.

 
Press and hold the Power/Lock Key .




Note: Your device's internal antenna is located along the bottom back of the device. Do not block the antenna; doing so may affect signal quality and may cause the device to operate at a higher power level than is necessary.

Turning Your Device Off

1. Press and hold the Power/Lock Key .

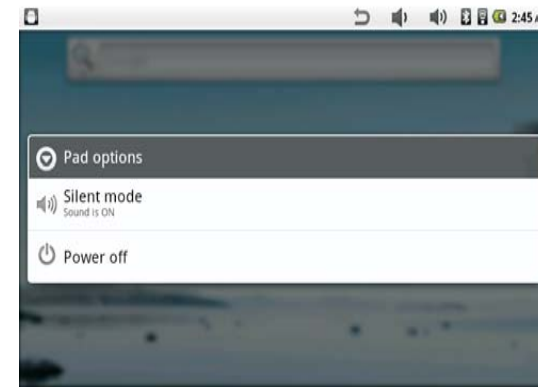


 
2. At the prompt, touch Power off.

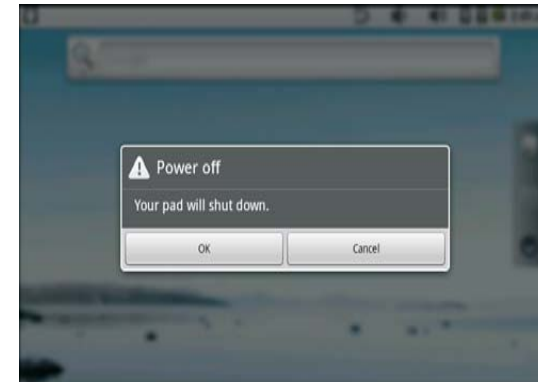

Set-up Wizard


The first time you turn on your device, the Set-up Wizard will prompt you to customize your device. Follow the prompts to set:

  1. 3.5mm Headset Jack: Plug in an optional headset or TTY equipment.
2. Menu Key: Press to display options for the current screen.
3. Home Key: Press to display the Home screen. Press and hold to display recent applications or to launch Task Manager.
4. Back Key: Press to return to the previous screen or option.
5. Microphone: Used to pick up your voice, or audio during recording.
6. Memory Card Slot: Install a memory card for storage of files.
7. Power/Lock Key: Press and hold to turn the device on or off. Press to lock the device, or to wake the screen for unlocking.
8. Camera: 1.3MP Camera
9. DC-IN: DC-IN Port, 5A 3A
10. MINI-USB PORT: MINI USB PORT
11. EXTERNAL SPEAKER: Used in music or video playback

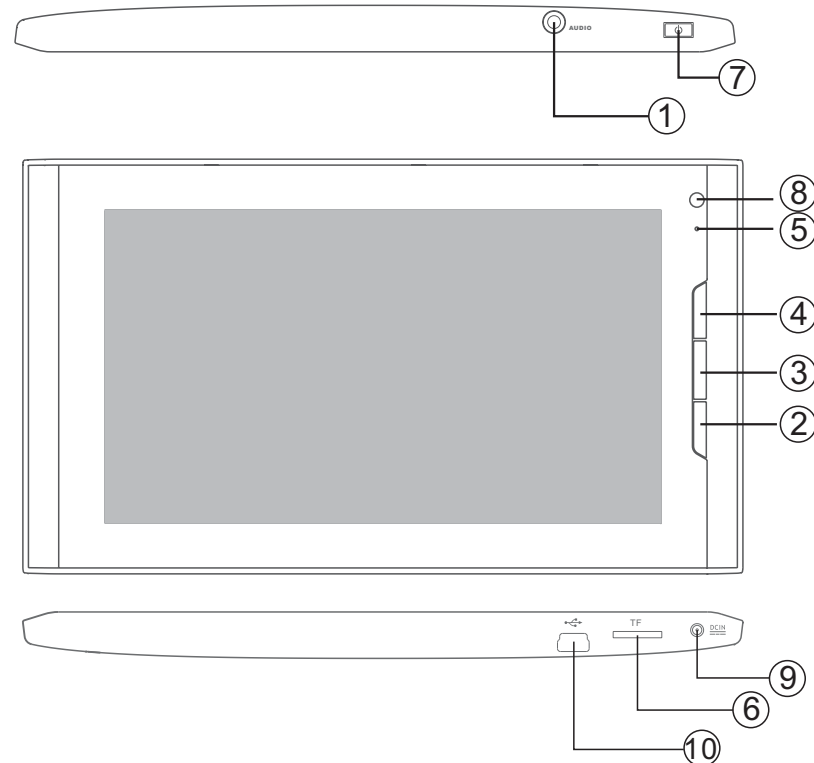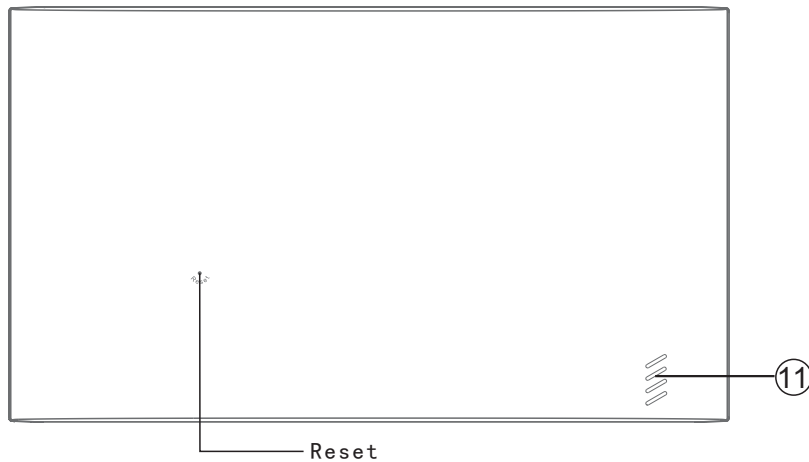

Home Screen

 The Home screen is the starting point for using your device.

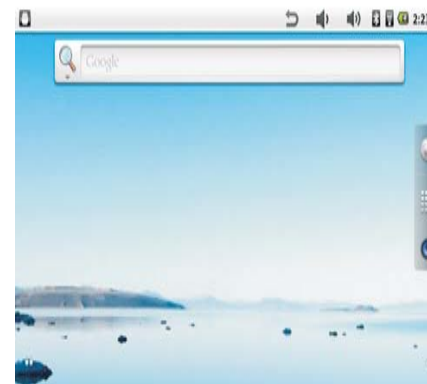

Note: Unless stated otherwise, instructions in this User Manual start with the device unlocked, at the Home screen.

1. Home screen: The starting point for using your device. Place shortcuts, widgets and other items to customize your device to your needs.
2. Widgets: Applications that run on the Home screen. These widgets are found on the Home screen by default.
3. Shortcuts: Shortcuts to common applications. These shortcuts are found on the Home screen by default.
4. Primary Shortcuts: Shortcuts to common features.












Warning!: If your device has a touch screen display, note that a touch screen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Adding and removing Home screen panels

Your device comes with some Home screen panels. You can customize the Home screen to include additional panels, and set one panel as Home.

Status Bar

The Status Bar displays icons to show network status, battery power, and other details.


-  **Signal Strength:** Current signal strength. The greater the number of bars, the stronger the signal.
-  **Battery Level:** Shown fully charged.
-  **Charging Indicator:** Battery is charging.
-  **Device Power Critical:** Battery has only three percent power remaining, Charge immediately.
-  **USB Connected:** Device is connected to a computer using a USB cable.
-  **Alarm Set:** An alarm is active.
-  **Preparing SD Card:** A memory card is installed.
-  **SD Card Removed:** Memory card was uninstalled.
-  **Bluetooth Active:** Bluetooth is turned on.
-  **Wi-Fi Active:** Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).
-  **Wi-Fi Action Needed:** Action needed to connect to Wireless Access Point (WAP).

Section 4: Entering Text

This section describes how to enter words, letters, punctuation and numbers when you need to enter text.


Virtual QWERTY Keyboard

 Your device uses a virtual QWERTY keyboard for text entry. Use the keyboard to enter letters, punctuation, numbers, and other characters into text entry fields or applications. Access the keyboard by touching any text entry field. The virtual QWERTY keyboard displays at the bottom of the screen.

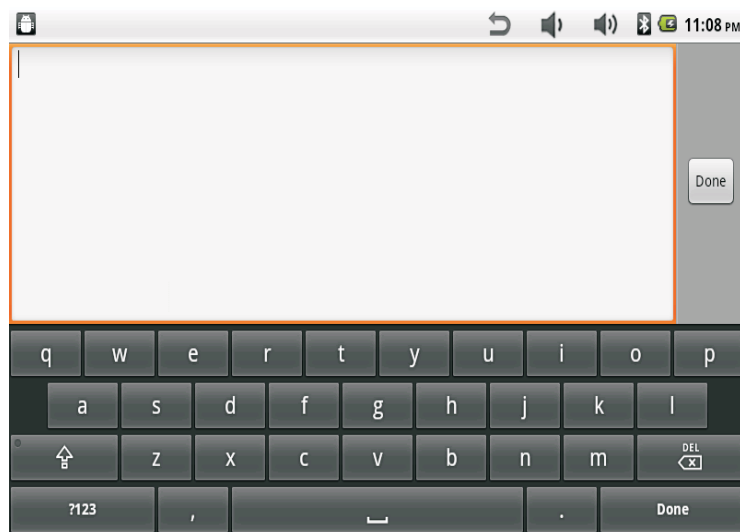

Changing the Input Method

 When entering text, you can select the text input method. Touch and hold on a text input field, then select an input

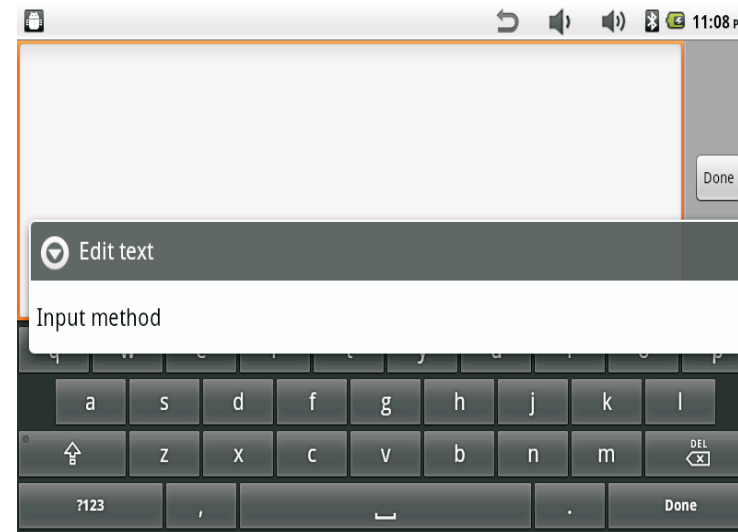

By default, when you rotate the device, the screen orientation updates to display the keyboard at the bottom of the screen.

Browser Menu

While viewing a web page, press the Menu Key for options:

- Add Bookmark: Create a bookmark for the current page.
- Find on page: Search for content on the current page.
- Download manager: View and manage recent downloads.
- Brightness setting: Set the display's brightness.
- Settings: Customize the Browser (see Browser Settings).
- More:
 - Share page: Send the page's URL via Bluetooth, Email, Gmail, or Messaging.
 - Page info: View information about the current page, including the URL.

Browser Settings

1. From a Home screen, touch Browser .

2. Press the Menu Key → Settings:

- Page content settings
 - Default zoom: Choose a default zoom level for web pages.
 - Open pages in overview: When enabled, displays an overview of newly-opened pages.
 - Text encoding: Choose a default character set for web pages.
 - Block pop-up windows: When enabled, blocks pop-up windows.
 - Load images: When enabled, images are automatically loaded when you visit a page. When disabled, images are indicated by a link, which you can touch to download the picture.
 - Auto-fit pages: When enabled, the browser automatically sizes web pages to fit your device's display.
 - Landscape view only: When enabled, Browser displays all pages in the wider landscape orientation (rotate your device to view pages in landscape mode).

Section 7: Connections

Your device includes features to connect to the internet and to other devices, via Wi-Fi, Bluetooth, VPN and Dial Up Networking.

Wi-Fi

Wi-Fi is a wireless networking technology that provides access to local area networks. Use your device's Wi-Fi **feature to:**

- Access the internet for browsing, or to send or receive email.
- Access your corporate network.
- Use hotspots provided by hotels or airports while traveling. Wi-Fi communication requires access to an existing Wireless Access Point (WAP). WAPs can be Open (unsecured, as with most hotspots), or Secured (requiring you to provide login credentials). Your device supports the 802.11 b/g/n Wi-Fi protocol.

Configuring Wi-Fi Settings

Finding Wi-Fi Networks You can have your device automatically notify you of available networks. Turning Wi-Fi On or Off Turn your device's Wi-Fi service on or off. When you turn Wi-Fi service on, your device automatically searches for available, in-range WAPs (Wireless Access Points).

Turning Wi-Fi On

1. From any screen, sweep your finger downward from the top to display the Notification Panel.
2. Touch Wi-Fi to turn Wi-Fi Off.



5. Transfer files to the memory card. When finished, touch Turn Off on the USB Mass Storage prompt, and disconnect the USB cable.

Section 8: Applications and Widgets

Camera

Take pictures and record video with your device's built in Camera.



Tip: A shortcut to Camera appears on a Home screen by default.

From application screen, touch Camera  .
– or – From a Home screen, touch Applications → Camera .

Email

Send and receive email using popular email services.

Tip: Email appears as a Primary Shortcut on a Home screen by default.

From application screen, touch Email  .
– or – From a Home screen, touch Applications → Email .

Gallery

Use Gallery to view, capture, and manage pictures and videos.

Manage applications

Manage and remove applications from your device.

1. From a Home screen, press the Menu Key → Settings → Applications → Manage applications.
2. Touch an application to view and update information about the application, including memory usage, default settings and permissions.

Running services

View and control services running on your device.

Warning!: Not all services can be stopped, and stopping services may have undesirable consequences on the application or Android System.

1. From a Home screen, press the Menu Key → Settings → Applications → Running services.
2. To stop a service, touch the service, then touch Stop at the confirmation prompt.

Development

Set options for application development.

USB debugging

When enabled, allows debugging when the device is attached to a PC by a USB cable.

Note: This setting is used for development purposes.

1. From a Home screen, press the Menu Key → Settings → Applications → Development.
2. Touch USB debugging to enable or disable the setting. When enabled, a check mark appears in the check box.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.