



Global Standard



V801SH

基本操作編

Abridged English Manual

For more information about handset operations and functions, please go to the Vodafone K.K. Website (www.vodafone.jp) for the full manual* or dial 157 from a Vodafone handset for Customer Service.

 
Contents

Accessories	16-2	■ Forwarding a Call	16-28
Safety Precautions	16-2	■ Calling from Call History	16-29
General Notes	16-10	■ Manner Mode	16-29
Minding Mobile Manners	16-14	■ Driving Mode	16-29
■ Basic Handset Etiquette.....	16-14	Entering Characters	16-30
■ Manner-Related Features.....	16-14	■ Character Types	16-30
Handset Parts & Functions	16-15	■ Key Assignments.....	16-31
■ Handset (Front)	16-15	■ Symbols, Pictographs & Emoticons ...	16-32
■ Handset (Side & Back).....	16-16	Saving to Phone Book	16-33
■ Charging Battery	16-18	■ Phone Book Entry Items	16-33
■ Display.....	16-20	■ New Phone Book Entries	16-34
■ Symbols.....	16-23	■ Editing Phone Book	16-35
■ USIM Card.....	16-24	■ Saving from Call History	16-35
■ USIM PINs	16-25	Dialing from Phone Book	16-36
■ Handset Codes	16-25	■ Entry Number Search	16-36
Basic Handset Operations	16-26	■ Search by Reading.....	16-36
■ Turning Handset On/Off	16-26	Mobile Camera	16-37
■ Display Language	16-26	■ Before Using Camera.....	16-37
■ Your Phone Number	16-26	■ Capturing Still Images	16-37
■ Setting Clock	16-26	Data Folder	16-38
■ Japan/International Mode.....	16-26	■ Data Folder Contents.....	16-38
■ Initiating a Call.....	16-26	■ Opening Data Folder	16-39
■ Redial	16-27	■ VGS Mail Attachments.....	16-39
■ Total Charges & Talk Time ...	16-27	F Function Shortcuts	16-40
■ Incoming Call	16-27	Specifications	16-44
■ Placing a Caller on Hold.....	16-28	Customer Service	16-47
■ Message Recorder & Voice Mail...	16-28		


*Please note that the full manual may not be available in English at time of purchase. In this case, call Customer Service or check Vodafone Website again at a later date.

Accessories

■ **Battery (SHBR01)***
(Type 1 lithium-ion battery)




■ **Rapid Charger (SHCR01)***

 

■ **Desktop Holder (SHER01)***



 ■ **Analog Conversion Cable**



■ **Optical Conversion Plug**



■ **Stereo Headphones**



■ **SD Memory Card**

■ **USB HOST Driver for V801SH
(CD-ROM)**

*Additional quantities may be purchased separately.

Tip

Address accessory-related inquiries to Customer Service, General Information (P. 16-47).

Safety Precautions

- Read safety precautions before using handset.
- Observe precautions to avoid injury to self or others or damage to property.
- Vodafone is not liable for any damages resulting from use of this product.

Before Using Handset

■ Symbols

Make sure you thoroughly understand these symbols before reading on. Symbols and their meanings are described below:

	DANGER	Great risk of death or serious injury from improper use
	WARNING	Risk of death or serious injury from improper use
	CAUTION	Risk of injury or damage to property from improper use

■ Symbols

	Prohibited Actions
	Compulsory Actions
	Attention Required

DANGER

Handset, Battery & Charger

- Use only the specified battery, charger or holder**
Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.
- Do not short-circuit charger terminals**
Keep metal objects away from charger terminals. Keep handset away from jewelry. Battery may leak, overheat, burst or ignite causing injury. Use a case to carry handset.

Battery

- Prevent injury from battery leakage, breakage or fire.**
Do not:
 - Heat or dispose of battery in fire.
 - Disassemble, modify or break battery.
 - Damage or solder battery.
 - Use a damaged or deformed battery.
 - Use non-specified charger.
 - Force battery into handset.
 - Charge or place battery near fire, heat sources or in extreme heat.
 - Use battery for other equipment.
- If battery fluid gets into eyes, do not rub them. Rinse with clean water and consult a doctor immediately.**
Eyes may be severely damaged.

⚠ WARNING

Handset, Battery & Charger

- Do not insert foreign objects into handset**
Do not put metal or flammable objects in handset, charger or holder. This may cause fire or electric shock. Keep handset out of the reach of children.
- Keep handset out of rain or extreme humidity**
Fire or electric shock may occur.
- Keep handset away from liquid-filled containers**
Keep handset, charger and holder away from chemicals/liquids. Fire/electric shock may result.
- Avoid sources of fire**
Prevent fire or explosion. Do not use handset in the presence of gas or fine particles (coal, dust, metal, etc.).
- Do not use Mobile Light near people's faces**
Eyesight may be temporarily affected leading to accidents.
- Keep SD Memory Card, Analog Conversion Cable & Optical Conversion Plug out of reach of small children**
If swallowed accidentally, consult a doctor immediately.
- Keep handset, charger or holder away from microwave ovens**
Battery or handset may leak, burst, overheat or ignite and cause accidents.
- Do not disassemble or modify handset**
 - Do not open handset, battery or holder; may cause electric shock or injury. Contact Vodafone Customer Assistance for repairs.
 - Do not modify handset, charger or holder. Fire or electric shock may result.
- Do not subject handset to shocks**
Subjecting handset, charger or holder to shocks may cause malfunction or injury. Should the handset break, remove the battery and contact Vodafone Customer Assistance. Discontinue handset use. Fire or electric shock may occur.
- If water or foreign matter should get inside handset:**
Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug charger and contact Vodafone Customer Assistance.
- If an abnormality occurs:**
Should there be unusual sound, smoke or odor, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery and unplug charger and contact Vodafone Customer Assistance.

Handset

- Preventing accidents**
For safety, never use handset while driving. Pull over beforehand.
- Do not swing handset by handstrap**
May result in injury or breakage.
- Turn handset power off before boarding aircraft**
Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.
- Adjust vibration and ring tone settings:**
Select settings carefully if you have a heart condition or pacemaker.
- During lightning storms, turn power off and take shelter**
There is a risk of lightning strike or electric shock.

Charger

- Use only the specified voltage**
Non-specified voltages may cause fire or electric shock.
 - Rapid Charger
AC 100 V
 - Rapid Charger compatible with AC 100 V - 240 V household currents.
 - Included power cord is for use in Japan only.
 - Do not use included power cord overseas. Purchase power cord with appropriate plug. Vodafone bears no responsibility for problems charging handset abroad.
 - Cigarette Lighter Charger
DC 12 V/24 V
- Do not use commercial transformers**
Connecting the Rapid Charger to a commercially available transformer for travel use may cause breakage, fire or electric shock.
- Do not use In-Car Charger in cars with a positive earth**
Fire may result. Use In-Car Charger only in cars with a negative earth.
- Charger Care**
Do not touch plug with wet hands. Electric shock may occur.
 - Do not use multiple cords in one outlet. May generate excess heat or fire.
 - Do not bend, twist, pull or set objects on cord. Exposed wire may cause fire or electric shock.
- Do not short-circuit charger terminals**
Keep metal away from terminals. May cause overheating, fire or electric shock.
- Do not use Desktop Holder in automobiles**
Extreme temperature or vibration may cause fire or breakage.
- If Charger or In-Car Charger cord is damaged:**
May cause fire or electric shock; contact Vodafone Customer Assistance to replace.



Preventing accidents

Secure In-Car Charger to avoid injury or accidents.



During lightning storms:

Unplug charger to avoid breakage, fire or electric shock.



Keep Charger and Desktop Holder out of reach of children

Failure to do so may result in electric shock or injury.

Battery



• If battery does not charge properly, stop charging. Battery may overheat, burst or cause fire.

• If there is leakage or abnormal odor, avoid fire sources. It may catch fire/burst.



If there is abnormal odor, excessive heat, discoloration or distortion, remove battery from handset. It may leak, overheat or explode.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



Persons with implanted pacemakers or defibrillators should keep handset more than 22 cm away

Radio waves may cause implanted pacemakers or defibrillators to malfunction.



Turn handset power off in crowded places such as trains. People with implanted pacemakers or defibrillators may be near.

Implanted pacemakers or defibrillators may malfunction due to radio waves.



Observe these rules when visiting medical institutions:

• Do not take handset into operating rooms, Intensive or Coronary Care Units.

• Keep handset off in hospitals.

• Keep handset off in hospital lobbies. Electronic equipment may be near.

• Obey rules regarding mobile phone use in medical institutions.



Consult manufacturer for radio wave effects on electronic medical equipment.



CAUTION

Handset, Battery & Charger



Handset Care

- Place handset on stable surfaces to avoid malfunction or injury.
- Keep handset away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage or burnout.
- Keep handset away from direct sunlight (inside cars, etc.) or heat sources. Distortion, discoloration or fire may occur. Battery shape may be affected.
- Keep handset out of extremely cold places to avoid malfunction or accidents.
- Keep handset away from fire sources to avoid malfunction or accidents.



Usage Environment

- Excessive dust may prevent heat release and cause burnout or fire.
- Avoid using handset on the beach. Sand may enter resulting in malfunction or accidents.
- Keep handset away from credit cards, phone cards, etc. to avoid data loss.

Handset



Avoid leaving handset in extreme heat (inside a car, etc.)

Handset may heat up and lead to burns.



Do not use in crowded places

The handset may strike others and cause accidents.



Volume settings

Be careful when setting volumes. High volumes may damage your hearing. In order to prevent this, set at a moderate volume.



Stereo headphones, analog conversion cable and optical digital conversion plug

• Always grasp the plug to disconnect. Pulling on the cord may disconnect the wire and malfunction.

• Keep the plug clean. If the plug is dirty, noise and malfunctions may occur.












Inside automobiles:







Handset use may cause electronic equipment to malfunction.



Charger

-  **Charger & In-Car Charger**
Grasp plug (not cord) to disconnect Charger. May cause fire/electric shock.
- 
 - Keep cord away from heaters. Exposed wire may cause fire or electric shock.
 - Stop use if plug is hot or improperly connected. May cause fire/electric shock.
 - Keep In-Car Charger socket clean. May overheat and cause injury.
-  **Do not touch Desktop Holder while in use**
May cause burns.
-  **Long periods of disuse**
Be sure to unplug Charger or In-Car Charger after use.
-  **Handset Maintenance**
When cleaning, disconnect Charger/In-Car Charger to prevent shock/injury.
-  **Use only the specified fuse**
1A fuse for In-Car Charger. Or may cause breakage/fire.
-  **Always charge handset in a well-ventilated area**
Avoid covering/wrapping Charger/Desktop Holder. May cause damage/fire.
-  **Installing In-Car Charger**
Properly position the cable for safe driving to avoid injury or accidents.
-  **Do not use In-Car Charger when engine is off**
Start engine before use. Or car battery may be weakened.

Battery

-  **Do not throw or abuse battery. Battery may overheat, burst or cause fire.**
-  **Do not leave battery in direct sunlight or inside cars. Overheating/fire may occur and battery performance may deteriorate.**
-  **Do not expose battery to liquids. Performance may deteriorate.**
-  **If battery fluid gets on skin or clothes, rinse with clean water immediately.**
- 
 - Do not dispose of exhausted batteries with ordinary refuse. Tape over charger terminals before disposal, or bring them to a Vodafone shop. Follow local regulations regarding battery disposal.
 - Keep battery out of the reach of children.
- 
 - Charge battery within a range of 5°C - 35°C. Or may leak/overheat. Performance may deteriorate.
 - If your child is using handset, explain all instructions and supervise usage.
 - If there is abnormal odor or excessive heat, stop using battery and call Vodafone Customer Assistance.

General Notes

General Use

- Vodafone is not liable for any damages resulting from accidental loss/alteration of handset or SD Memory Card data. Please keep separate records of Phone Book data, etc.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law.
Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Japan Mode (3G Mode) available only within Japan.
- Beware of Eavesdropping
Digital signals reduce interception, however transmissions may be overheard.
Eavesdropping
Deliberate/accidental interception of communications constitutes eavesdropping.

In Automobiles

- Do not use handset while driving. Doing so is dangerous.
- Do not park illegally to use handset.
- Handset use may affect an automobile's electronic equipment.

Aboard Aircraft

Never use handset aboard aircraft (keep power off).
Handset use may impair aircraft operation.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. Vodafone is not liable for any resulting damages.
- Use handset between 5°C - 35°C and 35% - 85% humidity. Avoid extreme temperatures/direct sunlight.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Do not drop or subject handset to shocks.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow or high humidity.
- Never disassemble or modify handset.
- Avoid scratching handset displays.
- When closing handset, keep straps, etc. outside to avoid damaging the display.
- **Handset is not water-proof. Keep it away from fluids and high humidity.**
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid dropping handset in a wet area (restroom, bathroom, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - Perspiration may get inside handset causing malfunction.
- **Heavy objects or excessive pressure should be avoided.**
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Do not remove the face plate or antenna terminal cover. Handset may not be accepted for repairs.
- Handset or battery may become warm with prolonged use. This is not a malfunction if it is not hot enough to prevent touch by hand.
- Always turn off handset before removing battery. When charging with the Rapid Charger connected, always turn off handset before disconnecting.
- If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

Handset Temperature

Handset becomes hot when phone is used while charging. This is not a malfunction.

Observe Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

FCC Declaration of Conformity

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

SHARP ELECTRONICS CORPORATION
Sharp Plaza, Mahwah, New Jersey 07430
TEL: 1-800-BE-SHARP

Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE



FCC Notice

The handset may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the handset if such interference cannot be eliminated.

Information To User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.489W/kg and when worn on the body, as described in this user guide, is 0.284W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID APYHRO00032.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

European RF Exposure Information

Your handset has been designed, manufactured and tested so as not to exceed the limits for exposure to electromagnetic fields recommended by the Council of the European Union. These limits are part of comprehensive guidelines developed by independent scientific organisations. The guidelines include a substantial safety margin designed to assure the safety of the handset user and others and to take into account variations in age and health, individual sensitivities and environmental conditions. European standards provide for the amount of radio frequency electromagnetic energy absorbed by the body when using a handset to be measured by reference to the Specific Absorption Rate (SAR). The SAR limit for the general public is currently 2W/kg averaged over 10g of body tissue. Your handset SAR value is 0.364W/kg.

This has been tested to ensure that this limit is not exceeded even when the handset is operating at its highest certified power. In use however your handset may operate at less than full power because it is designed to use only sufficient power to communicate with the network.

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide.

Basic Handset Etiquette

Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or automobile traffic.

Manner-Related Features

Take advantage of built-in features to help you use your handset in public places without disturbing or endangering others.

■ Manner Mode

Press the Manner Key to automatically silence all ring tones and activate Vibration Mode for incoming calls, mail and information.

■ Driving Mode

Disable incoming calls with a single operation (Message Recorder is set). Callers hear an announcement that you are driving and cannot accept the call. Handset will not ring or vibrate when calls are received.

■ Vibration Mode

Activate Vibration Mode to use handset vibration to alert you to incoming calls, mail, etc. in public places.

■ Volume Settings

Lower or silence Ring Tone Volume for Incoming Calls, New Mail, Information and V-Applications when carrying the handset in public places.

■ Whisper Mode

 
Use Whisper Mode to increase microphone sensitivity, allowing you to lower your voice and speak softly when you must use the handset in public places.

■ Message Recorder

Use Message Recorder to handle incoming calls when it is inappropriate or unsafe to answer them. Use Optional Services such as Call Forwarding or remote Voice Mail to handle incoming calls.

Handset Parts & Functions

Handset (Front)

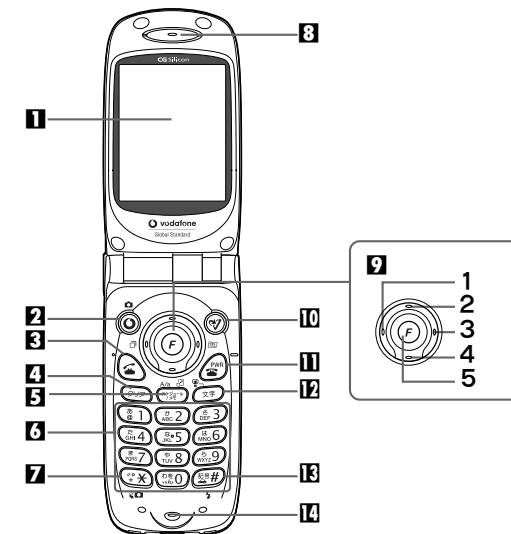

- 1** Display
- 2** Vodafone live! Key/Mobile Camera Key
Initiate Vodafone live! Service. Press for 1+ seconds to activate Mobile Camera.
- 3** Start Key
Initiate/answer calls.
- 4** Clear Key
Delete entries/return to previous window.
- 5** Schedule/Memo and A/a Key
Save/check schedule or record/play Voice Memos. Toggle between upper/lower case alphanumeric or double-byte/single-byte hiragana/katakana in text entry windows. Change Web and Mail text size and attached image size.
- 6** Keypad
- 7** (*X) Key
In Mobile Camera, toggle between Display/Sub Display.
Enter + when making international calls.
- 8** Earpiece
- 9** Multi Selector
Select menu items, move cursor, scroll, etc. or use for the following:
 - 1** Redial Key
Select previously dialed numbers.
 - 2** Raise volume
 - 3** Phone Book Key
Open entries to make calls/send messages.
 - 4** Lower volume

5 F Key/Key Guard

Access Functions menu. Press for 1+ seconds to set or release Key Guard.

10 Direct Key

List User Shortcuts, etc.

11 Power On/Off & End Key

Place callers on hold or cancel operations. Press for 2+ seconds to turn power on/off.

12 Text/Manner Key (📵)

Toggle character type or create Phone Book entry.

Press for 1+ seconds to activate/cancel Manner Mode.

 
13 (📵) Key

Activate/Disable Driving Mode. In Mobile Camera, turn Mobile Light on/off.

In Character Entry Mode, toggle through Symbol & Pictograph lists.

14 Microphone

Handset (Side & Back)

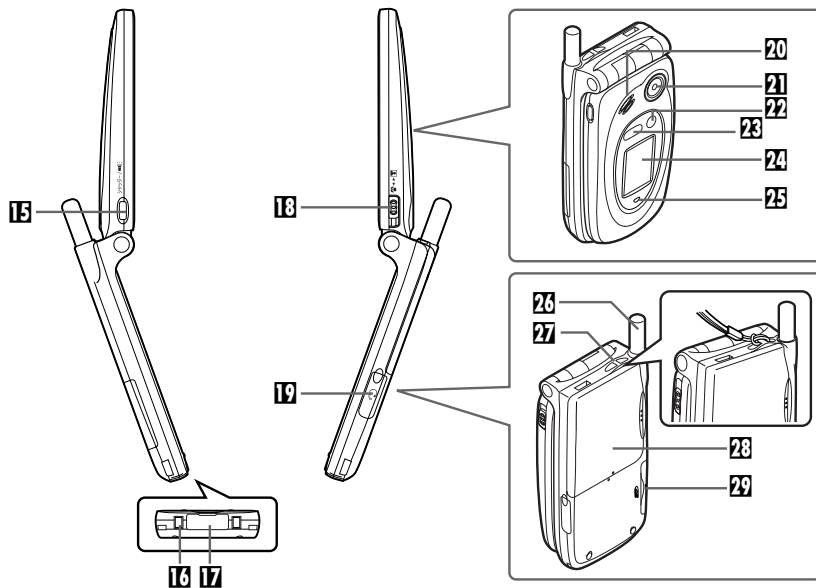

15 Side Key (シャッター / 📷)

With handset closed, activate Message Recorder for incoming calls or Camera, and illuminate Sub Display backlight or Sub Display indicators.

16 Charger Terminal

17 External Device Connector

Connect Charger here.

18 Macro Selector

Switch between Macro Mode and Portrait Mode.

19 Earphone Jack/Optical Digital/Line In

Connect included Analog Conversion Cable or Optical Conversion Plug.

Also connect optional LCD Remote/Mic. Cover when not in use.

20 Speaker

21 Camera

Captures still images and movies.

22 Mobile Light

Flashes for incoming calls/mail; serves as a strobe or penlight.

23 Infrared Port

24 Sub Display

25 Small Light

Illuminates red while charging; flashes orange when Panel Saving is active.

Set to flash for incoming calls.

26 Antenna

27 Strap Eyelet

Attach strap as shown.

28 Battery Cover

29 Memory Card Slot

Insert SD Memory Card here.

Note

Do not touch or cover Antenna during transmissions. Signal quality will be affected.

Charging Battery

Battery & Charger

Charge a new battery before use or after a period of disuse.

■ Battery Life

- Do not use or store battery at extreme temperatures. May shorten battery life. Ideal working temperature is between 5°C - 35°C.
- Use specified charger only. Battery may deteriorate, overheat or cause fire.
- Replace battery if operating time is noticeably shorter than normal.

■ Charging

- Do not use Charger for other purposes.
- Battery may short-circuit, overheat or burst from contact with metal objects.
- Charger and battery may become warm during charging.
- Move charger away from TV or radio if interference occurs.

 
■ Precautions

- Use a dry cotton swab to keep handset, battery and charger terminals clean.
- Avoid:
 - Extreme temperatures
 - Humidity, dust and vibration
 - Direct sunlight
- Do not leave battery uncharged. Charge at least once every six months.
- Use a case when carrying battery separately.

■ Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over charger terminals before disposal, or bring them to the nearest Vodafone shop. Always follow local regulations.

Charging with Desktop Holder

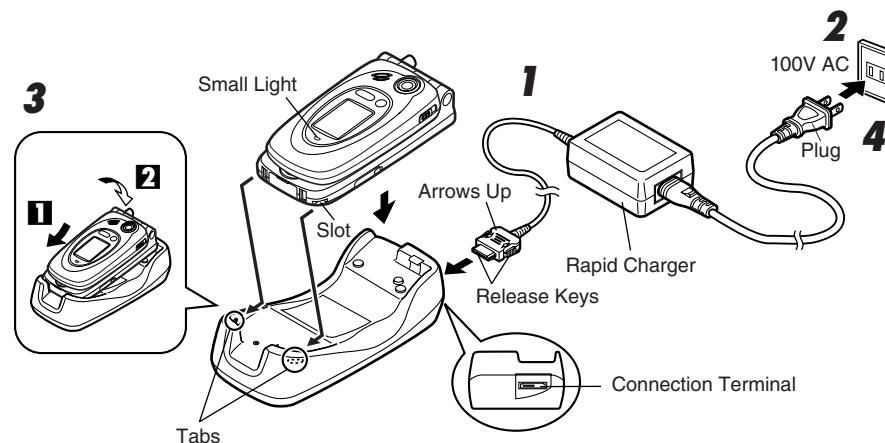

1 Insert charger connector into Desktop Holder until it clicks

2 Plug in Charger

3 Gently insert the handset into Desktop Holder

- Fit tabs into slots as shown in **1** and push handset as **2** indicates until it clicks. Small Light illuminates red (goes out when charging is complete).
- Charging takes approximately 125 minutes (with handset power off). May vary with temperature.

4 After charging, unplug Charger from outlet and remove handset

 
Pull Rapid Charger straight out.

Note

- Rapid Charger is compatible with AC 100 V - 240 V household currents.
- Included power cord is for use in Japan only.


Tip

Rapid Charger
Insert connector into External Device Connector.

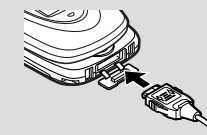

Display

 Display indicators

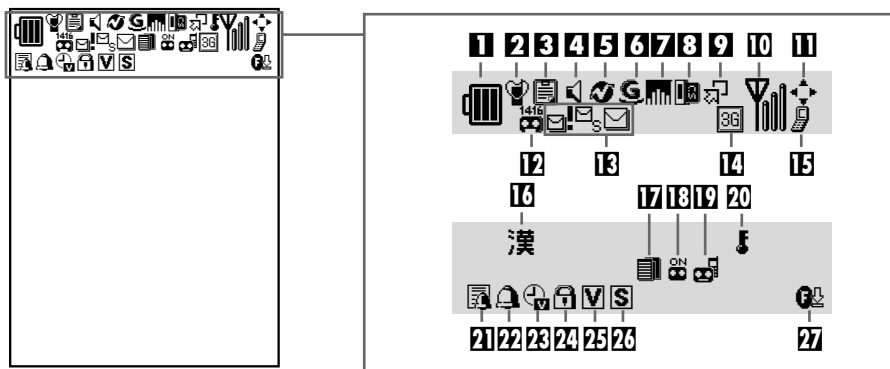

- 1** Battery Strength / Pen Light
 - : Strong : Moderate : Low : Empty
 - and flash when Pen Light is in use.
- 2** Manner Mode Active
- 3** Information
- 4** Speaker Phone Active / Speaker Active / Microphone Mute / Normal / Large
- 5** Active V-Application / Paused V-Application
- 6** GPRS
- 7** Audio Player Active / Voice Recorder Active / Line Active / External Data Transmission: Packet Transmission
- 8** SD Memory Card Status
- 9** SSL / User Shortcut
 - appears if Web site supports SSL and appears if it can be set as User Shortcut.
- 10** Signal Strength / No Incoming Calls / Infrared Transmission
 - : Strong : Moderate : Low : Weak : Out-of-Range
- 11** Scroll
 - Scrolling options
- 12** New Voice Mail
- 13** SMS
 - VGS Mail
 - Unretrieved VGS Mail
 - VGS Mail held at Server
- 14** 3G / GSM
 - Japan Mode International Mode
- 15** Handset / SD Memory Card / USIM Card
 - Accessing handset , SD Memory Card or USIM Card data.

16 Character Mode

Character Type Icons

	Kanji and Hiragana
	Double-byte Katakana
	Single-byte Katakana
	Double-byte Alphanumerics (upper / lower case)
	Double-byte Alphanumerics (lower case)
	Single-byte Alphanumerics (upper / lower case)
	Single-byte Alphanumerics (lower case)
	Single-byte Numbers
	Pictograph Codes
	Kuten Codes
	Double-byte Roman Letters (upper case)
	Single-byte Roman Letters (upper case)
	Double-byte Roman Letters (lower case)
	Single-byte Roman Letters (lower case)

 
*Available in Pager Mode

- 17** Report
- 18** Message Recorder Active / Driving Mode Active
- 19** Message
- 20** Secret Mode Active
- 21** Schedule
 - Schedule Alarm On: / Off:
- 22** Alarm Set
- 23** V-Application Timer On
- 24** Keypad Lock Active
- 25** Vibration Active
- 26** Silent / Rising Tone
 - Ringer is Silent or Rising Tone
- 27** Key Guard Active

Tip Vibration and Ring Tone Level can be set separately for incoming calls and Vodafone live! However, , and are Incoming Call setting indicators.

Sub Display

Indicators appear on the first line of Sub Display

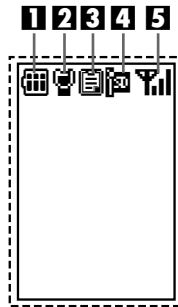


- 1** Battery Strength / Pen Light
 and flash when Pen Light is in use.
- 2** Manner Mode Active
- 3** Information
- 4** SD Memory Card Status / Audio Player Active /
 External Data Transmission: Packet Transmission
- 5** Signal Strength / No Incoming Calls

Indicators appearing below the first line

When **2** *In Standby* of Side Key Settings is set to Mark, press Side Key for 1+ seconds to see active Sub Display indicators.

 - Sub Display & Display indicators (see P. 16-20) represent same functions.
- These indicators disappear when Side Key is released.

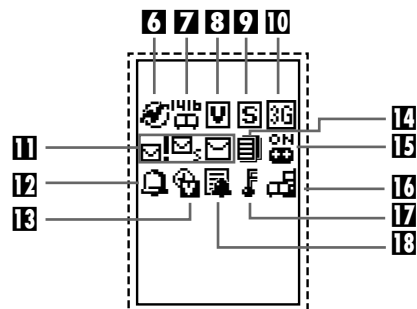

- 6** Paused V-Application
- 7** New Voice Mail
- 8** Vibration Active
- 9** Silent / Rising Tone
- 10** Japan Mode / International Mode
- 11** SMS / VGS Mail / Unretrieved VGS Mail / Server VGS Mail
- 14** Paused V-Application
- 15** New Voice Mail
- 16** Vibration Active
- 17** Silent / Rising Tone
- 18** Japan Mode / International Mode

 
- 12** Alarm Set
- 13** V-Application Timer On
- 14** Report
- 15** Message Recorder Active / Driving Mode Active
- 16** Message
- 17** Secret Mode Active
- 18** Schedule

- Sub Display is only active when handset is closed.
 (Note: In Camera mode, Sub Display can be used with handset open.)
- Sub Display backlight illuminates when handset is closed or Side Key is pressed unless Sub Display is Off.

Symbols

Multi Selector

Select menu items, move cursor, scroll, etc.
 Multi Selector Indicators used in this manual:

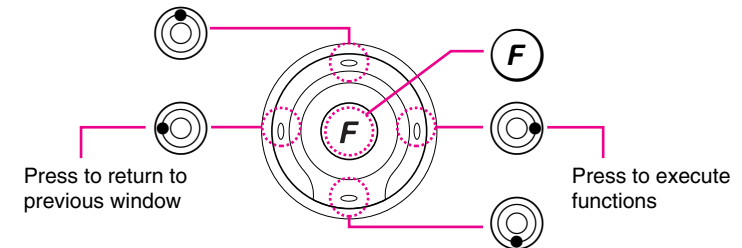

Navigational Multi Selector Indicators

Examples of key operations

- : Press or
- : Press or
- : Press , , , or

 
Menu Items

Use or to select menu items. (Example: Select **5** *Text* and press **F**.)

USIM Card

Vodafone Global Standard USIM Card is an IC Card containing customer information such as handset number. USIM Card must be inserted before using a USIM Card compatible handset. USIM Card can only be used on networks specified by Vodafone.

Inserting USIM Card

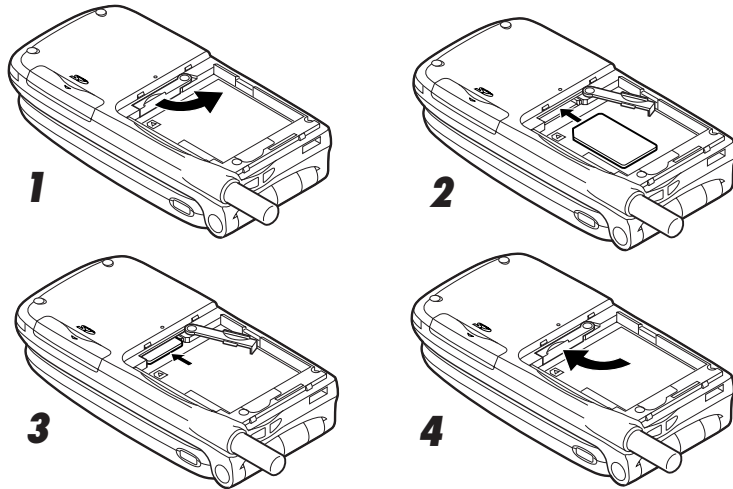

- 1 Open USIM Card cover
- 2 Insert USIM Card with IC Chip facing down
- 3 Push in until USIM Card clicks
- 4 Close USIM Card cover

Removing USIM Card

- 1 Open USIM Card cover
- 2 Lightly push in USIM Card
USIM Card pops out.
- 3 Slowly pull out USIM Card
- 4 Close USIM Card cover

Note Do not apply force to USIM Card. Bending or stress may damage it.

USIM PINs

PIN1 & PIN2

PIN1	Prevent unauthorized use of Vodafone handset.
PIN2	Required to reset Total Charges and to set, cancel or save Fixed Dialing Number.

- PIN1 & PIN2 are **9999** by default.
- PIN1 & PIN2 can be changed.
- When **PIN On/Off** is **ON**, PIN1 (4-8 digits) is required when USIM Card is inserted into handset or handset is turned on.

PIN Lock & Cancel PIN Lock

PIN1 Lock or **PIN2 Lock** is activated if PIN1 or PIN2 is incorrectly entered three times. Cancel PIN Lock by entering the **PIN Lock Cancel Code**. For information on PIN Lock Cancel Code, contact Customer Service (☎ P. 16-47).

- Note**
- If PIN Lock Cancel Code is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PIN Lock Cancel Code.
 - For procedures required to unlock USIM Card, contact Customer Service (☎ P. 16-47).

- Tip**
- Placing Calls when USIM Card Locked
In Japan, calls cannot be made from the handset when USIM Card is locked. Overseas calls can be placed to emergency service numbers only.

Handset Codes

Security Code and Center Access Code.

Security Code

"9999" or 4-digit number selected at initial subscription. Security Code is required to use/change handset functions. * appear as Security Code is entered.
If incorrect, **Invalid Code** appears.

Center Access Code

4-digit number in subscription contract required to access optional services from fixed line phones.

Call Barring Password

Use Call Barring Password selected at initial subscription to restrict handset services. If Call Barring Password is incorrectly entered three times, Call Barring settings are locked. Center Access Code and Call Barring Password must be changed. For details, contact Customer Service (☎ P. 16-47).

- Note**
- Write down PINs, Center Access Code and Call Barring Password. If you forget any of these codes, contact Customer Service (☎ P. 16-47).
 - Do not disclose PINs, Center Access Code or Call Barring Password to others. Vodafone is not liable for damages resulting from misuse.

- Tip**
- Change PINs and Call Barring Password on the handset.
 - Do not attempt to change Center Access Code. If you mistakenly alter Center Access Code, please contact Customer Service, General Information (☎ P. 16-47).

Basic Handset Operations

Turning Handset On/Off

Activate Handset Power

Press for 2+ seconds

Deactivate Handset Power

Press for 2+ seconds

Display Language

1 Press

2 Select *English* and press

Your Phone Number

1 Press

2 Press to exit

Setting Clock

1 Press

2 Enter current date and time

3 Press

Japan/International Mode

1 Press

2 Select *Area Selection* and press

3 Select *Japan* (3G Mode) or *International* (GSM Mode) and press

4 Restart handset

Initiating a Call

Calling in Japan

1 Enter a phone number

2 Press

Making an International Call

Service requires an additional contract, but no basic monthly charges or application fees.

1 Enter a phone number

Proceed to Step 6 when calling Vodafone handsets (GSM Mode).

2 Press

3 Press

4 Select a country and press

5 Press

6 Press



- Omit the first 0 of the area code except when calling a number in Italy.
- For detailed information concerning international calling, contact Customer Service, General Information (P. 16-47).

Calling from Abroad

Service requires an additional contract, but no basic monthly charges or application fees.

1 In International Mode, enter a phone number

2 Press

3 Press

4 Select a country and press

Always select *日本(JPN)* when calling Vodafone handsets.

5 Press

6 Press

Redial

1 Press

2 Press or to search Redial records

3 Press

Total Charges & Talk Time

1 Press (Total Charges) or (Total Talk Time)

2 Press to exit

Incoming Call

1 Handset rings and Mobile Light flashes for an incoming call. Open handset

2 Press

Answer calls by pressing: - , , key , , , ,

Placing a Caller on Hold

- 1 Handset rings and Mobile Light flashes for an incoming call. Open handset
- 2 Press to place caller on hold
- 3 Press to talk

Message Recorder & Voice Mail

Use Message Recorder or Voice Mail to record caller messages.

	Message Recorder	Voice Mail
Message Recorded	Handset	Voice Mail Center
Setting	Press	Press Select Set VM Ring Tone and press Select Call or No Call and press
Additional Contract	Not required	Required
Message Indicator		
Play	Press	Press Select Play (Japan) or Play (Abroad) and press Press Dial
Delete	During playback, press , choose Yes and press	After playback, press
When Handset Power is Off	Unavailable	Available
When Handset is Out-of-Range	Unavailable	Available

Tip When Voice Mail is off, press to forward a call to Voice Mail Center.

16 Forwarding a Call

Forward a call to a specified phone number.

Initiating Call Forwarding

- 1 Press
- 2 Enter a phone number and press
- 3 Select **Call** or **No Call** and press
Select Forward Ring Time and press when selecting **Call**
- 4 Press to confirm

Note Initiating Call Forwarding cancels Voice Mail.

Calling from Call History

- 1 Press
- 2 Press or to search Call History record
- 3 Press

Manner Mode

Activate Manner Mode to use handset without disturbing others.

Default Manner Mode Settings:

- ① Silences Keypad Sound, Power On/Off, Error and Barcode recognition tones.
- ② Sets the following: Message Recorder (On), Ring Tone Level (Silent), Vibration (On), LED Indicator (Small Light), Whisper Mode (On), Sound Volume (Silent), V-Appli Volume (Silent), V-Appli Vibration (On).

These settings can be changed.

In Standby, press for 1+ seconds

Tip Canceling Manner Mode
In Standby, press for 1+ seconds.

Driving Mode

Disable handset with a simple operation when driving and have incoming calls forwarded to Message Recorder.

Driving Mode Settings:

- Silences VGS Mail and SMS ring tones.
- Schedule, Repeat Alarm are disabled.
- If a call is received, the handset does not ring or vibrate. After the caller hears the Driving Mode announcement, Message Recorder is activated.

 
In Standby, press for 1+ seconds

Tip Canceling Driving Mode
In Standby, press for 1+ seconds.

Entering Characters

Character Types

Press to toggle between character types.

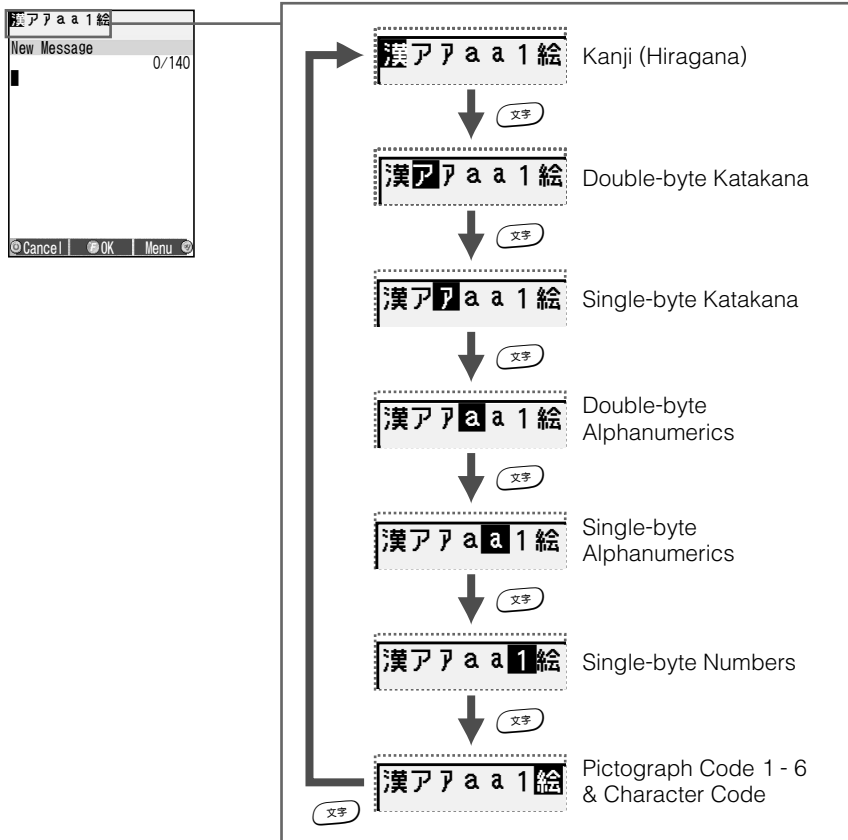

Key Assignments

Key	Single-byte Alphanumerics		Single-byte Numbers	Pictograph Code 1 - 6 & Character Code
	Upper & Lower Case	Lower Case		
	@./_-1 (Space)	@./_-1 (Space)	1	1
	A B C a b c 2	a b c 2	2	2
	D E F d e f 3	d e f 3	3	3
	G H I g h i 4	g h i 4	4	4
	J K L j k l 5	j k l 5	5	5
	M N O m n o 6	m n o 6	6	6
	P Q R S p q r s 7	p q r s 7	7	7
	T U V t u v 8	t u v 8	8	8
	W X Y Z w x y z 9	w x y z 9	9	9
	,. 0 (Line Break)	,. 0 (Line Break)	0	0
	Single-byte Mail/Web Extensions ¹		*+-, (Pause) ²	
	Single-byte Symbols/Double-byte Pictographs		#	
	Cursor Up			
	Cursor Down (Line Break)			
	Cursor Left			
	Cursor Right			
	Change Character Type			
	Toggle Case + Toggle Mode (upper & lower/lower case)	Toggle Case + Toggle Mode (upper & lower/lower case)		
	Delete One Character			Delete Code/One Character
	Delete All			
	OK			
				Switch Pictograph Code 1 - 6 & Character Code

¹ Portion of E-mail address or URL appears.

² Use +, - and , (Pause) for phone number entry.

 
Tip **Entering Characters Assigned to the Same Key**
 Press to move cursor to the right, then enter the next character.

Editing Characters
 Use to move cursor to a character. Press to delete it and then enter another.

Symbols, Pictographs & Emoticons

Symbols

- 1 Press **[Sym#]** in text entry window
Usable Symbols appear.
- 2 Use **[Globe]** to select a symbol and press **[F]**

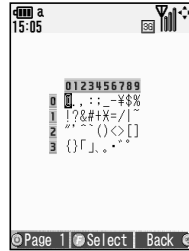

Tip In double-byte character entry, three symbol lists appear.
Press **[Globe]** to toggle between them.

Pictographs

 
- 1 Select Pictograph Mode (**[Pict]** P. 16-30)
- 2 Press **[V]** **List**
Pictograph 1 List appears.
- 3 Use **[Globe]** to select a pictograph and press **[F]**



Tip Press **[Globe]** to toggle between Pictograph Lists 1 to 6.

Emoticons

- 1 Press **[V]** **Menu** in text entry window
- 2 Select **[Emoticons]** and press **[F]**
- 3 Select an Emoticon and press **[F]**

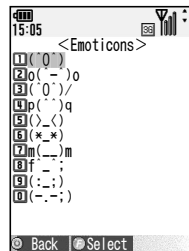

Saving to Phone Book

Save names with phone numbers, E-mail addresses, etc. to Phone Book.
Save up to three phone numbers and three mail addresses per entry.

Phone Book Entry Items

Item	Description	
Name [Person] :	Up to 24 single-byte (12 double-byte) characters.	
Reading [Read] :	Katakana, Alphanumerics and symbols automatically appear. (Up to 24 single-byte characters including ` and °).	
Phone Number [Phone] :	Up to three phone numbers (32 digits each).	
E-mail [Mail] :	Up to three E-mail addresses (128 single-byte characters each).	
Group [Group] *:	Sort entries into ten groups (0 - 9). Change group names or set ring tone by group.	
Personal Data [Person] *:	Add personal details. Use up to 60 single-byte (30 double-byte) characters.	
Secret Mode [Lock] *:	Restrict access to Phone Book entries by saving them as secret.	
Option Settings*	Personal Ring Tone	Set ring tone by caller.
	Incoming Notice	Set ring tone by sender.
	Picture Call/Mail	Set images to appear by caller or sender.
	Mail Folder	Messages are sorted into folders.

*Cannot be saved to USIM Card.

- Up to 500 entries (000 to 499) can be saved in Phone Book.
- Up to 10,000 entries (0000 to 9999) can be saved in Phone Book saved on SD Memory Card.
- Up to 50 entries (01 to 50) can be saved in Phone Book saved on USIM Card (only Name, Reading, one Phone Number and one E-mail address can be saved per entry).

Note Back-up Important Information

Keep a separate copy of important data. When battery is exhausted or removed for long periods, Phone Book data may be lost. Handset damage may also affect data. Vodafone is not liable for any damages resulting from accidental loss/alteration.

New Phone Book Entries

Enter a name, reading and phone number.

- 1 Press **文字**
- 2 Enter a name
- 3 Press **F**
 - Characters entered for names appear after ******* :
 - Confirm the reading.

Tip

Correcting Spelling, etc.

Select ******* : and press **F**. Correct spelling and press **F**.



- 4 Select **☎** : and press **F**
- 5 Enter a phone number and press **F**
- 6 Select an icon and press **F**
- 7 Select **✉** : and press **F**
- 8 Enter an e-mail address and press **F**
- 9 Select an icon and press **F**
- 10 Press **Save**
- 11 Enter a 3-digit number (000 - 499)

Note

Enter a name, phone number or mail address to create a Phone Book entry.

Tip

Saving to SD Memory Card or USIM Card

- After Step 10, press **Save** to select save destination (once for SD Memory Card or twice for USIM Card).
- After selecting save destination, enter Memory Number (SD Memory Card: 0000 to 9999, USIM Card: 01 to 50).

Editing Phone Book

- 1 Open Phone Book (P. 16-36)



- 2 Press **Menu**
- 3 Select **Edit** and press **F**
- 4 Select an item and press **F**
- 5 Make corrections and press **F**
- 6 Press **Save** to finish
- 7 Press **F**
- 8 Choose **Yes** and press **F**

Saving from Call History

- 1 Select a phone number (P. 16-29)
- 2 Press **Menu**, select **Save to Phone Book** and press **F**
- 3 Enter a name
- 4 Press **F**
 - Characters entered for names appear after ******* :
 - Confirm the reading.

Tip

Correcting Spelling, etc.

Select ******* : and press **F**. Correct spelling and press **F**.

- 5 Select **✉** : and press **F**
- 6 Enter an e-mail address and press **F**
- 7 Select an icon and press **F**
- 8 Press **Save**
- 9 Enter a 3-digit number (000 - 499)

16

16

Dialing from Phone Book

Entry Number Search

- 1 Press **TEL**.
The search method used last appears.
- 2 Press **Menu**, select **Memory No. Search** and press **F**.
- 3 Enter Memory No. (000 - 499)
- 4 Select a name and press **F**.

Tip Multiple Numbers/Addresses
Use **SEL** to select other numbers/addresses.

- 5 Press **END**.

Search by Reading

- 1 Press **TEL**.
The search method used last appears.
- 2 Press **Menu**, select **Search by Reading** and press **F**.
- 3 Enter reading and press **F**.
Use up to 24 single-byte characters.
- 4 Select a name and press **F**.

Tip Multiple Numbers/Addresses
Use **SEL** to select other numbers/addresses.

- 5 Press **END**.

Mobile Camera

Before Using Camera

Select from four different shooting modes.

Use **Mobile Camera** and **Digital Camera** for still images and **Movie** and **Video Camera** for videos.

	Mobile Camera	Digital Camera
Image Size	240 × 320 dots 120 × 160 dots 120 × 128 dots 64 × 96 dots	1144 × 858 dots 1024 × 768 dots 640 × 480 dots
Save to	Handset or SD Memory Card	SD Memory Card

	Movie	Video Camera
Image Size	176 × 144 dots 128 × 96 dots	176 × 144 dots 128 × 96 dots
Save to	Handset or SD Memory Card	SD Memory Card

Camera Shake

If handset moves while shooting, images may blur. Hold handset firmly or place it on a stable surface and use Self-Timer.

Do not shoot while charging

The red Small Light may be captured if shot while charging.

Note **Lens Cover**
Use a soft cloth to wipe fingerprints or oil off the lens cover.

CCD Camera

- Mobile Camera is engineered to exacting standards; however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Color filter may be affected if the lens is subjected to direct sunlight.

Capturing Still Images

- 1 In Standby, press **F**, select **Mobile Camera** and press **F**.
- 2 Select **1 Mobile Camera** or **2 Digital Camera** and press **F**.
- 3 Frame image on Display
- 4 Press **F Shoot** or Side Key
- 5 Press **F Save** to save the image
- 6 Press **END** to exit

 
Tip **Using Camera with Handset Closed**
After Step 2, close handset, use Sub Display to frame image and Side Key as shutter release.

Data Folder

Data Folder Contents

Saved files are organized in separate folders according to file format.

Data Folder supports the file formats listed below.

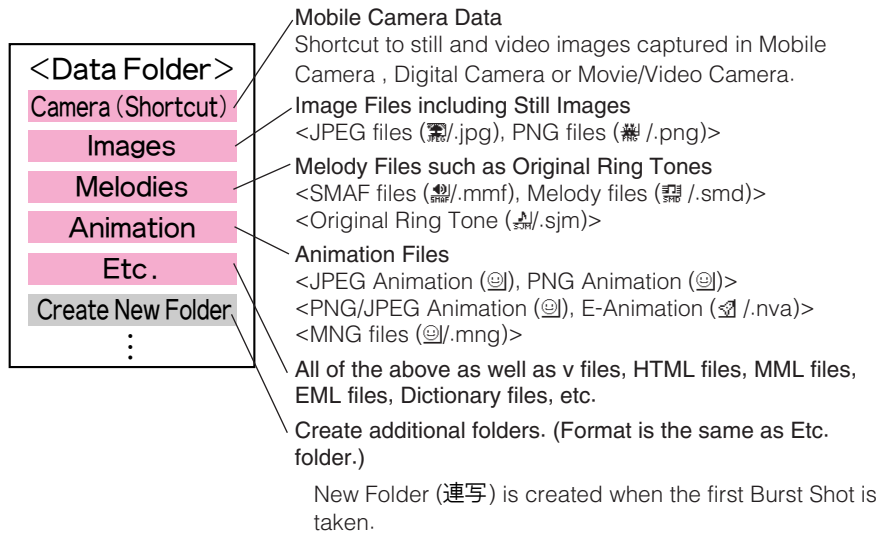


Note File extensions and icons inside < > indicate file format. File extensions do not appear for JPEG Animation, PNG Animation nor PNG/JPEG Animation.

Data Folder Structure

Create up to three layers to organize files.

 Example: Create folders, My Folder and My Pictures for convenient access to files.

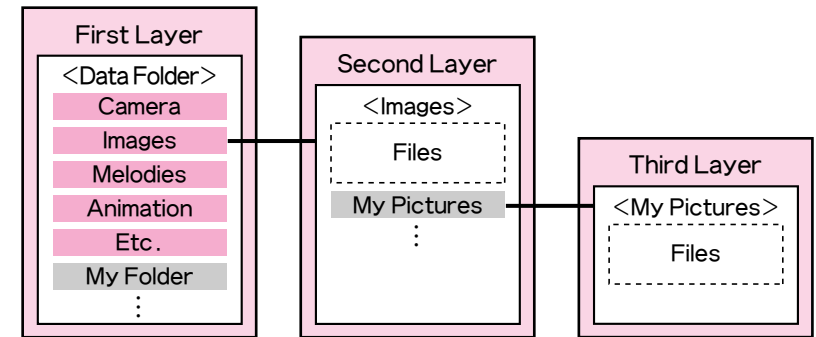

Opening Data Folder

- 1 Press **3**
- 2 Select a folder and press **F**
- 3 Select a file and press **F**
- 4 Press **Exit** to exit

VGS Mail Attachments

Example: Attaching an image from Images Folder to VGS Mail

- 1 Press **3**
- 2 Select **Images** and press **F**
- 3 Select a file and press **Menu**
- 4 Select **Attachment** and press **F**
- 5 Select Attachment type and press **F**
- 6 Enter an address, title, text and press **Send** to send VGS Mail

F Function Shortcuts

Select and execute handset functions by pressing the indicated keys.

¹ Available while talking

² Only available when SD Memory Card is inserted.

Shortcut	Function	Description
● Basic & Display		
F	My Number	Show handset number
F	USIM Setting	PIN On/Off Settings
F	System Settings	Toggle Japan/International Mode and show Network Status
● Sounds		
F	Call Functions	Set Ring Tones
F	Volume	Adjust Volume
F	Sound Effects	Set Sound Effects
F	Ringer Out	Set Ringer Output for Earphone use
F	Speaker	Set Speaker Phone/Speaker
F	Original Ring Tone	Save Original Ring Tones
F	Instrument Effects	Save Instrument Effects
F	Tone Octave	Set Tone Octaves
● Privacy		
F	Keypad Lock	Disable keypad
F	Auto Key Lock	Disable keypad at handset power on
F	Secret Mode	Show Secret Memory
F	Phone Book Lock	Disable Phone Book
F	Restrict Dial	Restrict calling from keypad
F	Accept Call	Accept calls from designated numbers
F	Reject Call	Reject calls from designated numbers
F	Reset All	Delete all saved information, restore defaults
F	Change Code	Change Security Code
F	Reset Defaults	Reset settings to default values

Shortcut	Function	Description
● Settings 1		
F	Guide	Show functions other than F functions
F	Memory	Phone Book, Accumulated Memory, Sent, File Cabinet, Save location
F	Panel Saving	Set Panel Saving
F	Backlight Settings	Adjust Backlight, Keypad light and Backlight Brightness
F	Language (言語選択)	Toggle between Japanese and English Menus
F	Power On Message	Set/Cancel welcome message
F	Group Settings	Change Group Names/Ring Tones
F	Side Key Settings	Set functions for Side Key (for 1+ seconds)
● Settings 2		
F	Display Settings	Set Display detail
F	Expenditure Memo	Show total expenditures and item list
F	User Dictionary	Save/Edit entries or add downloaded items
F	Answer Time	Set Message Recorder Answer Time
F	Manner Settings	Change Manner Mode settings
F	Sub Display	Set Sub Display and Clock
F	Animation Settings	Set/create animation
F	Calculator	Open Calculator/Foreign Exchange
● Clock		
F	Alarm	Set Alarm
F	Clock Display	Show Clock and Calendar in Standby
F	Clock Settings	Set Date & Time/Set Travel Clock
● Charges		
F	Total Charges	Show Total Charges
F	Call Charge	Show Last Call Charge
F	Total Talk Time	Show Total Talk Time
F	Call Time	Show Last Call Talk Time
F	Instant Display	Show Charge/Talk Time after a call
F	Set Charge Limit	Set limit for call charges

Shortcut	Function	Description
● Services		
F (F) (7) (0)	Call Barring	Restrict incoming and outgoing calls
F (F) (7) (1)	Call Forwarding	Activate service/Set a Forwarding Number
F (F) (7) (2)	Voice Mail	Activate Voice Mail Service
F (F) (7) (3)	Cancel Call Fwd/VM	Cancel Call Forwarding or Voice Mail
F (F) (7) (4)	Fwd/VM Status	Check Call Forwarding or Voice Mail
F (F) (7) (5)	Call Waiting	Set/Cancel Call Waiting
F (F) (7) (6)	Confirm Status	Check Call Waiting Settings
F (F) (7) (7)	Play Voice Mail	Listen to messages
F (F) (7) (8)	Int'l Calling	Toggle International Prefix and Auto Country Code On/Off and edit Country Code List
F (F) (7) (9)	Send With Code	Set number to add to phone numbers saved in Phone Book
● Messaging		
F (F) (8) (0) (1)	Mail Box	Open Mail Box
F (F) (8) (0) (2)	Mail	Create New Mail
F (F) (8) (0) (3)	New Mail Request	Preloads received VGS Mail
F (F) (8) (0) (4)	Server Mail	Receive/Delete VGS Mail held temporarily at Mail Server
F (F) (8) (0) (5)	SMS	Create New SMS
F (F) (8) (0) (6)	Settings	Adjust/Customize Mail Settings
● Web		
F (F) (8) (1) (1)	Vodafone Web	Connect to Vodafone Web
F (F) (8) (1) (2)	Home	Open Web page set as Home
F (F) (8) (1) (3)	Favorites	View/Access saved Web page links
F (F) (8) (1) (4)	Bookmarks	View/Access saved Web page
F (F) (8) (1) (5)	Internet	Enter a URL or select from Log List to access the Web
F (F) (8) (1) (6)	Message Folder	Open Cache Memory or Message Folder
F (F) (8) (1) (7)	Web Settings	Adjust and customize Web Settings
● V-Appli		
F (F) (8) (2) (1)	V-Appli Library	Open V-Appli Library
F (F) (8) (2) (2)	V-Appli Settings	Set V-Appli details
● Data Folder		
F (F) (8) (3)	Data Folder	Open Data Folder

Shortcut	Function	Description
● Audio & Video		
F (F) (8) (4) (1)	Video Player	Playback/Edit Video
F (F) (8) (4) (2)	Audio Player	Playback music
F (F) (8) (4) (3)	Audio Recorder	Record music
F (F) (8) (4) (4)	Player Settings	Audio & Video Settings
● Network Settings		
F (F) (8) (5) (1)	Incoming	Choose Notify or Reject for calls during Web ops
F (F) (8) (5) (2)	Network Setup	Network Connection Status
F (F) (8) (5) (3)	Clear DNS Cache	Clear DNS Cache
● Others		
F (F) (Long Press)	Key Guard	Disable Keypad
F (F) (1)	Menu	Open Index Menu
F (F) (2)	Memory Card	Memory Card Menu
F (F) (文字)	In Standby Message Recorder	Set/Cancel Message Recorder
F (F) (文字) In Standby	Play	Play Messages/Voice Memos
F (F) (3)	Incoming call Forward Call	Forward an incoming call to Voice Mail/Forwarding Number
(文字) In Standby or during call	Add to Phone Book	Create a new Phone Book entry
(文字) Long Press in Standby	Manner Mode	Set/Cancel Manner Mode
(文字)# Long Press in Standby	Drive Mode	Activate/Cancel Drive Mode
(文字) In Standby	Schedule	Open Existing/Create New Schedule
(文字) Long Press in Standby	Voice Recording	Record My Voice Memo/Voice Recorder
(文字) Long Press during call	Voice Memo	Record Voice Memo
(文字) Long Press while 文字 appears	User Shortcut	Set User Shortcut
F (F) (***)# In Standby	On/Off	Set/Cancel Mail, Web or V-Appli
F (F) (In Standby)	Useful	Open Useful Menu

Specifications

V801SH

Weight	Approximately 126 g (with battery)
Continuous Talk Time	Approximately 120 minutes (Japan Mode) Approximately 180 minutes (International Mode)
Continuous Standby Time (when closed)	Approximately 200 hours (Japan Mode) Approximately 220 hours (International Mode)
Charging Time (Power off)	Rapid Charger: Approximately 125 minutes In-Car Charger: Approximately 125 minutes
Dimensions (W × H × D)	Approximately 50 × 102 × 26 mm (when closed, excludes protruding portions)
Maximum Output	0.25 W (Japan Mode) 2.0W (International Mode)

- Values above were calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully-charged battery, with Panel Saving off, in Standby with normal signal reception. Continuous Standby Time is an average measured with a new, fully-charged battery, with handset closed without calls or operations, in Standby with normal signal reception. Standby Time may be less than half this value if handset is out-of-range or signal quality is poor. Battery life may vary by environment (battery status, temperature, etc.).
- Battery life is a nominal value, measured under stable signal conditions. Battery life may be less than half this time if handset is used in weak signal conditions.
- Talk Time and Standby Time will decrease if display/keypad backlights are used frequently.
- Talk Time and Standby Time may decrease when V-Applications are active.
- Talk Time and Standby Time may decrease by handset operations or settings.
- Displays employ precision technology, however, some pixels may appear brighter or darker.

Rapid Charger

■ Rapid Charger

Power Source	AC 100 V - 240 V, 50/60 Hz
Power Consumption	11 VA
Output Voltage/Current	DC 5.2 V/600 mA
Charging Temperature	5°C - 35°C
Dimensions (W × H × D)	Approximately 66 × 27 × 48 mm (without protruding parts, cord)
Cord Length	Approximately 1.5 m

■ Power Cord

Power Source	AC 100 V, 50/60 Hz
Cord Length	Approximately 1.3 m

Desktop Holder

Input Voltage/Current	DC 5.2 V/600 mA
Output Voltage/Current	DC 5.2 V/600 mA
Charging Temperature	5°C - 35°C
Dimensions (W × H × D)	Approximately 62 × 34 × 124 mm (without protruding parts)

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	740 mAh
Dimensions (W × H × D)	Approximately 38 × 5.9 × 37 mm (without protruding parts)

Stereo Headphones

Weight	Approximately 14.6 g
Cord Length	Approximately 133 cm

Customer Service

If you have questions about Vodafone handsets or services, please call General Information. For repairs, please call Customer Assistance.

Vodafone Customer Centers

From a Vodafone handset, dial toll free at 157 for General Information or 113 for Customer Assistance

Call these numbers toll free from fixed lines.

Subscription Area	Service Center	Phone number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	General Information	☎ 0088-259-157
	Customer Assistance	☎ 0088-259-113
Tokushima, Kagawa, Ehime, Kochi	General Information	☎ 0088-247-157
	Customer Assistance	☎ 0088-247-113
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113

Declaration of Conformity

We Sharp Telecommunications of Europe Ltd

of Azure House
Bagshot Road
Bracknell
Berkshire
RG12 7QY

Declare under sole responsibility that the product:

Model: V801SH
Description: GSM 900/GSM 1800/ PCS 1900 Tri Band Dual Mode Cellular Telephone
WCDMA(for Japan Domestic Market)

To which this declaration relates, is in conformity with the following standards and/or other normative documents:

- ETSI EN301511
- ETSI EN301908-2
- ETSI EN301489-7
- ETSI EN301489-1
- EN60950
- EN50360

We hereby declare that the above named product is in conformance to all the essential requirements of the Directive 1999/5/EC

The conformity assessment procedure referred to in Article 10 and detailed in Annex [IV] of directive 1999/5/EC has been followed related to Articles

- R&TTE Article 3.1 (a) Health and Safety
- R&TTE Article 3.1 (b) EMC
- R&TTE Article 3.2 spectrum Usage

With the involvement of the following Notified Body:

BABT, Claremount House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ

Identification mark: **0168** (Notified Body) CE

The technical documentation relevant to the above equipment will be held at:

Sharp Telecommunications of Europe Ltd
Azure House
Bagshot Road
Bracknell
Berkshire
RG12 7QY

EU Representative: Clive Ross Bax

Authorised Person:

Name: C. R. BAX

Signature: 

Title: GENERAL MANAGER

Date: 26/2/2004

付録

F機能一覧

表中の「ボタン操作」に記載されているボタンを連続して押すと、メニューの表示を待たずに機能を選択／実行できます。

※1 通話中も操作できます。

※2 SDメモ리카ードが取り付けられてあるときのみ表示されます。

ボタン操作	機能名称	概要	頁
●基本設定／表示			
F (F) (0) (0) ※1	自局電話番号	この電話機の電話番号を表示	P.2-32
F (F) (0) (1)	USIM設定	PINコードのON/OFF設定、変更	P.13-2
F (F) (0) (2)	システム設定	日本モード／海外モードを切り替え	P.2-2
●音関連機能			
F (F) (1) (0) ※1	着信設定	各種着信音を設定	P.8-2
F (F) (1) (1) ※1	受話音量調節	受話音量を調節	P.2-18
F (F) (1) (3)	効果音設定	各種効果音を設定	P.8-8
F (F) (1) (5)	着信音出力切替	イヤホン装着時の着信音出力場所を設定	P.8-12
F (F) (1) (6) ※1	スピーカー設定	スピーカーホン（通話）／スピーカー受話を設定	P.8-11
F (F) (1) (7)	オリジナル着信音	オリジナル着信音を登録	P.8-15
F (F) (1) (8)	オリジナル音色	オリジナル音色を登録	P.8-32
F (F) (1) (9)	音色オクターブ設定	音色の音程を設定	P.8-34
●管理機能			
F (F) (2) (0)	ダイヤル操作禁止	電話機の使用を禁止	P.13-4
F (F) (2) (1)	簡易ロック	電源ON時に自動的にダイヤル操作禁止を設定	P.13-5
F (F) (2) (2) ※1	シークレットモード	シークレットメモリを表示	P.13-10
F (F) (2) (3)	メモリ使用禁止	メモリダイヤルの使用や登録を禁止	P.13-5
F (F) (2) (4)	ダイヤル禁止	ダイヤル入力での発信を禁止	P.13-6
F (F) (2) (5)	指定着信許可	指定した相手の着信を許可	P.13-7
F (F) (2) (6)	指定着信拒否	指定した相手の着信を拒否	P.13-7
F (F) (2) (7)	オールリセット	登録内容やデータを消去し、各種設定を初期状態に戻す	P.13-12
F (F) (2) (8)	暗証番号変更	操作用暗証番号を変更	P.13-2
F (F) (2) (9)	設定リセット	各種設定を初期状態に戻す	P.13-12

ボタン操作	機能名称	概要	頁
●表示／設定 1			
F (F) (3) (0) ※1	ガイド機能	F機能以外の機能の操作方法を表示	P.14-36
F (F) (3) (1)	メモリ確認	メモリダイヤル登録件数を表示／蓄積メモリ／送信メール／ファイルBOX確認／保存先設定	P.5-6
F (F) (3) (3)	パネルセーブ	パネルセーブを設定	P.14-31
F (F) (3) (4)	照明設定	パネル照明／キー照明／パネル照明の明るさを設定	P.7-17
F (F) (3) (5)	Language	日本語表示／英語表示の切替	P.7-18
F (F) (3) (6)	ウェイクアップ	電源ON時のメッセージ表示の有無／メッセージを設定	P.7-16
F (F) (3) (7)	グループ設定	メモリダイヤルのグループ名やグループ着信音を設定	P.5-13
F (F) (3) (9)	サイドキー設定	サイドキーを1秒以上押したときの動作を設定	P.14-5
●表示／設定 2			
F (F) (4) (0)	画面表示設定	壁紙／マイキャラクタ／文字表示／背景パターン／マーク表示を設定 P.7-2、P.7-15、P.7-12、P.7-14、P.7-3	
F (F) (4) (1) ※1	マネー積算メモ	マネー積算メモを表示／明細変更	P.14-35
F (F) (4) (3)	ユーザー辞書	ユーザー辞書の登録／編集／ダウンロード辞書の設定 P.4-21～P.4-23	
F (F) (4) (4)	応答時間	簡易留守録が応答するまでの時間を設定	P.14-8
F (F) (4) (6)	マナー設定変更	マナーモード時の設定内容を変更	P.3-4
F (F) (4) (7)	サブディスプレイ	サブディスプレイの表示方法を設定	P.7-6
F (F) (4) (8)	アニメーション設定	アニメの設定／作成	P.7-12、P.7-14、P.7-15、P.11-13
F (F) (4) (9)	簡易電卓	簡易電卓の利用	P.14-33
●時計／アラーム機能			
F (F) (5) (0)	リピートアラーム設定	リピートアラームを設定	P.14-10
F (F) (5) (2)	時計表示設定	待受画面に時計やカレンダーを表示	P.7-4
F (F) (5) (9) ※1	時刻設定	西暦／日付／時刻／世界時計を設定	P.1-28、P.1-29
●時間／料金機能			
F (F) (6) (0)	累積通話料金	累積の通話料金の目安を表示	P.2-30
F (F) (6) (1)	通話料金	直前の通話料金の目安を表示	P.2-29
F (F) (6) (2)	累積通話時間	累積の通話時間の目安を表示	P.2-28
F (F) (6) (3)	通話時間	直前の通話時間の目安を表示	P.2-28
F (F) (6) (4)	即時表示	通話後の通話明細表示を設定	P.2-31
F (F) (6) (5)	通話料金上限設定	通話料金の上限を設定	P.2-30

ボタン操作	機能名称	概要	頁
●付加サービス機能			
F (長押し) 0	発信規制	発信や着信を規制する	P.15-9
F (長押し) 1	転送電話	転送電話サービスの開始/転送先の登録	P.15-3
F (長押し) 2	留守番電話	留守番電話サービスの開始設定	P.15-5
F (長押し) 3	転送/留守番停止	転送電話と留守番電話サービスの解除	P.15-4、P.15-6
F (長押し) 4	転送留守設定確認	転送電話と留守番電話サービスの確認	P.15-4、P.15-6
F (長押し) 5	割込通話設定	割込通話サービスの設定/解除	P.15-7
F (長押し) 6	割込通話設定確認	割込通話サービスの設定確認	P.15-7
F (長押し) 7	留守録再生	V801SHで伝言メッセージを聞く	P.15-6
F (長押し) 8	国際発信設定	国際コード、国番号自動付加のON/OFF、国番号リスト編集	P.14-3
F (長押し) 9	セット発信登録	メモリダイヤルの電話番号に付加する番号を登録	P.14-4
●メール・SMS機能			
F (長押し) 0 1	メールボックス	メールボックスの表示/設定	別冊
F (長押し) 0 2	新規作成	メールの新規作成	別冊
F (長押し) 0 3	新着先行受信リクエスト	新着したVGSメールを先行受信	別冊
F (長押し) 0 4	サーバー操作	メールサーバーに一時蓄積されているVGSメールの受信や消去	別冊
F (長押し) 0 5	SMS	ショートメッセージ(SMS)の新規作成	別冊
F (長押し) 0 6	メール・SMS設定	VGSメールやショートメッセージ(SMS)の各項目を設定	別冊
●ウェブ機能			
F (長押し) 1 1	ポータフォンウェブ	ポータフォンウェブに接続	別冊
F (長押し) 1 2	ホーム	ホームに設定している情報画面への接続	別冊
F (長押し) 1 3	お気に入り	よく使う情報画面を登録	別冊
F (長押し) 1 4	ブックマーク	ブックマークを利用して接続	別冊
F (長押し) 1 5	インターネットアクセス	インターネット(ホームページ)への接続	別冊
F (長押し) 1 6	メッセージフォルダ	V801SHに保存している情報を表示	別冊
F (長押し) 1 7	ウェブ設定	ウェブの各項目を設定	別冊
●Vアプリ機能			
F (長押し) 2 1	Vアプリライブラリ	Vアプリライブラリを表示	別冊
F (長押し) 2 2	Vアプリ設定	Vアプリの各項目を設定	別冊
●データフォルダ			
F (長押し) 3	データフォルダ	データフォルダを表示	P.11-7
●オーディオ&ビデオ機能			
F (長押し) 4 1	ビデオプレイヤー	動画の再生/編集	P.9-3
F (長押し) 4 2	オーディオプレイヤー	音楽の再生	P.9-22
F (長押し) 4 3	オーディオレコーダー	音楽の録音	P.9-16
F (長押し) 4 4	プレイヤー設定	オーディオ&ビデオの設定	P.9-27
●ネットワーク設定			
F (長押し) 5 1	通話中着信設定	ネットワーク接続中に電話がかかってきたときの動作を設定	別冊
F (長押し) 5 2	ネットワーク自動調整	ネットワークの接続情報をサーバーから入手	別冊
F (長押し) 5 3	DNSキャッシュクリア	DNSキャッシュをクリア	別冊

ボタン操作	機能名称	概要	頁
●その他の項目			
F (長押し)	誤動作防止	持ち運び時のボタン操作を禁止	P.13-11
F ※1	メニュー表示	インデックスメニューを表示	P.1-30
F (長押し) ※2	メモリカード	メモリカードメニューを表示	P.10-6
F (長押し) (待受中)	簡易留守設定	簡易留守録を設定/解除	P.14-6
F (長押し) (待受中)	録音データ再生	簡易留守録の用件/音声メモを再生	P.14-7
F (長押し) (着信中)	手動着信転送	電話を転送先に転送	P.15-4、P.15-5
文字 (待受中/通話中)	メモリダイヤル登録	メモリダイヤルを登録	P.5-2
文字 (長押し)	マナーモード	マナーモードの設定/解除	P.3-3
表示# (待受中長押し)	運転中モード	運転中モードの設定/解除	P.3-6
(待受中)	スケジュール	スケジュールを表示/設定	P.14-15
(待受中長押し)	ボイス録音	マイボイスメモ/ボイスレコーダーを録音	P.2-19、P.14-9
(通話中長押し)	音声メモ	音声メモを録音	P.14-9
(表示中長押し)	ユーザーショートカット登録	ユーザーショートカットを登録	P.2-33
F (長押し) (待受中)	ON/OFF設定	メール/ウェブ/VアプリのON/OFF設定	別冊
F (長押し) (待受中)	ユースフルメニュー	ユースフルメニューを表示	P.1-30

設定リセットで初期化される内容

■初期状態に戻る項目（F機能）

F番号	機能の名前	初期設定	F番号	機能の名前	初期設定	F番号	機能の名前	初期設定
F10	着信設定	※1	F33	パネルセーブ	※5	F52	時計表示設定	時計大1
F11	受話音量調節	音量3	F34	照明設定	※6	F61	通話料金	0円
F13	効果音設定	※2	F35	Language	日本語	F62	累積通話時間	0時間0分
F15	着信音出力切替	※3	F36	ウェイクアップ	OFF	F63	通話時間	0分0秒
F16	スピーカー設定	OFF	F39	サイドキー設定	※7	F64	即時表示	OFF
F19	音色オクターブ設定	※4	F40	画面表示設定	※8	F71	転送電話	※12
F20	ダイヤル操作禁止	OFF	F44	応答時間	9秒	F77	留守録再生	※13
F21	簡易ロック	OFF	F46	マナー設定変更	※9	F78	国際発信設定	※14
F22	シークレットモード	OFF	F47	サブディスプレイ	※10	F※	ON/OFF設定	※15
F23	メモリ使用禁止	OFF	F48	アニメーション設定	※11			
F24	ダイヤル禁止	OFF	F49	通貨換算設定	OFF			

- ※1 P.8-2参照
- ※2 P.8-8参照
- ※3 イヤホン+スピーカー
- ※4 P.8-20~P.8-23参照
- ※5 パネルセーブモード：ON/OFF設定：ON（5分）、ランプ表示設定：ランプ表示あり
- ※6 パネル照明、キー照明共にON/OFF設定：ON（15秒）、パネル明るさ調整：明るさ3
- ※7 着信時：簡易留守、待受時：マーク表示
- ※8 壁紙設定：ON、マイキャラクタ：すべてOFF、文字表示設定：文字1、背景パターン設定：背景1、マーク表示設定：ON
- ※9 簡易留守：ON、着信音量：すべてサイレント、バイブレータ：すべてON、ランプ設定：スモールライト、マナートークモード：ON、サウンド再生音量：サイレント、Vアプリ再生音量：サイレント、Vアプリバイブレータ：ON
- ※10 サブディスプレイON/OFF設定：ON、照明設定：ON（15秒）、濃度調整：濃度5、待受表示内容設定（時計：デジタル時計大1、マーク：ON、メモ（テキスト）：OFF）、壁紙設定：OFF、着信表示（カラーパターン：すべてホワイト、グラフィックパターン：OFF）、表示方向切替：上向き
- ※11 スクリーンアニメ：OFF、背景アニメ：ON、ポードフォンライブ！アニメ：すべてON
- ※12 留守番電話センター番号：09066517000
- ※13 留守 再生番号：1416（国内用）、+819066514170（海外用）
- ※14 国際コード自動付加：OFF、国番号自動付加：OFF
- ※15 メール、ウェブ、Vアプリ共にON

■初期状態に戻る項目（F機能以外）

機能	初期設定
マナーモード	解除
簡易留守録	解除
メモリダイヤル検索モード	メモリNo検索
インフォメーションメニュー	ランプ表示設定：すべてランプ表示なし、 タイムアウト設定：タイムアウトしない
メモリカードの暗号化設定	メモリダイヤル、メール、スケジュール：すべてOFF
ユーザーショートカット	①メール・SMS、②オーディオ&ビデオ、③ボイス、 ④電子ブック、⑤簡易電卓、⑥マナー積算メモ、 ⑦国際発信設定、⑧テキストメモ、⑨バーコード、 ⑩Vアプリライブラリ、⑪赤外線/USB通信、 ⑫スポットライト、⑬データフォルダ
スポットライト	継続点灯時間：1分、点灯カラー：ライチフルーツ（白色系統）
スケジュール表示切替	1日表示
バーコード読取表示サイズ設定	文字中/画像等倍

トラブルシューティング

症状	確認すること	処置
電源が入らない	<ul style="list-style-type: none"> ●電源ボタンを2秒以上押していますか？ ●電池切れになっていませんか？ ●電池パックがV801SHに装着されていますか？ 	<ul style="list-style-type: none"> ●電源ボタンを2秒以上押してください。 ●電池パックを予備電池に交換するか、充電してください。 ●正しく装着してください。
電源を入れたのに操作できない	<ul style="list-style-type: none"> ●PIN1 ON/OFF切替が「ON」に設定されていませんか？ 	<ul style="list-style-type: none"> ●PIN1 ON/OFF切替が「ON」に設定されているときは、PIN1コードの入力を求められますので、画面の指示に従って入力してください。（参照P.1-7）
電源を入れたときや機能の操作時に「USIMカードを確認してください」と表示される	<ul style="list-style-type: none"> ●USIMカードは正しく差し込まれていますか？ ●違ったUSIMカードをお使いではありませんか？ 	<ul style="list-style-type: none"> ●USIMカードが正しく取り付けられていることを確認してください。正しく取り付けられているときは、破損している可能性があります。正しいUSIMカードであることを確認してください。使用できないカードが取り付けられている可能性があります。
ボタン操作ができない	<ul style="list-style-type: none"> ●誤動作防止が設定されていませんか？（「Q」が表示） ●ダイヤル操作禁止が設定されていませんか？（「R」が表示） 	<ul style="list-style-type: none"> ●誤動作防止を解除してください。（参照P.13-11） ●ダイヤル操作禁止を解除してください。（参照P.13-4）

症状	確認すること	処置
ダイヤルしても通話音(ブーッ…)が出る	<ul style="list-style-type: none"> 市外局番など0からはじまる相手の電話番号をダイヤルしていませんか？ 「圏外」が表示されていませんか？ 	<ul style="list-style-type: none"> 市外局番など0からはじまる相手の電話番号をダイヤルしてください。 電波の届く場所に移動してかけ直してください。
「圏外」が表示され、電話がかかけられない	<ul style="list-style-type: none"> サービスエリア外か電波の届きにくい場所にいるのでは？ 日本で海外モードに設定されていませんか？(「圏」表示) 海外で日本モードに設定されていませんか？(「国」表示) 	<ul style="list-style-type: none"> 電波の届く場所に移動してかけ直してください。 日本モードに設定してください。(☎P.2-2) 海外モードに設定してください。(☎P.2-2)
通話がとぎれたり、切れる	<ul style="list-style-type: none"> 電波の届きにくい場所にいるのでは？ 電池切れになっていませんか？ 	<ul style="list-style-type: none"> 電波の届く場所に移動してかけ直してください。 電池パックを予備電池に交換するか、充電してください。
ダイヤルを押しても電話がかかけられない	<ul style="list-style-type: none"> 誤動作防止が設定されていませんか？(「Q」が表示) ダイヤル操作禁止が設定されていませんか？(「罎」が表示) ダイヤル禁止が設定されていませんか？ 	<ul style="list-style-type: none"> 誤動作防止を解除してください。(☎P.13-11) ダイヤル操作禁止を解除してください。(☎P.13-4) ダイヤル禁止を解除してください。(☎P.13-6)
メモリダイヤルを使って電話がかかけられない	<ul style="list-style-type: none"> かけたいメモリダイヤルをシークレットメモリに登録していませんか？ メモリ使用禁止が設定されていませんか？ 	<ul style="list-style-type: none"> シークレットモードにしてください。(☎P.13-10) メモリ使用禁止を解除してください。(☎P.13-5)
通話中に「プチッ」と音が入る	<ul style="list-style-type: none"> 電波が弱くなって別のエリアに切り替わるときに発生することがあります。 	—
充電ができない	<ul style="list-style-type: none"> 急速充電器の接続コネクタがV801SHまたは卓上ホルダーに確実に差し込まれていますか？ 急速充電器のプラグがしっかりとコンセントに差し込まれていますか？ 電池パックがV801SHに装着されていますか？ V801SHが卓上ホルダーに確実に装着されていますか？ V801SH、電池パック、卓上ホルダーの充電端子や急速充電器の接続コネクタ、V801SHの外部機器端子、卓上ホルダーの接続端子が汚れていませんか？ 周囲温度が5℃～35℃以外になると、充電しないことがあります。 電池パックの寿命、または電池パックが異常です。 充電中にV801SHや電池パックの温度が上昇すると、充電を中断することがあります。 	<ul style="list-style-type: none"> もう一度、確実に差し込んでください。 もう一度、確実に差し込んでください。 正しく装着してください。 もう一度、確実に装着し直してください。 端子部を綿棒などで清掃してください。 5℃～35℃の温度範囲でご使用ください。 新しい電池パックと交換してください。

症状	確認すること	処置
充電時間が短い	<ul style="list-style-type: none"> 電池パックに容量が残っている場合は、充電時間が短くなります。 	—
熱くなる	<ul style="list-style-type: none"> 充電中に、急速充電器や卓上ホルダーが発熱することがあります。 長時間通話すると、V801SHが熱くなることがあります。手で触れることのできる温度であれば異常ではありません。 	—
電池の消耗が早い	<ul style="list-style-type: none"> 使用環境(気温/充電状況/電波状態)、操作や設定状態によっては、電池パックの消耗が早くなります。 	<ul style="list-style-type: none"> 電池パックの利用可能時間(☎P.1-17)、持ちについて(☎P.1-17)、消耗を軽減する(☎P.1-18)を参照してください。
ディスプレイの表示がちらつく	<ul style="list-style-type: none"> 蛍光灯の下では、ディスプレイの表示がちらつくことがあります。 	—
バックライト消灯時ディスプレイの表示が暗い	<ul style="list-style-type: none"> ディスプレイの特性によるもので、故障ではありません。 	—
スピーカーで音楽が再生できない	<ul style="list-style-type: none"> マナーモードが設定されていませんか？ 	<ul style="list-style-type: none"> マナーモードを解除してください。(☎P.3-3)

補足

●故障の際の連絡先やアフターサービス：☎P.17-23

こんなときはご利用になれません

■「圏外」表示が出ているとき

サービスエリア外か電波の届かない場所にいるためです。「圏外」表示が消え、受信電波の強さを示すバーが1本以上表示される場所へ移動してください。

■「充電して下さい」のメッセージが出て、電池アラーム音が鳴っているとき

電池パックの残量がなくなっています。(☎P.1-18)

電池パックを充電するか、充電されている予備の電池パックと交換してください。

■「Q」表示が出ているとき

誤動作防止が設定されています。(☎P.13-11)

設定を解除しないとボタン操作はできません。ただし、電話がかかってきたときは、一時的に誤動作防止は解除されます。エンキーアンサー(☎P.2-10)で電話に出ることができます。V801SHを閉じた状態でサイドキーを1秒以上押しと、サブディスプレイに「サイドキー誤動作防止 F長押しで解除」と表示されます。

■「罎」表示が出ているとき

ダイヤル操作禁止が設定されています。(☎P.13-4)

ダイヤル操作禁止を解除しないと電話はかけられません。ただし、電話がかかってきたときは、エンキーアンサー(☎P.2-10)で電話に出ることができます。

17

付録

17

付録

スモールライト / 電池残量表示

スモールライトや電池残量表示は、次のような状態をお知らせします。

電源が入っているとき

スモールライト	電池残量表示 (電池)	状態
消灯	点滅	温度異常により充電中断中
赤色点滅	点滅	電池パックの寿命、異常
赤色点灯	点滅	充電中
消灯	点灯	充電完了、待受中

電源が切れているとき

スモールライト	電池残量表示 (電池)	状態
赤色点滅	消灯	電池パックの寿命、異常
赤色点灯	消灯	充電中

保証書とアフターサービス

■保証書

V801SH本体をお買い上げいただいた場合は、保証書がついています。

- お買い上げ店名、お買い上げ日をご確認ください。
- 内容をよくお読みのうえ、大切に保管してください。
- 保証期間は、保証書に記載しております。

■アフターサービスについて

修理をご依頼になる前に、「トラブルシューティング」に掲載されている項目をもう一度ご確認ください。該当する症状がないときや、異常を解決できないときは、ご予約いただいたポータフォンの故障受付（☎P.17-23）にご相談ください。

その際、できるだけ詳しく異常の状態をお聞かせください。

- 保証期間中は保証書の記載内容に基づいて修理いたします。
- 保証期間後の修理につきましては、修理により機能が維持できる場合は、ご要望により有償修理いたします。

その他アフターサービスの詳細は、お買い上げいただいた「取扱店」、最寄りの「ポータフォンショップ」または「お問い合わせ先」（☎P.17-23）までご連絡ください。なお、補修用性能部品（機能維持のために必要な部品）の最低保有期間は、生産打ち切り後6年です。

注意


- 本製品の故障、誤作動または不具合などにより、通話などの機会を逸したために、お客さま、または第三者が受けた損害につきましては、当社は責任を負いかねますのであらかじめご了承ください。
- 故障または修理により、お客さまが登録・設定した内容が消失／変化する場合がありますので、大切なメモリアイタルなどは控えをとっておかれることをおすすめします。
なお、故障または修理の際にV801SHに登録したデータ（メモリアイタル／画像／サウンドなど）や設定した内容が消失／変化した場合の損害につきましては、当社は責任を負いかねますのであらかじめご了承ください。
- 本製品を分解／改造すると、電波法にふれることがあります。また、改造された場合は修理をお引き受けできませんので、ご注意ください。

Table with 4 columns of text. Includes characters like 互伍, 江洪, 骨伯, 菜載, 珊產, 事似, 謝車, 輓遇, 薯請, 姪紹, 唇娠, 唇娠, 惜感, 運選, 燥爭, 受情, 辰事, 秩室, 沈珍, 諦諦, 士奴, 胴菊.

Table with 4 columns of text. Includes characters like 錐錘, 惜感, 運選, 燥爭, 受情, 辰事, 秩室, 沈珍, 諦諦, 士奴, 胴菊.



 付錄



付錄



お問い合わせ先一覧

お困りのときや、ご不明な点などがございましたら、お気軽に下記お問い合わせ窓口までご連絡ください。

ボーダフォンお客さまセンター		
総合案内	ボーダフォン携帯電話から157(無料)	
紛失・故障受付	ボーダフォン携帯電話から113(無料)	

■一般電話からおかけの場合

ご契約地域	お問い合わせ内容	電話番号
北海道・青森県・秋田県・岩手県・山形県・宮城県・福島県・新潟県・東京都・神奈川県・千葉県・埼玉県・茨城県・栃木県・群馬県・山梨県・長野県・富山県・石川県・福井県	総合案内	☎0088-240-157(無料)
	紛失・故障受付	☎0088-240-113(無料)
愛知県・岐阜県・三重県・静岡県	総合案内	☎0088-241-157(無料)
	紛失・故障受付	☎0088-241-113(無料)
大阪府・兵庫県・京都府・奈良県・滋賀県・和歌山県	総合案内	☎0088-242-157(無料)
	紛失・故障受付	☎0088-242-113(無料)
広島県・岡山県・山口県・鳥取県・島根県	総合案内	☎0088-259-157(無料)
	紛失・故障受付	☎0088-259-113(無料)
徳島県・香川県・愛媛県・高知県	総合案内	☎0088-247-157(無料)
	紛失・故障受付	☎0088-247-113(無料)
福岡県・佐賀県・長崎県・大分県・熊本県・宮崎県・鹿児島県・沖縄県	総合案内	☎0088-250-157(無料)
	紛失・故障受付	☎0088-250-113(無料)

魏	8218	缺	8280	玦	8347	
魁	8219	鳩	8281	玦	8348	
魁	8220	鳩	8282	玦	8349	
魁	8221	鸞	8283	鸞	8350	
颯	8222	鸞	8284	鸞	8351	
访	8223	鸞	8285	鸞	8352	
解	8224	鸞	8286	鸞	8353	
解	8225	鸞	8287	鸞	8354	
解	8226	鸞	8288	鸞	8355	
解	8227	鸞	8289	鸞	8356	
解	8228	鸞	8290	鸞	8357	
解	8229	鸞	8291	鸞	8358	
解	8230	鸞	8292	鸞	8359	
解	8231	鸞	8293	鸞	8360	
解	8232	鸞	8294	鸞	8361	
解	8233				8362	
解	8234	鸞	8301	鸞	8363	
解	8235	鸞	8302	鸞	8364	
解	8236	鸞	8303	鸞	8365	
解	8237	鸞	8304	鸞	8366	
解	8238	鸞	8305	鸞	8367	
解	8239	鸞	8306	鸞	8368	
解	8240	鸞	8307	鸞	8369	
解	8241	鸞	8308	鸞	8370	
解	8242	鸞	8309	鸞	8371	
解	8243	鸞	8310	鸞	8372	
解	8244	鸞	8311	鸞	8373	
解	8245	鸞	8312	鸞	8374	
解	8246	鸞	8313	鸞	8375	
解	8247	鸞	8314	鸞	8376	
解	8248	鸞	8315	鸞	8377	
解	8249	鸞	8316	鸞	8378	
解	8250	鸞	8317	鸞	8379	
解	8251	鸞	8318	鸞	8380	
解	8252	鸞	8319	鸞	8381	
解	8253	鸞	8320	鸞	8382	
解	8254	鸞	8321	鸞	8383	
解	8255	鸞	8322	鸞	8384	
解	8256	鸞	8323	鸞	8385	
解	8257	鸞	8324	鸞	8386	
解	8258	鸞	8325	鸞	8387	
解	8259	鸞	8326	鸞	8388	
解	8260	鸞	8327	鸞	8389	
解	8261	鸞	8328	鸞	8390	
解	8262	鸞	8329	鸞	8391	
解	8263	鸞	8330	鸞	8392	
解	8264	鸞	8331	鸞	8393	
解	8265	鸞	8332	鸞	8394	
解	8266				8333	
解	8267	鸞	8334	鸞	8401	
解	8268	鸞	8335	鸞	8402	
解	8269	鸞	8336	鸞	8403	
解	8270	鸞	8337	鸞	8404	
解	8271	鸞	8338	鸞	8405	
解	8272	鸞	8339	鸞	8406	
解	8273	鸞	8340	鸞		
解	8274	鸞	8341	鸞		
解	8275	鸞	8342	鸞		
解	8276	鸞	8343	鸞		
解	8277	鸞	8344	鸞		
解	8278	鸞	8345	鸞		
解	8279	鸞	8346	鸞		

17
付録

17
付録

索引

英数字

DPOF.....	6-38
E- アニメータ	11-16
F機能一覧	17-2
PIN コード	1-7
ON/OFF を切り替える	13-3
PIN ロックを解除する	13-3
変更.....	13-2
USB データ通信	14-38
USIM カード	1-4

あ

アラームを鳴らす	14-10
暗証番号	1-33
インデックスメニュー	1-30
インフォメーションメニュー	2-22
ウェイクアップ	7-16
運転中モード	3-6
英語表示に切り替える	7-18
英数字入力モード	4-2、4-9
絵文字コード入力モード	4-2、4-10
エリア選択.....	2-2
オーディオプレイヤー	9-20
再生する.....	9-22
再生方法を設定する	9-27
オーディオリスト	9-23
オーディオレコーダー	9-11
オーディオ機器と接続する	9-14
音する.....	9-16
音方法を設定する	9-18
オーナー情報	2-32
オールリセット	13-12
オリジナル着信音	8-12
オリジナル音色	8-28
音声メモ	2-19、14-9

か

カーソル	4-7
ガイド機能.....	14-36
外部データ通信	14-38
各ボタンに割り当てられた文字	4-4
画像一覧表示	11-6
画像装飾	11-28
画像分割メール	6-35、11-39
カタカナ入力モード	4-2
カナ英数字変換	4-18
かな入力方式	4-2
壁紙	7-2
画面表示設定	
壁紙設定.....	7-2
マーク表示設定.....	7-3
マイキャラクタ	7-15
文字表示設定	7-12
カレンダー.....	7-5
簡易電卓.....	14-33
簡易留守録.....	14-6
解除する.....	14-7
設定する.....	14-6
用件を聞く	14-7
用件を消去する	14-8
呼出し時間（応答時間）変更.....	14-8
簡易ロック.....	13-5
漢字（ひらがな）入力モード	4-2、4-6
簡単アニメ.....	11-13
区点コード入力モード.....	4-2、4-12
国番号自動付加	2-7、14-4
国番号リスト	14-3
クローズ終話設定	1-27
圏外	17-9
言語選択（日本語／英語）.....	7-18
交換機用暗証番号	1-33
国際コード自動付加.....	14-3
国際電話	2-5
国際ローミング	2-2

声のメモを録音する.....	14-9
誤動作防止	13-11

さ

サービス呼出し時間.....	15-4
サイドキー設定	14-5
サイレント	8-3
サウンド再生音量.....	8-8
サブディスプレイ.....	1-14、7-6
三者通話サービス.....	15-8
相手を切り替えながら通話する	15-8
3人で同時に通話する	15-9
もう一人へ電話をかける	15-8
シークレットモード.....	13-10
時刻を合わせる	1-28、1-29
指定着信音	5-8
指定着信許可	13-6
指定着信拒否	13-6
自分の電話番号を表示する（自局電話番号）..	2-32
手動着信転送	14-5
受話音量調節.....	2-18
照明設定.....	7-17
スクリーンアニメ.....	7-12
スケジュール	14-15
ステップ.....	8-3
スピーカー受話.....	8-11
スピーカーホン.....	8-11
スピードダイヤル.....	5-20
スポットライト	14-20
西暦を合わせる	1-28
世界時計.....	1-29
赤外線通信	12-2
設定リセット	13-12
セット発信	14-4
操作音	8-8
音量調整	8-10
時間設定	8-10
パターン設定	8-8
操作用暗証番号	1-33
変更	13-2
即時表示.....	2-31

た

ダイヤル禁止	13-6
ダイヤル操作禁止	13-4
ダウンロード辞書	4-23、11-49
着信	2-10
着信応答保留	2-15
着信音	
音量調整	8-2
着信パターン設定.....	8-3
着信呼出時間	8-7
バイブパターン	8-6
バイブレータ	8-5
ランプ設定	8-6
着信音出力切替	8-12
着信履歴.....	2-14
通話時間.....	2-28
通話内容を録音	14-9
通話明細を表示する	2-31
通話料金.....	2-29
データフォルダ	11-2
新しくフォルダを作成する	11-50
ファイルを確認する	11-7
ファイルをコピーする	11-52
フォルダを移動する	11-51
フォルダやファイルを消去する ..	11-51
フォルダやファイル名の変更.....	11-50
テキストメモ	4-28
デジタルカメラモード	6-5、6-7
電子ブック	11-45
転送電話サービス.....	15-3
転送先に転送する	15-4
転送設定を確認する	15-4
転送を開始する	15-3
転送を停止する	15-4
電池レベル（電池残量表示）.....	1-19
電話を受ける	2-10
電話をかける（日本モード）.....	2-4
海外で電話をかける（海外モード）..	2-6
以前にかけた番号に（リダイヤル）..	2-8
かけてきた方に（着信履歴）.....	2-12
登 してある番号に（メモリダイヤル）..	5-16
電話を切る	2-5

17

付録

登録	
オーナー情報	2-32
オリジナル着信音	8-12
オリジナル音色	8-28
スケジュール	14-15
着信履歴の電話番号	5-6
テキストメモ	4-28
メモリダイヤル	5-2
ユーザー辞書	4-21
リダイヤルの電話番号	5-6
時計	1-28
アラーム	14-10
時刻を合わせる	1-28
世界時計	1-29
時計表示設定	7-4

な

音色オクターブ設定	8-34
ノートパッドメモリ	2-20

は

バーコード	14-22
作成	14-28
読み取り	14-22
背景アニメ	7-14
背景パターン	7-14
パイプパターン	8-6
パイプレータ	8-5
発信規制サービス	15-9
着信規制を設定する	15-10
発信規制を設定する	15-10
発信規制サービスの設定を確認する	15-10
発信規制を解除する	15-10
発信規制用暗証番号	1-33
変更	15-10
パネル明るさ調整	7-17
パネルセーブ	14-31
パノラマ合成	11-37
ピクチャーコール/メール	5-11
日付を合わせる	1-28
ビデオカメラモード	6-15、6-17
ビデオプレイヤー	9-2
動画を再生する	9-3

動画を編集する	9-5
ファイルを管理する	9-23
ビデオリスト	9-23
ファンクションメニュー	1-31
フェイスアレンジ	11-29
不在時の着信お知らせ表示	2-25
プッシュトーン	14-2
ボイスレコーダー	9-32
再生する	9-35
音する	9-32
ポータフォンライブ!アニメ	7-15
ポケベル入力方式	4-12

ま

マイキャラクタ	7-15
マイク付液晶オーディオリモコン	14-37
マイボイスメモ	14-9
待受画面	1-26
マナーモード	3-3
マネー積算メモ	14-34
ムービーモード	6-15、6-17
ムービングフォトフレーム	11-32
メールコール	5-10
メールフォルダ	5-12
メールに添付する	11-12
メニュー	1-30
メモリカード	10-2
メモリ確認	5-6
メモリダイヤル	5-2
画像の登	5-11
グループ着信音の設定	5-13
グループ名の変更	5-13
グループを指定して呼び出す	5-19
修正/変更	5-23
消去	5-24
使用を禁止する(メモリ使用禁止)	13-5
作る(登)	5-3
登 件数を確認する	5-6
検索方法を選ぶ	5-17
秘密のメモリダイヤルを作る	13-9
メモリ番号を入力して呼び出す	5-18
「ヨミ」の行を指定して呼び出す	5-18
「ヨミ」を入力して呼び出す	5-19

メモリ番号	5-5、5-18
文字の入力方法	4-6
文字表示設定	7-12
文字を修正する	4-24
文字を消去する	4-24、4-26
モバイルカメラ	6-2
明るさを調整する	6-26
画質を設定する	6-27、6-28
撮影サイズを設定する	6-26
撮影した画像を確認する	6-30
撮影する	6-7、6-17
サムネイル	6-6
シャッター音を設定する	6-25
シャッターを設定する	6-27
ズームを利用する	6-24
静止画のプリントを指定する(DPOF)	6-38
接写撮影する	6-24
セルフタイマーを利用する	6-20
デジタルカメラモード	6-5、6-7
動画の音声 音を設定する	6-28
動画の撮影時間を設定する	6-28
登 先を設定する	6-29
ビデオカメラモード	6-15、6-17
表示サイズを設定する	6-25
ファインダーを切り替える	6-22
フレームを付けて撮影する	6-11
V801SH を閉じて撮影する	6-23
ムービー写メール用の動画を撮影する	6-29
ムービーモード	6-15、6-17
メールに添付する	6-34
メモリ使用状況を確認する	6-33
モバイルカメラモード	6-5、6-7
モバイルライトを利用する	6-23
連写撮影する	6-12
モバイルカメラモード	6-5、6-7

や

ユーザー辞書	4-21
ユースフルメニュー	1-30

ら

リダイヤル	2-8
リピートアラーム	14-10
留守番電話サービス	15-5
V801SH から伝言を聞く	15-6
留守番電話サービスの設定を確認する	15-6
留守番電話サービスを開始する	15-5
留守番電話サービスを停止する	15-6
留守番電話センターに転送する	15-5
連写モード	6-12
連続表示	11-11

わ

割込通話サービス	15-7
相手を切り替える	15-7
割込通話の設定を確認する	15-7
割込通話を受ける	15-7
割込通話を解除する	15-7
割込通話を設定する	15-7
ワンコールサイレント	2-17
ワンタッチ変換	4-19

主な仕様

仕様変更などにより、図や内容が一部異なる場合があります。

■V801SH

質量	約126g（電池パック装着時）
連続通話時間	約120分（日本モード） 約180分（海外モード）
連続待受時間（折りたたみ時）	約200時間（日本モード） 約220時間（海外モード）
充電時間	急速充電器：約125分 シガーライター充電器：約125分 （V801SHの電源を切って充電した場合）
サイズ（幅×高さ×奥行）	約50×102×26mm（アンテナ、突起部を含まず） （折りたたみ時）
最大出力	0.25W（日本モード） 2.0W（海外モード）

- 上記は、電池パック装着時の数値です。
- 連続通話時間とは、充電を満した新品の電池パックを装着し、電波が正常に受信できる静止状態から算出した平均的な計算値です。
連続待受時間とは、充電を満した新品の電池パックを装着し、V801SHを閉じた状態で通話や操作をせず、電波が正常に受信できる静止状態から算出した平均的な計算値です。電波の届きにくい場所（ビル内、車内、カバンの中など）や、圏外表示の状態での待受では、ご利用時間が約半分以下になることがあります。また、使用環境（充電状態、気温など）によっては、ご利用可能時間が変動することがあります。
- 電池の利用可能時間は、電波が安定した状態で算出した当社計算値です。電波の弱い場所での通話や圏外表示での待受は電池の消耗が多いため、ご利用時間が半分以下になることがあります。
- パネル照明およびキー照明が点灯している状態での利用（ボードフォンライブ！ご利用時など）が多いときは、連続通話時間および連続待受時間は短くなります。
- Vアプリを起動させた状態では、通話時間および待受時間が短くなる場合があります。
- 操作や設定状態によっては、通話時間および待受時間が短くなる場合があります。（[P.1-17](#)）
- 液晶ディスプレイは非常に精密度の高い技術で作られていますが、画素欠けや常時点灯する画素がありますので、あらかじめご了承ください。

■急速充電器

●本体

電源	AC100-240V、50/60Hz共用
消費電力	11VA
出力電圧／出力電流	DC5.2V／600mA
充電温度範囲	5℃～35℃
サイズ（幅×高さ×奥行）	約66×27×48mm（突起部、コード除く）
コードの長さ	約1.5m

●電源コード

電源	AC100V、50/60Hz共用
コードの長さ	約1.3m

■卓上ホルダー

入力電圧／入力電流	DC5.2V／600mA
出力電圧／出力電流	DC5.2V／600mA
充電温度範囲	5℃～35℃
サイズ（幅×高さ×奥行）	約62×34×124mm（突起部除く）

■電池パック

電圧	3.7V
----	------

使用電池	リチウムイオン電池
------	-----------

容量	740mAh
----	--------

外形サイズ（幅×高さ×奥行）	約38×5.9×37mm（突起部 除く）
----------------	----------------------

■ステレオヘッドホン

質量	約14.6g
----	--------

コードの長さ	約133cm
--------	--------
