

Saving to Phone Book

Save names with phone numbers, mail addresses, etc. to Phone Book.

Phone Book Entry Items

Item	Description	Item	Description
Last Name:	Enter up to 32 characters.	Note:*	Add personal details. Enter up to 256 characters.
First Name:	(Select Name : when saving to USIM Card.)	Birthday:*	Enter birth date
Reading:	Enter up to 64 characters	Picture:*	Set an image to appear for incoming calls/mail
Add Phone Number:	Enter up to three numbers on handset/two on USIM Card (32 digits each)	Tone/Video for Voice Call:*	Customise handset response to calls/mail
Add Email Address:	Enter up to three addresses on handset/one on USIM Card (128 single-byte alphanumeric each)	Tone/Video for Video Call:*	
		Tone/Video for New Message:*	
Category:	Sort entries into 16 Categories (11 Categories on some USIM Cards). Category names can be changed. Set Ringtone by Category (handset only).	Light for Voice Call:*	
		Light for Video Call:*	
		Light for New Message:*	
		Vibration for Incoming Call:*	
Address:*	Enter postal code (20 characters), country name (32 characters), state/province (64 characters), city name (64 characters) and street name/number (64 characters)	Vibration for New Message:*	
		Secret:*	Restrict access to Phone Book entries by saving them as Secret Mode entries
Homepage:*	Save URLs. Enter up to 1024 bytes.		

* Not supported on USIM Card.








- Save up to 750 entries in 705SH Phone Book; USIM Card Phone Book entry limit varies according to card specifications. Depending on the USIM Card in use, some items may not be supported, and character entry limits or number of Categories may be lower. Also, the number of phone numbers or mail addresses per entry may be lower.


Note ► Back-up Important Information

When battery is exhausted/removed for long periods, Phone Book entries may be lost; handset damage may also affect handset information recovery. Vodafone is not liable for damages from lost/altered data.





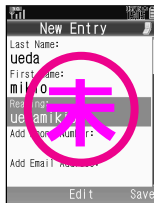


New Phone Book Entries

Enter a name, reading, phone number and mail address.






- 1 Press , select **Phone Book** and press .
- 2 Select **Add New Entry** and press .
- 3 Select **Last Name:** and press .
- 4 Enter last name and press .
- 5 Select **First Name:** and press .
- 6 Enter first name and press .
Characters entered for names appear under **Reading:**.










- Tip** ▶ **Correcting Reading**
Select **Reading:** and press .
Make corrections and press .


- 7 Select **Add Phone Number:** and press .
- 8 Enter a phone number and press .
- 9 Select an icon and press .
- 10 Select **Add Email Address:** and press .
- 11 Enter a mail address and press .
- 12 Select an icon and press .
- 13 Press  **Save**

Note ▶ Enter a name, phone number or mail address to create a Phone Book entry.




- Tip** ▶ **Setting Storage Media**
Press  → Select **Phone Book** → Press  →
Select **Settings** → Press  → Select **Save New Entry** → Press  → Select **Phone, USIM Memory** or **Ask Each Time** → Press .
- For **Ask Each Time**, select storage media for each new entry.

Editing Phone Book Entries

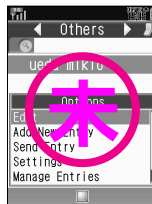

- 1 Press  and select an entry
- 2 Press  **Options**
- 3 Select **Edit** and press .
- 4 Select an item and press .
- 5 Edit contents and press .
After numbers/mail addresses, select an icon and press .
- 6 Press  **Save**



Saving from Received Calls

- 1 Select a record (see P.17-24 "Calling from Received Calls")
- 2 Press  **Options**, select *Save Number* and press 
- 3 **New Entry**
 - 1 Select *As New Entry* and press 
 - 2 Perform Steps 3 - 13 on P.17-30






Add to Existing Entry






 - 1 Select a Phone Book entry and press 
 - 2 Press  **Save**

Dialling from Phone Book



Changing Search Method


By Reading	Shows entries that start with specified Reading
By Category	Opens entries in the specified Category
By a-ka-sa-ta-na	Shows entries with Readings that start with katakana in the specified row

- 1 Press , select *Phone Book* and press 
- 2 Select *Settings* and press 
- 3 Select *Sort Entries* and press 
- 4 Select *By Reading*, *By Category* or *By a-ka-sa-ta-na* and press 

- Tip ► Opening USIM Card Phone Book Entries
Press  ► Press  **Options** ► Select *Settings* ►
Press  ► Select *Select Phone Book* ► Press 
► Select *USIM Memory* ► Press 

Search by Reading

- 1 Set search method to *By Reading*
- 2 In Standby, press 
- 3 Enter reading
- 4 Select a name and press 

- Tip ► Multiple Numbers
Use  to select other numbers.

- 5 Press 

Vodafone Address Book (VAB)

Back up Phone Book via server; refresh VAB or Phone Book to reflect changes; add to/update VAB online via PC; restore lost/alterd Phone Book entries via VAB. VAB requires a separate contract. For details, contact Vodafone Customer Centre, General Information (see P.17-45) or access the Vodafone K.K. Website via PC: <http://www.vodafone.jp/en/VAB/>

Mobile Camera

Before Using Camera

Select from two different shooting modes. Use **Photo Camera** for still images and **Video Camera** for video.

■ Photo Camera

Image Size	W 1200 × H 1600 dots W 960 × H 1280 dots W 768 × H 1024 dots W 480 × H 640 dots W 240 × H 320 dots W 120 × H 160 dots
Save Location	Handset or Memory Card
File Format	JPEG (.jpg)


■ Video Camera

Image Size	W 176 × H 144 dots W 128 × H 96 dots	W 240 × H 320 dots
Save Location	Handset or Memory Card	Memory Card
File Format	MPEG-4 or H263 (.3gp)	MPEG-4 (.3gp or .ASF)

Camera Shake

Handset movement may blur images; hold 705SH firmly or place it on a stable surface and use Self-timer.








Note ▶ Lens Cover

Clean dust/smudges from lens cover (see [P.17-14](#) ) with a soft cloth before use.

Mobile Camera

- Mobile camera is a precision instrument, however, some pixels may appear brighter/darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Subjecting the lens to direct sunlight will damage the camera's colour filter.


Capturing Still Images

- 1 Press , select **Camera** and press .
- 2 Frame image on Display
 - In Video Camera mode, press   to switch to Photo Camera.
- 3 Press .
- 4 Press  to save
- 5 Press  to exit

Data Folder

Contents

705SH files are organised in folders by file format.

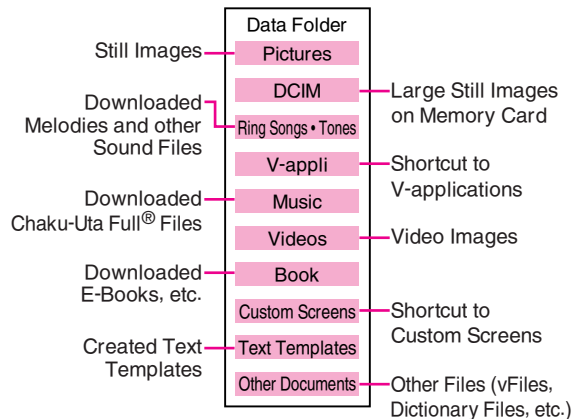

Opening Data Folder

- 1 Press **[F2]**, select **Data Folder** and press **[F2]**
- 2 Select a folder and press **[F2]**
 - To switch between handset and Memory Card, press **[F4]** **Options**, select **Change to Phone** or **Change to Memory Card**, then press **[F2]**.
- 3 Select a file and press **[F2]**
- 4 Press **[F4]** **SEARCH/BACK** to return to file list





MMS Mail Attachments

Example: Attaching an image from Pictures folder to MMS Mail

- 1 Press **[F2]**, select **Data Folder** and press **[F2]**
- 2 Select **Pictures** and press **[F2]**
- 3 Select a file and press **[F4]** **Options**
- 4 Select **Send** and press **[F2]**
- 5 Select **As Message** and press **[F2]**
- 6 Complete other fields and send MMS Mail (perform from Step 3 on [P.17-37](#))

Vodafone live!

Retrieving Network Information

To use Vodafone live! services, first retrieve Network information. Handset initiates information retrieval when ,  or  is pressed for the first time. If handset is in Japanese mode, press  **No**, then change to English mode (see P.17-22).

1 Press ,  or 

2 Press  **Yes**

- 705SH connects to the Network and retrieves required information.

Web

Access the Mobile Internet via Vodafone Web. Browse for image or sound files as well as information.

Vodafone Web Main Menu

Access Vodafone live!-compatible Mobile Internet sites via Vodafone Web Main Menu; download news/info as well as files for use on handset.

Auto Delivery Service

Use this Vodafone live! service (when available) to request automatic information updates from compatible Mobile Internet sites.

Opening Vodafone Web Menu

1 Press , select *Vodafone live!* and press 

2 Select *Vodafone live!* and press 

3 Select *English* and press 

4 Highlight a menu item and press 


5 Repeat Step 4 to open additional links

6 Press  to exit Web

7 Press  **Yes**

Note ▶ Vodafone Web Main Menu is subject to change.

Web Options Menu

Access a Mobile Internet site and press  **Options** to use the following functions.

Item	Description
Bookmark	Save links to Mobile Internet sites; access the site (705SH connects to the Network) or edit the list
Save This Page	Save page content; 705SH opens saved pages without connecting to the Network
Copy Text	Copy text
Reload	Update page content
Enter URL	Enter URL directly to open a Mobile Website
Home	Return to Vodafone Web Main Menu
Handle File(s)	Save images, sounds, etc. to Data Folder
Advanced	Send URL via SMS/MMS, open properties, search within site, customise settings, etc.
Access History	Previously visited Mobile Internet site links
Browser Settings	Set font size, scroll unit, download parameters, select cookie acceptance or customise other Web-related settings
Help	View a summary of key assignments
Exit	Exit Web

Messaging

Use Vodafone text communication services in Japan and overseas. Exchange text/multimedia messages with compatible handsets, PCs and other devices.

SMS

Use this basic Vodafone live! messaging service to exchange short text messages of up to 160 alphanumeric characters with Vodafone handsets. This service is the ideal solution for fast and short text messaging!

MMS

Exchange text messages of up to 30,000 alphanumeric characters with MMS-compatible Vodafone handsets, email-compatible mobiles, PCs and other like devices. Attach images/sounds for multimedia messages.

Note ▶ 705SH is incompatible with Greeting, Coordinator, Relay Mail, Hotline and Polling service messages.

- Tip** ▶
- An additional contract is required to use MMS and receive e-mail from PCs, etc.
 - The Centre resends undeliverable messages at regular intervals until delivered. Messages not received by specified expiry are deleted.

Opening Messages

- 1** Press , select *Messaging* and press
- 2** Select *Received Msg., Drafts, Templates, Unsent Messages* or *Sent Messages* and press
- 3** Select a message and press

Editing Messages

- 1** Select a sent/unsent message and press **Options**
- 2** Select *Edit & Send* or *Edit* and press
- 3** Edit the message

Customising Handset Address

Change alphanumerics before @ of the default handset mail address. Customising handset mail address helps reduce spam.

- 1** Press , select *Vodafone live!* and press
- 2** Select *Vodafone live!* and press
705SH connects to the Network and Vodafone Web Main Menu opens.
- 3** Select *English* and press
- 4** Select *User Support* and press
- 5** Select *Messaging Setting* and press

- 6** Read through instructions, then select *Go to setup* and press
- 7** Select *English* and press
- 8** Select the text entry field below *Input your PIN number.* and press
- 9** Enter Centre Access Code and press
- 10** Select *OK* and press
- 11** Select *1. Messaging settings* and press
- 12** Select *1. Email address* and press
- 13** Select the text entry field below *Input email address you want to change.* and press
- 14** Enter an address and press
Enter between 3 and 30 single-byte alphanumerics.
- 15** Select *OK* and press

Note ▶ This procedure may change without prior notice. For further information, contact Vodafone Customer Centre, General Information (see [P.17-45](#)).

Messaging Menu

Press **[F4]**, select *Messaging* and press **[F4]** to open Messaging menu.

Item	Description
Received Msg.	List of received messages
Create Message	Create and send new message
Drafts	List of incomplete/unsent messages
Templates	Saved message templates
Unsent Messages	Undelivered/cancelled/failed mail
Sent Messages	List of sent messages
Server Mail Box	Request Centre message list and then select messages to retrieve
Settings	Customise SMS/MMS settings, sort messages into folders or save frequently used numbers/addresses to Speed Mail List to send from Standby
Memory Status	Received and Sent memory usage

Sending Text Messages

1 Press **[F4]**, select *Messaging* and press **[F4]**

2 Select *Create Message* and press **[F4]**

3 Select recipient field and press **[F4]**

4 Enter a recipient

Phone Book

1 Select *Phone Book* and press **[F4]**

2 Select an entry and press **[F4]**

3 Select recipient's Vodafone handset number or mail address and press **[F4]**

Sending to Group

1 Select *Select Group* and press **[F4]**

2 Select a Group and press **[F4]**

3 Press **[F4]** to return

Sent Mail Record

1 Select a recipient and press **[F4]**

Speed Mail List

1 Select *Speed Mail List* and press **[F4]**

2 Select a recipient and press **[F4]**





Direct Entry

1 Select *Enter Number* or *Enter Address* and press **[F4]**

2 Enter recipient's Vodafone handset number or mail address and press **[F4]**



Mail Composition Window

- 5** Enter subject (MMS only)
- 1** Select subject field and press 
 - 2** Enter subject and press 
- 6** Select message text field and press , then enter a message and press 









7 Attach files (MMS only)
Press  **Options**, select *Insert Item* and press 




Image Files

- 1** Select *Picture* and press 
- 2** Select a folder and press 
- 3** Select a file and press 

Melody Files

- 1** Select *Sound* and press 
- 2** Select a folder and press 
- 3** Select a file and press 


Video Files

- 1** Select *Video* and press 
- 2** Select *Saved Videos* and press 
- 3** Select a file and press 





- 8** When finished, press  **Send** to send

Incoming Text Messages

Receiving MMS & SMS Messages

Delivery Notice appears and Information window opens (✉ appears) for new mail. Press  to open Received Messages.

Opening Received Text Messages




- 1** Press , select *Messaging* and press 
- 2** Select *Received Msg.* and press 
- 3** Select a message and press 

Retrieving Complete MMS Messages

Centre sends initial portion of MMS message when:




- The message was sent to multiple recipients
- Files are attached to the message

Download complete message and any attachments:





- 1** Perform Steps 1 - 2 above
- 2** Select an MMS message with  (MMS Notice) and press 
- 3** Press  **More**

Replying & Forwarding

Replying to Messages

- 1 Open a received message (see P.17-38)
- 2 Press  **Options**
- 3 Select *Reply* or *Reply All* and press 
- 4 Select *Reply* or *Reply with History* and press 
- 5 Complete and send (see P.17-37 - 17-38)

Forwarding Messages



- 1 Open a received message (see P.17-38)
- 2 Press  **Options**
- 3 Select *Forward* and press 
- 4 Enter a recipient (see P.17-37) and press 
- 5 Press  **Send**

V-applications

Enjoy a variety of 705SH-compatible V-applications.








- Download V-applications via Vodafone Web.
- Enjoy network gaming or access real-time news/info.
- Set a V-application that activates in Standby.

V-appli Menu

Press , select *V-appli* and press  to open V-appli menu.

Item	Description
V-appli	Download, activate or delete V-applications
Settings	Adjust V-application settings
Information	Open Java™ and JBlend™ licence information

Downloading V-applications





- 1 Press , select *V-appli* and press 
- 2 Select *V-appli* and press 
- 3 Select *Download* and press 
- 4 Open a Mobile Internet site offering V-applications
- 5 Select a V-application and press 
- 6 Press 
Downloaded V-application is automatically saved and a confirmation appears.
- 7 Press  **Yes**

Vodafone live! CAST (Japanese Only)

Subscribe to Japanese mobile periodical content automatically downloaded to 705SH overnight.




- Requires a separate subscription and registration
- All currently available content limited to Japanese
- Only available within Japan on compatible 3G handsets

Service Subscription

- 1 Press , select **Entertainment** and press 
- 2 Select **Cast** and press 
- 3 Select **Join/Cancel Service** and press 
705SH connects to the Network and service registration page opens. Follow onscreen instructions.

Note ▶ Registration requires Mobile Internet use (connection fees apply). Confirm signal strength beforehand.

Newly Arrived Information

- 1 Delivery Notice appears and Information window opens ( appears) for new information
- 2 Select **Cast** and press 
Follow onscreen instructions.
- 3 Press  to exit

Near chat

Exchange text messages with other 705SH or other compatible devices within ten metres.

- Connection fees do not apply.
- Near chat requires a Near chat-compatible V-application.
ちかチャット (Near chat) application is preloaded on 705SH.

Note ▶

- Near chat range may vary by ambient condition.
- **ちかチャット** (Near chat) application cannot be deleted.

Software Update

Check for 705SH firmware updates and download as required.

- Choose to begin update or set update timer.
- 705SH is disabled until update is complete. Update may take up to approximately 30 minutes.
- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Keep 705SH in a place where signal is strong and stable.
- Charge battery (🔋 appears) beforehand; a low battery may cause update to fail.
- Do not remove battery during update; update may fail.
- To reduce risk of failure, disconnect USB Cable from 705SH beforehand.

Main Menu ► Settings ► Phone Settings ► Software update

1 Select **Software update** and press

Confirmation appears (🔔 appears).

- Follow onscreen instructions.
- Update may take up to approximately 30 minutes.
- Confirmation appears and Information window opens (🔔 appears) for successful update.

While confirmation appears, press **OK** to acknowledge update completion and cancel Information window.

Note ► Update failure may disable 705SH. Contact Vodafone Customer Centre, Customer Assistance (see [P. 17-45](#)).

Update Result

- While Information window appears, select **Update result**
 - Press
 - Press again to exit.
- In Standby, press ► Select **Settings** ► Press ► Use to select **Phone Settings** ► Select **Software update** ► Press ► Select **Update result** ► Press
 - Press again to exit.

Update Timer

- Confirmation appears at set update time. Press or wait approximately ten seconds for update to start.
- Update will not start while 705SH is in use. When the current operation ends, confirmation appears. After ten minutes, update timer is automatically cancelled.
- Update automatically cancels Keypad Lock.

Note ►

- 705SH Phone Book entries, media files, and other content are not affected by firmware updates, but users should always back-up important information (note that some files cannot be copied). Vodafone is not liable for damages from lost information, etc.
- If 705SH does not return to Standby after update, turn power off and restart 705SH.

Function Menu

Main Menu	Sub Menu
Entertainment	Cast
	Near chat
	ComicSurfing
Vodafone live!	Vodafone live!
	Bookmarks
	Saved Pages
	Enter URL
	Access History
	Browser Settings
	Music
Media Player	Videos
	Streaming
	Received Msg.
Messaging	Create Message
	Drafts
	Templates
	Unsent Messages
	Sent Messages
	Server Mail Box
	Settings
	Memory Status
	Camera
Data Folder	Pictures
	DCIM
	Ring Songs • Tones
	V-appli
	Music
	Videos
	Book
	Custom Screens
	Text Templates
	Other Documents
	Memory Status

Main Menu	Sub Menu
Tools	Calendar
	Alarms
	Auto Power On
	Calculator
	Answer Phone
	Voice Recorder
	Barcode
	E-Book
	Stopwatch
	Tasks
	World Clock
	Countdown Timer
	Expenses Memo
	Phone Help
	V-appli
Settings	
Call Log	Information
	All Calls
	Dialled Numbers
	Received Calls
	Call Timers
	Data Counter
	Call Costs
Connectivity	Bluetooth
	Infrared
	Mass Storage
	Memory Card

Main Menu	Sub Menu	
Phone Book	Phone Book List	
	Add New Entry	
	Call Voicemail	
	Category Control	
	My Details	
	Speed Dial List	
	Contact Groups	
	VF Address Book	
	Settings	
	Manage Entries	
	Mode Settings	
	Custom Screens	
	Display	
	Sounds & Alerts	
	Date & Time	
	言語選択 (Language)	
	User Dictionary	
Settings	Ringer Output	
	Earpiece Volume	
	Locks	
	Software update	
	Master Reset	
	Call/Video Call	Call Settings
		Video Call
	Network Settings	Select Network
		Select Service
		Offline Mode
Internet Setting		
Location Info		
	Network Info	

Specifications

705SH

Weight	Approximately \$\$\$ g (with battery)
Continuous Talk Time	Approximately \$\$\$ minutes (3G) Approximately \$\$\$ minutes (GSM)
Continuous Standby Time (clamshell closed)	Approximately \$\$\$ hours (3G) Approximately \$\$\$ hours (GSM)
Video Call Continuous Talk Time	Approximately \$\$\$ minutes (with Internal Camera in use) Approximately \$\$\$ minutes (with External Camera in use)
Charging Time (Power off)	AC Charger: Approximately \$\$\$ minutes In-Car Charger: Approximately \$\$\$ minutes
Dimensions (W x H x D)	Approximately \$\$\$ x \$\$\$ x \$\$\$ mm (clamshell closed)
Maximum Output	\$\$\$ W (3G) \$\$\$ W (GSM)

- Values left were calculated with battery installed.
- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals. Continuous Talk Time may be less than half this value if signal is weak.
- Continuous Standby Time is an average measured with a new, fully charged battery, with clamshell closed without calls or operations, in Standby with stable signals. Standby Time may be less than half this value if 705SH is out-of-range/signal is weak. Standby Time may vary by environment (battery status, ambient temperature, etc.).
- Talk Time/Standby Time decrease with frequent use of Display/Keypad Backlights.
- Talk Time/Standby Time may decrease when a V-application is active.
- Talk Time/Standby Time decrease with handset use in poor signal conditions.
- Display employs precision technology, however, some pixels may appear brighter/darker.

AC Charger

Power Source	AC 100V-240V, 50/60 Hz
--------------	------------------------

Power Consumption	12VA
-------------------	------

Output Voltage/Current	DC 5.2V/650 mA
------------------------	----------------

Charging Temperature	5°C - 35°C
----------------------	------------

Dimensions (W × H × D)	Approximately 55 × 45 × 22 mm (without protruding parts, cord)
------------------------	---

Cord Length	Approximately 1.5 m
-------------	---------------------

Battery

Voltage	3.7 V
---------	-------

Battery Type	Lithium-ion
--------------	-------------

Capacity	820 mAh
----------	---------

Dimensions (W × H × D)	Approximately \$\$\$ × \$\$\$ × \$\$\$ mm (without protruding parts)
------------------------	---

Customer Service

If you have questions about Vodafone handsets or services, please call General Information.
For repairs, please call Customer Assistance.

Vodafone Customer Centres

From a Vodafone handset, dial toll free at
157 for General Information or
113 for Customer Assistance

Vodafone International Call Centre

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number.
International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Centre	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	General Information	☎ 0088-259-157
	Customer Assistance	☎ 0088-259-113
Tokushima, Kagawa, Ehime, Kochi	General Information	☎ 0088-247-157
	Customer Assistance	☎ 0088-247-113
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113

MEMO