

Note

- When i-αpli To is set to [No], i-αpli is not activated from Ir exchange.
- Cannot be activated as i-αpli stand-by.

Infrared remote control


Using the infrared remote control function

Use the FOMA terminal's Infrared port from i-αpli software to operate equipment supporting the infrared remote control such as TVs and VCRs.

- To use the infrared remote control function, download compatible i-αpli software.

Remote control operation

Start i-αpli software that supports Ir remote control functions, point the FOMA terminal's Ir port to the front of the remote control sensor on the TV, VCR or other device to operate, and perform remote control operations.

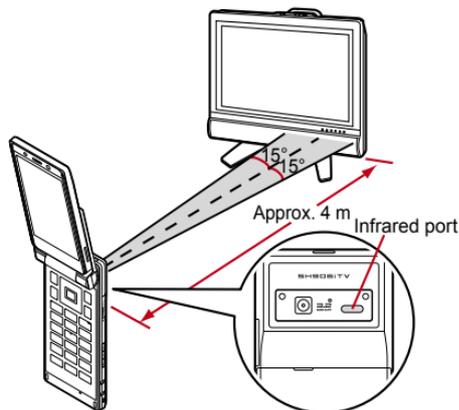

- Actual operational methods will differ with each i-αpli software application.
- Control devices from a distance of up to approximately 4 m (Distance will vary depending on the device, the ambient brightness and other factors).

Note

- When in the Self mode, the Ir remote control function cannot be used.
- Depending on the device, operation may not run properly.
- Remote control operation may not run properly directly under fluorescent lights, near other equipment using infrared signals, or in areas of direct sunlight.


iC transmission

iC transmission

Use iC transmission to send and receive data to and from other FOMA terminals which also support iC transmission function.

- During iC transmission, the FOMA terminal status is the same as when outside the service area, such that making/receiving calls, i-mode, and data communications are not possible.
- iC transmission is not available while a call is in progress or the IC card is locked.
- Data that can be sent and received or operations when various lock functions are set are same as for Ir exchange (☞ P. 333).
- For details on starting iC transmission from i-αpli ☞ P. 251

Precautions for using iC transmission function

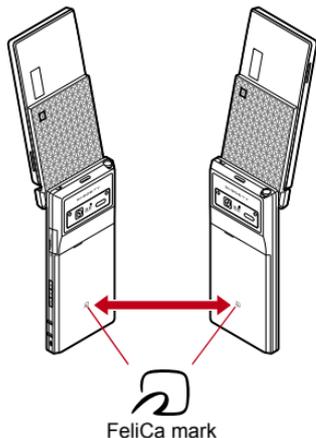

- Use while placing FeliCa mark (🌀) of receiving side FOMA terminal on that of sending side FOMA terminal as shown above.
- Do not move the FOMA terminal until all data are sent and received.
- Sending and receiving data may be difficult according to other party's FOMA terminal. In such cases, make the clearance between the FeliCa marks (🌀) closer or farther, or move them up/down/left/right alternately.
- During iC transmission, FOMA terminal called LED flashes (☞ P. 121).

Sending and receiving data individually

Sending a single data item <Send>

Example: Phonebook

- 1 In stand-by, press [☐].

- 2 Select a name ▶ [📷] ▶ [Send data] ▶ [iC transmission] ▶ [Send] ▶ [Yes].

- In the details screen: Press [📷] ▶ [Send data] ▶ [iC transmission] ▶ [Send] ▶ [Yes].

- 3 Place FeliCa mark (🌀) on that of the other party's FOMA terminal.

Receiving a single data item <Receive>

- 1 Place FeliCa mark (🌀) on that of the other party's FOMA terminal.

- 2 Select [Yes].

Note

- When receiving phonebook, a confirmation message to store in PushTalk phonebook appears. To store, select [Yes]. When multiple phone numbers are stored, select the phone number. However, if the 2in1 mode is set to [B mode], the PushTalk phonebook confirmation screen does not appear.

Sending and receiving all data items

- Terminal security code and authentication password entry are required for sending or receiving all data items. The authentication password is a password exclusively for iC transmission. Before starting data transfer, the sender and receiver must enter the same user-specified four-digit password.

Sending all data items <Send all>

Example: Phonebook

- 1 In stand-by, press [☐] ▶ [📷] ▶ [Send data] ▶ [iC transmission] ▶ [Send all].

- 2 Enter the terminal security code ▶ [☐].

- 3 Enter the authentication password ▶ ▶ [Yes].
- 4 Place FeliCa mark (📶) on that of the other party's FOMA terminal.

Receiving all data items <Receive all>

- 1 In stand-by, place the FeliCa mark (📶) on that of the other party's FOMA terminal.
- 2 Select [Yes].
- 3 Enter the terminal security code ▶ .
- 4 Enter the authentication password ▶ ▶ [Yes].
 - To cancel Receive: While receiving data, press .

Voice recorder

Using the FOMA terminal handset as a voice recorder

Use the FOMA terminal as a voice recorder (microSD Card is required).

- Save up to 400 recordings on the [Multimedia] folder of microSD Card (Actual number varies depending on recording time). Record up to 6 hours per recording.
- When recording is attempted after the 400th recording, the message stating that recording is failed appears and Voice recorder ends.
- Record up to approximately 10 hours when saving to a 64 MB microSD Card.
- Recording within a distance of approximately 1.5 m is recommended.
- Play back recorded voice or audio with i-motion player (P. 309).

Recording

- Recording start sound is heard and recording starts. The Camera LED flashes during recording.

- 1 In the Custom menu, select [Media tool] ▶ [Voice recorder] ▶ .
 - To pause/play: Press .
- 2 Press to end recording.
 - Recording stops automatically in the following cases.
 - When the remaining time goes to 00:00:00
 - When recording time reaches approximately 6 hours
 - When microSD Card has no available space
- 3 Select [Save].
 - Recorded voice is saved.
 - To play back a recorded voice: Select [Play].
 - To cancel a recorded voice: Select [Cancel] ▶ [Yes].

Note

- Recorded data is saved as the file without file restrictions.
- Recording continues even if the FOMA terminal is closed during recording.
- When a call is received during recording, recording automatically stops and the call can be answered. After the call ends, the save confirmation screen appears.

Related Operations

- Display files in the Data box <Display Data box>**
In the Voice recorder screen, press ▶ [Display Data box].
- Minimize audio noise <Noise reduction>**
In the Voice recorder screen, press ▶ [Noise reduction] ▶ [ON].
- Set Auto timer <Auto timer>**
In the Voice recorder screen, press ▶ [Auto timer] ▶ select the auto timer duration ▶ .

Specific Absorption Rate (SAR)

This model phone FOMA SH906iTV meets the MIC's* technical regulation for exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)** averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP***.

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone is 0.318 W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the following websites:

World Health Organization (WHO)

<http://www.who.int/peh-emf/>

ICNIRP

<http://www.icnirp.de/>

MIC

<http://www.tele.soumu.go.jp/e/ele/body/index.htm>

TELEC

http://www.telec.or.jp/ENG/Index_e.htm

NTT DOCOMO

<http://www.nttdocomo.co.jp/english/product/>

SHARP Corporation

<http://www.sharp.co.jp/products/menu/phone/cellular/sar/index.html>

* Ministry of Internal Affairs and Communications

** The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

***International Commission on Non-Ionizing Radiation Protection

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.270 W/kg*.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head.

* The tests are carried out in accordance with international guidelines for testing.

Declaration of Conformity

CE 0168

Hereby, Sharp Telecommunications of Europe Ltd, declares that this FOMA SH906iTV is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the original declaration of conformity can be found at the following internet address:
<http://www.sharp.co.jp/k-tai/>

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.370 W/kg and when worn on the body, as described in this user guide, is 0.748 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID APYHRO00068.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at <http://www.phonefacts.net>.

Export Control Regulations

The Japan Export Control Regulations (“Foreign Exchange and International Trade Law” and its related laws) will be applied to this product and its accessories under certain conditions. The Export Administration Regulations are also applied. To export or reexport this terminal and its accessories, conduct all legally required procedures at your own risk and expense. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the US Department of Commerce.


Quick Manual

How to use the Quick Manual

Remove the Quick Manual attached to the end of this manual by cutting along the perforations and fold it as shown below. Carry the Quick Manual "Overseas Use" when the mobile phone is used with the International Roaming (WORLD WING) overseas.

■ Folding the Quick Manual

- Be careful of injuries when cutting out the Quick Manual.

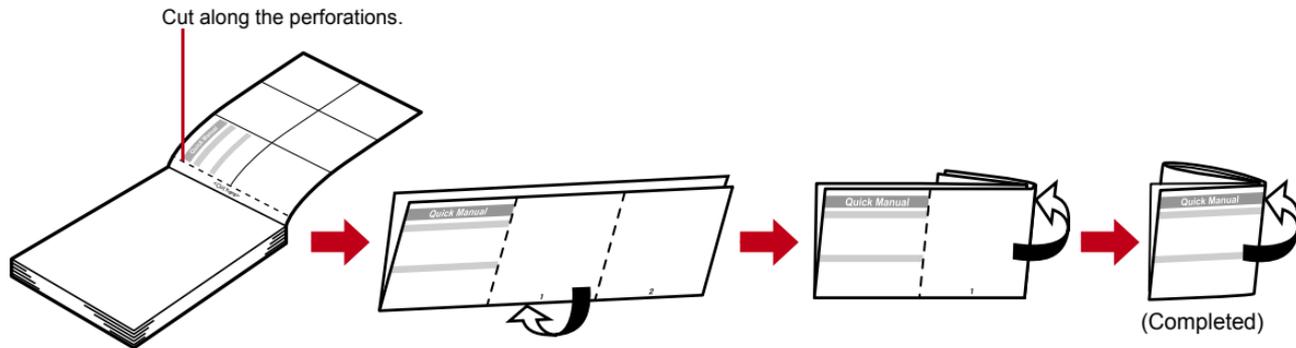

Quick Manual

Registration/Contacts

General Inquiries <DOCOMO Information Center>
(In English)

☎ 0120-005-250 (toll free)

※ Can be called from mobile phones and PHSs.
(In Japanese only)

f (No prefix) 151 (toll free)

※ Can only be called from DOCOMO mobile phones.
● Please confirm the phone number before you dial.

If you have problems with your FOMA

(In Japanese only)

f (No prefix) 113 (toll free)

※ Can only be called from DOCOMO mobile phones.
(In Japanese only)

☎ 0120-800-000 (toll free)

※ Can be called from mobile phones and PHSs.
● Please confirm the phone number before you dial.

Text input

Changing the input mode

- 1 In the text input screen, press select the input mode .

Switching upper/lower case

- 1 In the text input screen, press .

Deleting text

- 1 Move the cursor to the text and press .
 - To delete all text: At the end of the message, press (for 1+ seconds).

Using phrases

- 1 In the text input screen, press (for 1+ seconds) select a phrase .

Adding to the phonebook (Phone)

- 1 In stand-by, press (for 1+ seconds) [Phone].
- 2 Enter a name enter a phone number select a phone type icon enter a mail address select a mail address type icon select Add to PushTalk PB .

Other save items

: Group	: Secret code
: Company/school	: Select ring tone
: Department	: Mail ring tone
: Title	: Called LED color
: Postal code	: Called LED pattern
: Postal address	: Mail/Message LED color
: Birth day	: Mail LED pattern
: Memo	: Picture call set
: Secret	: Substitute image

Adding to the phonebook from Redials/Received calls

- 1 In stand-by, press () or () select a phone number [Add to phonebook] [Save new to phone] add to the phonebook.

Editing phonebook entries

- 1 In stand-by, press select a name [Edit data] [Edit] select an item edit.

Entering pictographs/symbols

- 1 In the text input screen, press .
 - To switch between Pictograph and Deco-mail pictograph: Press .
 - To switch between single- and double-byte symbols: Press .

Entering emoticons

- 1 In the text input screen, press (for 1+ seconds) select an emoticon .

Cutting/Copying/Pasting text

- 1 In the text input screen, move the cursor to the start point [Copy]/[Cut] .
- 2 Move the cursor to the end point .
- 3 Move the cursor to the paste location (for 1+ seconds).

Text input example

Ex.) 今日のテニス3時食

- 1 In the text input screen, press (twice) [今日] .
- As each hiragana character is entered, conversion candidates appear and they can be selected.



2 Press **[OK]**.

3 Press **[4]** **[5]** **[3]** **[OK]** **[テニス]**.

- Use **[OK]** for One-touch conversion.

4 Press **[OK]** (five times) **[OK]** **[3]**.

- Press **[OK]** (five times) for single-byte alphanumeric mode.

5 Press **[OK]** (twice) **[OK]** **[3]** (twice) **[X]** **[OK]** [時].

- Use **[X]** for dakuten mark.

6 Press **[F1]** **[F2]**.



-6-

Changing the font (font style)

1 In the Custom menu, select [Settings] **[Disp/LED/Power saver]** **[Font style]** **[Font style setting]** **[select the font]** **[OK]**.

Changing the font size

1 In the Custom menu, select [Settings] **[Disp/LED/Power saver]** **[Font style]** **[Font size]** **[Individual setting]** **[select the [Input] field]** **[OK]** **[select the font size]** **[OK]** **[Yes]**.

- To change collectively: In stand-by, press **[5]** (for 1+ seconds).

-7-

Camera

Shooting still pictures

1 In stand-by, press **[Camera]** **[OK]** **[OK]**.

Shooting panoramic pictures

1 In the still picture shooting screen, press **[Zoom]** **[OK]** **[move the FOMA terminal to either direction of left or right]** **[OK]** **[OK]**.

Shooting movies

1 In the still picture shooting screen, press **[Camera]** **[Switch camera-mode]** **[Movie]** **[OK]** **[OK]** **[Save]**.

Displaying still pictures

1 In the Custom menu, select [Data box] **[My picture]** **[select a still picture]** **[OK]**.

-8-

Playing back movies

1 In the Custom menu, select [Data box] **[I-motion]** **[select a movie]** **[OK]**.

Watching 1Seg

Performing the Automatic channel setting

1 In the Custom menu, select [1Seg] **[Channel setting]**.

2 Select the number to save **[OK]** **[Auto channel set]** **[Yes]**.

3 Select a prefecture/district **[OK]** **[OK]** **[Yes]**.

Selecting a channel list

1 In the Custom menu, select [1Seg] **[Channel setting]** **[select a channel list]** **[OK]**.

Watching 1Seg

1 In stand-by, press **[TV]**.

-9-

Watching videos

1 In the Custom menu, select [Data box] **[1Seg]** **[select a video]** **[OK]**.

Music playback

Using the MUSIC Player

1 In the Custom menu, select [Data box] **[MUSIC]** **[select the data type]** **[OK]** **[select music data]** **[OK]**.

Key operations during playback

To pause/play	[OK]
To stop	[F1]

-10-


To adjust the volume	[Volume]
To play previous song/return to the beginning of song	[Previous]
To play next song	[Next]
To end MUSIC Player	[CLR/END] [Yes]

Mail

Composing and sending i-mode mail

1 In stand-by, press **[Compose]** (for 1+ seconds) **[select the [To] field]** **[OK]** **[select the input method]**.

- Select [Search phonebook] **[select a recipient]** **[OK]**.
- Select [Direct input] **[enter an address]** **[OK]**.
- Select [Sent messages] **[select a recipient]** **[OK]** **[OK]**.

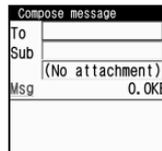

-11-

- Select [Rcvd messages] ▶ select a recipient ▶ [] ▶ []
 - Select [Mail members] ▶ select a mail member ▶ [] ▶ []
- 2 Select the [Sub] field ▶ [] ▶ enter a subject ▶ [] ▶ [Msg] ▶ enter the message text ▶ [] ▶ []

Sending Deco-mail

- 1 In the text input screen, press [] ▶ [Decorate mail] ▶ select a decoration type ▶ [] ▶ specify decoration ▶ [] ▶ input text ▶ [] ▶ []

Attaching a file

- 1 In stand-by, press [] (for 1+ seconds) ▶ select the attachment field (No attachment) ▶ [] ▶ select the file to attach.
- Select [Image] ▶ select an image ▶ []
 - Select [Melody] ▶ select a melody ▶ []
 - Select [i-motion] ▶ select an i-motion ▶ []
 - Select [ToruCa] ▶ select a ToruCa ▶ []

-12-

- Select [PDF] ▶ select a PDF ▶ []
- Select [Phonebook] ▶ select a save destination ▶ [] ▶ select a name ▶ []
- Select [Schedule] ▶ select a save destination ▶ [] ▶ (select a day) [] ▶ select a schedule ▶ []
- * No operation is needed if [microSD] is selected as the save destination
- Select [Bookmark] ▶ select a save destination ▶ [] ▶ select a bookmark ▶ []
- Select [Document] ▶ select a file ▶ []
- Select [Other] ▶ select a file ▶ []
- Select [Start cam (still)] ▶ [] ▶ []
- Select [Start cam (movie)] ▶ [] ▶ [] ▶ [Save].

Composing and sending SMS

- 1 In stand-by, press [] ▶ [Compose SMS] ▶ select the [To] field ▶ [] ▶ [Direct input] ▶ enter an address ▶ [] ▶ [Msg] ▶ enter the message ▶ [] ▶ []

-13-

Menu list

Switching between the Custom menu/Basic menu

- 1 In the Custom menu/Basic menu, press []

Recalling a function number

- 1 In the Basic menu, enter a function number.

1 Snd/Vibrator/Manner	
1 Select volume	phone ring vol, Mail ring vol, PushTalk tone vol, Key/Standby i-motion, Charge start sound, Charge end sound, Timer sound
2 Select sound	Select ring tone, Select mail tone, PushTalk tone, Shutter sound, Timer sound
3 Vibrator	Vibration mode, Mail vibration
4 Manner mode	ON (Normal, Silent, Original), OFF
5 Headset setting	

-15-

Receiving mail automatically

- 1 Mail is automatically received.
- 2 Select [Mail] ▶ select the mail ▶ []

Checking for new i-mode mail

- 1 In stand-by, press [] ▶ [Check new message].
 - SMS: Press [] ▶ [Check new SMS].

Replying to i-mode mail

- 1 In the received message details screen, press [] ▶ [Reply/Forward].
- 2 Select the reply method ▶ []
- 3 Compose and send a mail.

Forwarding i-mode mail

- 1 In the received message details screen, press [] ▶ [Reply/Forward] ▶ [Forward].
- 2 Enter an address and send a mail.

-14-

1 Snd/Vibrator/Manner

6 Ring time setting	Mail ring time set, PT ring time set
7 Set mute ring time	
8 Hold/On hold tone	Set on hold tone, Set hold tone
9 Snd playback (melody)	Stereo effects, Equalizer

2 Disp/LED/Power saver

1 Set screen	Stand-by display, Clock display, Calendar display, Stand-by memo disp, Desktop clock, Scrn rotation set, Sub) Caller ID disp, Sub) Clock display
2 Font style	Font style setting, Font size
3 Themes	Kisekae Tool, Call/Rcv display, Send/Rcv display, Submenu image, Dial image set, Animate notices, Signal/batt's clock, Color theme setting

-16-

2 Disp/LED/Power saver

4 LED settings	Called LED, Mail LED, Notice LED, In-call LED, Alarm/Timer LED, IC card LED, open-clos/rotatLED
5 Display img quality	Vibrant image mode, Control by scene
6 Light/Power saver	Norm (auto bright), Norm (fixed bright), Eco mode (Pwr saver), Original Eco mode
7 VeilView	Linked manner, Pattern
8 Menu priority	

-17-

③ General settings	
① Check status	Owner Information, Check memory, Battery level, Check settings
② Text input setting	User dictionary, Dwnld dictionary, Edit phrase, Clear memory terms
③ Auto power ON/OFF	Auto power ON, Auto power OFF, Link alarm/power ON
④ Date settings	
⑤ Select language	
⑥ TOUCH CRUISER set	Usage settings, Pointer speed, Scroll speed
⑦ USB mode setting	
⑧ Scanning function	Update, Set auto-update, Set scan, Version
⑨ Software update	
⑩ Reset settings	

-18-

④ NW Services	
① Voice Mail	Check messages, Play Messages, Activate VoiceMail, Set ring time, Deactivate VoiceMail, Check setting, Voice Mail setting, Notification setting, Notification
② Call waiting	Activate, Deactivate, Check setting
③ Call forwarding	Activate, Deactivate, Register number, Forwarding No. busy, Check setting
④ Bar nuisance calls	Register caller, Register selected No, Delete all entries, Delete last entry, Check No of entries
⑤ Notify caller ID	Check setting, Notify caller ID
⑥ Caller ID request	Activate, Deactivate, Check setting
⑦ Talk time/cost	
⑧ 2in1 setting	Mode switching, Phonebook 2in1 set, Stand-by display, Set call/receive No., 2in1 function OFF, Receive avoidance

-19-

④ NW Services	
⑨ In-call arrival act	Set arrival act, Arrival Call Act

⑤ Other NW Services	
① Remote control	Activate, Deactivate, Check setting
② Dual network	Switching, Status request
③ English guidance	Guidance setting, Check setting
④ Service number	ドコモ故障問合せ, ドコモ総合案内・受付
⑤ Additional service	USSD, Reply message
⑥ Multi number	Set multi number, Check setting, Number setting
⑦ Chaku-moji	Create message, Message display
⑧ Roaming guidance	Activate, Deactivate, Status request

-20-

⑥ Phone settings	
① In-call settings	Noise reduction, Reconnect signal, Quality alarm
② Headset sw to call	
③ Incoming settings	Any key answer, Auto answer setting, Melody Call setting, Rotation-link repl
④ Videophone set	Redial voice call, Set sending image, Display setting, Subscreen position, Visual preference, Notify switch mode, Hands-free V.phone, V-phone while packet
⑤ Record message	Record message, Answering duration, Reply message, V.phone reply image
⑥ Set PushTalk	Set PT arrival act, Hands-free PT
⑦ Set when folded	Phone/Videophone, PushTalk
⑧ Self mode	
⑨ Other settings	Int'l prefix, Sub address, Int'l dial assist, International Roam., In-area status

-21-

⑦ Security	
① Secret mode	
② UIM Settings	PIN1 code input set, Change PIN1 code, Change PIN2 code
③ Accept/Reject calls	Accept calls, Reject calls, Reject unknown, User unset, Reject payphone, Reject not support
④ Show call/ received	Show rcvd calls, Show redial
⑤ Show sent/ received	Show sent messages, Show rcvd messages
⑥ Lock settings	All lock, Keypad dial lock, Function lock, IC card lock, Multi easy lock set, Multi lock auto-set
⑦ Change security code	
⑧ Delete all data	Delete user data, Del secret data

-22-

Other settings	
⑧ Initial setting	
⑩ Own number	

-23-

⑨ ① Data box	
① My picture	
② MUSIC	
③ Music&Video ch	
④ i-motion	
⑤ 1Seg	
⑥ Melody	
⑦ My Documents	
⑧ Kisekai Tool	
⑨ Machi-chara	
⑩ Chara-den	

-24-

⑨ ② LifeKit	
① Bar code reader	
② Receive Ir data	
③ microSD manager	View microSD data, Backup/restore, Import, New manager info, Format, USB mode setting
④ Bluetooth	Accept Registered, Receive Bluetooth, List/cnnc/ discnct, Register new device, Bluetooth Power OFF, Bluetooth setting
⑤ Card reader	
⑥ Text memo	
⑦ Character reader	
⑧ Schedule	
⑨ Timer/Alarm	Timer, Alarm, Wakeup TV
⑩ Calculator	
☐ ① Data Sec. Service	

-25-

⑨ ③ Media tool	
① Manga&BookReader	
② Document Viewer	
③ PDF Viewer	
④ Voice recorder	
⑤ Voice memo/Rec msg	
⑥ Quick search	
Other menus	
⑨ ④ MUSIC	
⑨ ⑤ Osaifu-Keitai	
⑨ ⑥ 1Seg	

-26-

Other functions

Manner mode enable/disable	Ⓜ (for 1+ seconds)
Public mode (Drive mode) activate/deactivate	ⓧ (for 1+ seconds)
Multi easy lock activate/deactivate	Ⓜ (for 1+ seconds)
Show i-Channel list	Ⓜ (ch)
Activate Quick search	Ⓜ
Show i-mode menu	Ⓜ
Show i-appli software list screen	Ⓜ (ⓧ) (for 1+ seconds)
Supportbook	Ⓜ
Activate Multi Assistant (Multitask)	Ⓜ while using a function
Display Shortcut menu	Ⓜ
Register Shortcut menu	Ⓜ (for 1+ seconds) when Ⓜ appears
Side Key Guard Set/Disable	Ⓜ (ⓧ) (for 1+ seconds)
VeilView ON/OFF	Ⓜ (for 1+ seconds)

-27-

Network services

※ In the confirmation screen, select [Yes].

Voice Mail Service

Voice Mail Service is a paid option (monthly fees apply) that requires subscription.

1 In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Voice Mail].

2 Select [Activate VoiceMail] ▶ [Activate VoiceMail].

- To deactivate: Select [Deactivate VoiceMail].
- To play messages: Select [Play Messages].
- To check messages: Select [Check messages].

Call Waiting

Call Waiting is a paid option (monthly fees apply) that requires subscription.

1 In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Call waiting].

2 Select [Activate].

-28-

- To deactivate: Select [Deactivate].
- To check settings: Select [Check setting].

Call Forwarding Service

Call Forwarding Service is a free option (no monthly fees) that requires subscription.

1 In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Call forwarding].

2 Select [Activate] ▶ [Activate].

- To deactivate: Select [Deactivate].
- To check settings: Select [Check setting].

Caller ID Request Service

Subscription is not required (no monthly fees).

1 In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Caller ID request].


2 Select [Activate].

- To deactivate: Select [Deactivate].
- To check settings: Select [Check setting].

-29-


Icon list

Main display

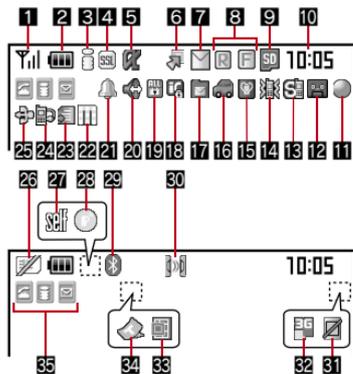

-30-

Sub display

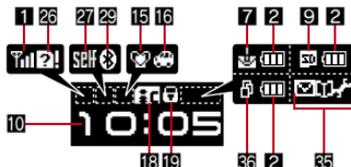

※ Icons are shown in the order of Main display and Sub display.

-31-

1		Signal status
2		Battery level
		Charging
3		i-mode/Full Browser
4		SSL
5		i-αappli
6		Shortcut menu
7		i-mode mail/SMS/Area Mail received
8		Message R/F
9		microSD Card is inserted
		microSD Card is being used
10		Clock display
11		1Seg being recorded
12		Record message
13		Silent
14		Vibrator

-32-

15		Manner mode
16		Public mode (Drive mode)
17		Storage status of i-mode center
18		IC card lock
19		Restriction indicator
20		Hands-free
		Bluetooth hands-free
21		Alarm
22		Music&Video Channel program reservation
23		i-mode mail send reservation
24		Earphone/Microphone connection
25		USB mode
26		FOMA card is malfunctioning or not inserted
		Non-FOMA card is inserted
27		Self mode
28		PushTalk
29		Bluetooth

-33-

30		Ir exchange/Bluetooth communication/External device
31		VeilView
32		3G/GSM
33		Status of Comics setting
34		ToruCa
35		Multitask
36		Operation in progress

※ Refer to P. 34 to P. 37 of the manual for detailed explanations of displayed icons.

-34-

<Emergency contacts in case of loss or other accidents>

Omakase Lock

※ Omakase Lock is a paid service.
If Omakase Lock is subscribed while or at the same time as when the use of the FOMA terminal is suspended, the usage fee of Omakase Lock is not charged.

Enable/Disable Omakase Lock

0120-524-360

Office hours: 24hours

Other contacts

<Contacts: >

<Contacts: >

<Contacts: >

※ Please confirm the phone number before you dial.

-35-

Quick Manual "Overseas Use"

Loss or theft of FOMA terminal or payment of cumulative cost overseas <DOCOMO Information Center> (24-hour service)

For DOCOMO mobile phones

International call access code of your country of stay (Table 1) -81-3-5366-3114*(toll free)

* Communication charges to Japan will apply when you make a call from a fixed-line telephone.

※ If you use the SH906iTV, you should dial the number +81-3-5366-3114 (to dial "+", press the "0" key for 1+ seconds).

For fixed-line telephones

<Universal number>

International prefix number for the universal number (Table 2) -800-0120-0151*

* Communication charges or other charges to your country of stay will apply.

※ See P.19 to P.20 and P.21 to P.22 for international call access codes of major countries (Table1) and international prefix number for the universal number (Table2).

<Out here>

Setting the remote access

■ Setting in Japan

1 In the Custom menu, select [Settings] ▶ [Other NW Services] ▶ [Remote control] ▶ [Activate] ▶ [Yes].

■ Setting in overseas

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Remote access(Int.)] ▶ [Yes] ▶ operate according to the voice guidance.

Correcting the date and time automatically

1 In the Custom menu, select [Settings] ▶ [General settings] ▶ [Date settings] ▶ select the [Auto time correction] field ▶ [ON] ▶ [i].

Failures encountered overseas <Network Technical Operation Center> (24-hour service)

For DOCOMO mobile phones

International call access code of your country of stay (Table 1) -81-3-6718-1414*(toll free)

* Communication charges to Japan will apply when you make a call from a fixed-line telephone.

※ If you use the SH906iTV, you should dial the number +81-3-6718-1414 (to dial "+", press the "0" key for 1+ seconds).

For fixed-line telephones

<Universal number>

International prefix number for the universal number (Table 2) -800-5931-8600*

* Communication charges or other charges to your country of stay will apply.

※ See P.19 to P.20 and P.21 to P.22 for international call access codes of major countries (Table1) and international prefix number for the universal number (Table2).

Setting the time zone manually

1 In the Custom menu, select [Settings] ▶ [General settings] ▶ [Date settings] ▶ select the [Auto time correction] field ▶ [OFF].

2 Press [i] ▶ select a time zone ▶ select a city ▶ [i].

Available network

3G network	Available
GSM network	Available
GPRS network	Available

Setting network communication system

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [3G/GSM setting] ▶ select the communication method ▶ [i].

Preparing for overseas use

Setting i-mode

■ Setting in Japan

1 In stand-by, press [i] ▶ [iMenu] ▶ [English] ▶ [Options] ▶ [International Settings] ▶ [i-mode services Settings] ▶ [Yes] ▶ select the [Enter i-mode Password] field ▶ enter the i-mode password ▶ [OK].

■ Setting in overseas

1 In stand-by, press [i] ▶ [iMenu] ▶ [English] ▶ [International Settings] ▶ [i-mode services Settings] ▶ [Yes] ▶ select the [Enter i-mode Password] field ▶ enter the i-mode password ▶ [OK].

Services available overseas

Communication service	3G	GSM	GPRS
Voice call	○	○	○
Videophone	○	×	×
i-mode mail	○	×	○
i-mode	○	×	○
i-Channel	○	×	○
SMS	○	○	○
Data communication (packet transmission)	○	×	○

● Unable to use 64K data communication by connecting a PC, etc. overseas.

Setting a search method of telecommunications carrier

Network search mode

Default setting: Auto (Automatically switches telecommunications carriers)

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode].
- 2 Select [Auto] ▶ [Yes].
 - To manually switch telecommunications carriers: Select [Manual] ▶ select a telecommunications carrier ▶ [OK].
 - To re-search for the host network: Select [Network re-search].

-6-

Setting a telecommunications carrier to preferentially connect to

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode] ▶ [PLMN setting] ▶ select the number of the priority order ▶ [OK].
- 2 Select [PLMN manual select] ▶ enter a country code (MCC) ▶ [OK] ▶ enter a network code (MNC) ▶ [OK] ▶ select a communication method ▶ [OK] ▶ [Yes].
 - To save from a telecommunications carrier list: Select [UPLMN by list] ▶ select a telecommunications carrier ▶ [OK] ▶ select a communication method ▶ [OK] ▶ [Yes].
 - To save the telecommunications carrier currently connected to: Select [Set VPLMN to PLMN] ▶ [Yes].
 - To change the priority: Select [Change priority] ▶ select a destination ▶ [OK] ▶ [Yes].

-7-

Displaying a telecommunications carrier name in stand-by

Telecommunications carrier name



- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Operator name disp] ▶ [Display on] ▶ [Yes].

-8-

Setting after homecoming

If Network search mode is set to [Auto], reset Network search mode to the FOMA network (DOCOMO) automatically when the power is turned on after homecoming.

Setting to the FOMA network (DOCOMO) manually

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode] ▶ [Manual] ▶ [DoCoMo].

-9-

Making calls

Making a call outside your country of stay (including Japan)

Using + to make an international call

- 1 In stand-by, press [0] (for 1+ seconds) ▶ enter the country code, area code (city code) and other party's phone number ▶ [Phone]/[V.phone].
 - When the area code (city code) begins with 0, omit the 0 when dialing. However, include 0 when making a call to landline phones in some countries or regions such as Italy.

Making an international call outside your country of stay using country code conversion

0 at the beginning of a phone number is automatically converted to the country code set in Country code conversion.

Example: Make a call from the phonebook

- 1 In stand-by, press [OK] ▶ select the other party ▶ [Phone]/[V.phone] ▶ [Call].

-10-

Making an international call

Save a country number using Set country code to select a country code before making an international call. The following operation is available overseas only.

- 1 In stand-by, enter a phone number ▶ [Add prefix setting] ▶ [International Call] ▶ select the country code ▶ [OK] ▶ [Phone]/[V.phone].

Making a call in your country of stay

- 1 In stand-by, enter a phone number ▶ [Phone]/[V.phone].

Making a call to the phone in your country of stay using the phonebook

- 1 In stand-by, press [OK] ▶ select the other party ▶ [Phone]/[V.phone] ▶ [Original number].

Making a call to a WORLD WING subscriber overseas

Even when making a call to the phone in your country of stay, make an international call to Japan if the call recipient is a "WORLD WING" subscriber overseas.

-11-

- 1** In stand-by, press **0** (for 1+ seconds) **8 1** **>** enter the other party's mobile phone number excluding the first **0** **>** **(Phone)/** **(V.phone)**.

Receiving calls

- 1** Press **(hook)** to answer an incoming call.

■ Having calls made to your FOMA terminal from Japan

Enter the phone number in the same way as it is entered in Japan and make a call.

■ Having calls made to your FOMA terminal from countries other than Japan

Enter *international access code of the country of the caller-81-user's phone number* excluding the first 0 and make a call.

-12-

Setting the roaming guidance

Make this setting while still in Japan
 ※ In the confirmation screen, select [Yes].

- 1** In the Custom menu, select **[Settings]** **>** **[Other NW Services]** **>** **[Roaming guidance]**.
- 2** Select **[Activate]**.
- To deactivate: Select [Deactivate].
 - To check settings: Select [Status request].

-13-

Call barring

● Depending on the overseas telecommunications carrier, the setting cannot be made.

- 1** In the Custom menu, select **[Settings]** **>** **[Phone settings]** **>** **[Other settings]** **>** **[International Roam.]** **>** **[Call barring]**.
- 2** Select **[Activate]** **>** **[Yes]** **>** select the barring method **>** **(hook)** **>** enter the network security code **>** **(hook)**.
- To deactivate: Select [Deactivate] **>** **[Yes]** **>** enter the network security code **>** **(hook)**.
 - To check settings: Select [Status request].

-14-

Using network service

- To use network service overseas, set Remote control to "Activate".
- ※ In the confirmation screen, select [Yes].
- ※ Operate according to the voice guidance.

Voice Mail (Int.)

- 1** In the Custom menu, select **[Settings]** **>** **[Phone settings]** **>** **[Other settings]** **>** **[International Roam.]** **>** **[Voice Mail(Int.)]**.
- 2** Select **[Activate Voice Mail]**.
- To deactivate: Select [Deactivate].
 - To play messages: Select [Play Messages].
 - To set the service: Select [Voice Mail settings].

-15-

Call Forward (Int.)

- 1** In the Custom menu, select **[Settings]** **>** **[Phone settings]** **>** **[Other settings]** **>** **[International Roam.]** **>** **[Call Forward (Int.)]**.
- 2** Select **[Activate]**.
- To deactivate: Select [Deactivate].
 - To set the service: Select [Settings].

Roaming guidance (Int.)

- 1** In the Custom menu, select **[Settings]** **>** **[Phone settings]** **>** **[Other settings]** **>** **[International Roam.]** **>** **[Roam. guidance(Int.)]**.

-16-

Country codes of major countries

The following shows "Country code" used when making international calls or setting International dial assist.
 (As of \$\$ 2008)

Country/Region	Code	Country/Region	Code
Australia	61	Hong Kong	852
Austria	43	Hungary	36
Belgium	32	India	91
Brazil	55	Indonesia	62
Canada	1	Italy	39
China	86	Japan	81
Czech	420	Macau	853
Egypt	20	Malaysia	60
Fiji	679	Maldives	960
Finland	358	Netherlands	31
France	33	New Caledonia	687
Germany	49	New Zealand	64
Greece	30	Norway	47

-17-

Country/Region	Code	Country/Region	Code
Peru	51	Tahiti (French Polynesia)	689
Philippines	63		
Russia	7	Taiwan	886
Singapore	65	Thailand	66
South Korea	82	Turkey	90
Spain	34	U.K.	44
Sweden	46	U.S.A.	1
Switzerland	41	Vietnam	84

※ For other country codes and details, refer to the DOCOMO "International Services website".

-18-

International call access codes of major countries (Table 1)

The following shows the International call access codes of major countries.

(As of March 2008)

Country/Region	Code	Country/Region	Code
Australia	0011	Hungary	00
Belgium	00	India	00
Brazil	0021/ 0014	Indonesia	001
		Ireland	00
Canada	011	Italy	00
China	00	Luxemburg	00
Czech	00	Macau	00
Denmark	00	Malaysia	00
Finland	00	Monaco	00
France	00	Netherlands	00
Germany	00	New Zealand	00
Greece	00	Norway	00
Hong Kong	001	Philippines	00

-19-

Country/Region	Code	Country/Region	Code
Poland	00	Taiwan	002
Portugal	00	Thailand	001
Russia	810	Turkey	00
Singapore	001	U.A.E.	00
South Korea	001	U.K.	00
Spain	00	U.S.A.	011
Sweden	00	Vietnam	00
Switzerland	00		

-20-

International prefix number for the universal number (Table 2)

The following shows the International prefix number for the universal number of each country.

(As of March 2008)

Country/Region	Code	Country/Region	Code
Argentina	00	Hong Kong	001
Australia	0011	Hungary	00
Austria	00	Ireland	00
Belgium	00	Israel	014
Brazil	0021	Italy	00
Bulgaria	00	Luxemburg	00
Canada	011	Malaysia	00
China	00	Netherlands	00
Columbia	009	New Zealand	00
Denmark	00	Norway	00
Finland	990	Peru	00
France	00	Philippines	00
Germany	00	Portugal	00

-21-

Country/Region	Code	Country/Region	Code
Singapore	001	Switzerland	00
South Africa	09	Taiwan	00
South Korea	001	Thailand	001
Spain	00	U.K.	00
Sweden	00	U.S.A.	011

-22-

About inquiries overseas

For lost, stolen, and cost settlement, or malfunction of the FOMA terminal overseas, refer to "Loss or theft of FOMA terminal or payment of cumulative cost overseas" on the cover of Quick Manual "Overseas Use" or "Failures encountered overseas" on P.1.

- Add the "International call access code" or "International prefix number for the universal number" that is assigned to your country of stay, to the head of your phone number for inquiries.

-23-

Access DOCOMO e-site for procedures to change your address or billing plan and for request of information materials.

From i-mode iMenu ▶ 料金 & お申込・設定 (Charges & Applications/Setting) ▶ 各種手続き (ドコモeサイト) (Application procedure (DOCOMO e-site))
Packet communication charges free

From a PC My docomo (<http://www.mydocomo.com/>) ▶ 各種手続き (ドコモeサイト) (Application procedure (DOCOMO e-site))

- ※ You will need your "Network Security Code" to access e-site from i-mode.
- ※ No packet communication charges are incurred when accessing e-site from i-mode. Accessing from overseas will incur charges.
- ※ You will need your "docomo ID/Password" to access e-site from PC.
- ※ If you do not have or you have forgotten your "Network Security Code" or "docomo ID/Password", contact the number listed in General Inquiries on the back of this manual.
- ※ DOCOMO e-site may not be available depending upon the content of your subscription.
- ※ You may not be able to access some e-site services due to system maintenance, etc.

Please follow proper etiquette

When using your FOMA terminal, please be considerate of those around you.

Turn off your FOMA terminal in the following places

■ When in an area where use is prohibited

There are places where the use of mobile phones is prohibited. Be sure to turn off your FOMA terminal in the following places.

★On an aircraft ★In a hospital

※ There are people outside hospital wards who also use electric medical equipment.

Please make sure that your FOMA terminal is turned off in the lobby and waiting room.

■ While driving

Using a mobile phone in hand while driving is regarded as a punishable act.

※ If there is no choice but to receive a call, use Hands-free and tell the caller that you will "call back", and then pull over to a safe place to make a call.

■ When in crowded places such as rush-hour trains in case somebody nearby is using an implanted cardiac pacemaker or implanted cardioverter-defibrillator

Your FOMA terminal may affect the operation of such equipment.

■ When in public places such as theaters, movie theaters, or museums

Use of your FOMA terminal in quiet public places will annoy others.

Be careful of where you use your FOMA terminal and the volume of your voice and the ring tone

■ When using your FOMA terminal in a restaurant or a hotel lobby, lower your voice.

■ In crowded places, be careful not to obstruct other pedestrians.

Be considerate of the privacy of the individuals around you



Please be considerate of the privacy of individuals around you when taking and sending images using a camera-enabled mobile phones.

The following functions will help you to keep your manners in public There are useful functions you can use to set your FOMA terminal not to answer incoming calls, and to silence all sounds.

- **Manner mode (☎ P. 110)/Original manner mode (☎ P. 111)**
Silences the Key/Standby i-motion sound and all the sounds from the FOMA terminal, and Record message is set (Manner mode). When in the Manner mode, automatically set functions (Record message, Vibrator, Mic sensitivity up, Ring tone, Mail ring tone, alarm tone, Key/Standby i-motion sound and Low battery alarm) can be set to ON (enable)/OFF (disable) (Original manner mode).
- **Public mode (Drive mode) (☎ P. 71)**
The caller hears a guidance message that informs the receiver is driving and unable to answer. The call then disconnects. Your FOMA terminal does not sound even when it receives calls, so you can drive safely.
- **Vibration mode (☎ P. 108)**
Notifies incoming calls by vibration.
- **Record message (☎ P. 74)**
When you are unable to take a call, the Record message function records the caller's message.
※ You can also use optional services such as Voice Mail Service (☎ P. 410) and Call Forwarding Service (☎ P. 413).