 
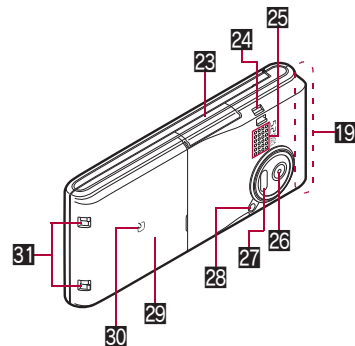 
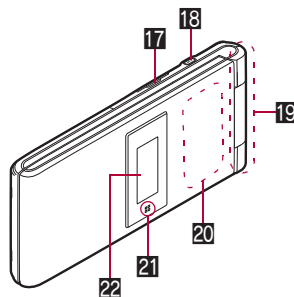 


Before Using the Handset

Component names and functions	24
Viewing display	27
Setting and selecting menu	32
Displaying Support Book	<Support Book>34
Using FOMA card	<FOMA card>34
Attaching/Removing battery pack	38
Charging	39
Checking battery level	<Battery level>42
Turning power ON/OFF	<Power ON/OFF>43
Changing screen display to English	<Select language>44
Making initial setting	<Initial setting>44
Setting date and time	<Date settings>44
Notifying the other party of your phone number	<Notify caller ID>45
Checking your own phone number	<Own number>46

 
Component names and functions

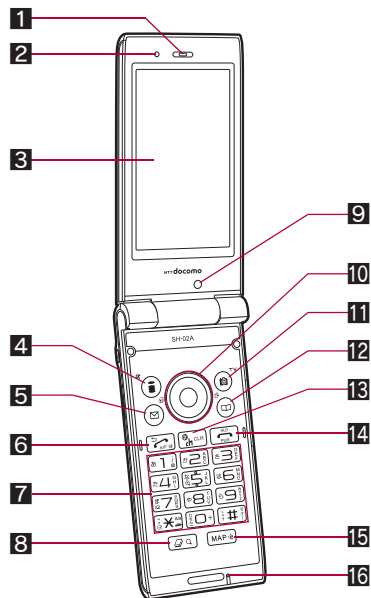

Using earphone

Connect an earphone compatible with external connector terminal (sold separately). When using an earphone which does not support external connector terminal, connect with an earphone plug adapter for external connector terminal (sold separately).

Connection example for flat-plug earphone/microphone with switch (sold separately)

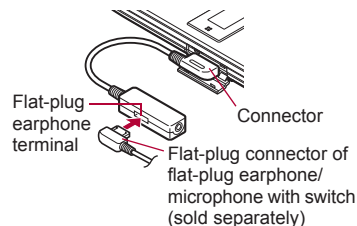

※ Key illustrations are examples and may look different from actual keys.

1 Earpiece

- Listen to the other party's voice.
- Listen to Record message/Voice memo.

2 Brightness sensor (☞ P. 94)

- The sensor detects the light of the surrounding area and automatically adjusts the display brightness and turns on/off the keypad backlight.
- Do not cover the sensor area with your hand or a sticker. May interfere with the sensor.

3 Main display (☞ P. 27)**4 i-mode/Operation guidance key (☞) (☞)**

- Press to use i-mode (☞ P. 154).
- Press to execute the functions of the operation guidance (☞ P. 27).
- Press for 1+ seconds to display the i-appli software list screen (☞ P. 245).

5 Mail/Operation guidance key (☞)

- Press to use mail functions (☞ P. 122).
- Press to execute the functions of the operation guidance (☞ P. 27).
- Press twice to check new messages (☞ P. 132).
- Press for 1+ seconds to display a compose message screen (☞ P. 122).

6 Start/Hands-free key (☞)

- Press to make or receive a voice call.
- Press to use Hands-free (☞ P. 49).
- Press for 1+ seconds to set the Eco mode (Power saver) (☞ P. 93).

7 Dial/Text entry keys (☞) to (☞), (☞), (☞), (☞)

- Press to enter a phone number or text.
- Press (☞) for 1+ seconds to enable/disable the Public mode (Drive mode) (☞ P. 62).
- Press (☞) for 1+ seconds to enable/disable the Manner mode (☞ P. 89).
- Press (☞) to (☞) for 1+ seconds to use assigned functions (☞ P. 351).
- Press (☞) for 1+ seconds to set font size collectively (☞ P. 101).

- Press (☞) for 1+ seconds to record Voice memos or play Voice memos/Recorded messages (☞ P. 66, P. 355).
- Press (☞) for 1+ seconds to start to use 2in1 or switch modes (☞ P. 381, P. 382).
- Press (☞) for 1+ seconds to reset Kisekae Tool settings or Font style setting (☞ P. 96, P. 101).

8 Multi/Quick search key (☞)

- Press to use Quick search (☞ P. 352).
- Press to use Multi Assistant (☞ P. 340).

9 Sub camera

- Use to shoot still pictures of yourself.
- Use to send images of yourself during a Videophone call.

10 Multi-guide key (☞) (☞)

- Move the cursor to select an item and execute or set (☞ P. 27).
- Press to display Menu, Redial list screen, Received calls list screen and Shortcut menu.
- Press (☞) for 1+ seconds to enable/disable Multi easy lock (☞ P. 111).
- Press (☞) to activate the function saved to the One-touch key (☞ P. 351).
- Press (☞) for 1+ seconds to enable/disable Side Key guard (☞ P. 111).
- Press (☞) for 1+ seconds to enable/disable IC card lock (☞ P. 268).
- Press (☞) for 1+ seconds to adjust the earpiece volume (☞ P. 86).

11 Camera/Operation guidance key (☞)

- Press to activate the camera (☞ P. 191).
- Press to execute the functions of the operation guidance (☞ P. 27).
- Press for 1+ seconds to activate 1Seg (☞ P. 211).

12 Phonebook/Operation guidance key (☞)

- Press to use the phonebook (☞ P. 75).
- Press to execute the functions of the operation guidance (☞ P. 27).
- Press for 1+ seconds to display the phonebook entry screen (☞ P. 75).

13 i-Channel/Clear key  (CH)

- Press to show the channel list (☞ P. 173).
- Press to return to the previous screen.
- Use to delete text or phone numbers.

14 Power/End key 

- Press for 2+ seconds to turn the power on/off (☞ P. 43).
- Use to end the function being used and return to stand-by display.

15 MAP key 

- Press to activate GPS compatible i-appli (☞ P. 279).
- Press for 1+ seconds to check your present location (☞ P. 278).
- Press to add location information to still pictures or display the added location information (☞ P. 191, P. 299).

16 Mouthpiece/Microphone

- Sends out your own voice.

17 microSD Card slot (☞ P. 314)**18 Light key** 

- Press for 1+ seconds with the FOMA terminal closed to turn on/off the picture light.
- Press with the FOMA terminal closed to scroll i-Channel ticker in the sub display from the beginning (☞ P. 174).

19 FOMA antenna

- An antenna is built in. To speak in better conditions, do not cover the antenna area by hand.

20 1Seg antenna (☞ P. 208)

- A 1Seg antenna is built in. To receive in better conditions, do not cover the antenna area by hand.

21 Called/Charging LED

- Flashes while receiving a call, etc (☞ P. 99).
- Illuminates while charging (☞ P. 39).

22 Sub display (☞ P. 27)**23 External connector terminal**

- Integrated terminal used while charging, connecting the earphone, etc.

- Connect to an external device such as AC adapter/DC adapter, FOMA USB Cable with Charge Function 01/02 (sold separately) (☞ P. 40, P. 322).

24 Strap ring**25 Speakers**

- Emits ring tones, music, etc.
- Emits the other party's voice during hands-free operation.

26 Main camera

- Use to shoot still pictures or movies (☞ P. 186).
- Use to send a camera image shot during a Videophone call to the other party (☞ P. 48).

27 Infrared port

- Use for the Ir communication (☞ P. 328).
- Use for the Ir remote control (☞ P. 332).


28 Picture light

- Illuminates while activating the camera (☞ P. 186).
- Illuminates/Flashes during shooting (☞ P. 191, P. 193).

29 Back cover (☞ P. 38)

- A radio frequency-preventing sticker is attached on the back of the back cover. Do not peel off this sticker.

30  mark

 
- The IC card is included (The IC card cannot be removed). Use Osaifu-Keitai holding the  mark up to the scanning device (☞ P. 267).
- Use to send and receive data via the iC communication (☞ P. 333).

31 Charger terminal (☞ P. 41)

- Terminal for charging with the desktop holder.

Using Multi-guide key and Operation guidance key

Use to select or execute the menus that appear in the operation guidance. The following shows the keys allotted to select or execute the menu items that appear in the operation guidance.

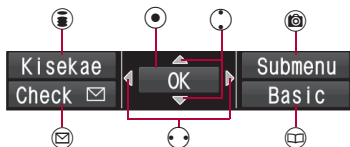

■ Operation guidance menu


In the operation guidance, menus appear according to the used function and situation.

The following table describes examples of the main operation guidance menus that appear.

OK	Sets the selected item
Submenu	Displays the Submenu
Agree	Checks selected image, music, etc.
Back	Returns to the previous screen
Play/Stop	Plays/Stops i-motion, music, etc.
Full	Displays selected images, etc. in full screen
Show all	Displays sorted files, etc. as a list
1/1 or Zoom↓	Displays selected images, etc. in actual/reduced size
Mail	Displays the compose message screen
Send	Sends a message
Cancel	Cancels the operation such as receiving a message
SelAll/ClrAll	Selects/Disables all selectable items (Up to 50 items can be selected/disabled depending on the function)
Page ▲/Page ▼	Scrolls the display by page
Close	Closes the Submenu, etc.


Viewing display

 Main display

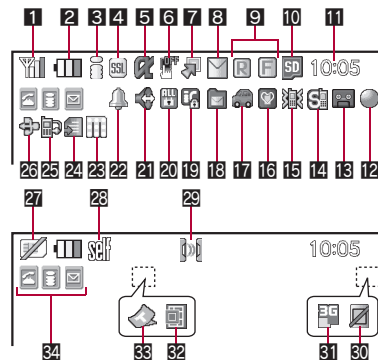


Sub display

 
The display appears when Sub) Clock display (P. 91) is set to [Stand-by clock(L)].

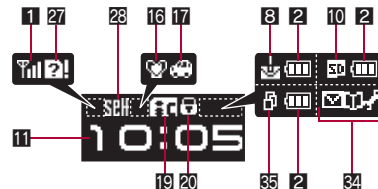


※ Icons are shown in the order of main display and sub display.

1 Signal status

	Indication of the signal strength Strong ← → Weak
--	--


- When  appears, the handset is outside the service area or in a place with no signal. Signal icon can be changed (P. 97).

2 Battery level/Charging (P. 42)


	Battery level
	Charging


- Battery icon can be changed (P. 97).

3 i-mode/Full Browser (P. 154, P. 176)





	Indicates i-mode/Full Browser status
---	--------------------------------------

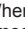 4 SSL (P. 156, P. 176)

	SSL compatible sites are viewed SSL compatible Internet web pages are viewed SSL/TLS pages are viewed
---	---




- When  appears while Multi Assistant is used, function such as i-mode, Full Browser, i-appli or Software update is being used with Multi Assistant.

5 i-appli (P. 245)


	i-appli is being activated i-appli stand-by is being activated
	i-appli stand-by is set*
	i-appliDX is being activated i-appliDX stand-by is being activated
	i-appliDX stand-by is set*

- * Indicates that i-appli is set as the stand-by display, but cannot be used.


6 GPS (P. 278, P. 286)

	Location request menu is set to [Loc. provision:ON]/ [Reject No. unset] Location request menu is set to [Permission sched.] and Location provision is permitted
	Location request menu is set to [Permission sched.] and Location provision is rejected
	GPS positioning

7 Shortcut menu (P. 351)


	Appears when the function can be added to the One-touch key or Shortcut menu
---	---

8 i-mode mail/SMS/Area Mail received (P. 130)

	Indicates the status of the i-mode mail/SMS/ Area Mail reception Indicates the status of the memory to store received mail
---	---



- * Appears when Area Mail is received.

9 Message R/F (P. 146)

	Indicates the reception status of the Message R/F Indicates the storage status of the Message R/F
---	---

- The status may not always be indicated even if messages are held at the i-mode center.

10 microSD Card (P. 314)

	(gray)/ (gray)	microSD Card is inserted
	(pink)/ (pink)	microSD Card is being used


11 Clock display (P. 44)




- Small clock icon can be changed (P. 97).

12 1Seg being recorded (☞ P. 216)

	1Seg is being recorded
--	------------------------

13 Record message (☞ P. 64)


	Record message is set
---	-----------------------

- When messages (voice calls/Videophone) are recorded,  to  appears to indicate the total number of both types of message. If three messages (voice calls) and two messages (Videophone) are recorded,  appears.

14 Silent (☞ P. 85)

	The phone ring volume [Silent] is set
---	---------------------------------------


15 Vibrator (☞ P. 87)

	Vibration mode is set
---	-----------------------



16 Manner mode (☞ P. 89)

	Manner mode is set
---	--------------------

17 Public mode (Drive mode) (☞ P. 62)

	Public mode (Drive mode) is set
---	---------------------------------



18 Storage status of i-mode center (☞ P. 130)






 
 
	Mail being held at the center
	Mail being held at the center full

19 IC card lock (☞ P. 268)



	IC card is locked
---	-------------------

20 Restriction indicator (☞ P. 106, P. 112)


	Secret mode is set
	Secret data is being edited

	Keypad dial lock
	All lock is set
	Function lock is set
	Keypad dial lock and Function lock are set
	Secret mode, Function lock and Keypad dial lock are set
	Side key guard, Secret mode, Function lock and Keypad dial lock are set
	Side key guard is set

21 Hands-free (☞ P. 49)


	Hands-free in progress
	USB hands-free in progress

22 Alarm (☞ P. 217, P. 343, P. 347)



	Alarm is set Schedule alarm is set* Reception reserve alarm is set* Recording reserve alarm is set* Wakeup TV is set*
---	---

* Appears only when an Alarm is set for that day.


23 Music&Video Channel program reservation (☞ P. 227)

	Appears 12 hours before Music&Video Channel program distribution
---	--


24 i-mode mail send reservation (☞ P. 129)

	Mail with send reservation
	Mail failed to be automatically sent


 
25 Earphone/microphone connection (☞ P. 360)

	When Auto answer setting is set to [ON] and while an earphone/microphone (sold separately) is connected
--	---

26 USB mode (☞ P. 322)

	FOMA USB Cable with Charge Function 01/02 (sold separately) is connected in the Communication mode
---	--





27 FOMA card error

	Appears when FOMA card is malfunctioning or not inserted
	Appears when a card other than the FOMA card is inserted

28 Self mode (☞ P. 108)

	Self mode is set
---	------------------

29 Ir communication/External device



	Data is communicated with another device using the Ir communication function (☞ P. 328) Data is sent using the Ir remote control (☞ P. 332)
 (green)	Connected to an external device and transmitting packets
 (red)	Connected to an external device and sending/receiving packet data
	Connected to an external device and transmitting 64K data

30 VeilView (☞ P. 102)



	VeilView is set
---	-----------------

- The VeilView icon does not appear during International roaming or while 1Seg is recorded.

31 Overseas 3G network

 (green)	3G network (Packet transmission is available)
 (red)	3G network (Packet transmission is not available)

32 Status of Comics setting (☞ P. 335)

	Frame display is set
	Page display is set

- Status of Comics setting icon does not appear during hands-free operation.

33 ToruCa (☞ P. 270)























	Unread ToruCa
---	---------------

- The ToruCa icon does not appear during hands-free operation or e-comic display.

34 Multitask (☞ P. 340)

Indicates functions that are running.

- While two or more functions are running, the Multitask icon appears also in the sub display.

	Four or more applications are running		Character reader (OCR)
			Bar code reader
	Videophone		Card reader
	Voice call		Voice recorder
	Phonebook		Schedule
	Modem transmission (appears during data transmission)		Text memo, Stand-by memo
	Software update		Calculator
	Shotdeco		Manga&BookReader
	Receive via Ir/iC/USB communication		Quick search
			Full Browser, Internet movie player
	i-appli		ToruCa
	i-mode, i-Channel, WEB Mail		

	Mail, SMS, Message R/F, Check new message		Timer
	Mail/Decome-Anime/SMS being composed		microSD manager
	Received calls/Received messages history		General settings
	Redial/Sent messages history		Voice memo/Record message
	Shoot still picture		Own number
	GPS		1Seg
	Shoot movie		Reception reserve/Recording reserve alarm sounds
			Data box, Music&Video Channel

Operation in progress

	A screen other than stand-by appears in the main display
--	--

 
- microSD Card is referred to as [microSD] or [SD] on the FOMA terminal (P. 314).
- Some of the screen shots in this manual have been modified or abbreviated.
- The display for the FOMA terminal is manufactured using high-precision technology, but it may occasionally contain dots that fail to light or that remains permanently lit. This is not a malfunction.
- The display time of sub display follows the light duration setting.

Flash display in sub display

Flash movies are viewed in the sub display when Sub) Clock display is set to [Graphic stdby clock] or calls and messages are received.



Stand-by
([Graphic stdby clock])

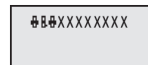

Receiving



Receiving mail

Checking notices with stock icon

Stock icons are displayed in stand-by when a call is missed or new mail is received. In stand-by, select stock icons to check notice details.



Number of entries

Message

Stock icon

Stock icon type

Icon	Message	Page
	xx missed call*1	P. 64
	Recorded messages xx message/ xx message	P. 66
	xx voice mail*1	P. 373
	xx mail message	P. 131, P. 151
	xx New Message R	P. 146
	xx New Message F	P. 146
	xx new ToruCa	P. 270
	New auto send result	P. 129
	Update complete	P. 451
	Check update	P. 451
	Update required	P. 449
	Check for update	P. 449

Icon	Message	Page
	USB mode setting	P. 322
	Download successful (Music&Video Channel)	P. 227
	Download failed (Music&Video Channel)	P. 227
	Charge limit exceeded	P. 356
	Send loc - No resp	P. 289
	Send loc - Resp	P. 289
	Send loc - Failed	P. 289
MENU	Custom menu/Basic menu/Menu*2	P. 33

*1 When the 2in1 mode is set to [Dual mode], the number of [A mode] and [B mode] appears each.

*2 The message that appears differs depending on the menu screen.

1 In stand-by, a stock icon appears

2 Select the stock icon .

- After the details are checked, the stock icon and message disappear.

- Stock icons do not appear while the i-motion set as stand-by is played or the i-αpli stand-by is being activated.

Setting and selecting menu

Set, change or save functions from the menu screens.

The explanations in this manual are based on how to retrieve a function from the Custom menu.

Setting start menu <Menu priority>

Set the start menu that displayed when is pressed while displaying the stand-by.

Start menu	Characteristics
Custom menu	<p>The preset Kisekae Tool (P. 95) can be selected and set. Each Kisekae Tool consists of different functions and designs. Kisekae Tools can be downloaded from sites and used.</p> <p>Preset Kisekae Tools</p> <ul style="list-style-type: none"> ■ HiTechSports ■ 拡大メニュー(Large) ■ ダイレクトメニュー <p>※ Preset Kisekae Tools differ depending on the FOMA terminal handset color.</p>
Basic menu	<p>In the Basic menu, input the function number, which is assigned to each function, to quickly retrieve the function to be used.</p> <ul style="list-style-type: none"> ● For details on assigned function numbers P. 404

 
1 In stand-by, press **[Settings]** **[Disp/LED/Power saver]** **[Menu priority]**.

- In the Custom menu/Basic menu: Press **[Menu priority]**.

2 Select the start menu **[Yes]**.

■ Switching set start menu temporarily

Switch the start menu temporarily. When the stand-by display reappears, the start menu returns to the one set in Menu priority. Use the Shortcut menu to retrieve saved functions quickly. Other functions can also be saved in the Shortcut menu (☞ P. 351).

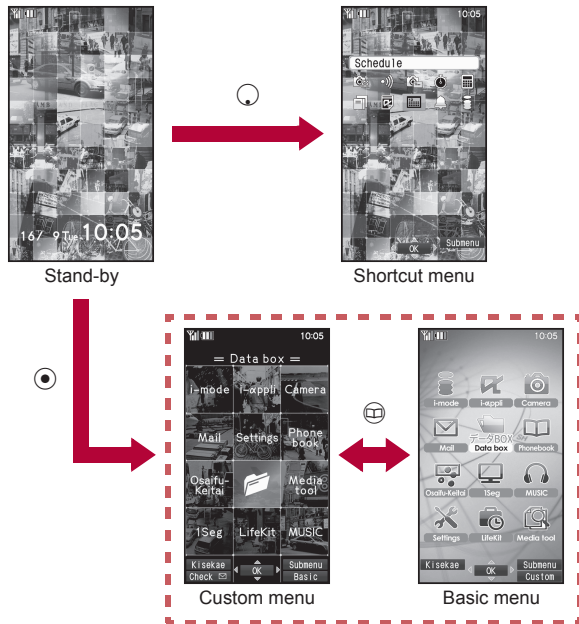

■ Retrieving a function from each start menu

- For details on operating Shortcut menu ☞ P. 351
- For details on the available functions ☞ P. 404
- Use \odot in all menus.
- Press the dial key corresponding to the menu item number (1, 2, 3, etc.) to select a function. However, in the Custom menu, a function may not be selected by using the menu item numbers.
- The method for selecting functions may differ depending on the Kisekai Tool set for the Custom menu.
- Press \square to re-select a function, and the previous screen reappears. Press \square to return to stand-by.

When a stock icon (☞ P. 31) appears in stand-by, select **MENU** to show the start menu.

■ Retrieving from the Custom menu

Example: Activating 1Seg with Multi guide key

