 


Key	Operations	Operations when pressing for 1+ seconds
	To activate Quick search (☞ P. 370)	To enable/disable VeilView (☞ P. 103)
	To activate GPS compatible i-αpli (☞ P. 296)	To check your present location (☞ P. 295)

\* Press for 2+ seconds.

## Multi-guide key and Operation guidance key

Use to select or execute the menus that appear in the operation guidance. The following shows the keys assigned to select or execute the menu items that appear in the guidance.

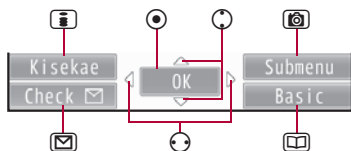

### ■ Operation guidance menu

In the operation guidance, menus appear according to the function being used and situation.

The following table describes examples of the main operation guidance menus that appear.


OK	Sets the selected item
Submenu	Displays the Submenu
Agree	Checks selected image, music, etc.
Back	Returns to the previous screen
Play/Stop	Plays/Stops i-motion, music, etc.
Full	Displays selected images, etc. in full screen
Show all	Displays sorted files, etc. as a list
1/1 or Zoom↓	Displays selected images, etc. in actual/reduced size

Mail	Displays the compose message screen
Send	Sends a mail
Cancel	Cancels the operation such as receiving a mail
SelAll/ClrAll	Selects/Disables all selectable items (Up to 50 items can be selected/disabled depending on the function)
Page ▲/Page ▼	Scrolls the display by page
Close	Closes the Submenu, etc.

## Viewing display


- Icons are shown in the order of main display and sub display.
 
### Main display

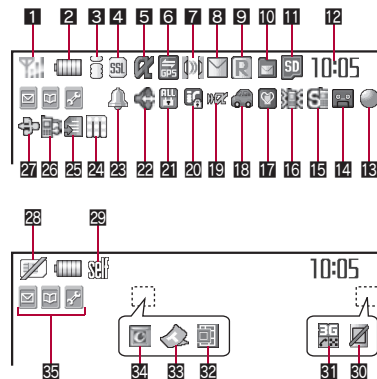

## Sub display

 The following shows a screen when Sub Clock display (☞ P. 94) is set to [Stdby clock(H·L)].

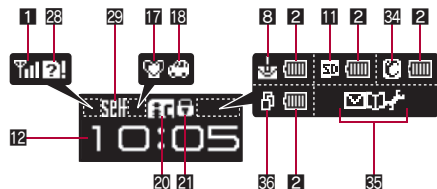

### 1 Signal status

	Indication of the signal strength
	Strong ← → Weak

- When [📶] appears, the handset is outside the service area or in a place with no signal. Signal icon can be changed (☞ P. 99).

### 2 Battery level (☞ P. 47)

	Indicates battery level
--	-------------------------

- Flashes during charging.
- This icon can be changed (☞ P. 47, P. 99).

### 3 i-mode/Full Browser (☞ P. 159, P. 162)

	Indicates i-mode/Full Browser status
--	--------------------------------------

### 4 SSL/TLS (☞ P. 159, P. 162)

	SSL/TLS pages are viewed
--	--------------------------

- When this icon appears while Multi Assistant is used, function such as i-mode, Full Browser, i-appli or Software update is being used with Multi Assistant.

### 5 i-appli (☞ P. 257)

	i-appli is being activated i-appli stand-by is being activated
	i-appli stand-by is set*
	i-appliDX is being activated i-appliDX stand-by is being activated
	i-appliDX stand-by is set*

- \* i-appli is set as the stand-by display, but cannot be used.
- Does not appear in the i-Widget screen.

### 6 GPS (☞ P. 295, P. 298)

	Location request menu is set to [Loc. provision:ON]/ [Reject No. unset] Location request menu is set to [Permission sched.] and Location provision is permitted
	Location request menu is set to [Permission sched.] and Location provision is rejected
	GPS positioning

### 7 Ir communication/External device


	Data is communicated with another device using the Ir communication function (☞ P. 346) Data is sent using the Ir remote control (☞ P. 349)
	Connected to an external device and transmitting packets
	Connected to an external device and sending/receiving packet data
	Connected to an external device and transmitting 64K data

### 8 i-mode mail/SMS/Area Mail received (☞ P. 132)


	Indicates the status of the i-mode mail/SMS/Area Mail reception Indicates the status of the memory to store received mail
--	--

- \* Appears when Area Mail is received.

**9 Message R/F received** (☞ P. 150)




	Indicates the reception status of the Message R/F Indicates the status of the memory to store Message R/F
--	--

**10 Storage status of i-mode center** (☞ P. 132, P. 150)

	Indicates the storage status of the mail and Message R/F
---	--

- May not appear even if messages are held at the i-mode center.

**11 microSD Card** (☞ P. 329)

	microSD Card is inserted
	microSD Card is being used
	Appears when microSD Card is not recognized


**12 Clock display** (☞ P. 49)

- Small clock icon can be changed (☞ P. 99).

**13 1Seg being recorded** (☞ P. 230)


	1Seg is being recorded
---	------------------------

**14 Record message** (☞ P. 68)

	Record message is set
---	-----------------------

- When there are messages, [ ] to [ ] appears, indicating the total number of both types of messages. When there are three Record messages (voice calls) and two Record messages (Videophone), [ ] appears.

**15 Silent** (☞ P. 87)

	The phone ring volume [Silent] is set
---	---------------------------------------


**16 Vibrator** (☞ P. 89)

	Vibration mode is set
---	-----------------------

**17 Manner mode** (☞ P. 91)

	Manner mode is set
---	--------------------

**18 Public mode (Drive mode)** (☞ P. 66)

	Public mode (Drive mode) is set
---	---------------------------------








 

**19 i-appli call** (☞ P. 273)

	New i-appli call
---	------------------



**20 IC card lock** (☞ P. 284)

	IC card is locked
---	-------------------


**21 Restriction** (☞ P. 108, P. 114)

	Secret mode is set
	Secret data is being edited
	Keypad dial lock
	All lock is set
	Function lock is set
	Keypad dial lock and Function lock are set
	Secret mode, Function lock and Keypad dial lock are set
	Side key lock, Secret mode, Function lock and Keypad dial lock are set
	Side key lock is set

**22 Hands-free** (☞ P. 53)


	Hands-free in progress
	USB hands-free in progress

**23 Alarm** (☞ P. 232, P. 362, P. 367)



	Alarm is set Schedule alarm is set* Reception reserve alarm is set* Recording reserve alarm is set* Wakeup TV is set*
---	---

\* Appears only when an Alarm is set for that day.


**24 Music&Video Channel program reservation (P. 241)**

	Appears 12 hours before Music&Video Channel program distribution
--	--


**25 i-mode mail send reservation (P. 132)**

	Mail with send reservation
	Mail failed to be automatically sent



**26 Earphone/microphone connection (P. 378)**

	While Auto answer setting is set to [ON] with an earphone/microphone (sold separately) connected
---	--

**27 USB mode (P. 340)**

	FOMA USB Cable with Charge Function 02 (sold separately) is connected in the Communication mode
---	---

**28 FOMA card error**

	Appears when FOMA card is malfunctioning or not inserted
	Appears when a card other than the FOMA card is inserted

**29 Self mode (P. 110)**




	Self mode is set
---	------------------

**30 VeilView (P. 103)**



	VeilView is set
---	-----------------

- Does not appear while displaying 13 or 31.

**31 3G**

	3G network (Packet transmission is available)
	3G network (Packet transmission is available/Call is not available)
	3G network (Packet transmission is not available)

**32 Status of Comics setting (P. 355)**

	Frame display is set
	Page display is set

- Does not appear while displaying 22 or 34.

**33 ToruCa (P. 286)**

	Unread ToruCa
---	---------------

- Does not appear while displaying 22, 32 or 34.

**34 Receiving information (P. 192)**























	New information
---	-----------------

























- Does not appear while displaying 22.

**35 Multitask (P. 360)**


Indicates functions that are running.


 
- While two or more functions are running, the Multitask icon also appears on the sub display.

	Four or more applications are running		Shoot still picture
			Shoot moving picture
	Videophone		Character reader (OCR)
	Voice call		Bar code reader
	Phonebook		Card reader
	Modem transmission (appears during data transmission)		Information reader
			Motiondeco
			Shotdeco
	Software update		Voice recorder
	Map/GPS		Schedule
	Receive via Ir/iC/USB communication		Text memo, Stand-by memo
			Calculator
	i-appli		Manga&BookReader

	i-mode, i-Channel, Full Browser, Internet movie player		Quick search
	i-concier		ToruCa
	Receive information		Alarm
	Mail, SMS, Message R/F, Check new messages		Timer
	Mail/Decome-Anime/SMS being composed		microSD
			General settings
	Received calls		Voice memo/Record message
			1Seg
	Received messages history		Reception reserve/Recording reserve alarm sounds
	Own number		Data Security Service
	Redial		Data box
	Sent messages history		MUSIC


### Operation in progress

 	A screen other than stand-by appears in the main display
---	--







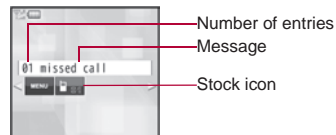








- Does not appear while displaying .
- microSD Card is referred to as [microSD] or [SD] on the FOMA terminal ( P. 329).
- Some of the screen shots in this manual have been modified or abbreviated.
- The display for the FOMA terminal is manufactured using high-precision technology, but it may occasionally contain dots that fail to light or that remain permanently lit. This is not a malfunction.
- The display time of sub display follows the light duration setting.
- The icon of sub display cannot be changed.



## Checking notices with stock icon

Display stock icons in stand-by when a call is missed or new mail is received. In stand-by, select stock icons to check notice details.



### Stock icon type

Icon	Message	Page
	xx missed call*1	P. 67
	 xx/  xx messages	P. 70
	xx voice mail*1	P. 390
	xx mail message	P. 133, P. 155
	xx New Message R	P. 151
	xx New Message F	P. 151
	xx new ToruCa	P. 286
	New auto send result	P. 132
	Update complete	P. 473
	Check update	P. 473
	Update required	P. 471
	Check for update	P. 472
	USB mode setting	P. 340
	Download successful (Music&Video Channel)	P. 241
	Download failed (Music&Video Channel)	P. 241
	Charge limit exceeded	P. 375

Icon	Message	Page
	Send loc - No resp	P. 300
	Send loc - Resp	P. 300
	Send loc - Failed	P. 300
	New i-appli call	P. 273
<b>MENU</b>	Custom menu/Basic menu*2	P. 38

\*1 When the 2in1 mode is set to [Dual mode], the number of [A mode] and [B mode] appears each.

\*2 The displayed message differs depending on the menu screen.

### 1 In stand-by, a stock icon appears ▶ ●.

- When both the stock icon and the popup message appear, switch the selection between the stock icon and the popup message with ●.

### 2 Select the stock icon ▶ ●.

- After the details are checked, the stock icon and message disappear.

- Stock icons do not appear while the i-motion set as stand-by is played or the i-appli stand-by is being activated.


## Displaying and operating i-Widget

In the i-Widget screen, multiple Widget Appli can be activated simultaneously and viewed as a list.

- For details on operation of i-Widget  P. 278

 


i-Widget screen

- Area where Widget Appli is pasted
- Setting status icons for Widget Appli
  - For details on the setting status icons  P. 257
- Operation guidance
  - Available menus appear.

## Activating i-concier with popup message

Display popup messages in the stand-by display when information is received. Activate i-concier with the popup messages to check information details.

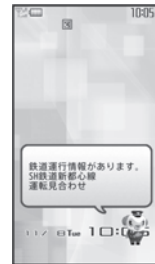

“ひつじのしつじくん”  
©NTT DOCOMO

### 1 In stand-by, a popup message appears ▶ ●.

### 2 Select the popup message ▶ ●.

- The popup message disappears after activating i-concier.

- Calendar or Stand-by memo does not appear while a popup message appears.

## Setting and selecting menu

Set, change or save functions from the menu screens.

- Menus are classified by function (☞ P. 422).

The explanations in this manual are based on how to retrieve a function from the Custom menu.

### Setting start menu <Menu priority>

 
Set the start menu that displayed when  is pressed in stand-by.

Start menu	Characteristics
Custom menu	<p>The preset Kisekae Tool (☞ P. 97) can be selected and set. Each Kisekae Tool consists of different functions and designs. Kisekae Tools can be downloaded from sites and used.</p> <p><b>Preset Kisekae Tools</b></p> <ul style="list-style-type: none"> <li>■ White      ■ Black      ■ Pink</li> <li>■ Blue Green    ■ 拡大メニュー (Large)</li> <li>■ シンプル (Simple)    ■ ダイレクトメニュー</li> </ul> <p>※ Preset Kisekae Tools differ depending on the FOMA terminal handset color.</p>
Basic menu	Select the icon displayed on the menu to retrieve the function. Also, input the function number, which is assigned to setting menu, to quickly retrieve the function to be used.


- 1 In stand-by, press  ▶ [Settings] ▶ [Disp/LED/Power saver] ▶ [Menu priority].
- 2 Select the start menu ▶  ▶ [Yes].

### Switching set start menu temporarily

Switch the start menu temporarily. When the stand-by display reappears, the start menu returns to the one set in Menu priority.

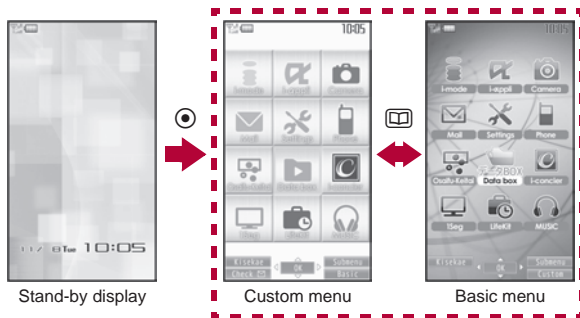

### Submenu operations for the Custom menu screen

[Assign function]	☞ P. 98
[Rst func asgnment]	☞ P. 98
[Reset menu screen]	☞ P. 98
[Reset menu history]	☞ P. 98
[Menu priority]	☞ P. 37
[Operation guide] ▶ select an item ▶ 	

## ■ Submenu operations for the Basic menu screen

### [Icon settings]

▶ [Icon image] P. 100

▶ [Dsp icon name] P. 100

[Set background] P. 100

[Reset menu screen] P. 100

[Menu priority] P. 37

[Operation guide] ▶ select an item ▶

 
## Retrieving a function from each menu

- For details on operating shortcut menu P. 370
- For details on the available functions P. 422
- Use in either menu.
- Press the dial key corresponding to the menu item number (1, 2, 3, etc.) to select a function. However, in the Custom menu, a function may not be selected by using the menu item numbers.
- The method for selecting functions may differ depending on the Kisekae Tool set for the Custom menu.
- Press to re-select a function, and the previous screen reappears. Press to return to stand-by.


When a stock icon ( P. 35) appears in stand-by, select [MENU] to show the each menu.

The way of activating camera (shooting still pictures) with Multi guide key is explained as an example below.

## ■ Retrieving from the Custom menu

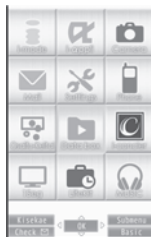

Custom menu

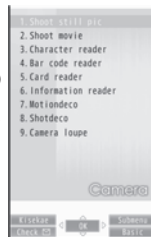 

When [Camera] appears




When the camera (shooting still pictures) is activated

## ■ Retrieving from the Basic menu



 Basic menu

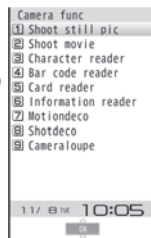

When [Camera func] appears




When the camera (shooting still pictures) is activated

- In the Basic menu, input the function number, which is assigned to setting menu, to quickly retrieve the function to be used ( P. 422).
- When the Custom menu screen is changed by Kisekae Tool, the operation may differ from the description in this manual. In this case, switch the menu screen to the Basic menu ( P. 37) or perform the Reset menu screen ( P. 98).



## Retrieving a function from the Simple menu

 - Refer to the menu list for details on [シンプル(Simple)] (P. 442).

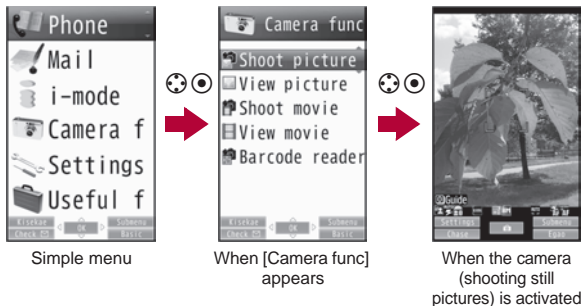

Simple menu


When [Camera func]  
appearsWhen the camera  
(shooting still  
pictures) is activated

## Selecting a function from Submenu

 When [Submenu] appears in the operation guidance, press **[OK]** to display functions (Submenu) that can be used in the screen. Select the displayed Submenu with **[Left]**.

If there are multiple pages in the Submenu, change pages with **[Right]**.

Alternatively, press the dial key corresponding to the menu item number (1, 2, 3, etc.) to select a function. However, some Submenus do not have item numbers.

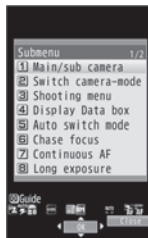

Submenu screen


## Target data when operating functions from Submenu

 - When operating functions from Submenu of data list screen, some functions target at selected data only while other functions target at all data in the list screen. When attempting to operate selected data only, select the data to operate in advance.
  - Function targeting at selected data only  
Example: Edit title, Edit file name, Delete one, etc.
  - Function targeting at all data in the list screen  
Example: Delete all, Copy all in folder, Move all in folder, etc.

## Support Book

### Displaying Support Book

Use this function for unsure operations. After the Support Book appears, check the explanation and operation procedures of each function. In addition, directly start functions that were looked up in the Support Book.

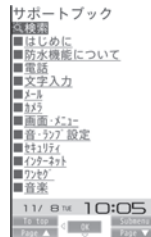

1 In stand-by, press **[Q]** ▶ [Support Book].

2 Select a menu or item ▶ **[Left]**.

- To start functions directly: Select the function to start ▶ **[Right]** ▶ **[Yes]**.

## FOMA card

## Using FOMA card

A FOMA card is an IC card that records personal information, such as phone numbers. A FOMA card can store phonebook data and SMS. By switching FOMA cards, multiple FOMA terminals can be used for different purposes as needed.

- If a FOMA card is not inserted, transmission functions such as voice/ Videophone calls, i-mode, mail transmission and packet transmission are not available on the FOMA terminal.

## Inserting/Removing FOMA card

 
- Before inserting or removing the FOMA card, turn off the power, position the back facing upwards and remove the battery pack. Close and hold the FOMA terminal securely with your both hands.

## Inserting FOMA card

## 1 Hook a finger on the tab and pull the tray out (1).


- Pull out the tray straight until it stops.

## 2 Hold the FOMA card with the IC facing up and set on the tray (2).



## 3 Push the tray all the way in (3).

 
Fit the notch of the FOMA card to that of the tray.

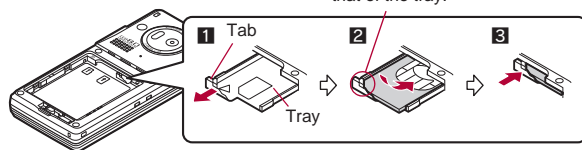

## Removing FOMA card

## 1 Hook a finger on the tab, pull the tray out (1) and remove the FOMA card (2).

 - Do not allow the FOMA card to fall when removing it.

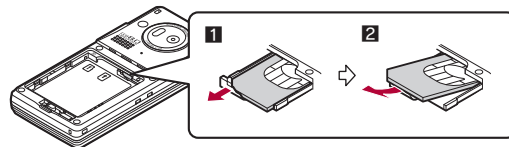

- Inserting or removing the FOMA card forcibly may damage the card or deform the tray. Use caution.
- Refer to the FOMA card user's guide for more information on the FOMA card.
- Do not misplace the FOMA card once it is taken out.
- When the tray falls off, slide the tray in straight along the guide rail.

## Security codes

The FOMA card has a "PIN1 code" and a "PIN2 code".

Both are set to [0000] by default but can be changed to a four- to eight-digit number by the user (P. 108).

 
## FOMA card security functions

### <FOMA card security functions>

The FOMA terminal has built-in FOMA card security functions (FOMA card restriction functions) as functions for protecting personal data and files.

- When data or files are retrieved using any of the following methods or i-αpli is running with the FOMA card inserted into the FOMA terminal, FOMA card security functions are automatically set in the retrieved data or files.
  - When a file such as an image, melody or PDF is downloaded from a site or Internet web page
  - When a site or Internet web page is added in screen memo
  - When i-mode mail with a file attached is received
  - When i-αpli is running
- Data, files or software with FOMA card security functions run only when in use with the FOMA card inserted at time of acquisition. Display, play, attach to i-mode mail, run software, send data using Ir communication function and iC communication function, and copy to microSD Card can be executed. These operations cannot be performed if a different FOMA card is inserted.
- The following indicates the data for which FOMA card security is set.
  - Melody
  - Image (including animation and Flash movie)
  - Screen memo
  - Chaku-uta®/Chaku-uta full®
  - Chara-den
  - File attached to Message R/F
  - i-motion
  - ToruCa (details) image
  - PDF data
  - Image inserted to Deco-mail or signature
  - Kisekai Tool
  - Videophone picture memo
  - Machi-chara
  - i-αpli (including i-αpli stand-by)
  - Download dictionary
  - Download font
  - Contents transfer compatible data
  - Image in Message R/F
  - Music&Video Channel program
  - Deco-mail template with data which FOMA card security functions are set
  - Decome-Anime Template
  - e-book/e-dictionary/e-comic saved in the [Comic] folder

- File attached to i-mode mail other than the following
  - ToruCa
  - Phonebook
  - Schedule
  - Bookmark
- ※ "Chaku-uta" is a registered trademark of the Sony Music Entertainment (Japan) Inc.
- The following indicates the settings saved in the FOMA card.
  - Own number
  - PIN setting
  - Select language
  - SSL/TLS certificates
  - SMS center
  - SMS expiry
  - SMS input character
- The following explanation refers to the FOMA card inserted at time of data/files retrieval as "one's own FOMA card" and other FOMA cards as "another's FOMA card".

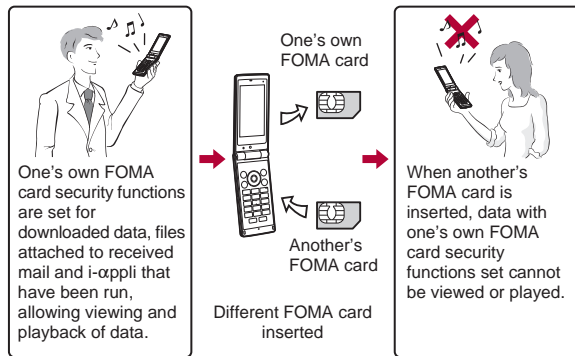

- When one's own FOMA card is replaced with another's FOMA card, the data or files for which FOMA card security functions are set cannot be set as stand-by displays or ring tones.

- When a FOMA card is replaced with another's FOMA card, FOMA card security functions are activated and if data or file retrieved from a site is set as the stand-by display or ring tone, the setting is reset to the default. When one's own FOMA card is re-inserted, the setting returns.

**Example: When setting [Melody A], for which FOMA card security functions are set, as a ring tone**

When one's own FOMA card is taken out or is replaced with another's FOMA card, ring tone returns to default setting. When one's own FOMA card is put back, the ring tone returns to [Melody A].

- FOMA card security functions cannot be set for data received using Ir communication or data transmission functions, and still/moving pictures, etc. shot with the FOMA terminal.
- It is possible to move or delete data or files for which FOMA card security functions are set even when another's FOMA card is inserted.
- Running i-αppli by selecting highlighted text in i-mode mail details screen cannot be performed or retrieved when FOMA card security functions are set.
- If the FOMA card is replaced with another's FOMA card after i-αppli stand-by is set, the set i-αppli cannot be activated in stand-by, and the image set in Stand-by display appears.

## FOMA card type

Note the following differences between "FOMA card (blue)" and "FOMA card (green/white)" used on the FOMA terminal.

Function	FOMA card (blue)	FOMA card (green/white)	Page
Number of phone number digits available in the FOMA card phonebook	Up to 20 digits	Up to 26 digits	P. 77
Client certificate operations for FirstPass	Not available	Available	P. 182
Use of WORLD WING	Not available	Available	P. 406
Service Numbers	Not available	Available	P. 396

## About WORLD WING

WORLD WING is a DOCOMO's FOMA international roaming service that makes it possible to use the mobile phone number registered in Japan to make and receive calls even overseas by the FOMA card (green/white) and supported FOMA terminal.

Also, SH-05A is available in the DOCOMO's 3G roaming service area only. When using this service in the GSM service area, the FOMA card is inserted into GSM supported terminal.

- If subscribed to the FOMA service after September 1, 2005, subscription for "WORLD WING" is not required. However, if subscription for "WORLD WING" is canceled at or after subscription for the FOMA service, subscription for "WORLD WING" is required again.
- If subscribed to the FOMA service before August 31, 2005 but not subscribed to "WORLD WING", subscription for "WORLD WING" is required.
- Some payment plans are not available.
- When the FOMA card (green/white) is lost or stolen overseas, promptly contact DOCOMO and conduct a procedure for canceling the use of service. Refer to General Inquiries on the back of this manual for inquiries. Note that transmission/calling charges after the FOMA card is lost or stolen are incurred to the subscriber.

## Attaching/Removing battery pack

Use the Battery Pack SH20 exclusive to the FOMA terminal.

 
- Turn off the power, close the FOMA terminal, and hold it in your both hands before attaching or removing the battery pack.
- The battery pack is not waterproof.

### ■ Attaching battery pack

#### 1 Remove the back cover (☞ P. 22).

#### 2 Attach the battery pack.

- The battery pack has tabs that make it easy to attach. Attach the battery pack with a recycle mark side faced up.

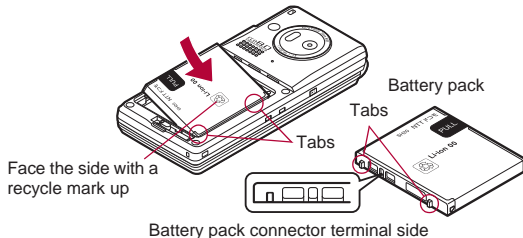


#### 3 Attach the back cover (☞ P. 21).

### ■ Removing battery pack

#### 1 Remove the back cover (☞ P. 22).

#### 2 Remove the battery pack.

 - The battery pack has a "PULL" Tag that makes it easy to remove. Hold the "PULL" Tag between the fingers and lift up it in the direction of an arrow (45-degree from the FOMA terminal) to remove the battery pack.

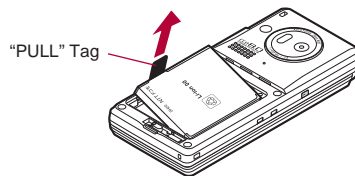

- Using unnecessary force when attaching or removing the battery pack may damage the connector terminal for the battery pack (charger terminal) on the FOMA terminal.
- Securely close the back cover. If not closed securely, the back cover may come off and the battery pack may fall out due to vibration. May damage the waterproof performance and allow water to seep.

## Charging

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery using the exclusive AC or DC adapter (sold separately) before use.

- It is recommended that the desktop holder be used for charging to prevent water from seeping caused by forgetting to close the external connector terminal cover (☞ P. 45).
- The AC adapter and desktop holder are not waterproof. Never try to charge the battery pack when the FOMA terminal is wet. For precautions on the waterproof performance when charging ☞ P. 25

### ■ Cautions while charging

- Do not charge for long periods of time with the power left on. If the FOMA terminal is left on after charging is complete, the battery pack charge decreases.

In such cases, the AC or DC adapter charges the battery again.

However, depending on when the FOMA terminal is disconnected from the AC or DC adapter, the battery charge level may be low, the battery alert tone may sound, or the battery may only be usable for a short time.

- When the battery is empty and terminal is recharging, charging LED may not illuminate immediately.
- If the battery empty alert is displayed, the alert tone sounds and the power cannot be turned on, charge the battery for a while.
- If the battery empty alert is displayed and charging begins within 60 seconds of the alert tone, the status returns to normal.
- While charging, terminal may not turn on even when charging LED is illuminated in red. Charge longer and try turning power on again.
- Frequently recharging the battery when its power is still remaining enough may shorten the life of the battery pack. It is recommended to use the battery to a certain level before recharging.

### ■ Estimated charge times and LED display

The following figures are estimated times for charging an empty battery pack with the FOMA terminal turned off.

FOMA AC Adapter 01/02	Approx. 120 min
FOMA DC Adapter 01/02	Approx. 120 min

- Charging LED illuminates in red while charging, and it turns off when charging is completed.
- Check that the battery pack has been properly attached when charging LED flashes red. The LED also flashes red when the battery pack has reached the end of its service life.
- The battery pack can also be charged with the FOMA terminal turned on (Battery icon flashes during charging).
- When the battery becomes warm, charging may automatically stop even if the battery has not been fully charged. Charging resumes after the temperature lowers to an appropriate temperature. While charging is stopped, charging LED turns off (Battery icon flashes while stopped).

### ■ Estimated times of use when fully charged

Continuous talk time	FOMA/3G	Voice call: Approx. 220 min
		Videophone call: Approx. 110 min
Continuous stand-by time	FOMA/3G	When mobile: Approx. 370 hr
		At rest: Approx. 570 hr
1Seg watching time		Approx. 230 min

- Continuous talk time is estimated as the usage time at normal transmission signal strength, and continuous stand-by time is estimated as the usage time while moving with the FOMA terminal folded at normal signal strength. Using i-mode reduces talk (transmission)/stand-by time. When i-Channel is subscribed, information is automatically received and updated, so talk (transmission)/stand-by time will be reduced. In addition, when shooting or editing an image, watching 1Seg, composing i-mode mail, activating the downloaded i-appli or the i-appli stand-by, or using MUSIC Player, i-motion player or data communication, the talk (transmission)/stand-by time will be reduced even if calls or i-mode transmission are not made. Some i-appli software may continue transmission even after downloading. To avoid this, set not to connect in advance.
- The actual usage time is a combination of stand-by time and talk time, and the longer the talk time, the shorter the stand-by time becomes.
- 1Seg watching time is estimated as the watching time at normal transmission signal strength with the Stereo Earphone Set 01 (sold separately) used.
- Talk (transmission)/stand-by time may be reduced by about half or 1Seg watching time may be shortened depending on battery pack status, function used, temperature and other environmental conditions, or signal strength (no signal or weak signal).

### ■ Battery pack service life

- Battery pack is a consumable product. Service time per charge is gradually reduced every time the battery is charged.
- When service time per charge is reduced to about half of the default time, this means that the battery pack is approaching the end of its service life. In such a case, it is recommended to replace the battery pack as soon as possible. Depending on usage, the battery pack may swell as it approaches the end of its service life but this will not cause problems.

- If i-appli, Videophone, or 1Seg is used while charging for a long time, the service life of the battery pack may become shorter than estimated.
- To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.



Li-ion 00

### About charging batteries

- Refer to user's guide of FOMA AC Adapter 01/02 (sold separately), FOMA AC Adapter 01 for Global use (sold separately), or FOMA DC Adapter 01/02 (sold separately).
- FOMA AC Adapter 01 covers only 100V AC. FOMA AC Adapter 02/ FOMA AC Adapter 01 for Global use covers from 100 to 240V AC.
- The shape of the plug for the AC adapter is for 100V AC (for domestic use). To use the AC adapter of 100 to 240V AC overseas, a conversion plug adapter that is compatible with the voltage of your country of stay is required. Do not use a transformer for use overseas to charge the battery.

### Charging by using desktop holder

**[Read "Desktop Holder SH25 (sold separately) user's guide" carefully.]**

- Battery pack cannot be charged with the FOMA terminal opened.

**1 Face the side with the arrows of the AC adapter connector up and insert it into the connector terminal of the desktop holder (1).**

 
- Keeping the connector parallel with the desktop holder, securely push it all the way in until it clicks.

**2 Insert the AC adapter power plug into an outlet (2).**

**3 When placing the FOMA terminal in the desktop holder, Charge start sound is heard, charging LED illuminates, and charging starts.**

- Place the FOMA terminal as the figure shows (3) and push it in the direction of the arrow (4) until it clicks.

- Do not open the FOMA terminal while it is placed in the desktop holder.

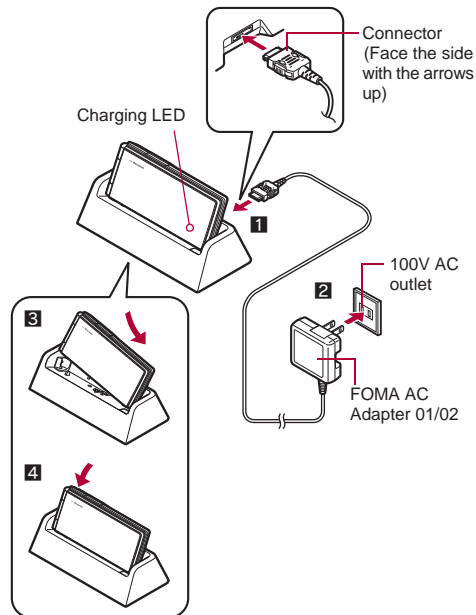

**4 When Charge end sound is heard and charging LED turns off, charging is complete.**

- Hold the desktop holder and lift the FOMA terminal out.
- Pull the AC adapter out of the outlet when left unused for a long period of time.

 
- When Charge start sound is not heard or when charging LED does not illuminate, check that the FOMA terminal is placed securely in the desktop holder (except when terminal is turned off, Manner mode is set or Charge start sound is Silent).
- When placing the FOMA terminal in the desktop holder, be careful that the strap is not caught in between the handset and the desktop holder.

## Charging by using AC adapter/DC adapter


[Read “FOMA AC Adapter 01/02 (sold separately) and FOMA DC Adapter 01/02 (sold separately) user’s guide” carefully.]

- Battery pack can be charged even with the FOMA terminal opened.


- 1 Open the external connector terminal cover and insert the AC or DC adapter connector horizontally into the external connector terminal (1).

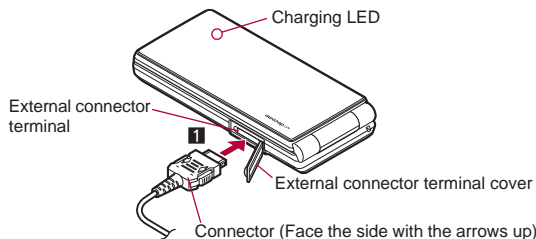

 - Check the direction (See diagram) of the connector, keep it parallel with the FOMA terminal and securely push all the way in until it clicks.




 - 2 When inserting the AC adapter power plug into an outlet or inserting the DC adapter power plug into a car cigarette lighter socket, Charge start sound is heard, charging LED illuminates, and charging starts.

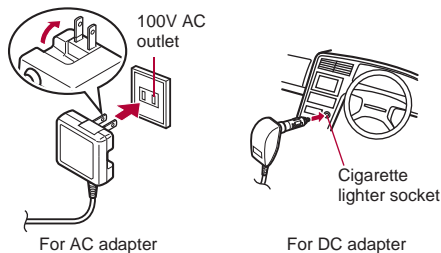

- 3 When Charge end sound is heard and charging LED turns off, charging is complete.

 - When removing the connector, always hold the release buttons on both sides (1) and unplug it horizontally (2).

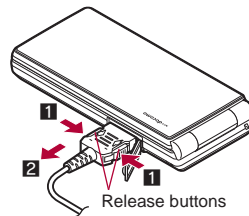

- Do not forcibly insert or remove. May cause damage to the external connector terminal and the connector.
- Pull the adapter out of the outlet or cigarette lighter socket if it will not be used for a long time.
- Do not forcefully pull the external connector terminal cover. May damage the cover.
- Do not place objects near the FOMA terminal when charging. May damage the FOMA terminal.




**When using a DC adapter**

- The DC adapter should only be used in negative grounded vehicles (12 and 24V DC).
- Do not use with the car engine shut off. May drain the car battery.
- The DC adapter fuse (2A) is a consumable. For replacement, purchase a new fuse at a local automobile supply shop.
- Refer to the FOMA DC Adapter 01/02 user's guide for details.

**Battery level****Checking battery level**

- If the battery icon is changed to [電池マーク%表示], battery level is displayed in percentage. However, [Full] appears when battery level is 100% while [Low] appears when battery level is 4% or less.
- The battery icon and Percentage are rough indications.
- The battery level may change a lot depending on the conditions of use.
- If the FOMA terminal is left for a long period or without turning off the power, the battery level may decrease even after the charging is completed.



	81 to 100%	Battery is sufficiently remaining.
	61 to 80%	Battery is remaining.
	41 to 60%	Battery level is low.
	21 to 40%	Battery level is very low.
	1 to 20%	Battery is almost empty. Charge the battery.
	0%	Battery is empty (Power will turn off soon).

**Changing design of battery icon <Battery icon>**

- 1 In the Custom menu, select [Settings] ▶ [Battery] ▶ [Battery icon] ▶
- 2 Select an image ▶

**Displaying battery icon in percentage temporarily <Icon% temp display>**

When the battery icon is set to other than [電池マーク%表示], if the display is shown again with the display off, the battery icon in percentage is displayed for approximately 3 seconds.

- 1 In the Custom menu, select [Settings] ▶ [Battery] ▶ [Icon% temp display] ▶ [ON].

**Checking battery level with sound and display**

- 1 In the Custom menu, select [Settings] ▶ [Battery] ▶ [Battery level].

- Battery level is displayed in percentage and graphic. In addition, it is notified by the number of the battery level sound according to its remaining amount.

Graphic	Number of beep sound
	Five times
	Four times
	Three times
	Twice
	Once

- Wait approximately 5 seconds and the display disappears.
- The battery level sound is heard at the volume set in Key sound (P. 88).
- If the Manner mode is set, the battery level sound follows the setting of the Manner mode.

**If battery runs out**

[Battery empty. Unsaved data will be lost. Ending current operation] appears if battery starts to run out (Press to clear the message). After a while, an alert tone sounds.

The warning screen stating that the battery runs out appears, handset operations are disabled and power turns off after approximately 60 seconds.




- During a voice/Videophone call, the alert tone sounds and [Battery empty. Unsaved data will be lost. Ending current operation] appears. The call is disconnected after approximately 20 seconds. At the same time, the screen above appears and after approximately 60 seconds, the power turns off.
- Alert tone does not sound when Manner mode or Public mode (Drive mode) is set (Alert tone sounds during a call).

## Power ON/OFF

### Turning power ON/OFF

#### Turning power ON

##### 1 Press (for 2+ seconds).

- It may take some time for the wakeup screen to appear.
- The wakeup screen appears followed by the initial settings screen. Proceed to Initial setting ( P. 48).
- If initial settings have been completed, the screen shown on the right appears when power is turned on. This screen is called the “stand-by display”.

 

#### Welcome mail


- “Welcome  ドコモ動画 

(Welcome  docomo-doga ) and “緊急速報「エリアメール」のご案内” (Information of Early Warning “Area Mail”) are saved by default.
- To check a welcome mail: In stand-by, press  select the stock icon [] (mail message) .
- For details on the following operations  P. 136



Stand-by display

- If initial settings are not yet completed, the setting screen appears every time the power is turned on.
- If the FOMA card is not inserted, [Insert UIM] and a FOMA card error appear ( P. 34).
- When [Enter PIN1 code] appears, enter the PIN1 code ( P. 107).

- When a FOMA card is replaced with a new card, the terminal security code (four to eight digits) must be entered after turning on the terminal. If a correct terminal security code is entered, stand-by display appears. When a wrong terminal security code is entered five times, the power is turned off. However, turning on the power again is possible.
- When [] appears, the handset is outside the service area or in a place with no signal. Move to a place where the icon disappears.

### Turning power OFF




##### 1 Press (for 2+ seconds).

- It may take some time for the power to be turned off (The end screen appears on the display until the power is turned off).

## Select language

### Changing screen display to English

##### 1 In the Custom menu, select [Settings] [一般設定] [Bilingual] [English].

- To switch the display language from English to Japanese: In the Custom menu, select [Settings]  [General settings]  [Select language]  [日本語].
- If a FOMA card is inserted, settings are saved to the FOMA card as well. When the setting of the FOMA terminal handset and the setting of the inserted FOMA card are different, the setting in the FOMA card is prioritized.

## Initial setting

### Making initial setting


The initial settings screen appears automatically when the power is turned on for the first time. Each setting item can also be set from Menu (When the initial settings are complete, the stand-by display appears).

- Date and time settings
- Change terminal security code

- Key sound
- Location request menu
- Set all font size
- When items that have not been set remain, the setting screen appears every time the power is turned on.
- Alternatively, select [Settings] ▶ [Initial setting] in the Custom menu to display the setting screen.

- 1 **Set the date and time** (☞ P. 49).
- 2 **Register a terminal security code** (☞ P. 107).
- 3 **Set the Key sound** (☞ P. 88).
- 4 **Set GPS Location provision ON/OFF** (☞ P. 298).
- 5 **Set the font size collectively** (☞ P. 103).




- When the initial settings are complete, the software update function confirmation screen appears. Read the description and select [Agree] (When the initial settings are made from the menu or the software update is set to other than [auto-update], the confirmation screen does not appear).






- Press  to cancel the initial settings.

## Date settings

### Setting date and time

Set the date and time on the FOMA terminal.

- 1 **In the Custom menu, select [Settings] ▶ [General settings] ▶ [Date settings].**
- 
- 2 **Select the [Auto time correction] field ▶  ▶ select the setting.**
    - ◆ Select [ON] ▶ .

- ◆ Select [OFF] ▶ select the [Date] field ▶  ▶ enter the date ▶  ▶ select the [Time] field ▶  ▶ enter the time (24-hour format) ▶  ▶ .
- When entering month, day and time, add 0 before numbers one through nine (example: 01, 02, 03, etc.).
- Set the date and time from 00:00 January 1, 2001 to 23:59 December 31, 2050.

- When Limit settings is set to [Enable], the terminal security code must be entered in the Date settings.
- The date and time that are set are saved even if the battery pack is removed, but if the battery pack remains removed for approximately 30 seconds or more, the settings are reset. Also, if the battery remains empty, the settings may be reset. When this happens, set again after charging the battery.
- If the date and time are not set correctly, the following functions cannot be used properly.
 

■ Redial, Received calls	■ Auto power ON/OFF
■ Alarm	■ Schedule
■ SSL/TLS (authentication)	■ i-appli Auto start
■ Starting i-appliDX	■ Reception, Recording
■ Machi-chara	■ Software update
■ Pattern definitions update	
■ Record message (voice), Record message (Videophone calls)	
■ Camera image titles/shooting date	
■ Playback of i-motion or music data with expiration date/period for replay	
■ View of e-books/e-dictionaries/e-comics with expiration date/period for browse	

#### When [Auto time correction] is set to [ON]

- When the power is turned on, the FOMA terminal adjusts the time by connecting to the network's time information.
- If the FOMA terminal does not adjust the time even when the power is turned on, turn off the power and restart.
- Time may not be adjusted depending on the signal status.
- Time may be off by a few seconds.

- When time difference is adjusted overseas, the local time and date and [📧] appear in Redial, Received calls, Received/Sent messages history (SMS only), received/sent mails list and location history list. The received/sent mails are not displayed in order of the displayed time and date but the mail reception/send.
- [📧] does not appear in the Unsent messages for mail messages. If the date order display is set for the Unsent messages, unsent mails are displayed in the order of the displayed time and date.
- Time correction may not be performed depending on the overseas telecommunications carriers' network. Change the time zone manually.
- During overseas use, Japan time and local time (or time set in City) appear in the dual display except for the following cases.
  - When Auto time correction is set to [ON] and time correction information is not being received from an overseas telecommunications carriers' network
  - When Auto time correction is set to [OFF] and City is set to the city in the same time zone as Japan

### ■ Changing time zone manually <City>

- 1 In the Date settings screen, select the [Auto time correction] field ▶ ▶ [OFF] ▶ .
- 2 Select a time zone ▶ .
- 3 Select a city ▶ ▶ .

### Notify caller ID

## Notifying the other party of your phone number

Display your number (caller ID) on the other party's phone (display) when making a voice/Videophone call.

- Handset number (caller ID) is important personal information. Be very careful about your caller ID setting.
- The Notify caller ID function is available only on compatible phone devices.

## Setting Notify caller ID/No caller ID in advance

 
- 1 In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Notify caller ID].
- 2 Select [Activate/Deactivate].
  - To check the setting: Select [Check setting].
- 3 Select the setting.
  - To notify caller ID: Select [Yes].
  - To not notify caller ID: Select [No].

- Notify caller ID setting cannot be set from outside the service area.

### Own number

## Checking your own phone number

- When checking your own phone number during a call P. 54
- 1 In the Custom menu, press .
    - Alternatively, select [Phone] ▶ [Own number] (or [Settings] ▶ [General settings] ▶ [Check status] ▶ [Own number]).
    - To switch between Number A and Number B (when 2in1 [Dual mode] is used): Press .
- When changing the Number B of 2in1, use any of the following methods to obtain the correct Number B.
    - Set 2in1 function OFF and then perform 2in1 setting again to set 2in1 function ON
    - Check the 2in1 subscription
  - When a FOMA card exchange (2in1 subscriber → 2in1 nonsubscriber) is performed, set 2in1 function OFF.
  - When a FOMA card exchange (2in1 subscriber → 2in1 subscriber) is performed, check the 2in1 subscription.
  - For details on Owner information P. 372

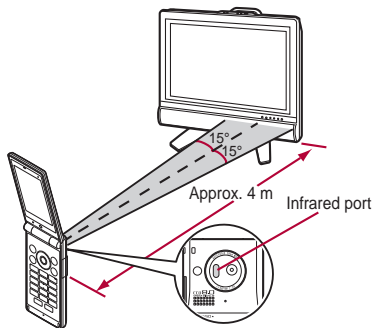

- Actual operational methods will differ with each i-αpli software application.
  - Control devices from a distance of up to approximately 4 m (Distance will vary depending on the device, the ambient brightness and other factors).
- When in the Self mode, the Ir remote control function cannot be used.
  - Depending on the device, operation may not run properly.
  - Remote control operation may not run properly directly under fluorescent lights, near other equipment using infrared signals, or in areas of direct sunlight.


## iC communication

 
 
Use iC communication to send and receive data to and from other FOMA terminals which also support iC communication function.

- During iC communication, the FOMA terminal status is the same as when outside the service area, such that making/receiving calls, i-mode, and data communications are not possible.
- iC communication is not available while a call is in progress or the IC card is locked.

- For an image, i-motion, Melody, PDF, or Decome-Anime Template in the Data box, Sending and receiving all data items is not available. For other than those above, data that can be sent and received or operations when various lock functions are set are same as for Ir communication (☞ P. 346).
- For details on starting iC communication from i-αpli ☞ P. 277

## Precautions for using iC communication function

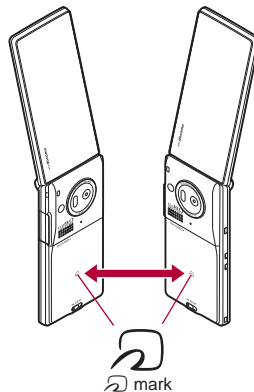










- Use while placing the  mark of receiver's FOMA terminal on that of sender's FOMA terminal as shown.
- Do not move the FOMA terminal until all data are sent and received.
- Sending and receiving data may be difficult depending on the other party's FOMA terminal. In such case, make the clearance between the  mark closer or farther, or move them up/down/left/right alternately.
- During iC communication, FOMA terminal called LED flashes (☞ P. 100).
- Data communication via iC communication is not available while charging.

## Sending and receiving data








- Terminal security code and authentication password entry are required for sending or receiving all data items. The authentication password is a password exclusively for iC communication. Before starting data transfer, the sender and receiver must enter the same user-specified four-digit password.

### Sending data <Send/Send all>

#### Example: Phonebook

- In stand-by, press .
- Select a name   **[Send data]**  **[iC transmission]**.
- Select the sending method.
  - Select **[Send]**.
  - Select **[Send all]**  enter the terminal security code   enter the authentication password .
- Select **[Yes]**.
- Place the  mark on that of the other party's FOMA terminal.


### Receiving data <Receive/Receive all>

- In stand-by, place the  mark on that of the other party's FOMA terminal.
- Select **[Yes]**.
  - When receiving all data items: Select **[Yes]**  enter the terminal security code   enter the same authentication password entered on the sender's FOMA terminal   **[Yes]**.
    - To cancel Receive: While receiving data, press .

## Voice recorder

### Using the FOMA terminal as voice recorder

#### Use the FOMA terminal as a voice recorder (microSD Card is required).

- Save up to 1,000 recordings on the [Multimedia] folder of microSD Card as [Voice only] (no image) i-motion (Actual number varies depending on recording time). Record up to 6 hours per recording.
- When recording is attempted after the 1,000th recording, the message stating that recording is failed appears and Voice recorder ends.
- Record up to approximately 7.7 hours when saving to a 64 MB microSD Card.
- Recording within a distance of approximately 1.5 m is recommended.
- Play recorded voice with i-motion player ( P. 317).


### Recording

- Recording start sound is heard and recording starts. Picture Light flashes during recording.

- In the Custom menu, select **[LifeKit]**  **[Voice recorder]**  .
  - To pause/play: Press .



Voice recorder screen

- Press  to end recording.
  - Recording stops automatically in the following cases.
    - When the remaining time goes to 00:00:00
    - When recording time reaches approximately 6 hours
    - When microSD Card has no available space
- Select **[Save]**.
  - Recorded voice is saved.
  - To play a recorded voice: Select **[Play]**.

# Overseas Use

Outline of international roaming (WORLD WING) . . . . .	406
Available services overseas . . . . .	407
Before use overseas . . . . .	407
Making a call at your country of stay. . . . .	410
Receiving a call overseas . . . . .	411
Setting a search method of telecommunications carrier . . . . . <Network search mode>	411
Setting a telecommunications carrier to preferentially connect to . . . . . <PLMN setting>	412
Displaying a telecommunications carrier during roaming . . . . . <Operator name disp>	412
Activating roaming guidance. . . . . <Roaming guidance>	412
Setting incoming call to reject during roaming . . . . . <Call barring>	413
Using Missed Call Notice function during roaming . . . . . <Missed Call Notice>	413
Using network services during roaming . . . . . <Int'l services>	413

## Outline of international roaming (WORLD WING)

International roaming (WORLD WING) is a service that enables you, using overseas telecommunications carrier's networks, to make calls and use i-mode.

Use this FOMA terminal for voice/Videophone calls, i-mode and SMS with the phone number and mail address used in Japan.

Network services such as Voice Mail and Call Forwarding Services can also be used.

- This service is available in the 3G network service area. In addition, this service is available in countries and regions supporting 3G850MHz. This FOMA terminal cannot be used in the GSM/GPRS network service area.
- By default, the FOMA terminal is set to automatically switch networks (☞ P. 411).
- Refer to the following before using the FOMA terminal overseas.
  - "Mobile Phone User's Guide [International Services]"
  - "Mobile Phone User's Guide [Network Services]"
  - PDF file "海外ご利用ガイド" pre-installed in [My Documents] of Data box
  - DOCOMO "International Services website"

### Country codes of major countries

The following shows "Country code" used when making international calls (☞ P. 60) or setting International dial assist (☞ P. 61).

- For other country codes and details, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO "International Services website".

Country/Region	Code	Country/Region	Code
Australia	61	Maldives	960
Austria	43	Netherlands	31
Belgium	32	New Caledonia	687
Brazil	55	New Zealand	64
Canada	1	Norway	47
China	86	Peru	51
Czech	420	Philippines	63
Egypt	20	Russia	7
Fiji	679	Singapore	65
Finland	358	South Korea	82
France	33	Spain	34
Germany	49	Sweden	46
Greece	30	Switzerland	41
Hong Kong	852	Tahiti	689
Hungary	36	(French Polynesia)	
India	91	Taiwan	886
Indonesia	62	Thailand	66
Italy	39	Turkey	90
Japan	81	U.K.	44
Macau	853	U.S.A.	1
Malaysia	60	Vietnam	84



## Available services overseas

The available communication services overseas are as follows.

Communication service	Explanation	3G
Voice call*1, 2	Make or receive calls in your country of stay or make international calls to Japan or to other countries with the same phone number as used in Japan while abroad.	○
Videophone*1, 2	Make international Videophone calls to users of the specified 3G telecommunications carriers overseas and FOMA users in Japan.	○
i-mode mail	Send or receive i-mode mail overseas with the same address as used in Japan.	○
i-mode*3	Use i-mode overseas.	○
i-Channel*3, 4	Use i-Channel overseas.	○
i-concier*5	Use i-concier overseas.	○
i-Widget*6	Use i-Widget overseas.	○
SMS	Send or receive SMS overseas with the same phone number as used in Japan.	○
GPS position location*7	Use the GPS function to check the present location overseas.	○
Packet transmission by connecting a PC, etc.*8	Use packet transmission overseas.	○

\*1 When the 2in1 is used, calling from Number B is not available overseas.

\*2 When Multi Number is used, calling from Additional Number is not available overseas.

\*3 Overseas use settings for i-mode is required (☎ P. 408).

\*4 i-Channel setting is required. Packet transmission charges are incurred for each i-Channel reception (including Basic channel).

\*5 Overseas use settings for i-concier is required. Packet transmission charges are incurred for each information reception.

Overseas use settings for i-concier can be changed in the following way.

In the Custom menu, select [i-concier] ▶ [設定] ▶ [その他共通設定] ▶ [海外利用設定].

\*6 Setting for i-Widget roaming is required (☎ P. 279). Multiple Widget Appli may attempt transmission when i-Widget screen appears. In such case, packet transmission charges are incurred for each transmission.

\*7 Set the correct date and time in advance. Transmission charges are not incurred when the present location is positioned. However, packet transmission charges are incurred when a map is displayed based on the location information.

\*8 Unable to use 64K data communication by connecting a PC, etc.

- Some services are not available depending on the telecommunications carrier or network. Refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO "International Services website" for information on available countries and regions, and telecommunications carriers.

- Overseas packet transmission charges differ from those in Japan.

- 日英版しゃべって翻訳 for SH (J-E Speech Translation for SH) is available overseas (☎ P. 262).

## Before use overseas

The following items must be checked before departure, at your country of stay, and after homecoming.

### Preparation before departure

Prepare below in Japan before using the FOMA terminal overseas.

#### About contract

- If subscribed to the FOMA service after September 1, 2005, a subscription for "WORLD WING" is not required. However, if a subscription for "WORLD WING" is canceled at or after a subscription for the FOMA service, a subscription for "WORLD WING" is required again.

- If subscribed to the FOMA service before August 31, 2005 but not subscribed to "WORLD WING", a subscription for "WORLD WING" is required. Some payment plans are not available.
- Insert the WORLD WING compatible FOMA card (green/white) to the FOMA terminal (☎P. 42).



### ■ About charging batteries

- Precautions for handling the AC adapter ☎P. 16
- Methods for charging the AC adapter ☎P. 43

### ■ About browsing i-mode sites

To browse i-mode site overseas, the settings for overseas use must be made from iMenu in advance.

i-mode site: Select [iMenu] ▶ [English] ▶ [Options] ▶ [International Settings] ▶ [i-mode services Settings].

- iMenu cannot be displayed by pressing  in the stand-by display overseas. If Set i-mode button is set to [iMenu/Search], the message stating that i-mode menu is displayed appears when  is pressed for the first time overseas. i-mode menu appears from the next time.

### ■ About setting network service

If subscribed to network services, Voice Mail Service, Call Forwarding Service or other services can be used overseas.

- Some network services may not be set or checked depending on overseas telecommunications carrier. In addition, some network services are available only in Japan.
- To use network services overseas, set Remote Control (☎P. 397, P. 414) to "Activate" in advance.

### ■ About inquiries overseas

For lost, stolen, and cost settlement, or malfunction of the FOMA terminal overseas, refer to "Loss or theft FOMA terminal or payment of cumulative cost overseas" or "Failures encountered overseas" on the back of this manual. Note that any call or transmission charges incurred after the FOMA terminal is lost or stolen are charged to the subscriber.

- Add the "International call access codes for major countries (table 1)" or "International prefix numbers for the universal number (table 2)" that is assigned to your country of stay, to the head of your phone number for inquiries.

### International call access codes for major countries (table 1)

The following shows the International call access codes for major countries.

- Communication charges to Japan will apply.

Country/Region	Code	Country/Region	Code
Australia	0011	Monaco	00
Belgium	00	Netherlands	00
Brazil	0021/ 0014	New Zealand	00
		Norway	00
Canada	011	Philippines	00
China	00	Poland	00
Czech	00	Portugal	00
Denmark	00	Russia	810
Finland	00	Singapore	001
France	00	South Korea	001
Germany	00	Spain	00
Greece	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	002
India	00	Thailand	001
Indonesia	001	Turkey	00
Ireland	00	U.A.E.	00
Italy	00	U.K.	00
Luxemburg	00	U.S.A.	011
Macau	00	Vietnam	00
Malaysia	00		

## International prefix numbers for the universal number (table 2)

The following shows the International prefix number for the universal number of each country.

- Communication charges or other charges to your country of stay will apply.
- Communication charges to your country of stay will apply when calling from the mobile phone.

Country/Region	Code	Country/Region	Code
Argentina	00	Luxemburg	00
Australia	0011	Malaysia	00
Austria	00	Netherlands	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Bulgaria	00	Peru	00
Canada	011	Philippines	00
China	00	Portugal	00
Columbia	009	Singapore	001
Denmark	00	South Africa	09
Finland	990	South Korea	001
France	00	Spain	00
Germany	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	00
Ireland	00	Thailand	001
Israel	014	U.K.	00
Italy	00	U.S.A.	011

- Some codes may not be used.
- Note that the universal number may not be used for calls from a mobile phone, payphone or hotel.
- The universal number can be used only for countries listed on table 2.
- Calling from a hotel may cost you extra call charges requested by the hotel (You are responsible for the call charges). Confirm with the hotel before making calls.

## Using at your country of stay

The service is available in the 3G network service area.

The FOMA terminal automatically searches for the network when the power is turned on, and connects to the available telecommunications carrier in your country of stay.

- When Auto time correction (☞ P. 49) is set to [ON], if information with time and time differences is received from overseas telecommunications carrier which is being connected, time and time differences on the FOMA terminal clock are corrected. The correction timing differs depending on the telecommunications carrier.
- Auto time correction may not be available overseas. In such case, correct the time manually (☞ P. 49).
- If the connected telecommunications carrier is changed when Auto time correction is set to [ON], a screen notifying that time difference is adjusted may appear.
- When Operator name display (☞ P. 412) is set to [Display on], the telecommunications carrier connected appears in stand-by.
- When Clock display (☞ P. 93) is set to [ON(Large)], the local time and Japan time appear (excluding regions keeping the same standard time as Japan time). If selecting Down for Set display position, Japan time appears above the local time. If selecting Up for Set display position, Japan time appears under the local time. The local time appears on the sub display.
- Talk time or stand-by time may be reduced to half the normal time depending on the network condition of your country of stay.

## Setting after homecoming

By default, the FOMA terminal is set to automatically search for the network and to be connected to the FOMA network when the power is turned on after homecoming.

- If the Network search mode is set to [Manual], switch to the FOMA network (DOCOMO) manually or change to [Auto].

## Making a call at your country of stay

Make a call from overseas using the international roaming service.

- Even when Notify caller ID of the network service (☎ P. 50) is set to "Send ID", [Unavailable] or [User unset] appears depending on the telecommunications carrier, and the caller ID may not be displayed correctly.

## Making a call outside your country of stay (including Japan)

Make a call from your country of stay to Japan or other countries.

- 1 In stand-by, enter + (press  for 1+ seconds), country code, area code (city code) and other party's phone number.**

- When the area code (city code) begins with 0, omit the 0 when dialing (Include 0 when making a call to some countries or regions such as Italy).




- 2 Press  (Phone)/ (V.phone).**

### ■ Making an international call outside your country of stay using Country code conversion

Set Country code conversion (☎ P. 61) to [ON] and set the country code frequently called to easily make an international call.

- 0 at the beginning of a phone number is automatically converted to the country code set in Country code conversion.





#### Example: Make a call from phonebook

- 1 In stand-by, press  ▶ select the other party.**
- 2 Press  (Phone)/ (V.phone).**
- 3 Select [Call].**
  - To dial a phone number as stored in the phonebook: Select [Original number].

### ■ Making a call to the phone in country saved in Set country code



Save a country code using Set country code (☎ P. 62) to select a country code before making an international call.

- The following operation is available overseas only.

- 1 In stand-by, enter a phone number ▶  ▶ [Add prefix setting] ▶ [International Call].**
- 2 Select the country code ▶ .**
- 3 Press  (Phone)/ (V.phone).**




## Making a call in your country of stay

Make a domestic call at your country of stay in the same way as you do in Japan.

- 1 In stand-by, enter a phone number.**
- 2 Press  (Phone)/.**
  - Always dial the area code (city code), even when the number is in the same area.
  - When making a domestic call at your country of stay using the phonebook, select [Original number] in step 3 of "Making an international call outside your country of stay using Country code conversion" on P. 410.

## Making a call to a WORLD WING subscriber overseas

When making a call to a "WORLD WING" subscriber overseas, make an international call to Japan regardless of your country of stay.

- 1 In stand-by, enter + (press  for 1+ seconds), country code 81 (Japan), the other party's mobile phone number excluding 0.**
- 2 Press  (Phone)/.**

## Receiving a call overseas

Receive a call overseas in the same way as you do in Japan.

### 1 Press to receive an incoming call.

- Speak to the caller.

- Even when a caller tried to notify of caller ID, it might not be notified depending on the used telecommunications carrier.
- When a call is received during international roaming, the call is forwarded from Japan. Call charges to Japan are incurred by the caller and receiving charges by the receiver.

## Having calls to your FOMA terminal

### ■ Having calls made to your FOMA terminal from Japan

To receive an international call from Japan, have your phone number dialed just as a domestic call in Japan.

090 (or 080)-XXXX-XXXX

- Calling from Received calls may not be available since the phone number may not be displayed correctly.


### ■ Having calls made to your FOMA terminal from countries other than Japan

Have the international call access code and **81** (Japan) added to the beginning of your phone number, and **0** excluded as an international call to Japan regardless of your country of stay.

International call access code of the country of the caller-81-90 (or 80)-XXXX-XXXX



## Network search mode

### Setting a search method of telecommunications carrier

- Set to manually select a telecommunications carrier.
- Re-search a network to set another telecommunications carrier.
- Check that the Network search mode is set to [Auto] when  appears even after homecoming.
- If telecommunications carrier is selected with [Manual] set overseas, manually set to the FOMA network (DOCOMO) again or change to [Auto] after homecoming.

### 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode].

### 2 Select the setting.

- ◆ Select [Auto] ▶ [Yes].
  - When [Auto] is set: Select [Auto].
- ◆ Select [Manual] ▶ select a telecommunications carrier ▶ .
- ◆ Select [Network re-search].
  - The host network is changed automatically if the Network search mode is set to [Auto]. If set to [Manual], select a telecommunications carrier and press .

## Checking available communication services











### <In-area status>

Check the status whether making a call, data transmission or packet transmission is available.

### 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [In-area status] ▶ [Agree].


## Setting a telecommunications carrier to preferentially connect to

Specify the priority order of telecommunications carriers connected to when the Network search mode is set to [Auto]. Save up to 20.

- In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode] ▶ [PLMN setting].
  - To check the saved telecommunications carrier's detailed information, select the telecommunications carrier.
- Select the number of the priority order ▶ .
- Select the saving method.
  - Select [PLMN manual select] ▶ enter a country code (MCC) ▶  ▶ enter a network code (MNC) ▶ .
  - Select [UPLMN by list] ▶ select a telecommunications carrier ▶ .
    - To search a telecommunications carrier from country name: Select [UPLMN by list] ▶  ▶ select a country name ▶  ▶ select a telecommunications carrier ▶ .
    - To check the detailed information of the telecommunications carrier: Select [UPLMN by list] ▶ select the telecommunications carrier ▶ .
  - Select [Set VPLMN to PLMN].
    - Save the telecommunications carrier currently connected to.
  - Select [Change priority] ▶ select a destination ▶ .
  - Select [Delete] ▶ [Delete one].
  - Select [Delete] ▶ [Delete all] ▶ enter the terminal security code ▶ .
- Select [Yes].

## Displaying a telecommunications carrier during roaming

Set whether to display a telecommunications carrier name currently connected to in stand-by during international roaming.

- In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Operator name disp].
- Select the setting ▶  ▶ [Yes].


### When displaying a telecommunications carrier

Telecommunications carrier name



## Activating roaming guidance

Set whether to play the guidance stating that international roaming is activated when a call is received during international roaming.

- Make this setting while still in Japan.
- In the Custom menu, select [Settings] ▶ [Other NW Services] ▶ [Roaming guidance].
  - Select an item ▶ .
  - Select [Yes].

## Setting incoming call to reject during roaming

Set the FOMA terminal to reject calls during roaming. Select whether to bar all incoming calls or only the Videophone calls.

Bar all incoming	All incoming calls are barred.
Bar V.phone/64K	Only the Videophone calls are barred.

- Depending on the overseas telecommunications carrier, the setting cannot be made.
- Unable to use 64K data communication overseas.

**1** In the Custom menu, select **[Settings]** ▶ **[Phone settings]** ▶ **[Other settings]** ▶ **[International Roam.]** ▶ **[Call barring]**.

**2** Select an item.

- ◆ Select **[Activate]** ▶ **[Yes]** ▶ select the barring method ▶ enter the network security code ▶ .
- ◆ Select **[Deactivate]** ▶ **[Yes]** ▶ enter the network security code ▶ .
- ◆ Select **[Check setting]**.

## Using Missed Call Notice function during roaming

When the FOMA terminal is outside the service area, turned off, or a received call cannot be answered during international roaming, the information of the call (received date and time or caller ID) is notified with SMS.

- For details on setting at your country of stay P. 414

**1** In the Custom menu, select **[Settings]** ▶ **[Phone settings]** ▶ **[Other settings]** ▶ **[International Roam.]** ▶ **[Missed Call Notice]**.

**2** Select an item.

- ◆ Select **[Activate]** ▶ **[Yes]**.
- ◆ Select **[Deactivate]** ▶ **[Yes]**.
- ◆ Select **[Check setting]**.


## Using network services during roaming

Use network services such as Voice Mail and Call Forwarding Services from overseas.

- Depending on the overseas telecommunications carrier, the setting cannot be made.
- Voice Mail and Call Forwarding Services subscription are required to use Voice Mail (Int.) and Call Forward (Int.).
- To use network services overseas, set Remote Control ( P. 397, P. 414) to "Activate" in advance.
- If operated from overseas, international call charges for your country of stay are incurred.


**Operating Voice Mail Service in country you stay**

&lt;Voice Mail(Int.)&gt;

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.].
- 2 Select [Voice Mail(Int.)] ▶ select an item of Voice Mail Service ▶ .
- 3 Select [Yes] ▶ operate according to the voice guidance.

**Operating Call Forwarding Service in country you stay**

&lt;Call Forward (Int.)&gt;

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.].
- 2 Select [Call Forward (Int.)] ▶ select an item of Call Forwarding Service ▶ .
- 3 Select [Yes] ▶ operate according to the voice guidance.

**Operating roaming guidance in country you stay**

&lt;Roam. guidance(Int.)&gt;

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.].
- 2 Select [Roam. guidance(Int.)].
- 3 Select [Yes] ▶ operate according to the voice guidance.

**Setting remote control in country you stay**

&lt;Remote access (Int.)&gt;

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.].
- 2 Select [Remote access (Int.)].
- 3 Select [Yes] ▶ operate according to the voice guidance.

**Operating Caller ID Request Service in country you stay**

&lt;Caller ID req (Int.)&gt;

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.].
- 2 Select [Caller ID req (Int.)].
- 3 Select [Yes] ▶ operate according to the voice guidance.

**Setting Missed Call Notice setting in country you stay**

&lt;MissedCallNoticeInt.&gt;

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.].
- 2 Select [MissedCallNoticeInt.].
- 3 Select [Yes] ▶ operate according to the voice guidance.



## Introduction of options and related devices

Combine the FOMA terminal with various optional accessories (sold separately) for expanded personal and business use. Some products may not be available in certain areas. Contact a docomo Shop or retailer for details. Refer to the user's guide of each product for more details.

- FOMA AC Adapter 01\*1/02\*1
- Battery Pack SH20
- Back Cover SH30
- Desktop Holder SH25
- Earphone Terminal P001\*2
- Flat-plug Stereo Earphone Set P01\*3
- Flat-plug Earphone/Microphone with Switch P01\*3/P02\*3
- Stereo Earphone Set P001\*2
- Earphone/Microphone with Switch P001\*2/P002\*2
- Earphone/Microphone 01
- Stereo Earphone Set 01
- Earphone Plug Adapter P001\*3
- Earphone Plug Adapter for External connector terminal 01
- Earphone Plug Adapter 01
- FOMA USB Cable\*4
- FOMA AC Adapter 01 for Global use\*1
- FOMA DC Adapter 01/02
- FOMA Indoor Booster Antenna\*5
- In-Car Hands-Free Kit 01\*6
- FOMA In-Car Hands-Free Cable 01
- In-Car Holder 01\*7
- FOMA Dry Battery Adapter 01
- Carry Case S 01
- Bone conduction microphone/receiver 01\*3
- FOMA USB Cable with Charge Function 02\*4
- FOMA Portable Charging Adapter 01
- FOMA Indoor Booster Antenna (Stand Type)\*5

\*1 Refer to P. 43 for details on charging with an AC adapter.

\*2 Connect Earphone Plug Adapter for External connector terminal 01 and Earphone Plug Adapter to use these options and related devices.

\*3 Connect Earphone Plug Adapter for External connector terminal 01 to use these options and related devices.

\*4 The use of USB HUB may not work correctly.

\*5 For use only in Japan.

\*6 FOMA In-Car Hands-Free Cable 01 is required to use/charge SH-05A.

\*7 Activate Side key lock to use the In-Car Holder 01.

## Interfacing to external devices

Play moving pictures saved on microSD Cards on the FOMA terminal by using supported external devices.\* microSD Cards are sold separately. Purchase microSD Cards at home electronics shops (P. 329).

For details on compatible devices, refer to <http://k-tai.sharp.co.jp/support/d/sh-05a/>. Or, contact the number below.

- Play i-motion created on external devices (including music data in AAC format) on the FOMA terminal (P. 247).

\* Some moving pictures cannot be played depending on the file format or the type of external device.

Sharp Data Communication Support Center

TEL: 03-5396-2351

Hours: 10:00 A.M. to 12:00 noon, 1:00 P.M. to 5:00 P.M.,  
Monday through Friday  
(Closed on weekends, national holidays, and company holidays)

- Check the phone number carefully before dialing.

## About moving picture player software

QuickTime™ Player (Free) ver. 6.4 or later (or ver. 6.3+3GPP) provided by Apple Computer, Inc. is required to play moving pictures on a PC.

QuickTime™ Player can be downloaded from the following web page.

<http://www.apple.com/jp/quicktime/download/>

- To download, a PC connected to the Internet is required. Additional transmission fees are charged for downloading.
- Refer to the Apple Computer, Inc. web page for details on the operating environment, downloading, and usage instructions.

## Specific Absorption Rate (SAR) of mobile phone

**This model phone SH-05A meets the MIC's\* technical regulation for exposure to radio waves.**

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)\*\* averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP\*\*\*.

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone is 0.680 W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the following websites:

---

World Health Organization (WHO)

<http://www.who.int/peh-emf/>

ICNIRP

<http://www.icnirp.de/>

MIC

<http://www.tele.soumu.go.jp/e/ele/body/index.htm>

TELEC

[http://www.telec.or.jp/ENG/Index\\_e.htm](http://www.telec.or.jp/ENG/Index_e.htm)

NTT DOCOMO

<http://www.nttdocomo.co.jp/english/product/>

SHARP Corporation

<http://www.sharp.co.jp/products/menu/phone/cellular/sar/index.html>

\* Ministry of Internal Affairs and Communications

\*\* The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

\*\*\* International Commission on Non-Ionizing Radiation Protection

---

### European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.670 W/kg\*.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head.

\* The tests are carried out in accordance with international guidelines for testing.

## Declaration of Conformity

# CE 0168

Hereby, Sharp Telecommunications of Europe Ltd, declares that this SH-05A is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:  
<http://www.sharp.co.jp/k-tal/>

## FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.

3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

## FCC RF Exposure Information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.663 W/kg and when worn on the body, as described in this user guide, is 0.735 W/kg. Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID APYHRO00094.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at <http://www.phonefacts.net>.

## Export Administration Regulations

The Japan Export Administration Regulations (“Foreign Exchange and International Trade Law” and its related laws) will be applied to this product and its accessories under certain conditions. The Export Administration Regulations are also applied. To export or reexport this terminal and its accessories, conduct all legally required procedures at your own risk and expense. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the US Department of Commerce.

## Intellectual property rights

### Copyrights and rights of portrait

- Data with third party copyrights such as text, images, music and software that is downloaded or acquired via Internet web pages, shot by the FOMA terminal, or acquired from TV or other video cannot be duplicated, altered or publicly transmitted without rightful party’s consent. Only duplicating, quoting, etc. for personal use is permitted under copyright laws.  
Even if for personal use, filming and recording may be prohibited for demonstrations, performances and exhibitions.  
Also, shooting another’s image or posting another’s image on Internet web pages without their consent may constitute a violation of one’s right to their image.

### Registered trademarks and trademarks




- “FOMA”, “mova”, “ToruCa”, “mopera”, “mopera U”, “FirstPass”, “Chara-den”, “Deco-mail”, “Chaku-motion”, “i-motion mail”, “i-appli”, “i-appliDX”, “i-motion”, “i-mode”, “i-Channel”, “iD”, “DCMX”, “WORLD WING”, “Public mode”, “DoPa”, “WORLD CALL”, “Dual Network”, “visualnet”, “V-live”, “Security Scan”, “musea”, “sigmarion”, “OFFICEED”, “IMCS”, “2in1”, “Chokkan Game”, “docomo STYLE series”, the “i-mode” logo, the “FOMA” logo, the “i-appli” logo, the “DCMX” logo, the “iD” logo, the “HIGH-SPEED” logo are trademarks or registered trademarks of NTT DOCOMO, INC.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.

- **symbian** This product includes software licensed from Symbian Software Ltd.  
Symbian, Symbian OS and other associated Symbian marks are all trademarks of Symbian Software Ltd.  
© 1998-2009 Symbian Software Ltd. All rights reserved.
- Catch Phone (Call Waiting) is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Multitask is a registered trademark of NEC Corporation.
- This product is equipped with NetFront Browser, NetFront Sync Client and NetFront Browser DTW Profile Wireless Edition by ACCESS Co., Ltd. for an internet browser or other application software.
- This product adopts Media: specifications of ACCESS CO., Ltd. for activating broadcasting contents.  
Copyright © 1996-2009 ACCESS CO., LTD.
- ACCESS, NetFront and Media: are trademarks or registered trademarks of ACCESS Co., Ltd. in the United States, Japan and other countries.

**ACCESS™ NetFront®**

- Microsoft®, Windows®, Windows Vista® and Windows Media® are trademarks or registered trademarks of Microsoft Corporation in the U.S.A. and other countries.
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S.A. and other countries.
- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- QR code is a registered trademark of Denso Wave Inc.
- microSDHC Logo is a trademark.
- Powered by JBlend™ Copyright 2002-2009 Aplix Corporation. All rights reserved.  
JBlend and JBlend related trademarks are registered trademarks or trademarks of Aplix Corporation in Japan and other countries.



- "AXIS Font" is a trademark of AXIS Inc., and the "AXIS" font is a font developed by Type Project Inc.
- This handset features LCFONT, developed by Sharp Corporation, to make the LCD easier to view and read. LCフォント/LCFONT and  are registered trademarks of Sharp Corporation.
- DynaFont is a registered trademark of DynaComware Taiwan Inc.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the U.S.A. and other countries.
- Gガイド, G-GUIDE, Gガイドモバイル, G-GUIDE MOBILE and the G-GUIDE related logos are registered trademarks of Gemstar-TV Guide International, Inc. and/or its affiliates in Japan. 
- Google and Google Map for Mobile are trademarks of Google Inc.
- IrSimple™, IrSS™ or IrSimpleShot™ are trademarks of Infrared Data Association®.
- F e l i C a , which uses non-contact IC card technology, was created by Sony Corporation.
- F e l i C a is a registered trademark of Sony Corporation.
-  is a registered trademark of FeliCa Networks, Inc.
- Napster is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- FlashFX® Pro™ is a trademark or registered trademark of the Datalight, Inc. in the US.  
(U.S. Patent Office 5,860,082/6,260,156)
- PhotoSolid®, FaceSolid®, FrameSolid®, PhotoScouter™, ImageSurf™, and TrackSolid™ are the trademarks or the registered trademarks of Morpho, Inc.
- 「Chizu Talk」 is a trademark of ZENRIN DataCom CO.,LTD.
- "AQUOS", "VeilView", "Egao focus shutter", "Furimuki shutter", "Chase focus", "Motiondeco", "Shotdeco", "Wakeup TV", and "Quick Stand-by Display Setting" are trademarks or registered trademarks of Sharp Corporation.
- All other company names and product names are trademarks or registered trademarks of the respective companies.

## Others

- Under the MPEG-4 Visual Patent Portfolio License, customers have licensed permission for the following use of this product to engage in non-profit personal use. Other uses are not permitted.
  - Encoding MPEG-4 standard video (henceforth referred to as MPEG-4 video).
  - Decoding an MPEG-4 video that a customer not engaged in personal commercial activities has encoded.
  - Decoding an MPEG-4 video obtained from a licensed provider.For details on other intended uses, contact MPEG LA, LLC.
- This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard. An additional license and payment of royalties are necessary in the following cases.
  - Data stored or replicated in physical media which is paid for on a title by title basis.
  - Data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use.Such additional license may be obtained from MPEG LA, LLC. Contact MPEG LA, LLC for additional details.
- This product is licensed under the AVC patent portfolio license for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard (henceforth referred to as AVC video) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.  
See [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

- This product is licensed under the VC-1 Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the VC-1 standard (henceforth referred to as VC-1 video) and/or (ii) decode VC-1 video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide VC-1 video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.  
See [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)
- Contains Adobe® Flash® Lite™ and Adobe Reader® LE technology by Adobe Systems Incorporated  
Adobe Flash Lite Copyright © 2003-2008 Adobe System Incorporated. All rights reserved.  
Adobe Reader LE Copyright © 1993-2007 Adobe Systems Incorporated. All rights reserved.  
Adobe, Adobe Reader, Flash, and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- This product includes modules developed by the Independent JPEG Group.
- This product uses the GestureTek technology.  
Copyright © 2006-2009, GestureTek, Inc. All Rights Reserved.
- Content owners use Windows Media digital rights management (WMDRM) technology to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected contents. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.
- CP8 PATENT



- This manual refers to each OS (Japanese version) as follows.
  - Windows Vista is an abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, Ultimate).
  - Windows XP is an abbreviation of Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.
  - Windows 2000 is an abbreviation of Microsoft® Windows® 2000 Professional operating system.
- Internet dictionary embedded in this product uses the BSD license.  
Copyright © 2002,2003, Stefan Hausteine, Oberhausen, Rhld., Germany  
All rights reserved
  - Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
  - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.  
Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
  - Neither the name of the <ORGANIZATION> nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

 
## Quick Manual

### How to use Quick Manual

Remove the Quick Manual attached to the end of this manual by cutting along the perforations and fold it as shown below.  
Carry the Quick Manual "Overseas Use" when the mobile phone is used with the International Roaming (WORLD WING) overseas.

#### ■ Folding Quick Manual

- Be careful of injuries when cutting out the Quick Manual.

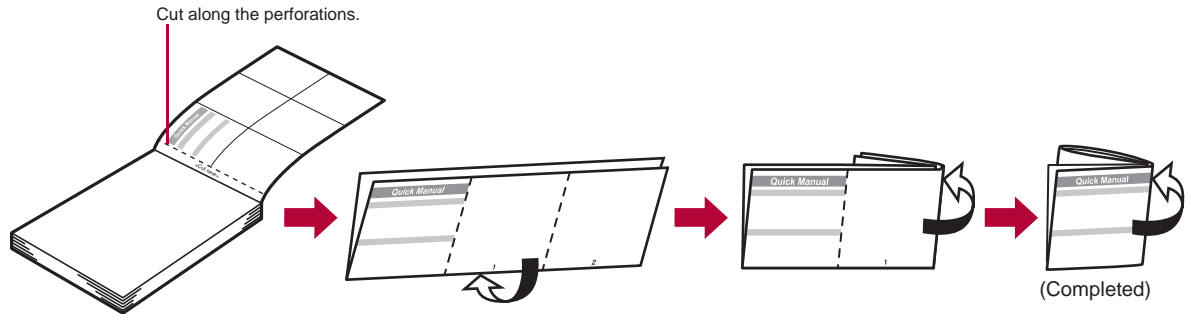

This manual is produced using recyclable material. Please recycle when no longer needed.



Quick Manual

Registration/Contacts

General Inquiries <docomo Information Center>

☎ 0120-005-250 (toll free)

※ Service available in: English, Portuguese, Chinese, Spanish, Korean.  
 ※ Available from mobile phones and PHSs.  
 From DOCOMO mobile phones  
 (In Japanese only)

ℹ (No prefix) 151 (toll free)

※ Unavailable from land-line phones, etc.  
 From land-line phones  
 (In Japanese only)

☎ 0120-800-000 (toll free)

※ Available from mobile phones and PHSs.  
 • Please confirm the phone number before you dial.

If you have problems with your FOMA

From DOCOMO mobile phones  
 (In Japanese only)

ℹ (No prefix) 113 (toll free)

※ Unavailable from land-line phones, etc.  
 From land-line phones  
 (In Japanese only)

☎ 0120-800-000 (toll free)

※ Available from mobile phones and PHSs.  
 • Please confirm the phone number before you dial.

Adding entries to phonebook  
 (FOMA terminal handset)

- 1 In stand-by, press [☎] (for 1+ seconds) ▶ [Phone].
- 2 Enter a name ▶ [☎] ▶ [☎] ▶ enter a phone number ▶ [☎] ▶ select a phone type icon ▶ [☎] ▶ enter a mail address ▶ [☎] ▶ select a mail address type icon ▶ [☎] ▶ [☎] ▶ [☎].

Other save items

👤 : Group

🏢 : Company/school

📖 : Company/school (Reading)

🏠 : Department

🏠 : Title

📮 : Postal code

📮 : Postal address

📍 : Location info

📅 : Birthday

📝 : Memo

🔒 : Secret

🔒 : Secret code

🎵 : Select ring tone

🎵 : Mail ring tone

🌈 : Called LED color

🌈 : Called LED pattern

🌈 : Mail/Message LED color

🌈 : Mail LED pattern

📷 : Picture call set

📷 : Substitute image

Adding entries to phonebook from  
 Redials/Received calls

- 1 In stand-by, press [☎] (☎)/[☎] (☎) ▶ select a phone number ▶ [☎] ▶ [Add to phonebook] ▶ [Save new to phone] ▶ add to the phonebook.

Editing phonebook entries

- 1 In stand-by, press [☎] ▶ select a name ▶ [☎] ▶ [Edit data] ▶ [Edit] ▶ select an item ▶ [☎] ▶ edit.

Text input

Changing input mode

- 1 In the text input screen, press [☎] ▶ select the input mode.

Switching upper/lower case

- 1 Enter a character ▶ [☎].

Deleting text

- 1 Move the cursor to the text and press [☎].
  - To delete all text: At the end of the message, press [☎] (for 1+ seconds).

Using phrases

- 1 In the text input screen, press [☎] (for 1+ seconds) ▶ select a phrase ▶ [☎] ▶ confirm the phrase ▶ [☎].

Entering pictograms/symbols

- 1 In the text input screen, press [☎].
  - To switch between pictogram and Deco-mail pictogram: Press [☎].
  - To switch between single- and double-byte symbols: Press [☎].
- 2 Select a pictogram/symbol ▶ [☎].

Entering emoticons

- 1 In the text input screen, press [☎] (for 1+ seconds) ▶ select an emoticon ▶ [☎].

 
Cutting/Copying/Pasting text

- 1 In the text input screen, move the cursor to the start position ▶ [☎] ▶ [Copy]/[Cut(Hold☎)] ▶ [☎].
- 2 Move the cursor to the end position ▶ [☎].
- 3 Move the cursor to the paste position ▶ [☎] (for 1+ seconds).

Text input example

Ex.) 今日のテニス3時食

- 1 In the text input screen, press [☎] (twice) ▶ [☎] ▶ [☎].
  - As each hiragana character is entered, conversion candidates appear and they can be selected.

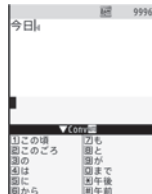

- 2 Press **[0]**.
- 3 Press **[4][5][3]** **[テニス]**.
  - Use **[0]** for One-touch conversion.
- 4 Press **[5]** (five times) **[3]**.
  - Press **[5]** (five times) for single-byte numeric mode.
- 5 Press **[5]** (twice) **[3]** (twice) **[X]** **[0]** **[時]**.
  - Use **[X]** for dakuten mark.
- 6 Press **[1]** **[時]**.



-6-

### Changing font (font style)

- 1 In the Custom menu, select [Settings] **[Disp/LED/Power saver]** **[Font style]** **[Font style setting]** select the font **[0]**.

### Changing font size

- 1 In the Custom menu, select [Settings] **[Disp/LED/Power saver]** **[Font style]** **[Font size setting]** **[Individual setting]** select the [Input field] **[0]** select the font size **[0]** **[Yes]**.
  - To change collectively: In stand-by, press **[5]** (for 1+ seconds).

-7-

### Camera

#### Shooting still pictures

- 1 In stand-by, press **[0]** **[0]** **[0]**.

#### Shooting moving pictures

- 1 In the Custom menu, select [Camera] **[Shoot movie]** **[0]** **[0]** **[Save]**.

#### Displaying still pictures

- 1 In the Custom menu, select [Data box] **[My picture]** select a still picture **[0]**.

#### Playing moving pictures

- 1 In the Custom menu, select [Data box] **[i-motion/Movie]** select a moving picture **[0]**.

-8-

### Watching 1Seg

#### Performing Automatic channel setting

- 1 In the Custom menu, select [1Seg] **[Channel setting]**.
- 2 Select the number to save **[0]** **[Auto channel set]** **[Yes]**.
- 3 Select an area **[0]** select a prefecture/district **[0]** **[Yes]** **[Yes]**.

#### Selecting a channel list

- 1 In the Custom menu, select [1Seg] **[Channel setting]** select a channel list **[0]**.

#### Watching 1Seg

- 1 In stand-by, press **[0]** (for 1+ seconds).
  - To record a video of 1Seg programs: While watching 1Seg, press **[1]** (for 1+ seconds) **[record]** **[1]**.
  - To record 1Seg programs as a still picture: While watching 1Seg, press **[1]**.

-9-

### Watching videos

- 1 In the Custom menu, select [Data box] **[1Seg]**.
- 2 Select the [Video] folder select a video **[0]**.

### Music playback

#### Using MUSIC Player

- 1 In the Custom menu, select [Data box] **[MUSIC]** select music data **[0]**.

#### Key operations for MUSIC Player

 
To pause/play	<b>[0]</b>
To stop	<b>[1]</b>
To adjust the volume	<b>[2]</b>
To play previous song/return to the beginning of song	<b>[3]</b>
To play next song	<b>[4]</b>
To end MUSIC Player	<b>[5]</b> <b>[Yes]</b>

-10-

### Mail

#### Composing and sending i-mode mail

- 1 In stand-by, press **[1]** (for 1+ seconds) **[0]** select the [To] field **[0]** select the input method.
  - ◆ Select [Search phonebook] select a recipient **[0]**.
  - ◆ Select [Sent messages] select a recipient **[0]**.
  - ◆ Select [Rcvd messages] select a recipient **[0]**.
  - ◆ Select [Mail members] select a mail member **[0]**.
  - ◆ Select [Blog/SNS] select a posting site **[1]**.
  - ◆ Select [Direct input] enter an address **[0]**.
- 2 Select the [Sub] field **[0]** enter a subject **[0]** **[Msg]** enter the message **[0]** **[1]**.

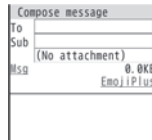

-11-

### Sending Deco-mail

- In the text input screen, press [Decorate mail] ▶ select a decoration type ▶ specify decoration ▶ input text ▶ [i].

### Attaching a file

- In the compose message screen, select the attachment field (No attachment) ▶ select the file to attach.
  - Select [Image] ▶ select an image ▶ [i].
  - Select [Melody] ▶ select a melody ▶ [i].
  - Select [i-motion] ▶ select i-motion ▶ [i].
  - Select [ToruCa] ▶ select a ToruCa ▶ [i].
  - Select [PDF] ▶ select a PDF ▶ [i].
  - Select [Phonebook] ▶ select a save destination ▶ select a name ▶ [i].
  - Select [Schedule] ▶ select a save destination ▶ (i) ▶ select a day ▶ (i) ▶ select a schedule ▶ [i].

\* No operation is needed if [microSD] is selected as the save destination.

-12-

- Select [Bookmark] ▶ select a save destination ▶ select a bookmark ▶ [i].
- Select [Other] ▶ select a file ▶ [i].
- Select [Start cam (still)] ▶ [i].
- Select [Start cam (movie)] ▶ [i] ▶ [Save].

### Composing and sending SMS

- In stand-by, press [Compose SMS] ▶ select the [To] field ▶ [Direct input] ▶ enter an address ▶ [Msg] ▶ enter the message ▶ [i].

### Receiving mail automatically

- Mail is automatically received.
- Select [Mail] ▶ select the mail ▶ [i].

### Checking new i-mode mail

- In stand-by, press [Check new messages].
  - SMS: Press [Check new SMS].

-13-

### Replying to i-mode mail

- In the received mail details screen, press [Reply/Forward].
- Select the reply method ▶ [i].
- Compose and send a mail.

### Forwarding i-mode mail

- In the received mail details screen, press [Reply/Forward] ▶ [Forward].
- Enter an address and send a mail.

-14-

### Menu list

#### Switching between the Custom menu/Basic menu

- In the Custom menu/Basic menu, press [i].

#### Recalling a function number

- In the Basic menu, enter a function number.

1 Snd/Vibrator/Manner	
1 Select volume	Received call volume, phone ring vol, Mail ring vol, Key sound, Standby i-motion, Charge start sound, Charge end sound, Timer sound, GPS volume
2 Select sound	Select ring tone, Select mail tone, Shutter sound, Timer sound, GPS tone
3 Vibrator	Vibration mode, Mail vibration, GPS vibrator
4 Manner mode	ON (Normal, Silent, Original), OFF
5 Headset setting	

-15-

#### 1 Snd/Vibrator/Manner

6 Ring time setting	Mail ring time set, GPS ring time set
7 Set mute ring time	
8 Hold/On hold tone	Set on hold tone, Set hold tone
9 Sound playback	Melody stereo fx, Melody equalizer, Pref playback sound

-16-

#### 2 Disp/LED/Power saver

1 Set screen	Stand-by display, Clock display, Calendar display, Stand-by memo disp, Sub Caller ID disp, Sub Clock display, Sub while charging
2 Font style	Font style setting, Font size setting
3 Themes	Kisekae Tool, Call/Rcv display, Send/Rcv display, Dial image set, Animate notices, Signal/batt/s clock, Machi-chara, Color theme setting
4 LED settings	Called LED, Mail LED, Notice LED, In-call LED, Alarm/Timer LED, IC card LED, Open/close LED, GPS LED
5 Display img quality	Vibrant image mode, Control by scene quality

-17-

②Disp/LED/Power saver	
⑥Light/Power saver	Norm (auto bright), Norm (fixed bright), Eco mode (Pwr saver), Original Eco mode
⑦VeilView	Linked manner, Display pattern, Density
⑧Menu priority	

③General settings	
①Check status	Own number, Check memory, Check settings
②Text input setting	User dictionary, Dwnld dictionary, Edit phrase, Clear memory terms, Input method
③Auto power ON/OFF	Auto power ON, Auto power OFF, Link alarm/power ON
④Date settings	
⑤Select language	
⑥USB mode setting	

-18-

③General settings	
⑦Scanning function	Update, Set auto-update, Set scan, Version
⑧Software update	
⑨Reset settings	

④NW Services	
①Voice Mail	Check messages, Play Messages, Activate VoiceMail, Set ring time, Deactivate VoiceMail, Check setting, Voice Mail setting, Notification setting, Notification, V.phone Voice Mail
②Call waiting	Activate, Deactivate, Check setting

-19-

④NW Services	
③Call Forwarding	Activate, Deactivate, Register number, If FWD number busy, Check setting
④Nuis. call blocking	Register caller, Register selected No, Delete all entries, Delete last entry, Check No of entries
⑤Notify caller ID	Check setting, Activate/Deactivate
⑥Caller ID request	Activate, Deactivate, Check setting
⑦Talk time/cost	
⑧2in1 setting	Mode switching, Phonebook 2in1 set, Stand-by display, Set call/receive No., 2in1 function OFF, Receive avoidance
⑨In-call arrival act	Set arrival act, Arrival Call Act

-20-

⑤Other NW Services	
①Remote Control	Activate, Deactivate, Check setting
②Dual network	Switching, Check setting
③English guidance	Guidance setting, Check setting
④Service Numbers	ドコモ故障問合せ, ドコモ総合案内・受付
⑤Additional service	USSD, Reply message
⑥Multi number	Set multi number, Check setting, Number setting
⑦Chaku-moji	Create message, Message display
⑧Roaming guidance	Activate, Deactivate, Check setting

-21-

⑤Phone settings	
①In-call settings	Noise reduction, Reconnect signal, Quality alarm
②Headset sw to call	
③Incoming settings	Any key answer, Auto answer setting, Melody Call setting
④Videophone set	Redial voice call, Set sending image, Display setting, Subscreen position, Visual preference, Notify switch mode, Hands-free V.phone, V.phone while packet
⑤Record message	Record message, Answering duration, Reply message, V.phone reply image
⑥Set when folded	
⑦Self mode	

-22-

⑤Phone settings	
⑥Other settings	Int'l prefix, Sub address, Int'l dial assist, International Roam., In-area status

-23-

7 Security	
1 Secret mode	
2 UIM Settings	PIN1 code input set, Change PIN1 code, Change PIN2 code
3 Accept/Reject calls	Accept calls, Reject calls, Reject unknown, User unset, Reject payphone, Reject not support
4 Show call/ received	Show rcvd calls, Show redial
5 Show sent/ received	Show sent messages, Show rcvd messages
6 Lock settings	All lock, Keypad dial lock, Function lock, Multi lock set, IC card lock, Multi lock auto-set
7 Change security code	
8 Delete all data	Delete user data, Del secret data

-24-

8 i-concier settings	
1 Incoming settings	Select volume, Select sound, Vibrator, Ring time setting, LED setting
2 Information display	
9 Battery	
1 Battery level	
2 Battery icon	
3 Icon% temp display	
Other settings	
0 Own number	
8 Initial setting	

-25-

Other functions	
Manner mode enable/disable	⏏ (for 1+ seconds)
Public mode (Drive mode) activate/deactivate	⏏ (for 1+ seconds)
Display the Lock selection	⦿ (for 1+ seconds)
Show i-Channel list	CLB (ch)
Show iMenu	i
Show i-appli software list screen	i (P) (for 1+ seconds)
Activate Quick search	CL
Activate Multi Assistant (Multitask)	CL while using a function
Display Shortcut menu	⌵
Display i-Widget screen	⌵
Display Received messages history	⌵ (for 1+ seconds)
Display Sent messages history	⌵ (for 1+ seconds)
VeilView ON/OFF	CL (for 1+ seconds)
Position location	MAP (for 1+ seconds)

-26-

### Network services

※ When the confirmation screen appears, select [Yes].

#### Voice Mail Service

Voice Mail Service is a paid option (monthly fees apply) that requires subscription.

- In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Voice Mail].**
- Select [Activate VoiceMail] ▶ [Activate VoiceMail].**
  - To deactivate: Select [Deactivate VoiceMail].
  - To play messages: Select [Play Messages] ▶ [Play(voice call)]/[Play(videophone)].
  - To check messages: Select [Check messages].

-27-

### Call Waiting

Call Waiting is a paid option (monthly fees apply) that requires subscription.

- In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Call waiting].**
- Select [Activate].**
  - To deactivate: Select [Deactivate].
  - To check settings: Select [Check setting].

### Call Forwarding Service

Call Forwarding Service is a free option (no monthly fees) that requires subscription.

- In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Call Forwarding].**
- Select [Activate] ▶ [Activate].**
  - To deactivate: Select [Deactivate].
  - To check settings: Select [Check setting].

-28-

### Caller ID Request Service

Subscription is not required (no monthly fees).


- In the Custom menu, select [Settings] ▶ [NW Services] ▶ [Caller ID request].**
- Select [Activate].**
  - To deactivate: Select [Deactivate].
  - To check settings: Select [Check setting].

-29-

## Icon list


- Icons are shown in the order of main display and sub display.
 
### Main display

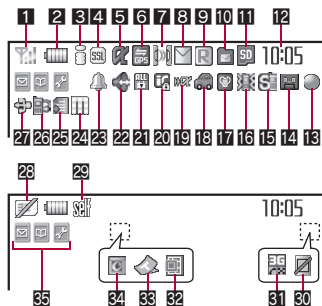

-30-

### Sub display

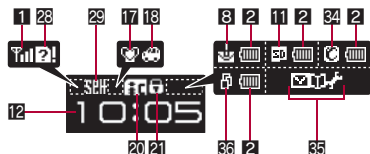 

-31-

1		Signal status
2		Battery level
3		i-mode/Full Browser
4		SSL/TLS
5		i-appli
6		GPS
7		Ir communication/External device
8		i-mode mail/SMS/Area Mail received
9		Message R/F received
10		Storage status of i-mode center
11	  	microSD Card is inserted microSD Card is being used microSD Card cannot be recognized
12		Clock display
18		1Seg being recorded

-32-

14		Record message
15		Silent
16		Vibrator
17		Manner mode
18		Public mode (Drive mode)
19		i-appli call
20		IC card lock
21		Restriction
22		Hands-free in progress
23		Alarm
24		Music&Video Channel program reservation
25		i-mode mail send reservation
26		Earphone/Microphone connection
27		USB mode

-33-

28		FOMA card is malfunctioning or not inserted
29		Non-FOMA card is inserted
30		Self mode
31		VeilView
32		3G
33		Status of Comics setting
34		ToruCa
35		Receiving information
36		Multitask
37		Operation in progress

※ Refer to P. 31 to P. 35 of the manual for detailed explanations of displayed icons.

-34-

## <Emergency contacts in case of loss or other accidents>

### Omakase Lock

※ Omakase Lock is a paid service. However, if Omakase Lock is subscribed while or at the same time as when the use of FOMA terminal is suspended, or if the user is a member of docomo Premier Club, the usage fee of Omakase Lock is not charged. Additionally, if Keitai Anshin Pack (Mobile Phone Security Package) is subscribed, Omakase Lock is available for a flat-rate.

Enable/Disable Omakase Lock

0120-524-360 Office hours: 24hours

### Other contacts

<Contacts: >

<Contacts: >

<Contacts: >

※ Please confirm the phone number before you dial.

-35-

Quick Manual "Overseas Use"

Loss or theft FOMA terminal or payment of cumulative cost overseas <docomo Information Center> (available 24 hours a day)

From DOCOMO mobile phones

International call access code for the country you stay (table 1) -81-3-5366-3114\* (toll free)

\* You are charged a call fee to Japan when calling from a land-line phone, etc.

※ If you use SH-05A, you should dial the number +81-3-5366-3114 (to enter "+", press the "0" key for 1+ seconds).

From land-line phones

<Universal number>

International prefix number for the universal number (table 2) -800-0120-0151\*

\* You might be charged a domestic call fee according to the call rate for the country you stay.

※ See P.19 to P.22 for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

Failures encountered overseas <Network Technical Operation Center> (available 24 hours a day)

From DOCOMO mobile phones

International call access code for the country you stay (table 1) -81-3-6718-1414\* (toll free)

\* You are charged a call fee to Japan when calling from a land-line phone, etc.

※ If you use SH-05A, you should dial the number +81-3-6718-1414 (to enter "+", press the "0" key for 1+ seconds).

From land-line phones

<Universal number>

International prefix number for the universal number (table 2) -800-5931-8600\*

\* You might be charged a domestic call fee according to the call rate for the country you stay.

※ See P.19 to P.22 for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

-1-

-2-

Preparing for overseas use

Refer to the following before using the FOMA terminal overseas.

- "Mobile Phone User's Guide [International Services]"
- "Mobile Phone User's Guide [Network Services]"
- PDF file "海外ご利用ガイド" (Guide for overseas use) pre-installed in [My Documents] of Data box
- DOCOMO "International Services website"

Setting i-mode

■ Setting in Japan

- 1 In the Custom menu, select [i-mode] ▶ [iMenu/Search] ▶ [English] ▶ [Options] ▶ [International Settings] ▶ [i-mode services Settings] ▶ [Yes] ▶ select the [Enter i-mode Password] field ▶ [OK] ▶ enter the i-mode password ▶ [OK].

<Out here>

■ Setting in overseas

- 1 In the Custom menu, select [i-mode] ▶ [iMenu/Search] ▶ [English] ▶ [International Settings] ▶ [i-mode services Settings] ▶ [Yes] ▶ select the [Enter i-mode Password] field ▶ [OK] ▶ enter the i-mode password ▶ [OK].

Setting remote access

■ Setting in Japan

- 1 In the Custom menu, select [Settings] ▶ [Other NW Services] ▶ [Remote Control] ▶ [Activate] ▶ [Yes].

■ Setting in overseas

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Remote access (Int.)] ▶ [Yes] ▶ operate according to the voice guidance.

-3-

Correcting date and time automatically

- 1 In the Custom menu, select [Settings] ▶ [General settings] ▶ [Date settings] ▶ select the [Auto time correction] field ▶ [ON] ▶ [OK].

Setting time zone manually

- 1 In the Custom menu, select [Settings] ▶ [General settings] ▶ [Date settings] ▶ select the [Auto time correction] field ▶ [OFF] ▶ [OK].
- 2 Select a time zone ▶ [OK] ▶ select a city ▶ [OK].

-4-

Available network

3G network	Available
GSM network	Not available
GPRS network	Not available

-5-

## Available services overseas

Communication service	3G
Voice call	○
Videophone	○
i-mode mail	○
i-mode	○
i-Channel	○
i-concier	○
i-Widget	○
SMS	○
GPS position location	○
Packet transmission by connecting a PC, etc.	○

- Unable to use 64K data communication by connecting a PC, etc. overseas.

-6-

## Setting a search method of telecommunications carrier

### Network search mode

Default setting: Auto (Automatically switches telecommunications carriers)

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode].
- 2 Select [Auto] ▶ [Yes].
  - To manually switch telecommunications carriers: Select [Manual] ▶ select a telecommunications carrier ▶ ▶ [Yes].
  - To re-search for the host network: Select [Network re-search].

 
-7-

## Setting a telecommunications carrier to preferentially connect to

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Network search mode] ▶ [PLMN setting] ▶ select the number of the priority order ▶ ▶ [Yes].
- 2 Select [PLMN manual select] ▶ ▶ enter a country code (MCC) ▶ ▶ enter a network code (MNC) ▶ ▶ [Yes].
  - To save from a telecommunications carrier list: Select [UPLMN by list] ▶ select a telecommunications carrier ▶ ▶ [Yes].
  - To save the telecommunications carrier currently connected to: Select [Set VPLMN to PLMN] ▶ [Yes].
  - To change the priority: Select [Change priority] ▶ select a destination ▶ ▶ [Yes].

-8-

## Displaying a telecommunications carrier name in stand-by



Telecommunications carrier name

- 1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Operator name disp] ▶ [Display on] ▶ [Yes].

### Setting after homecoming

If Network search mode is set to [Auto], reset Network search mode to the FOMA network (DOCOMO) automatically when the power is turned on after homecoming.

-9-

## Making a call

### Making a call outside your country of stay (including Japan)

#### Using + to make an international call

- 1 In stand-by, press (for 1+ seconds) ▶ enter the country code, area code (city code) and other party's phone number ▶ (Phone)/ (V.phone).
  - When the area code (city code) begins with 0, omit the 0 when dialing (Include 0 when making a call to some countries or regions such as Italy).

-10-

#### Making a call outside your country of stay using country code conversion

0 at the beginning of a phone number is automatically converted to the country code set in Country code conversion.  
Example: Make a call from the phonebook

- 1 In stand-by, press ▶ select the other party ▶ (Phone)/ (V.phone) ▶ [Call].

#### Making an international call

Save a country number using Set country code to select a country code before making an international call.  
The following operation is available overseas only.

- 1 In stand-by, enter a phone number ▶ ▶ [Add prefix setting] ▶ [International Call] ▶ select the country code ▶ ▶ (Phone)/ (V.phone).

-11-



### Making a call in your country of stay

1 In stand-by, enter a phone number ▶ [Phone]/[V.phone].

### Making a call to the phone in your country of stay using phonebook

1 In stand-by, press [Select] ▶ select the other party ▶ [Phone]/[V.phone] ▶ [Original number].

### Making a call to a WORLD WING subscriber overseas

Even when making a call to the phone in your country of stay, make an international call to Japan if the call recipient is a "WORLD WING" subscriber overseas.

1 In stand-by, press [0] (for 1+ seconds) ▶ [8] [1] ▶ enter the other party's mobile phone number excluding the first 0 ▶ [Phone]/[V.phone].

### Receiving calls

1 Press [Answer] to answer an incoming call.

-12-

- To deactivate: Select [Deactivate] ▶ [Yes].
- To check settings: Select [Check setting].

### Using network service

● Depending on the overseas telecommunications carrier, the setting cannot be made.

● To use network service overseas, set Remote Control to "Activate" in advance.

※ When the confirmation screen appears, select [Yes].

※ Operate according to the voice guidance.

### Voice Mail (Int.)

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Voice Mail(Int.)].

2 Select [Activate Voice Mail].

- To deactivate: Select [Deactivate].
- To play messages: Select [Play Messages].
- To set the service: Select [Voice Mail settings].

-15-

### Having calls made to your FOMA terminal from Japan

Enter the phone number in the same way as it is entered in Japan and make a call.

### Having calls made to your FOMA terminal from countries other than Japan

Enter international call access code of the country of the caller-81-user's phone number excluding the first 0 and make a call.

### Setting roaming guidance

● Make this setting while still in Japan.

※ When the confirmation screen appears, select [Yes].

1 In the Custom menu, select [Settings] ▶ [Other NW Services] ▶ [Roaming guidance].

2 Select [Activate].

- To deactivate: Select [Deactivate].
- To check settings: Select [Check setting].

-13-

### Call Forward (Int.)

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Call Forward (Int.)].

2 Select [Activate].

- To deactivate: Select [Deactivate].
- To set the service: Select [Settings].

### Roaming guidance (Int.)

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Roam. guidance(Int.)].

### Missed Call Notice (Int.)

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [MissedCallNoticeInt.].

-16-

### Call barring

● Depending on the overseas telecommunications carrier, the setting cannot be made.

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Call barring].

2 Select [Activate] ▶ [Yes] ▶ select the barring method ▶ [Enter the network security code] ▶ [0].

- To deactivate: Select [Deactivate] ▶ [Yes] ▶ enter the network security code ▶ [0].
- To check settings: Select [Check setting].

### Missed Call Notice

● For details on setting at your country of stay 日本 P. 16

1 In the Custom menu, select [Settings] ▶ [Phone settings] ▶ [Other settings] ▶ [International Roam.] ▶ [Missed Call Notice].

2 Select [Activate] ▶ [Yes].

-14-

### Country codes of major countries

The following shows "Country code" used when making international calls or setting International dial assist.

Country/Region	Code	Country/Region	Code
Australia	61	Hong Kong	852
Austria	43	Hungary	36
Belgium	32	India	91
Brazil	55	Indonesia	62
Canada	1	Italy	39
China	86	Japan	81
Czech	420	Macau	853
Egypt	20	Malaysia	60
Fiji	679	Maldives	960
Finland	358	Netherlands	31
France	33	New Caledonia	687
Germany	49	New Zealand	64
Greece	30	Norway	47

-17-

Country/Region	Code	Country/Region	Code
Peru	51	Tahiti (French Polynesia)	689
Philippines	63		
Russia	7	Taiwan	886
Singapore	65	Thailand	66
South Korea	82	Turkey	90
Spain	34	U.K.	44
Sweden	46	U.S.A.	1
Switzerland	41	Vietnam	84

- For other country codes and details, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO "International Services website".

-18-

### International call access codes for major countries (table 1)

The following shows the International call access codes for major countries.

Country/Region	Code	Country/Region	Code
Australia	0011	Hungary	00
Belgium	00	India	00
Brazil	0021/ 0014	Indonesia	001
		Ireland	00
Canada	011	Italy	00
China	00	Luxemburg	00
Czech	00	Macau	00
Denmark	00	Malaysia	00
Finland	00	Monaco	00
France	00	Netherlands	00
Germany	00	New Zealand	00
Greece	00	Norway	00
Hong Kong	001	Philippines	00

-19-

Country/Region	Code	Country/Region	Code
Poland	00	Taiwan	002
Portugal	00	Thailand	001
Russia	810	Turkey	00
Singapore	001	U.A.E.	00
South Korea	001	U.K.	00
Spain	00	U.S.A.	011
Sweden	00	Vietnam	00
Switzerland	00		

-20-

### International prefix numbers for the universal number (table 2)

The following shows the International prefix number for the universal number of each country.

Country/Region	Code	Country/Region	Code
Argentina	00	Hong Kong	001
Australia	0011	Hungary	00
Austria	00	Ireland	00
Belgium	00	Israel	014
Brazil	0021	Italy	00
Bulgaria	00	Luxemburg	00
Canada	011	Malaysia	00
China	00	Netherlands	00
Columbia	009	New Zealand	00
Denmark	00	Norway	00
Finland	990	Peru	00
France	00	Philippines	00
Germany	00	Portugal	00

-21-

Country/Region	Code	Country/Region	Code
Singapore	001	Switzerland	00
South Africa	09	Taiwan	00
South Korea	001	Thailand	001
Spain	00	U.K.	00
Sweden	00	U.S.A.	011

-22-

### About inquiries overseas

For lost, stolen, and cost settlement, or malfunction of the FOMA terminal overseas, refer to "Loss or theft FOMA terminal or payment of cumulative cost overseas" on the cover of Quick Manual "Overseas Use" or "Failures encountered overseas" on P.1. Note that transmission/calling charges after the FOMA terminal is lost or stolen are incurred to the subscriber.

- When the FOMA terminal is lost or stolen overseas, promptly contact DOCOMO and conduct a procedure for canceling the use of service.
- Add the "International call access codes for major countries (table 1)" or "International prefix numbers for the universal number (table 2)" that is assigned to your country of stay, to the head of your phone number for inquiries.

-23-

Check/Change the subscription, apply for various services, and request various information materials online.

From i-mode      iMenu ▶ お客様サポート (user support) ▶ お申込・お手続き (Applications/Procedures) ▶ 各種お申込・お手続き (Various Applications/Procedures)  
Packet communication charges free

From a PC      My docomo (<http://www.mydocomo.com/>) ▶ 各種お申込・お手続き (Various Applications/Procedures)

- ※ You will need your "Network Security Code" to access the site from i-mode.
- ※ No packet communication charges are incurred when accessing the site from i-mode. Accessing from overseas will incur charges.
- ※ You will need your "docomo ID/Password" to access the site from PC.
- ※ If you do not have or you have forgotten your "Network Security Code" or "docomo ID/Password", contact the number listed in General Inquiries on the back of this manual.
- ※ The site may not be available depending upon the content of your subscription.
- ※ You may not be able to access some site services due to system maintenance, etc.

## Please follow proper etiquette

When using your FOMA terminal, please be considerate of those around you.

### Turn off your FOMA terminal in the following places

#### ■ When in an area where use is prohibited

There are places where the use of mobile phones is prohibited. Be sure to turn off your FOMA terminal in the following places.

★On an aircraft    ★In a hospital

※ There are people outside hospital wards who also use electric medical equipment. Please make sure that your FOMA terminal is turned off in the lobby and waiting room.

#### ■ While driving

Using a mobile phone in hand while driving is regarded as a punishable act.

※ If there is no choice but to receive a call, use hands-free and tell the caller that you will "call back", and then pull over to a safe place to make a call.

#### ■ When in crowded places such as rush-hour trains in case somebody nearby is using an implanted cardiac pacemaker or implanted cardioverter-defibrillator

Your FOMA terminal may affect the operation of such equipment.

#### ■ When in public places such as theaters, movie theaters, or museums

Use of your FOMA terminal in quiet public places will annoy others.

### Be careful of where you use your FOMA terminal and the volume of your voice and the ring tone

- When using your FOMA terminal in a restaurant or a hotel lobby, lower your voice.
- In crowded places, be careful not to obstruct other pedestrians.

### Be considerate of the privacy of the individuals around you



Please be considerate of the privacy of individuals around you when taking and sending images using a camera-enabled mobile phones.

### The following functions will help you to keep your manners in public

There are useful functions you can use to set your FOMA terminal not to answer incoming calls, and to silence all sounds.

- **Manner mode** (☎ P. 91)/**Original manner mode** (☎ P. 92)  
Silences the Key sound and all the sounds from the FOMA terminal, and Record message is set (Manner mode). When in the Manner mode, automatically set functions (Record message, Vibrator, Mic sensitivity up, Ring tone, Mail ring tone, alarm tone, Key sound and Low battery alarm) can be set to ON (enable)/OFF (disable) (Original manner mode).
- **Public mode (Drive mode/Power OFF)** (☎ P. 66, P. 67)  
The caller hears a guidance message stating that the receiver is driving, or in the place where the receiver should refrain from using the mobile phone or turn off the power. The call is disconnected.
- **Vibration mode** (☎ P. 89)  
Notifies incoming calls by vibration.
- **Record message** (☎ P. 68)  
When you are unable to answer a call, the Record message function records the caller's message.  
※ You can also use optional services such as Voice Mail Service (☎ P. 390) and Call Forwarding Service (☎ P. 392).