



The side cursor key operates as a cursor when pressed up, down, left, or right, and as an enter key when pressed straight down.

## Turning Power On and Off

 



- **Turning Power On**  
Hold down  (side) for at least a few seconds.
- **Turning Power Off**  
Hold down  (side) for at least a few seconds.

## Activating the Soft Keypad

 

- **Displaying the Function Key Screen**  
Flick or slide from the bottom to the top part of the screen.
- **Displaying the Dial Key Screen**  
On the function key screen: Flick or slide the top part of the screen to the left or right.

※ The display procedures for the soft keypad are not included in the English operating instructions.

## Switching the Screen to English

From the stand-by screen: Press . ▶ Touch . ▶ Touch . ▶ Touch .

## Checking Your Own Phone Number and E-mail Address

From the stand-by screen: Press . ▶ Touch .

## Making and Answering a Call

### ● Making a Call

From the stand-by screen: Touch . ▶ Enter the phone number you want to call. ▶ Touch .  
To end a call: Touch .

### ● Answering a Call

When the phone starts ringing, touch **##**.  
To unlock the touch panel operation setting: Press for at least one second.  
To adjust the earpiece volume during a call: Use .

## Storing and Recalling Address Book Entries

### ● Storing an Entry

From the stand-by screen: Touch for at least one second.  
▶ Use to select the item you want to edit. ▶ Press (Select).  
▶ Enter the data. ▶ Touch (Reg).

### ● Recalling an Entry

From the stand-by screen: Touch to display the Address Book screen.  
▶ Use to select the tab for the record you want to recall.  
▶ Use to select the name of the record.  
▶ Press (Detail) to view the record in detail.

## Using the Camera (Movie and Snapshot)

### ● Recording a Movie Clip

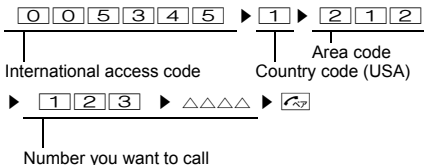 
From the stand-by screen: Press . ▶ Use to select "Camera".  
▶ Press (Select). ▶ Select "Movie". ▶ Press (Select).  
▶ Press (Record) to start recording.  
▶ Press (Stop) to stop recording.  
▶ Press (Save) to store the movie.  
Touch (||) (Pause) during recording to pause recording.  
Touch ( + ) in the Movie mode to change to the Photo mode.

### ● Taking a Snapshot

From the stand-by screen: Press . ▶ Use to select "Camera".  
▶ Press (Select). ▶ Select "Photo". ▶ Press (Select).  
▶ Press (Shoot) to take a snapshot.  
▶ Press (Save) to store the photo.  
Touch ( + ) in the Photo mode to change to the Movie mode.

## Making an International Call

Ex: To call 212-123-△△△△ in the USA



## Other Handy Features

### ● Setting the Manner Mode

From the stand-by screen: Hold down for at least one second.  
Repeat the above operation to disable the Manner Mode.

### ● Setting the Easy Voice Memo (Voice Recording)

From the stand-by screen: Touch for at least one second.  
Repeat the above operation to disable the Easy Voice Memo.

### For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)