



Turning Power On and Off

● Turning Power On

Hold down **[ON]** for at least four seconds.

● Turning Power Off

Hold down **[ON]** until the Phone options window opens.

▶ Select [Power off]. ▶ Select [OK].

Switching the Screen to English

On the desktop*: Select **[M]**. ▶ Select [設定(Settings)].

▶ Select [言語とキーボード(Language & keyboard)]. ▶ Select [言語(Language)を選択(Select language)]. ▶ Select [English].

* The desktop represents the stand-by screen.

Checking Your Own Phone Number and Mail Address

On the desktop: Select **[M]**. ▶ Select [Settings]. ▶ Select [Profile].

Making and Answering a Call

● Making a Call

On the desktop: Select . ▶ Select [Dialer].
▶ Enter the phone number you want to call. ▶ Select [Call].
To stop a call: Press /Select [Quit].
To end a call: Press /Select [Disconnect].

● Answering a Call

When you receive a phone call, select [Answer].
To adjust the speaker volume during a call: Press /▶.

Storing and Recalling Address Book Entries

● Storing an Entry

On the desktop: Select . ▶ Select [Address Book].
▶ Select [Add]. ▶ Select the item you want to edit.
▶ Select [Save]. ▶ Select [Yes].

● Recalling an Entry

On the desktop: Select . ▶ Select [Address Book]. ▶ Move the cursor to the record you want to recall. ▶ Select the phone number.
▶ Select [Voice call] in the Phone number menu.

Using the Camera (Movie and Snapshot)

● Recording a Movie Clip

On the desktop: Select . ▶ Select [Video Camera]. ▶ Select [MENU].
▶ Select [Image size]. ▶ Select [QCIF(176×144)]/[QVGA(320×240)]/[VGA(640×480)]. ▶ Select [Record]. ▶ Select [Stop] to stop recording.
▶ Select [Save] to store the movie.

To zoom in or out: Flick the touch screen left or right.

● Taking a Snapshot

On the desktop: Select . ▶ Select [Camera]. ▶ Select [MENU].
▶ Select [Picture size]. ▶ Select the size of a snapshot you want to take.
▶ Select [Shutter] to take a snapshot.

To zoom in or out: Flick the touch screen left or right.

Making an International Call

Ex: To call 212-123-△△△△ in the USA
On the desktop: Select . ▶ Select [Dialer].

[0] [0] [1] [0] [1] [0] ▶ [1] ▶ [2] [1] [2]
International access code Area code
Country code (USA)
▶ [1] [2] [3] ▶ △△△△ ▶ Select [Call].
Number you want to call

Other Handy Features

● Setting the Manner Mode

On the desktop: Press .
▶ Select [Normal Manner]/[Drive Manner]/[Silent Manner].
To disable the Manner mode: Press . ▶ Select [OFF].

● Setting the Answer Memo (Voice Recording)

On the desktop: Select . ▶ Select [Settings].
▶ Select [Call Settings]. ▶ Select [Call/Ans Memo].
▶ Select [Answering memo setting].
To disable the Answer Memo: Repeat the above operation.

For inquiries, please contact

au Customer Service Center (General Information)

- If you are calling from a landline phone: ☎ 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)