

## Quick Setup

Quick Setup gives you the basic information you need to start using your handset by simply following the steps.

### Step 1: Unpacking

Check that you have the following items;

 
- The handset
- Rechargeable Li-ion battery
- AC charger
- Hands free EARphone & MIC
- Operation Manual

Some other brochures or supplements may also be contained.

### Step 2: Inserting the SIM Card and the Battery


In order to access the services available, do not forget to insert a SIM card and a battery. The SIM card carries the user's identity for accessing the network and also stores personal information such as the handset directory and received Text messages, etc. Only use a 3V SIM card with your handset.

- 1 Press ( ) and flip the cover in the direction of the arrow ( ).

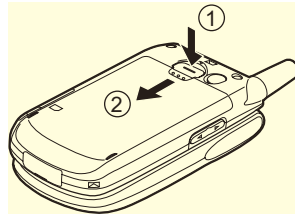


- 2 Remove the battery cover.

 - 3 flip the SIM card into the SIM holder as illustrated. Do not touch the metal part of the SIM terminal.

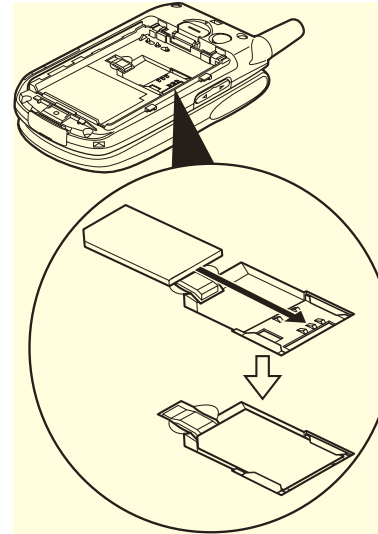

 - 4 Position the battery with the printed side up. Insert its top end as illustrated into slot and insert the other end into position .

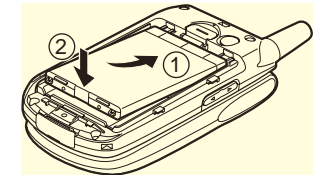

- 5 Align the battery cover with the battery compartment as illustrated and flip it in the direction of the arrow until it clicks.

### Removing the SIM Card

 
In step 3, press the back of the card, flip it in the opposite direction and remove it from the SIM holder.

### Step 3: Charging the Battery

The battery is not fully charged when you purchase the handset. Charge the battery for at least 2 hours before using the handset.

#### Using the Charger

- 1 Insert the charger plug into an AC outlet.
- 2 Open the external connector cap and insert the charger (label facing up) into the USB/Charger connector. The Indicator LED lights red.

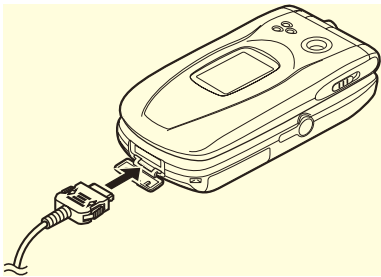

3-14

- 3 When charging is complete, the Indicator LED turns off.  
In standby mode, the Indicator LED blinks.



*The standard charging time is approximately 2 hours.  
Charging time may vary depending on the state of the battery and other conditions. For information on the battery, refer to "Battery" on page 1-5.*

#### Removing the charger

Disconnect the charger plug from the AC outlet and unplug the charger from the handset.

#### To charge using the cigarette lighter charger

The optional cigarette lighter charger (CE-CL30) supplies power for charging from the cigarette lighter socket of a car.

#### Battery Status

Check the battery indicator displayed in the upper left of the display to estimate remaining battery power. When the battery is empty, "0" appears on the display and an alarm sounds. The battery may only last for another 5 minutes. If you are using your handset, charge the battery immediately.

Battery Indicators	Charge Level
	Sufficiently charged
	Partially charged
	Charging recommended
	Charging required
	Empty

### Step 4: Turning Your Handset On

Press and hold for approximately 2 seconds.  
The standby screen appears.



*For information on key operations, refer to "Parts and Controls" on page 4-18.  
When turning on the handset, you will be asked to enter a PIN (Personal Identification Number) code. Enter it and press . For more information, refer to "If You Upgrade Your Handset" on page 3-16.*

#### Turning Your Handset Off

Press and hold for approximately 2 seconds.

### Step 5: Setting the Date and Time

Set the date and time before using the handset. If date and time are left unset, you cannot operate some time-based functions correctly.

- 1 Flip open the handset.
- 2 Press .  
The main menu appears.

3-15

- 3** Press , , or to highlight "Settings" and press .
- 4** Press or to highlight "Date & Time" and press .
- 5** Press or to highlight "Set date/time" and press .
- 6** Enter the day, month, year and time using the digit keys and press .  
If you enter the time in the 12-hour format, press . Press to switch between am and pm.

For more information on how to set date and time, refer to "Setting the Date and Time" on page 15-139.

## If You Upgrade Your Handset

If you have a mobile phone before purchasing this handset, you may use your previous SIM card with the new handset. In this case, you should keep in mind two things for the setup.

### Entering the PIN Code

If you insert a SIM card you have used for your previous mobile phone, you may be requested to enter a PIN code when you turn on your handset. For more information on the PIN code, refer to "Setting Security" on page 15-140.

- 1** Enter your PIN code that you used for your old mobile phone.
- 2** Press .



*If your PIN code is entered incorrectly three times in a row, the SIM card is locked. To release the lock, try entering the PUK (Personal Unblocking Key) code (8 digits) provided by your service provider. For more information on the code, contact your service provider.*

## Copying the Contacts List from the SIM card

The first time you insert a SIM card you have used for your previous mobile phone, you are asked whether you wish to copy the information such as the "Contacts list" entries. Follow the on-screen instructions, or you can do it later using the "Contacts list" menu as follows.

- 1** Press .  
The main menu appears.
- 2** Press , , , or to highlight "Contacts" and press .
- 3** Press or to highlight "Contacts list" and press .
- 4** Press [Options].  
The "Options" menu appears.
- 5** Press or to highlight "Advanced" and press .
- 6** Press or to highlight "Copy all from SIM" and press .
- 7** Press [Yes].  
Copying starts.  
To cancel, press [No].