



# Setting Up Your Device

## Bluetooth® Technology Setup

Your device supports Bluetooth wireless technology Specification 2.0+EDR so you can connect to hands-free devices (stereo or mono headsets and car kits) and any device that can receive a vCard, photo, or other file via Bluetooth (PCs, phones).

To turn on Bluetooth features and open the Bluetooth settings, press **JUMP**  to go to the Jump screen. Press **MENU**  and then select **Bluetooth** to open the submenu. Make sure Bluetooth features are “on”. The following menu items are available for configuring and using Bluetooth:






- **Pairing** – Displays a list of available Bluetooth devices with which you can pair.
- **My Device** – Rename your device (as it appears to others) and select an option requiring that others authenticate before connecting to your device. You can also request that the device automatically try the PINs 0000 and 1234 when authenticating with other devices.

✓ For maximum privacy and security, make sure you select the **Require authentication** check box.

- **Visibility and Turn Bluetooth On/Off** – Bluetooth features are “off” by default; to select a the visibility option, you must first Turn Bluetooth On from the menu. Once Bluetooth features are on, select from: Always Visible (if you are actively using Bluetooth devices), Visible for 60sec (to exchange a vCard or file quickly), and Never Visible (prevents others from sending you vCards or pairing with you).
- **Send My vCard** – If you have set “My vCard” in the Address Book, you can send your vCard quickly to another Bluetooth device by selecting this option or by using the shortcut **MENU**  + **Y**. Read more in “Set and Send My vCard” on page 65.
- **Transfer Sound to** – With Bluetooth features on, you can use a hands-free headset or car kit to place and receive phone calls from your device.

You can also use a Bluetooth stereo headset to listen to songs, videos, or game sounds.



**Bluetooth® Hands-Free Headset or Car Kit** To use a Bluetooth stereo/mono hands-free headset or car kit, do the following:

- 1 Press **JUMP**  to go to the Jump screen. Press **MENU**  and then select **Bluetooth** to open the submenu. Make sure Bluetooth features are “on”.
- 2 While you are in your car, make sure your hands-free headset or car kit is ready to pair by following the manufacturer’s instructions. On your device, go into the **Phone** application. Press **MENU**  and select **Settings > Pairing**.
- 3 From the Pairing dialog box, select your Bluetooth hands-free headset or car kit from the list of devices (it may take a few seconds for the list to populate). If prompted, type the device’s PIN code, then press **DONE**  to dismiss the PIN Code dialog box.
- 4 By default, your call’s sound will go through the device handset. To send or receive your call using a Bluetooth device, press **MENU**  and select **Transfer Sound to**, then select your Bluetooth device from the submenu.

✓ You may transfer the call’s sound either before or during a call.




## Themes

You can customize the backgrounds that appear on the application splash screens and even the system sounds by selecting different “themes.” In addition to the themes that come by default with your device, you can download themes from the Catalog. To change the theme on your device, do the following:

- 1 Press **JUMP**  to go to the Jump screen. Press **MENU**  and then select **Themes**.
- 2 The submenu opens to display a list of available themes. Your current selection is marked with a bullet and appears dimmed. If you have downloaded themes from the Catalog, they will appear at the top.
- 3 Select your choice with the trackball.

## Font Size



By default, the text on your device appears in a “Medium” size font, but you can change this size:

- 1 Press **JUMP**  to go to the Jump screen. Press **MENU**  to open the menu, then select **Settings > Font Size**.
- 2 Select the **Font Size** pop-up menu and choose from **Small, Medium, or Large**.
- 3 Press **DONE**  to save your font size setting. It will take a few moments for the font size to change.

✓ This font size setting does not affect the text size on pages viewed with the Web Browser.




## Backlighting

As long as you are actively using your device, the backlight will stay on. After you stop using your device, the backlight will stay on for 15 seconds, but you can change this setting:

- 1 Press **JUMP**  to go to the Jump screen. Press **MENU**  then select **Settings > Battery & Display**.
- 2 In the **Display Backlight** group box, open the **Dim after** pop-up menu and select a timeout option, up to five minutes. The lower the time, the more battery power you will conserve.
- 3 By default, the **Use ambient light sensor** check box is selected. This conserves battery power by causing the backlight to automatically adjust to the surrounding light.”


## Device Privacy Code


 
If you want to secure your device from unauthorized access once your device has gone into key guard mode, you must set up a privacy code:

- 1 Press **JUMP**  to go to the Jump screen. Press **MENU**  then select **Settings > Key Guard & Security**.
- 2 Scroll down to the **Privacy Lock** group box. Highlight , then press the trackball to select it.
- 3 Enter a three-digit code using the keyboard or the number pop-up menu:








At the prompt, re-enter your code to verify.

- 4 A “New Combination Enabled” message appears. Select **OK**.
- 5 Press **DONE**  to save your settings and return to the Jump screen.

✓ You can make emergency calls from the key guard screen, even if privacy code is enabled, by opening the display then pressing **MENU**  + **JUMP** .

## Key Guard Mode

You can “lock” your device controls by entering key guard mode:

- 1 You can enter key guard mode from any screen by pressing and holding **DONE**  for two seconds. Or, press **JUMP**  to go to the Jump screen. Press **MENU**  to open the menu, scroll to highlight **Key Guard**, then press the trackball.
- 2 The control buttons lock and the key guard screen appears.
- 3 To unlock and wake the device, open the screen or press **MENU**  + **DONE** . If you have set a privacy code, type it at the prompt.



✓ To change the image displayed while in key guard mode, see “Use Photo for Caller ID or Key Guard Background” on page 72.

- ✓ To turn on the backlight while in key guard or sleep, press the right shoulder button.

By default, your device is set to enter key guard mode after two minutes of idle time. You can change this setting from the **Jump Menu > Settings > Key Guard & Security** screen.

To conserve battery life, after your device has been in key guard mode for five minutes, the screen will go black, putting the device in “sleep mode.” To wake your device, press any key or open the screen. To learn what the blinking trackball colors mean during sleep mode, read “Trackball light indicators” on page 35.



## Sound Profiles

Each sound profile defines the volume of rings, reminders, and system sounds. You can have up to eight profiles; six editable profiles are provided by default. To create a new or modify an existing sound profile, press **JUMP** , then press **MENU**  and select **Settings > Sound Profiles**. From the Sound Profiles screen you can also set the behavior of pending alerts and reminders, and schedule sound profiles.

To change the current sound profile, read “Volume Controls” on page 23.

## Alarm Clock



To set a recurring alarm, do the following:

- 1 Press **JUMP** , then press **MENU**  and select **Settings > Date, Time, & Alarm**. Scroll down to the **Alarm** group box.
- 2 Select the **Alarm Time** from the pop-up menu.
- 3 If you want the alarm volume to be different from the sound profile setting, select the **Override Sound Profile** check box then select the **Alarm Volume** button to set a volume.

When the alarm sounds, a dialog box will appear, giving you the choice to snooze the alarm for 10 minutes or stop it. (Stopping the alarm turns it off.)


## Location Based Services

Location Based Services (LBS) is an implementation of GPS technology that allows you to use the geographical position of your device for geotagging of photos and mapping functions. Once you turn GPS on, your device will automatically update your location at pre-set intervals. To turn GPS on:



- 1 Press **JUMP** , then press **MENU**  and select **Location & Privacy**.
- 2 Select **GPS On: Show Location** to show your location. Conversely, **GPS Off: Hide location** hides your location.

You may experience decreased battery life when GPS is on.

✓ Please note that certain challenging environments, for example many indoor and outdoor locations such as urban areas surrounded by high-rises, may result in it taking longer for the device to triangulate your location or potentially result in a failure to register your location at all.

When GPS is set to on, the camera will grab your last known location and geotag your photos if you have opted to do so. To select photo geotagging, navigate to the camera application, press **MENU**  and Select **Photo Settings**. Select the **Turn geotagging on** option.

Typically, you do not need to manage your LBS updates or settings. Reasons to do so include wanting to manually start the location update process rather than waiting for the device to automatically update, viewing your last known location or changing your display unit preference. To manage these settings, do the following:


- 1 Press **JUMP** , then press **MENU**  and select **Location & Privacy**.
- 2 **Update location** – Use this option to start a GPS update. This can also be achieved by navigating to the **Advanced** menu.
- 3 Select the **Advanced** menu item to view the following:
  - **Last Known Location** – Displays the coordinates of your last known location, when the information was last updated and accuracy data.
  - **Permissions** – Downloaded applications require permission to find your location. Use this screen to change an applications' permission status.

- **Distance Display Unit** – Select your distance display unit preference (English Units or Metric Units).

✓ When you enter the Advanced screen, the device GPS will automatically attempt to get a location fix. It will continue to do so for as long as you remain on the Advanced screen.


## Application Customization



You can set application-specific preferences using the Settings screens found within the applications. Some of application settings you can customize include:

- Set your favorite Web home page (Web Browser).
  - Select Photo Caller ID icons or photos (Phone/Address Book).
  - Create your own categories and labels for contact information (Address Book).
  - Set different ringtones for callers (Phone/Address Book).
- ✓ If you see a musical note  next to a menu item, you'll know that's where you customize that application's ringtone setting.

# The Device Interface

## The Jump Screen

 
The Jump screen is your entry point to all device applications. Application selections are arranged on the left-side of the screen in a “ring”. Some applications are grouped into a second-level ring. If you press **MENU**  while on the Jump screen, you’ll have access to device-wide settings and controls:

- 1 To go to the Jump screen from any device screen press **JUMP** .
- 2 To select an application, scroll through the “ring” of application icons. When the application or application folder you want is highlighted, press the trackball once to open that application or to enter the second-level application ring.
- 3 Press **MENU**  from the Jump screen to open the Jump screen menu.





## Indicators

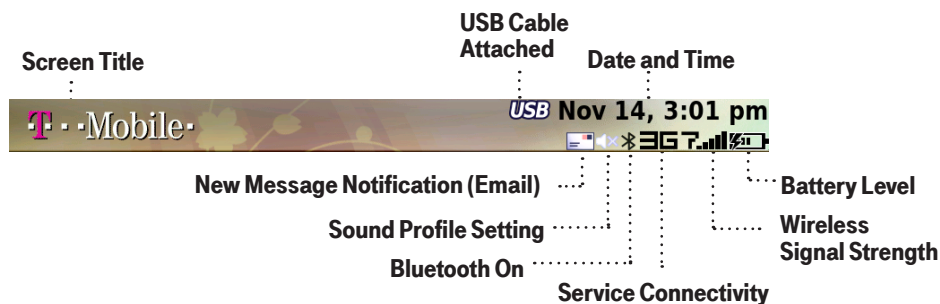

**7. Wireless signal strength indicator** – The number of signal bands showing to the right of the radio tower icon represents the strength of the signal at your current location.

✕ If you see an X flashing over the radio tower icon, you’ve temporarily lost your network connection and can make no calls.

**Service connectivity indicators** – One dot = device is connecting to the GPRS/EDGE network; two dots = getting IP address; three dots = connecting to the data service; **G** = fully connected to the data service; **3G** = connected to 3G network.

**GSM (Phone) service only** – A phone icon in the place of the **G** means you are using (or only have access to) GSM phone service. If you have a call in progress you’ll also see a timer. If the phone icon is hollow, you can only make emergency phone calls.


⌘ **Bluetooth indicator** – When you see this icon just to the left of the **G**, Bluetooth features are available.

**Battery level indicators** – The number of bars showing in the battery icon represents the charge remaining in the battery. While charging, a lightning bolt appears, and when your battery is almost fully discharged, a “!” appears.

**Phone call indicators** –

**0:16** A timer appears when you have a call in progress; in the example, call time elapsed is 16 secs. Note that the phone icon blinks. If you have two calls active, the time displayed is for the foreground call.

 Call forwarding is turned on. Your phone will not ring.


 **Sound Profile setting** – When you have selected a sound profile that has sound turned off, the title bar will indicate whether you have flashing lights or vibration set for alerts or notifications. From left to right, the icons indicate: totally silent (no sound, no flashing lights, no vibration), flashing lights only, and vibration only.

**Communication services notifications** – When you receive a new email, text, IM, MMS, or voice mail message, or when a Web page has finished loading, you’ll see a visual “balloon” notification move across the title bar, while you’re in any application except games. Until you check your new message, you’ll see the appropriate icon in the title bar as a reminder:


Multimedia message 

Text message 

Email message 


 **Memory card activity indicator** – When data is being transferred to or from your memory card, you will see this icon flashing in the title bar, just to the left of the date. When you are inserting or ejecting the card, you will see the memory card icon with an arrow.

 
✓ Do not eject a memory card while the memory card activity card icon is blinking. Wait until the blinking stops to safely remove the card.



 **USB connector icon** – When your device is connected to your computer using the USB port, you will see this icon in the title bar, just to the left of the date. Note that when your device is attached to your computer via USB, you cannot view the contents of your memory card from your device.

**Trackball light indicators** – During device sleep, the trackball will blink a color: blue=pending message, green=normal sleep, red=low battery.

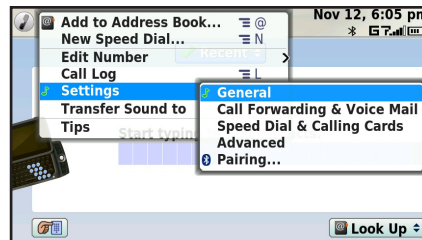

## Menus

Almost every screen on your device has a set of actions you can take while on that screen. These actions are listed in cascading menus, which you open by pressing the **MENU**  button. Menu items with submenus are noted with a right-pointing arrowhead. The Phone Settings submenu is shown expanded below.










Frequently-used menu items also have keyboard shortcuts that use the **MENU**  button plus a shortcut key. Using the example above you could create a new speed dial shortcut by pressing **MENU**  + **N** rather than opening the menu and selecting **New Speed Dial** with the trackball.

## Quick Jump

To jump to an unread message or an application you've recently used, open the Quick Jump dialog by pressing **JUMP**  + **CANCEL** . Select from **Recent** (recently-used applications) or **Pending** (messages you haven't read yet). Note that you can use the shortcuts listed to go directly to that application or message.

## Quick Find

To search for an item on your device (such as a contact, message, note, task, event, song, photo, or video), use the Quick Find dialog. Note that for email and MMS messages, the To, CC, From, Date, and Subject fields are searched, not the message bodies.

- 1 From the Jump screen, press **MENU**  and select **Quick Find**.
- 2 Type the name of the item or a date into the text field. You can use an asterisk (\*) as a wildcard. (To read more about acceptable formats for the find field, press **MENU**  then select **Tips**.) As you type, the search begins.
- 3 When the search is complete, you'll see the results grouped by application in tabs. Press the D-Pad left/right to navigate tabs; roll the trackball up/down to highlight individual results.
- 4 To open an item, highlight and select the item using the trackball. To discard an item, press **MENU**  and select **Discard** [ + ]. Note that if you discard an item in the find results field, it is moved to the relevant application's trash.
- 5 To clear the find matches, press **CANCEL** . To dismiss the Quick Find dialog box, press **DONE** . The find results will be saved if you did not explicitly clear them.

## Empty Trash

Emptying trash is a good way to make more room on your device if you are running out of storage space. You can empty trash from selected applications or all applications by using this dialog box:

- 1 From the Jump screen, press **MENU**  and select **Empty Trash**.
- 2 On the Empty Trash dialog box, check the applications whose trash you want to empty, or check **All Applications**.

**!** Once you select the **Empty Trash** button, all the items selected to be trashed are permanently discarded without confirmation.





## Type and Edit Text

It's easy to type and edit text using the keyboard and the advanced text editing features described below.




---

### Navigate in Text Boxes

Use the control buttons and keyboard to navigate within a text box:


- Move character-by-character – Press the D-Pad or roll the trackball left/right.
  - Jump to beginning/end of a word – Press **ALT** + D-Pad or trackball left/right.
  - Jump to beginning/end of a line – Press **MENU**  + trackball left/right.
  - Jump to beginning/end of the text box – Press **MENU**  +  / .
- 

### Delete Text

- Delete a character to the left of the cursor – Press **DEL** 
  - Delete a character to the right of the cursor – Press **SHIFT** + **DEL** 
  - Delete all the characters on one line – Press **ALT** + 
- 




### Cut, Copy, Paste, Undo

To cut, copy, or paste text you have typed, do the following:

- 1 Position your text cursor next to the text you want to cut or copy. (Use the navigation methods listed above to position the text cursor.)
- 2 Hold down the **SHIFT** key while pressing the D-Pad or trackball in a direction. As you select text, it is shown highlighted. (To de-select all, release the **SHIFT** key and roll the trackball.)
- 3 Press **MENU**  and select **Edit Text** to open the Edit Text submenu, or simply press and hold the trackball to open the Edit Text context menu. Select the operation you want to perform on the selected text.

Note the standard shortcuts:

- Cut                    **MENU**  + **X**
- Copy                  **MENU**  + **C**
- Select All            **MENU**  + **A**

- 4 Paste text that you have copied (or cut) into any text box in any application. Position your cursor where you want to paste the text, then use the Paste shortcut **MENU**  + **V**. Note that the device clipboard only stores one set of copied or cut text at a time.
- 5 If you make a text edit and want to undo it, simply press **MENU**  + **Z**. To redo an undo, press **MENU**  + **SHIFT** + **Z** again.

---

## Check Spelling

You can run spell check on any text field.

- 1 With the focus in the text field, press **MENU**  then select **Edit Text > Check Spelling**, or simply press **MENU**  + **S**.
- 2 If you have spelling errors, a pop-up will offer spelling suggestions for each error. Select the word replacement, **Ignore** the word, or **Add** the word to “My Dictionary”.

Go to “AutoText & Spelling” (next section) to read about setting spell check options. Note that words containing numbers are never flagged as spelling errors.


---

## AutoText & Spelling

To help you type accurately, the AutoText & Spelling screen provides control over the spell check function and allows you to customize rules that automatically correct common typing errors. You can add to, edit, or discard the AutoText rules that come with your device:

- 1 Press **JUMP**  to go to the Jump screen. Press **MENU**  to open the menu, then select **Settings > AutoText & Spelling**. The AutoText & Spelling screen appears.

2 From this screen you can set the following:

- **Highlight misspelled words** – When checked, any words you type that are misspelled will be underlined in red. (You can override this global setting in individual applications by going to the application’s Settings screen.)
- **Auto-correct spelling when possible** – When checked, spelling corrections will be made automatically when possible.
- **Skip slang words during spell check** – When checked, common word abbreviations and slang will not flagged as misspellings during spell check.
- **Edit My Dictionary** – Select this button to open “My Dictionary”, where you can add/discard/edit words that you want spell check to skip.
- **Capitalize first letter of sentences** – When checked, the first letter of each sentence will be automatically capitalized.
- **Automatic Word Replacement** – When checked, the replacement rules listed on the screen will be applied as you type. Open the menu to discard or create AutoText rules. Note that when typing, words are replaced only after you press the **SPACE**. To undo a word replacement, press the **DEL**  key to delete the space.

 
✓ Quickly insert your email address, date, time, or phone number by using these AutoText rules:

- **@email** to insert your email address
- **@ld** to insert the current day and date
- **@lt** to insert the current time
- **@phone** to insert your phone number

---


## Type Special Characters

To type special characters, including unicode characters, in any text box, press the **SYM** key. The Special Character selector opens.

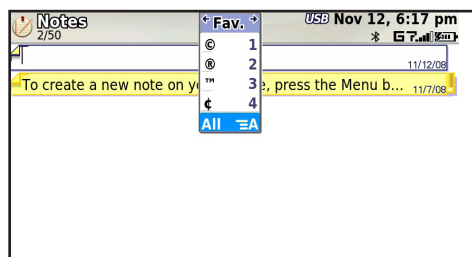

Use the D-Pad or trackball to navigate through the list: left-right to flip through the Favorites, Recent, alphabet, and symbol sets; up-down to select specific characters. Press the trackball to insert a highlighted character.

Here are some useful tips when using the Special Character selector:

- With the selector open, you can show the same characters capitalized by pressing **SHIFT** + the character (like “a”). Toggle back to lowercase by pressing the letter again.
- To see all special characters, select **All** (at the bottom of the selector) or use the menu shortcut **MENU**  + **A**, and the grid expands.
- To open a list of the international characters, select ALL, find the character you want to use in the list, and select it. It is now added to the list of favorite characters and has a number associated with it. In the future, you can type this character by entering **SYM** + the number. Please note, that as you add favorite characters, the number next to the characters will change.
- To type a character using its Unicode value (highlight a selection in the selector for two seconds to see the Unicode), press **SYM** + **SPACE** (press the keys simultaneously), then type the four-character Unicode value.
- There are numbers next to each character that are shortcuts. To type a specific character using the shortcut, press **SYM** + the number for that character.




# The Desktop Interface

 The data you store in your device's Email, To Do, Calendar, Address Book, Notes, and Camera applications is also available for viewing or editing on the Web from any computer connected to the Internet. Information in your Sidekick account is stored on servers in a data center with enhanced security and firewall features.

To access the desktop interface and My T-Mobile, go to [www.t-mobile.com](http://www.t-mobile.com) and click the **Register** link on the home page.

Once you've signed in, your Jump page will open. Use the Jump page navigation buttons to open the various applications:

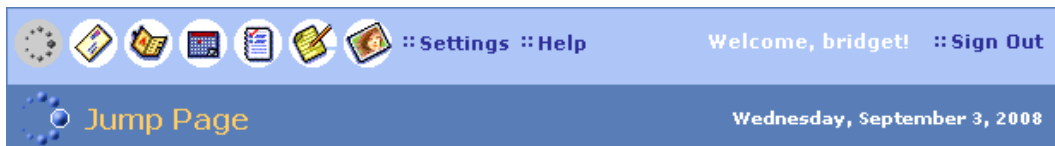

- Open the online Help page by clicking the **Help** link.
- Import existing contacts from the **Address Book > Import** page; import existing Calendar events from the **Calendar > Import** page.
- Synchronize your Sidekick Address Book, Calendar, and To Do items with Microsoft Outlook by downloading the Intellisync application: click **Settings** (next to the Help link on the top bar), then click the **Sync** tab and simply follow the instructions.
- Change your default time zone and time format by clicking **Settings**.

# Desktop Interface Jump Page

The screenshot displays a desktop interface with a blue header and a main content area. The header includes a navigation bar with icons for settings and help, and a welcome message for 'bridget!' with a sign out option. The main content area is titled 'Jump Page' and shows the date 'Wednesday, September 3, 2008'. The interface is divided into several sections:

- Calendar:** A calendar for September 2008 with the 3rd highlighted. Below it is a list of events: Trajan to Vet (Today, 9:30 AM), Lunch with Lilly (Today, 12:00 PM), Catch train (Today, 3:00 PM), and Program YCR to tape show (Today, 5:00 PM).
- Email (2 unread, 18% full):** A list of two emails: Lizzie with subject 'Don't forget your bathing suit!' (Today, 3:02 PM) and Natalie with subject 'You have to read this comic' (Today, 3:00 PM).
- Notes (6):** A list of six notes with dates: Good books (09/01/2008), Movies to see (08/30/2008), Important numbers (08/23/2008), Possible locations for party (08/05/2008), Good surfing spots in North America (06/07/2008), and Insulators I want badly (04/28/2008).
- To Do:** A list of tasks: Run (08/30/2008), Shower (08/31/2008), Drink (Today), and Sleep (This week).
- Camera (Recent Photos):** A gallery of three recent photos: a house, a person in a graduation cap, and a beach scene.

! When you are finished using the Web applications, always click **Log out** to exit the Web site securely.

# Using the Applications



---

## Add a Contact to myFaves



Create a new myFaves contact, or assign a phone number already in your Address Book to your myFaves plan:

- 1 Press **JUMP** to go to the Jump screen. If not already selected, scroll to highlight myFaves, then press the trackball.
- 2 **To add a number already in your Address Book**, press **MENU** + @. Roll the trackball to highlight a contact and phone number, then press the trackball to assign the contact to myFaves.
- 3 **To add a new contact**, press **MENU** + N. On the dialog box that opens, complete the Nickname and Phone number fields. (Type a 7- or 10-digit number. You don't need to add hyphens or spaces in the number.) You can also choose a category from the Label field and a special ringtone for this person from the Ringtone field. Press **Add** .
- 4 Confirm your decision to add the contact to myFaves by selecting **OK** .
- 5 Your new contact will appear in the myFaves ring of contacts. When the “pending” notice disappears, you can call or send messages to this contact.

---






## Communicate with a myFaves Contact

- 1 Press **JUMP** to go to the Jump screen. If not already selected, scroll to highlight **myFaves**, then press the trackball.
- 2 Roll the trackball to highlight the myFaves contact you want to call, then press **SEND CALL** . To send a text message, press **MENU** and select **Send Text**. To send a photo, video or audio message, press **MENU** and select **Send Photo/Video**. To send an audio postcard, press **MENU** and select **Send Audio Postcard**.

- 3 If you have stored an email address or IM the screen name for the highlighted contact in the Address Book, you can press **MENU**  and select **Send Email** or **Send Instant Message**.
- 4 To view a contact's details (including Web site, address, alternate phone numbers, and so on), highlight the contact, then press the trackball. In the Details tab that opens, you can select the Edit button to add or change the information. Or, you can select any of the contact information that may be on this page —phone number, email address or IM screen name—to send your communication from here.  
Switch to the Activity Log tab to view a history of your interactions with your selected contact.  
Use the **Call Log** to view call activity for all of your myFaves contacts. Press **JUMP**  to go to the Jump screen. If not already selected, scroll to highlight **myFaves**, then press the trackball and select **Call Log**.

---





 







### Assign an Icon to a myFaves Contact

- 1 Press **JUMP**  to go to the Jump screen. If not already selected, scroll to highlight **myFaves**, then press the trackball.
- 2 Roll the trackball to highlight the myFaves contact to whom you want to assign an icon, then press **MENU**  and select **Change Icon**. The icon selector opens.
- 3 Select one of the folders to view the icons within that folder. To assign one of your photos, open the **Select from Photos**  folder.
- 4 Select an icon or photo with the trackball. If you select a photo from your Photo Album, you will be able to crop the photo to the portion you want represented in the icon. Simply roll the trackball to move the cropper, then press the trackball to set the crop location. Once the crop location is set, you can also re-size the circle by using the D-Pad or trackball. When you're satisfied with your icon, press **DONE** .
- 5 The icon will appear in the Edit myFaves Contact dialog box. Press **DONE**  to complete the assignment.

## Phone

---

### Make a Phone Call

- 1 You can make a call using any of these dialing methods:
  - Dial using your list of speed dials and recently-dialed numbers – From the Jump or Phone screen, press **SEND CALL** . Highlight the number, then place the call by pressing **SEND CALL**  again.
  - Dial with numbers – From the Jump screen or Phone screen, open the display and type your number using the embedded keyboard dial pad, or use the numbers on the top row. Press **SEND CALL**  to place the call.
  - Dial using letters (such as 1-800-LETTERS) – First open the on-screen dial pad by selecting the  button on the Phone screen. Now you can use the keyboard to type letters; use the on-screen dial pad or the number row to type numbers (in this mode you can't use the embedded keyboard dial pad to type numbers). When ready, press **SEND CALL**  to place the call. To switch back to using the embedded dial pad to type numbers, select .
  - Dial using a list of recently-dialed numbers – From the Phone screen, highlight then select . If the number you want to call is on the list, highlight it with the trackball, then press **SEND CALL** .
  - Dial by finding a contact's number from your Address Book – From the Phone screen, highlight then select . Start typing a name to narrow your search. Highlight a number, then press **SEND CALL**  to place the call.
- 2 To end your call, select the on-screen button , or press **END CALL** .

---





### Use Bluetooth Hands-Free Headset or Car Kit

You can use a Bluetooth device to make or receive phone calls. To pair and set your headset or hands-free for use with the phone, read “Bluetooth Hands-Free Headset or Car Kit” on page 27.

---

## Answer a Phone Call




When your device signals an incoming phone call, the display shows the name of the caller and the icon or photo associated with that caller in your Address Book (see “Add a Contact to the Address Book” on page 62).

- 1 Press the trackball to select  or press **SEND CALL** . Your call connects.
- 2 To hang up, select  or press **END CALL** .

✓ If you receive another call while you’re on the phone (call waiting), a dialog box will appear, giving you the call details and options for handling the incoming call: select either **Switch Calls** or **Ignore**. Or, if you are leaving someone a voicemail and that person happens to be calling you at the same time, select **End Call & Answer** to end your message and answer the call.


---

 
## Add a Number to Your Speed Dial List

- 1 Press **JUMP**  to go to the Jump screen, then scroll to highlight **Phone** and press the trackball to open the Phone application.
- 2 Press **MENU**  to open the menu. Select **New Speed Dial** to open the New Speed Dial Entry dialog box. You can create up to eight speed dial shortcuts.
- 3 Select a Shortcut Key from the pop-up menu. Only the numbers available will appear in the pop-up menu.
- 4 Type the speed dial **Name** and **Number**, then select **DONE** .
- 5 To dial using the shortcut, from either the Phone application or the Jump screen, simply press and hold the number on the keyboard.

---

## Checking Your Voice Mail

- 1 Press **JUMP**  to go to the Jump screen, then press the trackball to open the Phone application.
- 2 Press and hold the 1 key (the speed dial shortcut assigned to voice mail) to call your voice mailbox.

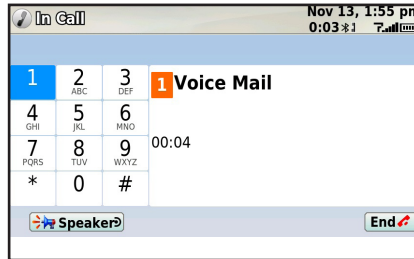




- 3 Follow the prompts to retrieve your messages.
- 4 To hang up, select **End** , or press **END CALL** .

✓ To check your voice mail from another phone, dial your mobile number and then press the star key (\*) to interrupt the greeting. At the prompt, type your password.

---

## Change Your Phone Ringtone



- 1 Press **JUMP**  to go to the Jump screen, then scroll to highlight **Phone** and press the trackball to open the Phone application.
- 2 Press **MENU**  to open the Phone menu. Select **Settings > General**.
- 3 Highlight the **Incoming Call Ringtone** pop-up menu, then press the trackball. The menu reveals the ringtone categories. First highlight a category, then press the trackball to open the ringtones submenu. As you scroll through the songs, you can preview each song by hovering over it for a few seconds.
- 4 When you have decided on a ringtone, press the trackball to select it. Press **DONE**  to assign the new ringtone.

✓ Assign caller-specific ringtones from the Address Book, Edit Contact Details pages.

---

## Import Contacts from Your SIM Card

If you already have a T-Mobile SIM card, you can import the phone numbers you have stored on the SIM card into your device's Address Book. First, make sure you've inserted the SIM card with the contacts into your device, then:

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Address Book**, then press the trackball.
- 2 Press **MENU** , then select **Settings > Import SIM Contacts**.
- 3 The SIM Import dialog will alert you when the import is complete.






---

## Text Messaging



---

### Send a Text Message

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Phone Messaging**, then press the trackball to open the second-level ring of applications. Highlight **Text Messaging**, then press the trackball.
- 2 Press **MENU**  + **N** to open a message Compose screen.
- 3 Address your message using the recipient's phone number, or start typing their name to bring up Address Book matches. Add more recipients by typing a comma (,) or semicolon (;) in the To field.
- 4 Use the trackball to scroll to the message body; type your message or use one of the Prewritten Messages by selecting the  button. Add Smileys by selecting the  button. To attach a vCard, press **MENU**  and select **Attach vCard**. Select a contact from the list that appears and their vCard will be attached to your message.

If your message is larger than the limit for a single text message (around 160 characters), the message will be sent in parts but received as one. The Compose screen will display how many characters you've typed as you go.

- 5 When ready to send, either select the **Send** button at the bottom of the Compose screen, or press **MENU**  + **M**.










## Picture Messaging



---

### Send a Multimedia Message

Each message you create can contain up to five multimedia slides, with each slide containing text, sound (voice recording or song), and video or photo attachment. To create, preview, then send a picture message, follow the steps below. Be creative!

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Phone Messaging**, then press the trackball to open the second-level ring of applications. Highlight **Picture Messaging**, then press the trackball.
- 2 Press **MENU**  + **N** to open a message Compose screen.
- 3 Address your message using the recipient's phone number, or start typing their name to bring up Address Book matches. Add more recipients by typing a comma (,) or semicolon (;) in the **To** field. Type a **Subject** for the entire message. (Each slide you create can have its own text message as well.)
- 4 Create your first slide:
  - Add the slide's message by typing in the text field.
  - Add a photo or video by selecting the "Add Photo or Video" icon . Your Browse Albums screen opens, where you can select one photo or video. Select the item to attach it to the slide.
  - Add a voice recording by selecting the "Add Audio" icon . Select **Record** from the audio selector list that opens and begin the voice recording. Speak into the microphone (next to the **DONE**  button). When finished, select **DONE**  to attach it to your slide.
  - Add a song or ringtone to your slide by selecting the "Add Audio" icon . Select a song/ringtone category from the audio selector list, then choose a specific song or ringtone from the pop-up menu. (Due to format and copyright limitations, not all ringtones available in other applications will be available as attachments to multimedia messages.)
  - Use the **sec(s)** pop-up menu to select how long you want the slide to play. Note that if you have attached a voice recording that plays longer than