







- the menu setting, the voice recording will be cut off when played.
- 5 To create another slide, select the “Add Slide” icon . Add up to five slides by repeating Step 4.
 - 6 To preview your message, select the **Preview** button. You can edit the attachments from the Compose screen: first highlight the attachment, then press the trackball to bring up the context menu containing edit options.
 - 7 When ready to send, either select the **Send** button at the bottom of the Compose screen, or press **MENU**  + **M**.

Send an Audio Postcard

Audio postcards are a great way to show your friends what you’re up to—take a photo and add a personalized voice message before sending. Audio postcards can be sent from within the Call Log and the picture messaging, camera, address book, and myFaves applications. The following steps walk you through sending an audio postcard from within picture messaging.

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Phone Messaging**, then press the trackball to open the second-level ring of applications. Highlight **Picture Messaging**, then press the trackball.
- 2 Press **MENU**  to open the Picture Messaging menu. Select **New Audio Postcard** then press the trackball.
- 3 The camera capture screen displays. For instructions on capturing a photo, read “Take a Photo” on page 69. You can either take a new photo or select a photo from your album. After you have selected a photo, click **DONE** .
- 4 The **Select Picture Frame** screen appears. Use D-pad left and right to change the postcard frame. You can also D-pad up and down to zoom. Click **DONE**  when you are finished.
5. On the **Compose Postcard** screen click the **Add Voice Note** button to add a voice message to your Audio Postcard. By default, the **Start Recording** button is selected. You can record a message up to 20 seconds long. Click **Stop Recording** to end your recording. To preview your recording, click the play button. If you are satisfied with your

recording click **DONE** ✓ or otherwise click the **Re-record button**.

6. Add a To address and Subject to your Audio Postcard.
7. You can change the photo frame on the **Compose Postcard** Screen by using the trackball to select **Click to change frame** on the photo. Click **DONE** ✓ to return to the **Compose Postcard** screen
8. Press **MENU** ☰ to save your draft, select a new frame and/or photo or add more recipients.
9. When you are done editing your audio postcard, press **MENU** ☰ and select Send.

Web Browser



Browse the Web



- 1 Press **JUMP** 🌟 to go to the Jump screen. Scroll to highlight **Web Browser**, then press the trackball.
- 2 Start typing the address of the Web page you wish to visit. The Go To dialog box opens and is populated while you type. Possible URL matches, and the option to search for the text you type, appear in the drop-down menu.
- 3 To go to a Web page, you can either finish typing the complete URL in the Go To dialog box then press Return; or, roll the trackball to highlight a suggested URL in the drop-down menu, then press the trackball.

✓ To open Web pages faster, press **MENU** ☰ and select **Settings**. Scroll down the Settings screen and clear the “Show images” check box.



✓ To **increase/decrease** the text size displayed on a page, press **MENU** ☰ and select **View > Text Size**.





Bookmark a Web Page

To open the list of bookmarks, press **MENU**  and select **Bookmarks** or press **MENU**  + **K**. To add a bookmark:

- 1 Open the Web page you want to bookmark.
- 2 Press **MENU**  + **N** to open the Add Bookmark dialog box.
- 3 Edit the bookmark name if you wish, verify the URL, and select a folder in which to store the bookmark from the **Folder** pop-up menu. (If you select **New Folder**, you'll be prompted to type a folder name.)
- 4 Press **DONE**  to save the bookmark.





Copy Text on a Web Page

You can copy **all** the text on a Web page by pressing **MENU**  + **A**, then **MENU**  + **C**. Copy only specific text you highlight by doing the following:


- 1 Press **MENU**  and select **Edit Text > Text Selection Mode**. Alternatively you can press the **SHIFT** key while rolling the trackball. Either method will put you in “text mode”. A blinking cursor (|) appears.
- 2 Use the D-Pad or trackball to position the cursor where you want your text selection to begin or end.
- 3 Press and hold the **SHIFT** key while using the D-Pad or trackball to select text, starting from the cursor's location. You can deselect the text by releasing the **SHIFT** key and rolling the trackball.
- 4 When finished selecting, press **MENU**  + **C**. Now you can paste (**MENU**  + **V**) the text in any text box on the device. Exit text mode by pressing **DONE** .





View and Save Web Page Images

You can switch your view of a page to “image mode” which allows you to view and save images on a Web page.


- 1 With a Web page on the screen, press **MENU**  and select **Image Selection Mode** (**MENU**  + **L**). You are now in “image mode”.
- 2 Roll the trackball to highlight the image you want to view or save to your device. Note that in this mode, images (instead of hyperlinks) are highlighted as you roll the trackball.
- 3 Press the trackball to select the image. It opens alone on the screen. Zoom the image by pressing the D-Pad up or down.
- 4 Press and hold the trackball to open the context menu. From this menu you can **Save Image** to your Device Album, **Copy Image Location** or **Send** the image link via the options listed.
- 5 Press **DONE**  to return to the Web page, still in image mode. Press **DONE**  again to exit image mode.

 
Web Page Layouts

You can view a Web page in a variety of layouts. To change the view, press **MENU**  and select **View**. Alternatively, you can toggle views using the shortcuts listed below.


- **Screen-Size Layout** - This is the default view, in which the page is fitted to the screen width. To switch to this view press **MENU**  and select **Screen-Size Layout** [**MENU**  + **W**].
- **Full-Size Layout** - In this view the Web page is presented in its original layout. So, only part of the full-size page fits in the screen. To switch to this view, press **MENU**  and select **Full-Size Layout** [**MENU**  + **W**]. To see all of the zoom options when in full-size layout select **View** > **Zoom** submenu.

Mini Page

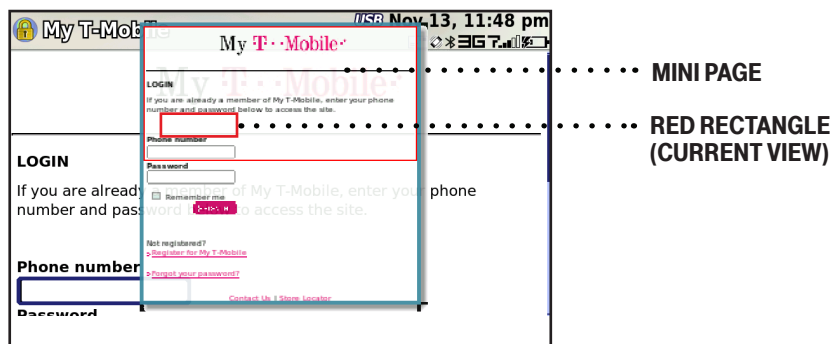


You can see an overview of the whole page so that you can navigate the page and select an area to zoom in on using the **Mini Page** tool. To switch to Mini Page, press [**MENU**  + **SPACE**].



While in **Mini Page**:

- Use the trackball to move the red rectangle to the area you want to view, then press the trackball to view that area in the main screen.
- Scroll quickly the height or width of a page by holding down **MENU**  while rolling the trackball.
- Zoom in/out of the page by pressing the D-Pad up/down. You must be in Full-Size Layout view to zoom.




To navigate a Web page:

- Use the trackball or the D-pad to move right/left or up/down.
- Scroll page by page by holding down **MENU**  while rolling the trackball up/down; or press  to page up,  to page down.



Email



Send an Email Message

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Email**, then press the trackball.
- 2 Using D-Pad left or right, navigate to the tab containing the email account you wish to use.
- 3 Press **MENU**  to open the menu. **New Message** is selected by default; press the trackball to open the Compose screen. Alternatively, press **MENU**  + **N**.
- 4 The text cursor is in the **To** field; type the name or email address of the person to whom you wish to send an email. If you type a name, the Address Book will try to pull the correct email address from your contact data. Add more To fields by typing a comma (,) or semicolon (;). Open the menu to add a **CC** or **BCC**.
- 5 Scroll to the **Subject** field and type the subject of your email.
- 6 Scroll to the message body and type your message.

✓ To delete text in the forward direction, press the **SHIFT + DEL** keys together. To delete the current line of text, press the **ALT + DEL** keys together.

- 7 To save the message as a draft, press **DONE** . To send the message, either select the **Send** button at the bottom of the Compose screen, or press **MENU**  + **M**.

Fetch Email from External Accounts








When you register your device account, you automatically receive an email account that you can use immediately on either your device or the Email application on the Desktop Interface. Your email address is *username*@gmail.com, where *username* is the name you selected during registration.

In addition to the email account that came with your device, you can receive email from (up to) three accounts with external email providers. You can also check some Internet email accounts by using the Web Browser, as described in “Fetch Email Using Your Device’s Web Browser” on page 60.

About Tabs


You can display the email you fetch to your device from external accounts in separate tabs on the Browse Email screen, with each tab containing an Inbox and the other system folders (Saved, Drafts, Sent, Trash).


Here are some tips about using tabs:

- **Navigate Tabs** – The quickest way to navigate tab-to-tab is to press the D-Pad left or right. You can also jump to any tab by pressing **MENU**  then selecting **View** [ + **D**]. The submenu lists all of the email accounts on the device.
- **Hide/Show “System” Tabs** – You can hide or show the Welcome and Add Accounts tabs by pressing **MENU**  then opening the **View** submenu.
- **Move a Tab** – With a tab highlighted, press **MENU**  then select **Move** [ + **O**]. Use the D-Pad to position the tab where you want it, then press the trackball.
- **Rename a Tab** – With a tab highlighted, press **MENU**  then select **Rename**. Type a new tab name in the Rename Tab dialog box, then press **DONE** .


Add an External Account


The instructions that follow explain how to use your device to fetch email from external accounts. You can also set up accounts from the Email application on the Desktop Interface.


- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Email**, then press the trackball.

- 2 Press **MENU**  then select **Accounts > Add Account**. Alternatively you can select the Add Account tab (if shown). Select a provider from the submenu:
 - If you select one of the branded accounts, you will be asked to sign in, agree to the terms of service, and your account will be set up in its own tab. If successful, the last seven days of messages will be fetched to your device.
 - If you select the POP/IMAP option, you can select one of the providers from the list, or choose Other Pop/IMAP, and provide the information, described below.
 - If you selected a named provider, the Mail Server, Port, and Protocol will auto-fill. Otherwise, for **Mail Server**, if you don't know the name of your email server, your email provider will be able to tell you, or if you have an email account through your ISP, contact them for assistance. Reference the table below for samples:

Web Email Provider	Mail Server Name
Yahoo!® Mail	pop.mail.yahoo.com
Mail.com	pop1.mail.com
Softhome.net	mail.SoftHome.net
Gmail	pop.gmail.com


- Select **Protocol** from the pop-up menu. If you aren't sure what protocol your email server uses, select **Auto-detect** (the default selection) or select one of the email services listed at the bottom of the pop-up menu.
 - Complete the **Port** field. Unless your email provider has specified otherwise, leave the port at 110. If you selected a specific email service in the Protocol field, then the Port field will auto-fill correctly.
 - Complete the **Username** field. The name you use to sign in to your account.
 - Complete the **Password** field. The password you use for your account.
- 3 When complete, select **Next** 
 - 4 The **Identity** dialog box appears. Change the **From Name/Address** and/or the **Reply-To Name/Address** fields if you want. These will be

used for all messages sent from this account. When complete, select **Next** .

- 5 The **Email Storage** dialog box appears. Select to store your account email in either a separate tab, or your primary account folder. Select a folder or create a new folder from the pop-up menu. When complete, select **DONE** .
- 6 The system will attempt to sign you in to the account. You will receive notification if there are any sign-in problems.

Edit External Email Account

To edit an existing account, do the following while in the Email application:

- 1 From the Browse Email screen, press **MENU**  then select **Accounts > Edit**. Select the account you want to edit from the submenu.
- 2 The **Edit Account** dialog box opens. Step through the dialog boxes or jump to a specific dialog box from the pop-up menu. In addition to the information you provided when you set up the account, you will see General and Signature categories.
- 3 In the **General** dialog box, you can turn certain functionality on or off:
 - **Collect email from this account** – This option is checked by default. If, at some point in the future, you want the Email application to stop collecting email messages from the external account, uncheck the box. The account information is saved.
 - **Remove retrieved email from server** – This option is not checked by default. This means that as your messages are fetched to your device and Email Desktop Interface, those messages are also kept on your external account's email server. If you want the messages on the server to be removed as they're downloaded to your device, then check this box.
 - **Copy outgoing messages** – You can have each message you send from this account automatically CC'd or BCC'd to another email address. Check the box and type the email address in the text field.

- **Send new message alerts** – This option is checked by default. When checked, after a new message arrives, you will receive a balloon alert and sound and see an icon in the title bar. This assumes you have selected a **New Message Alert** ringtone on the main menu's **Settings > General** screen.
- 4 In the **Signature** dialog box, you can change how the messages from your account are signed. The signature is added automatically to any new message.
 - 5 When you are finished making your edits, select **DONE** ✓. To discard any changes you've made and dismiss the screen, press **CANCEL** ✕.

Fetch Email Using Your Device's Web Browser

If there is a Web interface to your email account, you can use your device's Web Browser application to sign in to those accounts and check your email. A couple popular email Web sites are listed below:

- Yahoo!® Mail – <http://mobile.yahoo.com/home>
- MSN Hotmail – <http://mobile.msn.com/hm/folder.aspx>













Press **MENU** ☰ + **K** to open the Bookmarks screen; some sites may have been bookmarked for you.

To go directly to an email Web site, do the following:

- 1 Press **JUMP** ⚡ to go to the Jump screen. Scroll to highlight **Web Browser**, then press the trackball.
- 2 Begin typing the URL for your Internet email account. Your entry will be inserted in the Go To dialog box automatically.
- 3 Press the trackball to go to the Web site's sign in page.

Attach a Media File or vCard to an Email Message

You can attach up to 2 MB of files to an email message.












- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Email**, then press the trackball.
- 2 Press **MENU**  + **N** to open the Compose screen. Complete the **To**, **Subject**, and **Message** fields.
- 3 Do one of the following to attach a photo, video, vCard, or sound:
 - **Attach Image/Video** – Press  to go to your Camera albums. Roll the trackball to highlight an item, then press the trackball to select an image or video to send. You can select multiple items by holding the shift key while rolling the trackball. Each selected item will display a check mark in the corner. When you've finished selecting, open the menu and select **Use Checked** or press **DONE** .
 - **Attach Voice Recording** – Press  to open the recorder. Press  again to start recording and **DONE**  to stop recording. Review your recording then, when ready, press **DONE** .
 - **Attach Song or Ringtone** – Press **MENU**  and select **Attach > Audio**. Select a song/ringtone category from the audio selector list, then choose a specific song or ringtone from the pop-up menu and press **DONE** .
 - **Attach vCard** – Press **MENU**  and select **Attach > vCard**. Highlight the contact you want to send, then press the trackball to select it.
- 4 Your email message returns to the screen, including attached items. (To remove an attachment, highlight it and press the **DEL** key.) Select the **Send** button or press **MENU**  + **M** to send.


Address Book




Add a Contact to the Address Book

You can store up to **2000** contacts in your Address Book and assign **50** of those as “favorites”.

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Address Book**, then press the trackball.
- 2 Press **MENU**  to open the menu. **New Contact** is selected by default; press the trackball to go to the New Contact Identity screen.
- 3 To create a contact, you only need to type basic “identity” information: a **First** or **Last** name.
On this screen you can also provide a **Middle** name and a **Nickname**, as well as select an icon.
- 4 To select an icon, roll the trackball up to highlight , then press the trackball to open the icon selector. Highlight the icon you want, then press the trackball to select it.
To assign a **Photo Caller ID** icon, select  from the icon selector, which will open the Browse Albums screen. Then, from this screen:
 - To select a photo already in an album, roll the trackball to highlight the photo you want to associate with the contact, then press the trackball to select it. Press **DONE** .
 - To capture a new photo, press . Press  again to capture, then **DONE**  to save the photo. Press **DONE**  again to view the album contents. Select the photo. Press **DONE** .A smaller version of the photo now appears on the Identity screen and will be used to identify that contact on incoming call notifications.
- 5 When finished with the Identity screen, select **DONE** . You advance to the next New Contact screen, in which you can type or select additional contact information.



- 6 Scroll through the New Contact fields (Personal Info, Phone, Email, and so on), selecting **Add** or **Edit** to open screens in which you can add contact details. Set a custom ringtone for your contact in the Add Details dialog box for Phone.
- 7 If a contact has multiple phone numbers, you can mark one of the numbers as Preferred for easy dialing from the Browse Contacts screen.
- 8 When finished, press **DONE**  to save your new contact information.

Assign a Contact as a “Favorite”

You can assign **50** favorite contacts. A favorite contact is marked in the Browse Contacts screen with a heart . All your favorites are listed in the Favorites tab on the Browse Contacts screen. Your MyFaves contacts are automatically marked as Favorites and will be listed in the Favorites tab.

For favorite contacts, when you open their Contact Details screens, you will see an Activity Log tab, which lists the last 15 communications you’ve had with this contact.

To assign a contact as a favorite:

- 1 On the Browse Contacts screen, highlight the contact you want to be a favorite.
- 2 Press **MENU**  and select **Add to Favorites**. Your contact will now appear in the Favorites tab, as well as in the All tab. If you ever want to unassign this contact as a favorite, highlight the contact, press **MENU**  and select **Remove from Favorites**. Note that in order to remove a MyFaves contact from the Favorites tab you must first replace it with another contact in the MyFaves application.

Address Book Tabs

The Browse Contacts screen now has information displayed in tabs:

- **All** tab – Displays all contacts, or a specific category of contacts that you’ve selected from the View submenu.
- **Favorites** tab – Displays all the contacts you’ve assigned to be favorites.
- **Recent Calls** tab – Displays the last 100 calls in the Call Log.

- **Online Now** tab – Displays all your buddies that are online. Note that if you are offline for a specific IM service, then the online buddies for that service will not be displayed.

For more information about using tabs, read “About Tabs” on page 57.

Communicate with a Contact

From the Address Book’s Browse Contacts screen, highlight a contact, then press and hold the trackball. A menu opens that lists all the communication options available for that contact. Select the action you want to take. Alternatively, you can quickly dial the contacts Preferred number by pressing the green call button directly from the Browse Contacts screen.

You can also quickly send an email, instant message, text message, or place a call to a contact from a contact’s “Details” screen:

- 1 Go to the Address Book and select a contact with the trackball. Their Contact Details screen opens.
- 2 The Contact Details screen lists all the information that you have stored for this contact: phone numbers, email addresses, IM screen names, and so on.
- 3 To open a communication with this contact, highlight the phone number or address of interest, then press the trackball to select it. A menu opens with relevant communication options.
- 4 Select the option to send the call, open a compose screen, or an IM conversation.

If you go to the Recent Calls or Online Now tabs, select a call or screen name to open a communication with that contact.

To edit or add contact details, select the **Edit** button on the Contact Details screen.

Import Address Book Contacts




If you have a SIM card from T-Mobile with contact information stored on it, you can import that information to your device by following the instructions in “Import Contacts from Your SIM Card” on page 49 of this guide.






If you have existing contact information stored in a Personal Information Management (PIM) application, you can import that data to your Address Book on the device and Web. To do this, first go to your Address Book on the Web:

- 1 Go to your desktop or laptop computer and sign in to the Desktop Interface (see “The Desktop Interface” on page 42).
- 2 From your Jump page, click **Address Book**.
- 3 Click **Import** in the Address Book sidebar. The Import page opens.
- 4 The Import page includes step-by-step instructions for completing the import process. The following file types (exported formats) can be imported: Microsoft Outlook for PC (.txt file), Microsoft Outlook Express for Mac (.txt file), Microsoft Entourage for Mac (.txt file), Palm Desktop for PC (.txt/.tab file), Palm Desktop for Mac (.txt/.tab file).
- 5 After you click the **Import** button, your contacts are imported to your Web Address Book then sent to your device via the network. Make sure your device has a wireless connection; then, after two to three minutes, check your device to confirm that your new contacts have arrived.



Set and Send “My vCard”

You can set one of your contacts to be “you”, so that you can send “My vCard” to others easily.

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Address Book**, then press the trackball.
- 2 Scroll to highlight the contact you want to set as “you”, then press **MENU**  and select **vCard > Set as My vCard**. On the Browse Contacts screen, you will now see a  icon next to your name.

- 3 To send your vCard, from the Browse Contacts screen, press **MENU**  and select **vCard > Send My vCard via > Email** [**MENU**  + **M**], **Text**, **MMS**, or **Bluetooth** [**MENU**  + **Y**]. For Email, Text and MMS, a compose screen opens. For Bluetooth, a dialog opens that allows you to select the receiving device.
- 4 To change or remove the “My vCard” setting, first press **MENU**  and select **vCard > Clear My vCard**. To set a different contact as “My vCard”, highlight the contact, then press **MENU**  and select **vCard > Set as My vCard**.

Send any Contact’s vCard




- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Address Book**, then press the trackball.
- 2 Scroll to highlight the contact whose vCard you want to send, then press **MENU**  and select **vCard > Send Contact’s vCard via > Email**, **Text**, **MMS**, or **Bluetooth**. For Email, MMS, and Text, a compose screen opens. For Bluetooth, a dialog opens that allows you to select the receiving device.







Calendar



Add an Event to Calendar

You can create and store up to **1000** events in your Calendar.



- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Organizer**, then press the trackball to open the second-level ring of applications. Highlight **Calendar**, then press the trackball.
- 2 Press **MENU**  + **N** to open an Event Details screen.
- 3 Name your event, type a location, assign a duration, add reminders, repetitions, and notes as applicable.
- 4 Press **DONE**  to save the event. It will now appear on your Upcoming (if it’s scheduled within the next seven days), Daily, Week, or Month views.

- 5 To view your schedule, select one of the “Views” from the menu. Each view has a keyboard shortcut:
- Upcoming **MENU**  + 0
 - Day **MENU**  + 9
 - Week **MENU**  + 8
 - Month **MENU**  + 7
 - Year **MENU**  + 6
 - Trash **MENU**  + T




Notes

Create a Note

You can create and store up to **50** notes. Each note can be up to **8000** characters, which is about four pages in a paperback.

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Organizer**, then press the trackball to open the second-level ring of applications. Highlight **Notes**, then press the trackball.
- 2 Press **MENU**  + **N** to open a blank note. Type your note; it is saved as soon as you type it.
- 3 Press the trackball to fold your note; press again to unfold. Notes must be unfolded before you can edit them.

Send a Note via Email

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Planning**, then press the trackball to open the second-level ring of applications. Select **Notes**.
- 2 Create a new note or highlight an existing note.
- 3 Press **MENU**  and select **Send Note** or press **MENU**  + **M**. A compose screen opens with the note in the message body; complete the message and **Send**.

To Do



Add a Task

 
You can create and store up to **50** tasks.

- 1 Press **JUMP** to go to the Jump screen. Scroll to highlight **Planning**, then press the trackball to open the second-level ring of applications. Highlight **To Do**, then press the trackball.
- 2 Press **MENU** + **N** to open a blank task screen. Create your task.
- 3 Press **DONE** to save the task.

Camera





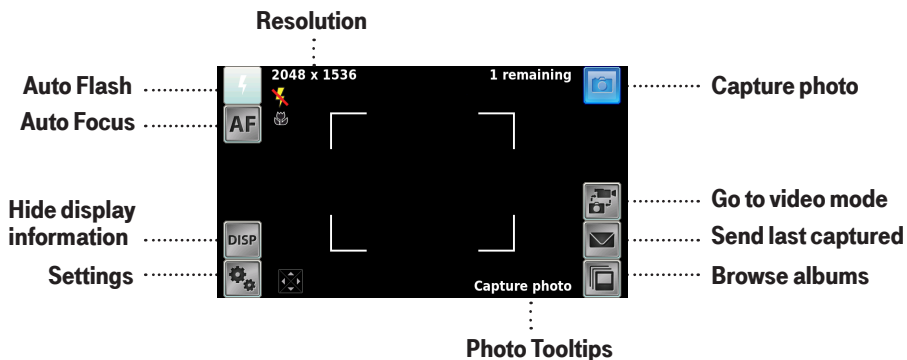









Your device comes with a built-in 3.2 megapixel photo/video camera with built-in flash and auto focus. You can store up to **1.75 MB** of photos on your device's internal memory. You can store more photos plus videos on your microSD card. The number you can store will depend on the capacity of the card and the size of the photos (Small, Medium, or Large) and length of the videos. Remember that you might be sharing the card's capacity with sound files as well.






✓ Before you capture a photo or video, be sure your camera lens is clean!







Albums


Albums are used to organize all photos/videos that are stored both on the device's internal memory (Device Album) and on the memory card (Memory Card Album).



- To access your album(s), press **JUMP**  to go to the Jump screen. Scroll to highlight **Camera**, then press the trackball. Scroll to highlight the album you want to view, then press the trackball. If you do not have a memory card installed, the device album will be open by default.
- To add a new album, from within the camera application press **MENU**  and select **New Album**. You can also use the shortcut **MENU**  + N. Enter a name for the new album and press **DONE** .
- To select all items in an album, open or highlight the album, then press **MENU**  and select **Edit > Check All in Album**, or press **MENU**  + A. To uncheck, select **Edit > Uncheck All** or press **MENU**  + U.
- To move an item to from one album to another, first select the item or items, then press **MENU**  and select **Move Item**. You can also use the shortcut **MENU**  + O. Select the album, you want to relocate the item(s) to. 
- To edit a photo, open the album where the photo is located and highlight the photo. Press **MENU**  and select **Edit**. A secondary menu opens giving you the option to rotate, crop, or reduce the photo and edit the item info. Note that for videos, you can only edit the item info. 
- For information on how to send an album item(s), read “Send Media Files via Bluetooth, Email or MMS Message” on page 71.

Take a Photo

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Camera**, then press the trackball.
- 2 Press **MENU**  and select **Capture** or simply press the right shoulder button . The screen now acts as the “viewfinder”. Note that you can also press the right shoulder button directly from the Jump screen to enter the viewfinder.











- 3 To change the quality and resolution of your photos, press **MENU**  and select **Photo Settings** or select the Settings button.
 - **Resolution** - Select from 2048 x 1536 (3MP), 1600 x 1200 (2MP), 1280 x 960, 800 x 600, 640 x 480.
 - **JPEG Quality** - Select from High, Medium, Low.
 - **White Balance** - Adjust to reflect the light source. Select from Auto, Daylight, Cloudy, Fluorescent, and Incandescent.
 - **Effects** - Select from Off, B/W, Sepia or Negative.
 - **Geotagging** - Select to turn on geotagging and tag your photos with location coordinate information.
 - **Turn photo tooltips on** - Select to display tips.
- ✓ Larger JPEG Quality and Resolution values increase the quality of your photo but require more storage space. The number of pictures remaining is shown in the upper right of the screen.
- 4 You can change your flash or auto focus settings by using the buttons on the left of the screen, or adjust exposure by using the D-pad left/right.
 - Flash Settings** - Auto Flash, On, Off
 - Focus Settings** - Auto Focus, Macro, Infinity
- 5 Use the **DISP** button to hide or show the information on the screen.
- 6 By default, the photo will be saved to the **Memory Card Album**. To save to your device, press **MENU**  and select **Capture to**. From the submenu select **Device Album**, or another album you created on the memory card.
- 7 When you're ready to take your photo, first press the right shoulder button  half-way down to focus. Once the focus box turns green, press the button the rest of the way to capture the photo. If the focus box turns red, release the button and try focusing again. You can also use the trackball to select the capture photo button .
- 8 The photo preview appears on the display. You can:
 - Press **CANCEL**  to discard it; or,
 - Press **DONE**  to save it to the album you've selected. If you do nothing, the photo will be automatically saved after a few seconds.

Once the preview has disappeared, you can select  to send the photo via Email, Audio Postcard, Bluetooth and MMS.



- 9 To return to the album, select  or press **DONE** .

Capture Video

Videos can only be stored on your memory card, so be sure you have a card inserted!

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Camera**, then press the trackball.
- 2 Press **MENU**  and select **Capture**, or simply press the right shoulder button . The screen now acts as the “viewfinder”.
- 3 Make sure you are in “Video mode”. If you are in “Photo mode”, then select the mode button  to switch to “Video mode”.
- 4 To change the quality setting of your video, press **MENU**  and select **VideoSettings** or select the **Settings** button. If you plan on sharing your videos via email or MMS, select the Low Quality video setting to ensure that your videos don’t exceed email or MMS size limits.
- 5 When you’re ready to start your video, press the right shoulder button  or use the trackball to select start recording button. During recording, you will see a red dot at the top of the screen.
- 6 To pause the recording, select the pause button. To end the recording, select the stop button .
- 7 Once you select the stop button, the video is saved to the specified album on your memory card. At this point you can select the send button  to send the video via Email, Bluetooth, and MMS.
- 8 To return to the Browse Albums screen, select  or press **DONE** .

Send Media Files via Bluetooth, Email or MMS Message

To send photos or videos, select the items you want to send from the Browse Album screen, then press **MENU**  and select **Send # Checked via > Email [MENU  + M], Audio Postcard, MMS, or Bluetooth**. For Email and MMS, a compose screen opens. For Audio Postcard, a select picture frame screen opens. For Bluetooth, a dialog opens that allows you to select the

receiving Bluetooth device. The recipient of the file(s) will receive an alert asking them to approve the Bluetooth transfer before it is made.

You can also attach one or more photos/videos while composing an email message or a multimedia message. For instructions, read “Attach a Media File or vCard to an Email Message” on page 62, and “Send a Multimedia Message” on page 50.






Use Photo for Caller ID or Key Guard Background

You can assign the photos you’ve saved in one of your photo albums as a Caller ID or a key guard background image.

To assign a photo as a Caller ID:

Follow the instructions in “Add a Contact to the Address Book”, step 4, on page 62.

To assign a photo as a key guard background image:

- 1 Press **JUMP**  to go to the Jump screen, then press **MENU**  and select **Settings > Key Guard & Security**.
- 2 Press the trackball with the **Select Image** pop-up highlighted. Select  to go to your Camera Albums.
- 3 Select the photo you want to use as the key guard background by highlighting it then pressing the trackball.
- 4 Press **DONE**  to make the assignment, then press **DONE**  again to dismiss the Key Guard & Security screen.

Media Player



Use the Media Player media player to play audio and video files that you have stored on your microSD card. You can use a memory card of any capacity. Remember that you might be sharing the card's capacity with Camera photos and videos.

✓ The media player will play 3GP and MP4 (simple profile) video files, and MP3, M4A, WMA, WAV, AAC, AMR, MIDI, XMF, AIF, RMF audio files; it will not play audio files that are not listed above or any files with DRM protections.

Copy Music or Video to the Memory Card








Before you can copy any songs or videos to your memory card, you must insert a card into the microSD card slot on your device. For instructions, read “Insert and Remove the Memory Card” on page 10.

Once your card is installed, do the following:

- 1 Connect your device to your computer with the USB cable provided in the box. Read more in “Charge the Battery” on page 12.
- 2 On your computer, find the mounted USB drive and open it.
- 3 You should see a folder at the top-level named “Music”. If you do not see this folder, then create it. If you are copying a video file, create a folder named “Video”.
- 4 You're ready to copy audio or video files to the memory card. In the Music folder, it's best if you organize your songs in sub-folders. For example, you could create one folder for each album or artist. Use sub-folders in the Video folder too if that helps you organize the files.
- 5 Copy audio or video files from your computer's hard drive to your device's mounted USB drive, in the folders under “Music” or “Video”, as appropriate.
- 6 When finished copying, close the USB drive window and “unmount” the drive as required by your computer. Remove the USB cable from your device and computer.


Play Music or Video Using the Media Player

Listen to your music and videos using the device speaker, stereo headphones with a 3.5mm jack (including those provided in the box) or a stereo Bluetooth device.

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Media Player**, then press the trackball.
- 2 The Browse Media screen appears. Your music and videos are organized into categories with the number of items in each shown in parentheses. (Files are categorized automatically, based on information contained in the file itself.)
- 3 Select a listening device by pressing **MENU**  and selecting **Listen via**. From the submenu, select your preferred method of listening. If you select a Bluetooth stereo headset, a dialog will open so you can select the receiving Bluetooth device.
- 4 Scroll to highlight a category, then press the trackball to “drill down” to the next level. Here you might see songs/videos or more categories. At any level of the Browse Library screen, simply select the category or item you want to play, and it will be added to the “Play Queue” (all the items that are waiting to be played). You can also use the shortcuts:
 - **MENU**  + **P** - Plays selection (interrupts currently-playing item).
 - **MENU**  + **Q** - Queues selection (waits its turn in the list to play).The progress of the item currently playing is shown at the top of the screen.
- 5 Items playing in a list will not repeat, but you can change this setting by pressing **MENU**  then selecting **Shuffle and Repeat**. Choose from **Shuffle**, **Repeat**, **Repeat 1**, or **No Repeat**.
- 6 To control play from anywhere on your device, press **JUMP**  + **DONE**  and the mini media player will open. Read more in “Mini Media Player Controls” on page 25.

Streaming Video

You can now stream videos from popular Internet sites.



- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Web Browser**, then press the trackball.
- 2 Type the address of the Web page containing videos you wish to view.
- 3 Roll the trackball to the picture or link of the video and then press the trackball to select the video to display. The device will fetch the stream and perform buffering prior to displaying the video.

Listen Using Stereo Bluetooth Headset





You can use a Bluetooth stereo device to listen to music or video. To pair and set your headset for use with the Media Player, read “Bluetooth Hands-Free Headset or Car Kit” on page 27.

Create a Playlist

You can create as many playlists as you wish and edit them at any time. Here’s how:

- 1 From the Browse Library screen, select one of the top-level categories, then find a song, video, artist, album, genre, or composer you want in a playlist.
- 2 With the song, video, artist, album, genre, or composer highlighted, press **MENU**  and select **Add to Playlist > New Playlist**.
- 3 Give your new playlist a name in the dialog box that opens. Press **DONE**  to save the playlist.

Now your newly-created playlist will be included in the Playlists category on the Browse Library screen.



- To add songs to this or any playlist, highlight an item or category, press **MENU**  and select **Add to Playlist > “Playlist Name”**.
- To remove an item from an existing playlist, open the playlist, then highlight the item. Press **MENU**  and select **Remove from Playlist (MENU  + )**.

Download Catalog



Download Items from the Catalog



Download ringtones, applications, games, and themes from the Catalog! You'll find that browsing the Catalog and purchasing items is easy and fun:

 
- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Download Catalog**, then press the trackball.
- 2 Wait while the latest Catalog contents load. (If you leave the Catalog while the contents are loading, you'll see a marquee notification in the title bar once all items are loaded.)
- 3 Use the trackball to scroll through the Catalog categories. The categories are organized like the Jump screen in a "ring" on the left, with each category's splash screen on the right. Highlight, then press the trackball to open a category's Browse Items screen.
 - ✓ If you know the name of the item you're interested in, press **MENU**  + **F** to open the Find dialog box. Type the name of the item then select **Find**. Matches will appear; select the item of interest to open its Item Details screen.
- 4 Individual items are grouped into folders. Highlight a folder, then press the trackball to open a folder's items. Once you find an item you're interested in, select the item to open its Item Details screen.
- 5 To listen to a brief sample of a ringtone or view sample screenshots of an application or theme before you purchase it, select the **Preview** button. Select **Purchase** to step through the simple on-screen purchase process.
- 6 Once purchased, your item will be downloaded to your device, network connectivity permitting. Download time varies according to the size of the application. You'll be notified with the Ready to Install dialog when your item is ready to be installed. Select **Install** to install immediately or select **Install Later** to add the item to your Downloads list, where you can find it and install it whenever you like (see the next section, "Manage Your Downloaded Items").


- 7 If your item is not delivered immediately, you can check the download process from the Downloads screen, described below.

Manage Your Downloaded Items

To install or remove a downloaded item; check the download status of a purchased item; or view a list of all the downloads you have made through the Catalog (including details such as price, subscription term, upgrade information), go to the Downloads screen:

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Download Catalog**, then press the trackball.
- 2 Scroll to **Downloads**, then press the trackball to open the Downloads screen.
- 3 All your downloads are listed on this screen, organized into folders by categories. Highlight a folder, then press the trackball to reveal the items within.
- 4 Items currently being downloaded or waiting to be installed are shown in *italic* with the “transmitting” icon . Items that have been uninstalled are shown in *italic*.
5. To install an item, select it using the trackball, then select **Install** from the Ready to Install dialog.

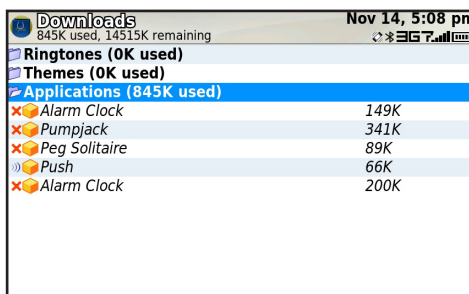


- 6 To view item details, highlight the item then press the trackball. To discard any highlighted item permanently, press **MENU**  then select **Discard**.


Instant Messaging

You can use all of the instant messaging applications at the same time!

Sign On


- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Instant Messaging**, then press the trackball to open the second-level ring of applications. Highlight the IM application of your choice, then press the trackball. The Sign On screen appears.
 - 2 Type your username and password (passwords are case-sensitive), then select the **Sign On** button.
 - 3 Your list of friends appears. You are ready to send an instant message.
-

Send an Instant Message

- 1 Press **JUMP**  to go to the Jump screen. Scroll to highlight **Instant Messaging**, then press the trackball to open the second-level ring of applications. Select the IM application of your choice.
 - 2 Sign on with your username and password; the screen listing all your IM friends' usernames displays.
 - 3 To start a conversation with a friend on your list, scroll to highlight the friend's username, then press the trackball to start a conversation.
 - 4 Type your message. When ready, press the Return key to send.
-

Switch Between IM Conversations



























You can have up to 10 IM conversations open at the same time. You can switch between conversations quickly by doing one of the following:

- **From Menu** – Press **MENU**  + **D** to open the **IM Conversations** submenu, which lists all your open conversations. Scroll to highlight the conversation you want to open, then press the trackball.
- **Using Conversation Number** – Each open IM conversation has a number (0-9), which is displayed in the IM Conversations submenu, as well as on the screen displaying your list of friends. From any screen

in IM, including the IM splash screen, you can quickly switch between conversations by pressing **MENU**  + the IM conversation number.

- **From Friends List Screen** – On the screen listing all your friends' usernames, scroll to highlight the conversation to which you want to switch, then press the trackball.

Keyboard Shortcuts

Call a speed dial number	Press and hold speed dial # on keyboard while in Phone or on Jump screen.
Redial last number	Press JUMP  ,  ,  .
Answer an incoming call	Press trackball or  .
Ignore incoming call (call forwards)	Press  .
Hang up active call	Press  .
Mute your device when ringing	Press any key, except  .
Create a new note, message, event, task, to do, or contact	Press MENU  + N .
Insert Unicode character	Press SYM key.
Discard item	Highlight item, press MENU  + CANCEL  .
Send a composed message	Press MENU  + M .
Open latest unread message	Press JUMP  + 0 .
Delete all text in a single line	Press ALT + DEL .
Put device in key guard mode	Press and hold DONE  two seconds.
Unlock device	Press MENU  + DONE  .
Power device on/off	Press and hold  for three seconds. Press  twice to power off.
Open Sound Controls	Press MENU  + DONE  .
Open mini music player	Press JUMP  + DONE  .
Open Quick Jump menu	Press JUMP  + CANCEL  .
Scroll page-by-page	Hold MENU  and roll trackball; or, press  to page up,  to page down.
Find an item across apps	Press JUMP  + F .


Troubleshooting

How do I know when my account is ready to register for data services?

Once your account is ready for you to register for data services, you will see a “Welcome” message on your screen. If the Welcome message doesn’t appear on your device within 48 hours, contact T-Mobile Customer Care department.

In order to comply with airline regulations, how can I temporarily disable wireless connectivity when traveling?

Remember to switch to “Airplane Mode” during aircraft takeoff and landing. To turn off wireless connectivity (to comply with FAA regulations) follow these instructions:

- 1 From the Jump screen, press **MENU**  , and select **Airplane Mode > Turn Wireless Off**.
- 2 Your device is now offline. Confirm offline status by looking at the title bar; the radio icon and “OFF” should blink alternately.

Even without wireless connectivity, you can still access the device applications and read email messages that have already been downloaded. However, you will not be able to send or receive messages until you enable wireless connectivity again.

How can I protect my device from damage?

The best way to protect your device is to carry it with the display closed and in the protective sleeve supplied in the box. You risk damaging your device if you do not protect the display. Also, water—even in small amounts or in the form of steam—can seriously damage your device and charger, so keep your device dry and away from potential water sources.

I needed to remove my battery, so I did. After I put the battery back in my device, it powered up, but all my messages and other data were gone. Is it all gone for good?

No, all your data is regularly saved in an ongoing basis to the Danger service so it is safe. If you wait a few minutes, all your data will be restored to your device. (Note, however, that any data you entered or modified between the last save to the Danger service and when you removed the battery will be lost.)


Chances are you removed the battery before powering off your device. Every time you power off your device, your data is saved to the device's internal flash memory. However, if you remove your battery before shutting down, your data will not be saved to flash. It is recommended that you always power off your device before removing the battery!

How can I improve radio reception when I'm in a "fringe" coverage area?

Try the following to improve radio reception:

- Use the hands-free headset and position the phone away from your body.
- Walk to a window if you are indoors.
- Step outside of buildings that have high metal, concrete, or earthen content, because they may absorb radio signals.
- Step away from metallic windows because they absorb RF energy.
- Go to the highest spot possible to make the call.
- Step away from computers or electronic equipment.
- If you are in a car, first park, then try the call from outside the car.
- If you are near or directly under a cellular/PCS radio tower, walk at least one block away.

My device has not connected to the service for quite a while. Is there anything I can do myself before calling Customer Care?

Yes, try powering your device off and on. After your device boots, you'll know you've connected to the service when you see the  in the title bar again.

What can I do when the device is frozen?

Remove the battery, wait for one minute or so, then put the battery back in the device.

What Web browsers do you support on the Desktop Interface?

Web browsers IE 5+ are supported on both the Windows and Macintosh operating systems, as well as Firefox and Safari.

Why do the Web pages I open using the device's Web Browser application appear different from the pages I open on my desktop computer?

The Web pages displayed on your device have been reformatted so they are easier to read on a small display. The same or similar information displays; it's just laid out on the screen so that it's easier to view on your device.

What are the requirements for getting my POP or IMAP email accounts to appear on my device?

To fetch messages from an email account, you must gather the following information:

- Name of the remote email server (e.g., mail.example.com).
- Protocol used by the remote email server (e.g., POP, IMAP).
- Your username on the remote email server. (For example, if your email address is joe@example.com, then your username is "joe".)
- Your password on the remote email server. This is the same password you use to open the remote email directly.

Most Internet Service Providers and University email systems work with the POP3 protocol. If you are not sure of the protocol, use the **Auto-detect** setting, or you can call or email your remote service and ask what protocol they support. The remote service operators can also tell you the name of the remote email server.

Once you have all this information, set up your external account by following the instructions in “Fetch Email from External Accounts” on page 56 of this guide. Once set up, your remote email account will be checked periodically and a copy of all new, unread messages will be placed in the Email mailbox on your device.

How secure is my account data on the Desktop Interface? There may be sensitive information stored in contact information (for example, credit card numbers) that must be secure!

Information in your account is stored on servers in a data center with enhanced security and firewall features. Please refer to the T-Mobile Privacy Policy and the Danger® Service Privacy Notice for more information.

What should I do if I need a replacement part for my device or if I need to have my device repaired?

Contact T-Mobile Customer Care department for support.

How can I clean my device screen?

The screen on your device is coated with a protective layer of polycarbonate. You can safely use warm soapy water, denatured alcohol, or isopropyl alcohol to remove dirt and smudges from your screen. Be sure to use a very soft cotton cloth, such as an old t-shirt, to prevent scratching when wiping the screen.

How do I report a lost device?

Call T-Mobile Customer Care department to report the lost device as soon as possible! T-Mobile will disable your lost device and your existing data will remain stored on the service, assuming no one has tampered with the data since you lost the device. When you receive your new device, your account data will be downloaded to it automatically after you sign in with your existing username and password.

The device is not charging when I connect it to a personal computer using the USB cable. What's wrong?

Some personal computers are not able to charge your device using the USB cable. If this is the case with your computer, when you attach your device to the computer, you will see an alert on the device telling you that you are receiving a USB charge that is too low for charging your device. Instead, use the power adapter included in the box for charging.

Why can't I use the Location Base Service (LBS)?

Confirm that the LBS is not set to off. Also, note that the LBS will not function if the device is in 'Airplane Mode'. You cannot use the Location Based Service (LBS) when you are underground or in a building. The LBS may be slow or may not function properly when surrounded by obstacles, or buildings, or when the LBS antenna is covered by your hand. The LBS antenna is located by the D-Pad.

Handling and Safety Precautions

The Sidekick is a mobile computing device that may break if dropped, subjected to severe shock, or exposed to water. Please handle the device carefully and read the precautions listed below. These precautions provide essential information for the safe handling of the product and for the protection of the users and others from possible harm.

! During a call, the sound level on your device may vary, depending on how you are routing the sound. Keep the volume at a moderate level to prevent damage to your hearing, and be careful not to switch accidentally to speakerphone (by pressing the right shoulder button) while the phone is against your ear.

Battery Handling

- Your device uses a removable lithium-ion battery. Lithium-ion batteries are recyclable. Never dispose of the battery or the unit by incineration or ordinary waste.
- Always turn off your device before removing the battery.
- Never attempt to disassemble or modify the battery.
- Never touch any fluid that may leak from the removable battery, because doing so may result in injury to the skin or eyes.
- Never drop your device or subject it to severe shock. This may cause the removable battery to leak, ignite, and/or rupture. Always immediately remove your device from the vicinity of any open flame in the event the built-in battery leaks or emits an unusual odor.

Device Handling and Use

- Never attempt to disassemble, repair, or modify your device. Such action may result in bodily injury, or damage to the unit or other property.
- Never touch liquid that might leak from a broken liquid crystal display (LCD), because doing so may cause a skin rash.
- Keep the volume at a moderate level to avoid damage to your hearing.
- Never dispose of your device with ordinary waste.
- Never allow infants, small children, or animals within reach of your device.
- Never play the CD-ROM containing the Reference Guide (included in the box) on an audio CD player. Doing so might result in a loud noise that could damage your ears or speakers.
- Switch off your device or put your device in “Airplane Mode” when in an aircraft. The use of the device in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network, and is illegal. Failure to observe this instruction may lead to suspension or denial of cellular telephone services to the offender, or legal action, or both.
- Check with your doctor if you have a pacemaker or hearing aid to make sure you can safely use the device’s cellular and Bluetooth radio frequencies.
- Persons with pacemakers:
 - Should **always** keep the phone more than six inches from their pacemaker.
 - Should not carry the phone in a breast pocket.
 - Should use the ear opposite the pacemaker to minimize the potential for interference.
 - If you have any reason to suspect that interference is taking place, turn your phone **off** immediately.
- Your phone contains exposed magnets, which may cause damage to credit cards, magnetic ID cards, and other magnetically encoded materials. Do not place these or other items that are sensitive to

magnetic fields near the exposed magnets. For example, do not place your phone in the same pocket as your credit card or hotel key.

- Never attempt to dry the device using a microwave oven.
- Using this device for long periods of time (e.g., playing games) may cause the device and the battery charger to get warm. If you feel the device or the battery charger to get warm. If you feel the device or the battery charger is too warm, avoid sustained contact with exposed skin otherwise this might cause discomfort, or eventually a burn.
- The Health Industry Manufacturers Association recommends that a minimum separation of six (6”) inches (15.24 centimeters) be maintained between the phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.
- Certain locations (e.g., hospitals) may restrict the use of any device that emits low-level RF energy. Always comply with posted prohibitions of the use of RF-emitting devices.
- Do not use the device when at a refuelling station.
- Observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress.
- It is advised that the device not be used by a driver while the vehicle is moving, except in an emergency. Speak only into a fixed, neck-slung or clipped-on microphone, or Bluetooth headset when it would not distract your attention from the road.
- Never allow any metallic objects (e.g., staples, paper clips) to become inserted into your device, as this could result in the generation of excess heat or fire.
- Never use or store your device in the following locations:
 - Anywhere it may be exposed to water (e.g., bathroom, sauna)
 - Conditions of high humidity (e.g., rain or fog)
 - Conditions of extreme high temperatures (e.g., near fire, in a sealed car)
 - In direct sunlight

- Locations or sites subject to strong vibration
- Using this device for long periods of time (e.g., playing games) may harm your hands or eyes. For your health and safety, take a 10-15 minute break every hour.
- If you have experienced seizures or blackouts that are caused by watching flashing lights, consult a doctor before using this device.
- Use your device in areas with the following ambient environmental condition:
 - Normal operation: 0°C to 40°C (32°F to 104°F), with humidity of 30% to 80%

Battery Charger Handling

- The device is intended for use when supplied with power from the battery charger included in the box with your device, or via a USB cable to an approved USB host. Other usage will invalidate any approval given to this device and may be dangerous.
- Charge the device within the temperature range of 5 to 35 degrees Celsius, or 41 to 95 degrees Fahrenheit, for the fastest charging time.
- Never place the battery charger on any surface that can be marred by exposure to heat; always place the battery charger on a heat-insulating surface.
- Never use a battery charger that has received a sharp blow, been dropped, thrown from a speeding vehicle, or is otherwise damaged; doing so may damage your device.
- Never place the battery charger adjacent to any heat source.
- Never leave the battery charger close to an open container of liquids.
- Never use a worn or damaged battery charger cable or plug, or a worn or damaged extension cord or plug.
- When traveling abroad, never plug the battery charger into a power source that does not correspond to both the voltage and frequency specified on the charger.
- Always confirm that the battery charger plug has been fully inserted into the receptacle to ensure a secure electrical connection.
- In the event of any unusual odor or smoke, always immediately disconnect the battery charger from the device and the power outlet,

then power off the device.

- It is normal for the battery charger to become warm when charging. Disconnect the battery charger from the outlet when not in use.
- Never attempt to disassemble or repair an battery charger, power supply cables, or plugs, because doing so exposes you to electric shock.

CAUTION

IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS

DANGER TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN THE UNITED STATES, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

! RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE FOLLOWING INSTRUCTIONS:

BATTERY DISPOSAL THIS PRODUCT CONTAINS A LITHIUM-ION BATTERY. THIS BATTERY MUST BE DISPOSED OF PROPERLY. CONTACT LOCAL AGENCIES FOR INFORMATION ON RECYCLING AND DISPOSAL OPTIONS IN YOUR AREA.

Regulatory and Compliance Information

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Notice

This class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Exposure to Radio Frequency (RF) Signals

THIS MODEL DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government and Industry Canada of the Canadian Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. In the United States and Canada, the SAR limit for mobile devices used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The FCC has granted an Equipment Authorization for this wireless device with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information for this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: APYNAR0065 for the PV300 model (850/900/1700/1800/1900/2100 MHz).

✓ For body-worn operation, to maintain compliance with FCC RF exposure guidelines and IC RF exposure rules, keep the Sidekick at least 5/8 inch (15 mm) away from the body, and only use the carrying cases, belt clips, or holders that do not have metal parts and that maintain at least 5/8 inch (15mm) separation between the Sidekick and the body. When carrying the device on your person, it is recommended to turn the screen display in toward the body in order to minimize RF exposure and maximize antenna efficiency.

Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Regulatory Compliance Information for Europe

EU Declaration of Conformity

Hereby, Sharp Corporation, declares that model PV300 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:
http://sharp-world.com/products/wireless_pda/index.html

Recycling Information



The RBRC™ Battery Recycling Seal on the Lithium-ion (Li-ion) battery/battery pack indicates Personal Communications Devices, LLC is voluntarily participating in an industry program to collect and recycle these battery/battery packs at the end of their useful life, when taken out of service in the United States or Canada. The RBRC™ program provides a convenient alternative to placing Li-ion batteries into the trash or municipal waste stream, which is illegal in some areas. Please call 1-800-822-8837 for information on Li-ion battery recycling in your area. Personal Communications Devices, LLC involvement in this program is part our commitment to preserving our environment and conserving our natural resources. (RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.)

Legal Information

Danger® Service and End-User License Agreement

IMPORTANT: PLEASE CAREFULLY READ THIS SERVICE AND END-USER LICENSE AGREEMENT (THE “AGREEMENT”) BETWEEN YOU AND DANGER, INC., A SUBSIDIARY OF MICROSOFT CORPORATION, (“DANGER”) BEFORE YOU USE YOUR WIRELESS DEVICE (THE “DEVICE”). YOUR USE OF THE DEVICE OR THE SERVICE FOR THE DEVICE SHALL CONSTITUTE YOUR BINDING ACCEPTANCE OF ALL OF THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO ALL OF THE TERMS AND CONDITIONS OF THIS AGREEMENT, THEN YOU MAY NOT USE THE DEVICE OR THE SERVICE AND SHOULD PROMPTLY RETURN THE DEVICE TO THE PLACE WHERE YOU PURCHASED IT.

Danger owns and operates a service that enables certain features on your Device, including email, Internet access, instant messaging, address book, and calendar functions, and that also allows you to access such features from a Web site operated by Danger (the “Service”). Your use of the Service and the Software (as defined below) in the course of operating your Device is subject to the terms and conditions of this Agreement. Danger reserves the right to change or modify any of the terms and conditions contained in this Agreement or any policy referenced herein at any time and in its sole discretion. You may access this agreement at www.danger.com/legal. If the Agreement is changed, we will post the new terms to such Web page. Any changes or modifications will be effective upon posting, and your continued use of the Service or Software after the posting of such changes will constitute your binding acceptance of the Agreement as revised.

1. Software

1.1 Definition. “Software” means any computer software, in executable code form, owned by Danger (or software owned by third parties, which Danger has the right to distribute or sublicense) and either pre-loaded on the Device at the time of manufacture or otherwise furnished to you by Danger in its sole discretion. “Software” includes the Danger® operating system and applications, including any and all updates to the same.

1.2 License Grant. Subject to the terms and conditions of this Agreement, Danger hereby grants to you a nonexclusive, nontransferable, nonsublicenseable license to use, perform, and display the Software using the Device upon which the Software was originally installed, and solely as necessary to operate the Software in accordance with the applicable documentation.

1.3 Restrictions. You may not (a) reproduce, distribute, sublicense, use for service-bureau purposes, sell, lease, or otherwise transfer the Software to any third parties; (b) modify, alter, improve, “hack,” or create derivative works of the Software; or (c) reverse-engineer, decompile, disassemble, reverse-assemble, or otherwise attempt to derive the source code of the Software.

1.4 Third-Party Software. You understand and agree that in addition to the Software, the Device may contain certain third-party software (“Third-Party Software”) the use of which may be subject to separate license agreements containing additional terms and conditions. Any such license agreements will be provided to you separately. You hereby agree to comply with all such additional terms and conditions in your use of the Third-Party Software.

2. Ownership. The Software is licensed to you, not sold. Danger and its licensors retain exclusive owner-

ship of all proprietary rights, including all patent, copyright, trade secret, trademark and other intellectual property rights worldwide, in and to the Service and the Software (including any corrections, bug fixes, enhancements, updates or other modifications thereto). There are no implied licenses under this Agreement, and all rights not expressly granted are hereby reserved.

3. Use of the Service

3.1 Wireless Service Provider. In addition to Danger's terms and conditions set forth in this Agreement, you agree and acknowledge that your use of the Service is subject to your wireless carrier's terms and conditions of service.

3.2 Privacy. You consent to the collection, use and disclosure of your personal information outlined in this section and in the Danger Service Privacy Notice.

In order to provide you the Service, and to improve, enhance and diagnose issues with the Software and the Service, we may collect information about your use of the Software and the Service such as Web pages you view, the links you click and other actions you take using the Software and the Service, your usage of certain features of the Service and the number of messages you send and other similar information ("Usage Information"). This Usage Information is not associated with your account information without your consent except as specifically provided in the Danger Service Privacy Notice and is used and disclosed as described in the Danger Service Privacy Notice. We may automatically upload Usage Information from your Device.

We may access or disclose information about you, your account and/or the content of your communications, in order to: (a) comply with the law or legal process served on us; (b) enforce and investigate potential violations of this Agreement; including use of the Service to participate in, or facilitate, activities that violate the law; (c) protect the rights, property or safety of Danger, its employees, its customers or the public; or (d) as otherwise disclosed in our Danger Service Privacy Notice.

Personal information collected by Danger may be stored and processed in the United States or any other country or region in which Danger or its affiliates, subsidiaries or service providers maintain facilities. By using the Danger Service, you consent to any such transfer of information outside of your country or region.

3.3 Your Account. All information that you provide in connection with your registration for the Service must be accurate. You will receive a password and username upon completing your registration. You are responsible for maintaining the confidentiality of the password and account information, and are fully responsible for all activities that occur under your password or account. You agree to immediately notify your wireless network operator of any unauthorized use of your password or account or any other breach of security.

3.4 Prohibited Activities. You agree not to use the Service to: (a) directly or indirectly violate any applicable laws, rules, or regulations issued or promulgated by any competent government authority, including without limitation any intellectual property laws, privacy laws, computer fraud or abuse statutes, or export control laws; (b) upload, post, email or transmit any content that you do not have the right to post or transmit under any law, contractual duty or fiduciary relationship; (c) upload, post, email or transmit any content that infringes a third party's trademark, patent, trade secret, copyright, publicity, privacy, or other proprietary right; (d) upload, post, email or transmit any materials that are unlawful, untrue (including incomplete, false or inaccurate biographical information), harassing, libelous, defamatory, abusive, tortious, threatening, obscene, pornographic, indecent, hateful, abusive, or harmful (including but not limited to viruses, corrupted files, or any other similar software or programs); (e) violate, attack, or attempt to violate or attack the security, integrity, or availability of any network, service, or other computer system; (f) send mass unsolicited or unauthorized electronic messages or "spam", including without limitation, promotions or advertisements for products or services; (g) send altered, deceptive or false source-identifying information (including forged TCP/IP headers); or (h) use the Service in a manner that otherwise vio-

lates Danger's then-current Acceptable Use Policy, the latest version of which is available at www.danger.com/legal. Violations of any of the above will be investigated by Danger and, where appropriate, Danger may either institute legal action, or cooperate with law enforcement authorities in bringing legal proceedings, against users who violate this Agreement.

3.5 Third-Party Content and Services. In the course of using the Service, you may download to the Device content that is provided by third parties and/or access services and Web sites provided by third parties, including third-party Web sites accessible through links from the Service. Danger is not responsible for the content, products, materials, or practices (including privacy practices) of any such Web sites or third-parties. You understand that by using the Service you may be exposed to third-party Web sites or content that you find offensive, indecent or otherwise objectionable. Danger makes no warranty, representation, endorsement, or guarantee regarding, and accepts no responsibility for, the quality, content, nature or reliability of third-party Web sites (including Web sites accessible by hyperlink from the Service) or third party products or services accessible via the Service. Danger provides links to third-party Web sites for your convenience only and Danger does not control such Web sites. Danger's inclusion of links to third party Web sites or access to third party products does not imply any endorsement of the third parties or their products and services. It is your responsibility to review the privacy policies and terms of use that apply to third party Web sites you visit or to third party content and services you access. In no event will Danger be liable to you in connection with any Web sites, content, products, services, materials, or practices of a third party.

3.6 Consent for Internet Based Services. Danger provides Internet-based services with the Service. It may change or cancel them at any time. Certain features of the Service connect to Danger or service provider computer systems over the Internet. In some cases, you will not receive a separate notice when they connect. **BY USING THESE FEATURES, YOU CONSENT TO THE TRANSMISSION OF THE INFORMATION DESCRIBED BELOW.**

(a) *Computer Information.* Features that access the Internet will send to the appropriate systems computer information, such as your Internet protocol address, each time the features access the Internet.

(b) *Automatic Update Feature.* Each time you use the Service, the Service checks with Danger for a newer version of the Software. If found, the newer version automatically downloads and installs on your personal Device. In certain cases, updates will be required and you will not be able to use certain features of the Service without first installing the Software update.

3.7 Uploading and Downloading of Information. You hereby agree and acknowledge: (a) that Software, data, and other information may be downloaded from Danger to your Device and requests for information may be uploaded from your Device to Danger on a regular basis; (b) that Danger makes no guarantee of, and is not responsible for, the accuracy or completeness of any downloaded information; and (c) that the Service may be inoperable from time-to-time and Danger shall incur no liability for such inoperability. You also hereby agree and acknowledge that any information, content or software that you upload or download using a particular Device model may not be available to you in the event that you switch to a different Device model.

4. Intellectual Property Rights

4.1 Copyright. All content included on the Device, including graphics, text, images, logos, button icons, images, audio and video clips and software, as well as the compilation of the content, is the property of Danger and/or its licensors ("Danger Material") and is protected by U.S. and international copyright laws. Any unauthorized use of Danger Material may violate copyright, trademark or other laws. Additionally, certain other content, including, websites, photographs, images, text, graphics, video clips, audio recordings, or other content accessed or transmitted through the Service may be copyrighted by third parties and protected by U.S. and international copyright law. Materials that are copyrighted may be viewed as presented and are for personal use only. Unless otherwise authorized by law, you agree not to alter, falsify,

misrepresent, modify, copy, reproduce, republish, upload, post, transmit, distribute or otherwise utilize such materials without the express, written permission of the copyright holder. Unauthorized copying or distribution of copyrighted works is an infringement of the copyright holders' rights. Pursuant to the Digital Millennium Copyright Act, Danger reserves the right to terminate the accounts of users of the Service who are infringers of the copyrights of others.

4.2 Trademarks. Danger®, hiptop®, the Danger logo, the hiptop logo, and the powered-by-danger logo are trademarks, service marks, and/or registered trademarks of Danger, Inc. in the United States and in other countries. You agree not to use Danger's trademarks (i) to identify products or services that are not Danger's, (ii) in any manner likely to cause confusion, (iii) in or as a part of your own trademarks, (iv) in a manner that implies that Danger sponsors or endorses your products or services or (v) in any manner that disparages or discredits Danger. You must have Danger's prior written consent before you use Danger's trademarks in any way.

5. No Monitoring; Necessary Disclosures. You acknowledge that Danger does not pre-screen or monitor content posted to or transmitted through the Service, but that Danger shall have the right (but not the obligation) to remove any content in its sole discretion, including, without limitation, any content that violates this Agreement. In addition, Danger reserves the right to disclose all content that you upload, post, email, transmit or otherwise make available via the Service (whether or not directed to Danger) if required to do so by law or in the good faith belief that such disclosure is necessary or appropriate to conform to the law or comply with legal process served on Danger or its service partners, to protect and defend the rights or property of Danger, the Service, Danger's service partners or end users, whether or not required to do so by law, or to protect the personal safety of our end users or the public.

6. Termination. You agree that Danger or its service partners, in their sole discretion, may immediately terminate your access to the Service (whether directly or through your wireless carrier) if they believe that you have violated the terms and conditions of this Agreement and/or the Acceptable Use Policy. You agree that any termination of your access to the Service may be effected without prior notice, and acknowledge and agree that, upon termination, Danger and its service partners may immediately deactivate or delete your account and all related information, emails, files and other data in your account and/or bar any further access to such files or the Service. Further, you agree that neither Danger nor its service partners shall be liable to you for any termination of your access to the Service hereunder.

7. NO WARRANTIES. THE SERVICE AND SOFTWARE ARE PROVIDED BY DANGER ON AN "AS IS" BASIS. DANGER, ITS SUPPLIERS AND SERVICE PROVIDERS HEREBY DISCLAIM ALL REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESS, IMPLIED, OR STATUTORY, RELATING TO THE SERVICE OR THE SOFTWARE (INCLUDING ANY INFORMATION, CONTENT, MATERIALS OR PRODUCTS THAT YOU MAY ACCESS THROUGH THE SERVICE), INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS, ACCURACY OF INFORMATIONAL CONTENT, AND ANY WARRANTIES ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE. WITHOUT LIMITING THE FOREGOING, YOU ACKNOWLEDGE THAT DANGER, ITS SUPPLIERS AND SERVICE PROVIDERS DO NOT WARRANT OR REPRESENT THAT THE SERVICE OR THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE SERVICE OR THE SOFTWARE WILL BE TIMELY, SECURE, UNINTERRUPTED, OR ERROR-FREE, THAT DEFECTS IN THE SERVICE OR THE SOFTWARE WILL BE CORRECTED, THAT ANY CONTENT OR INFORMATION CONTAINED IN THE SERVICE OR ACCESSED THROUGH YOUR USE OF THE DEVICE WILL BE ACCURATE, COMPLETE, RELIABLE, OR ERROR-FREE, THAT THE SOFTWARE OR ANY MATERIALS AVAILABLE FOR DOWNLOAD FROM THE SERVICE WILL BE FREE OF VIRUSES

OR OTHER HARMFUL COMPONENTS, OR THAT THE SERVICE WILL BE FREE FROM UNAUTHORIZED ACCESS (INCLUDING THIRD PARTY HACKERS OR DENIAL OF SERVICE ATTACKS). FURTHER, AS THE WIRELESS CARRIER IS NOT CONTROLLED BY DANGER, NO WARRANTY IS MADE AS TO COVERAGE, AVAILABILITY OR GRADE OF SERVICE PROVIDED BY THE WIRELESS CARRIER. PLEASE NOTE THAT SOME JURISDICTIONS MAY NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO SOME OF THE ABOVE EXCLUSIONS MAY NOT APPLY TO YOU.

8. LIMITATION OF LIABILITY. IN NO EVENT SHALL DANGER, ITS SUPPLIERS OR SERVICE PROVIDERS BE LIABLE TO YOU FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, EXEMPLARY, PUNITIVE, OR OTHER DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION OR DATA, OR OTHER PECUNIARY LOSS) RESULTING FROM YOUR ACCESS TO, OR USE OR INABILITY TO USE THE SERVICE OR SOFTWARE (INCLUDING AS A RESULT OF AN OUTAGE OF THE SERVICE PROVIDED BY YOUR WIRELESS CARRIER OR ANY OTHER THIRD-PARTY SERVICE PROVIDER, OR WITH RESPECT TO THE INFORMATION, SERVICES, CONTENT OR ADVERTISEMENTS CONTAINED ON OR OTHERWISE ACCESSED THROUGH THE SERVICE. IN NO EVENT WILL DANGER, ITS SUPPLIERS OR SERVICE PROVIDERS BE LIABLE TO YOU IN CONNECTION WITH THE SERVICE OR THE SOFTWARE FOR ANY DAMAGES IN EXCESS OF TWO HUNDRED U.S. DOLLARS (U.S. \$200).

9. Indemnity. You agree to defend, indemnify, and hold harmless Danger, its officers, directors, employees and agents, from and against any claims, actions or demands, including without limitation reasonable attorneys' fees, made by any third party due to or resulting from your violation of this Agreement.

10. Export Controls. You agree and acknowledge that the Software may contain cryptographic functionality the export of which is restricted under U.S. export control law. You will comply with all applicable laws and regulations in your activities under this Agreement, including without limitation all export laws and regulations of the U.S. Department of Commerce and all other U.S. agencies and authorities, including the Export Administration Regulations promulgated by the Bureau of Industry and Security (as codified in 15 C.F.R. Parts §§ 730-774). You expressly agree not to export or re-export the Software in violation of such laws or regulations, or without all required licenses and authorizations.

11. Government End Users. The Software is a "commercial item" as that term is defined at 48 C.F.R. 2.101, consisting of "commercial computer software" and "commercial computer software documentation" as such terms are used in 48 C.F.R. 12.212. Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4, all U.S. Government end users acquire the Software with only those rights set forth therein.

12. Applicable Law and Jurisdiction. You agree that this Agreement and all matters relating to the Service and the Software will be governed by the laws of the State of California, without giving effect to any principles of conflicts of laws that would require the application of the laws of a different state. You also consent to the exclusive jurisdiction and venue of the Superior Court of Santa Clara County for state claims and the Northern District of California for federal claims in all disputes arising out of or relating to the Software or the Service. The parties agree that the Uniform Computer Information Transaction Act (or any statutory implementation of it) and the United Nations Convention on the International Sale of Goods will not apply with respect to this Agreement or the parties' relationship.

13. General Provisions. You are responsible for compliance with applicable local laws. This Agreement is personal to you, and you may not transfer, assign or delegate this Agreement to anyone without the express written permission of Danger. Any attempt by you to assign, transfer or delegate this Agreement without the express written permission of Danger shall be null and void. The paragraph headings in this Agreement, shown in boldface type, are included to help make the agreement easier to read and have no binding effect. The waiver of any breach or default, or any delay in exercising any rights shall not constitute a waiver of any subsequent breach or default. This Agreement constitutes the complete and exclusive

agreement between you and Danger with respect to the subject matter hereof, and supersedes all prior oral or written understandings, communications or agreements. If for any reason a court of competent jurisdiction finds any provision of this Agreement, or portion thereof, to be unenforceable, that provision of the Agreement will be enforced to the maximum extent permissible so as to effect the intent of the parties, and the remainder of this Agreement will continue in full force and effect.

Danger® Service Privacy Statement

Microsoft and its subsidiary, Danger, Inc., (collectively “Microsoft”) are committed to protecting your privacy, while delivering software and services that bring you the performance, power, and convenience you desire in your personal computing. This privacy statement explains many of the data collection and use practices of Microsoft’s Danger wireless data services, (“Danger Service”). It does not apply to other online or offline Microsoft sites, products, or services. This privacy statement does not apply to the data collection and use practices of your wireless network operator that offers the Danger Service.

The Danger Service, operated on behalf of your wireless network operator, enables certain features on your wireless device, including email, Internet access, instant messaging, address book and calendar functions. The Danger Service also includes a Web site operated by Microsoft (“Danger Service Web Site”) that users may use to access these features, as described more fully in the Reference Guide accompanying your wireless device.

Collection and Use of Your Information

The information we collect from you will be used by Microsoft and its controlled subsidiaries and affiliates to enable the features you are using and provide the service(s) or carry out the transaction(s) you have requested or authorized. It may also be used to analyze and improve Microsoft products and services.

We may send certain mandatory service communications such as welcome letters, billing reminders, information on technical service issues, and security announcements. Some Microsoft services may send periodic member letters that are considered part of the service. We may occasionally request your feedback, invite you to participate in surveys, or send you promotional mailings to inform you of other products or services available from Microsoft and its affiliates.

In order to offer you a more consistent and personalized experience in your interactions with Microsoft, information collected through one Microsoft service may be combined with information obtained through other Microsoft services. We may also supplement the information we collect with information obtained from other companies. For example, we may use services from other companies that enable us to derive a general geographic area based on your IP address in order to customize certain services to your geographic area.

Except as described in this statement, personal information you provide will not be transferred to third parties without your consent. Your personal information may be shared with third parties for their use to fulfill your requests and purchases of products and services. Additionally, we occasionally hire other companies to provide limited services on our behalf, such as processing and collecting payments, servicing accounts, providing the products and services associated with the Danger Service, or performing statistical analysis of our services. We will only provide those companies the personal information they need to deliver the service, and they are prohibited from using that information for any other purpose.

Microsoft may access or disclose information about you, including the content of your communications, in order to: (a) comply with the law or respond to lawful requests or legal process; (b) protect the rights or property of Microsoft or our customers, including the enforcement of our agreements or policies governing your use of the Danger Service; or (c) act on a good faith belief that such access or disclosure is necessary to protect the personal safety of Microsoft employees, customers, or the public.

Information that is collected by or sent to Microsoft by the Danger Service may be stored and processed in the United States or any other country in which Microsoft or its affiliates, subsidiaries, or service providers maintain facilities. Microsoft abides by the safe harbor framework as set forth by the U.S. Department of Commerce regarding the collection, use, and retention of data from the European Union.

Collection and Use of Information about Your Computer or Wireless Device

When you use Internet-enabled features of the Danger Service, information about your computer or wireless device (“standard computer information”) is sent to the Web sites you visit and online services you use. Microsoft uses standard computer information to provide you Internet-enabled services, to help improve our products and services, and for statistical analysis. Standard computer information typically includes information such as your IP address, operating system version, browser version, and regional and language settings. In some cases, standard computer information may also include hardware ID, which indicates the device manufacturer, device name, and version. If a particular feature or service sends information to Microsoft, standard computer information will be sent as well.

Collection and Use of Danger Service Usage Data

The Danger Service collects certain information about actions you take while using the Danger Service and how you use the Danger Service (“Usage Data”). For example, the Danger Service automatically gathers information regarding which Web pages are visited by users of the Danger Service. In addition, data regarding usage of various features of the Danger Service is collected, such as how many email messages or IM messages are sent by a particular user or by users in the aggregate, the most popular Web sites visited by users of the Danger Service, the number of Web pages viewed at the Danger Service Web Site and other similar information. Similarly, for network monitoring purposes, the Danger Service records how many devices in the aggregate are connected to the Danger Service in particular geographic locations, but the Danger Service does not automatically identify the location of individual devices or users.

Usage Data gathered from your use of the Danger Service is stored under an automatically generated identification number that will not be linked to information that identifies you or can be used to contact you without your consent, except as specifically provided in this privacy statement.

Usage Data is used to effectively operate the Danger Service and enhance your experience using the Danger Service. For example, cached versions of the Web sites that are most frequently visited by users are stored on the Danger Service so that you can access them more quickly. Usage Data is also used to understand how certain features of the Danger Service are being used and to measure the costs of providing certain features. Usage Data may also be used to diagnose and correct problems with the Danger Service. In some cases, it may be necessary to link Usage Data relating to your use of the Danger Service with you individually in order to correct problems that you may be experiencing with the Danger Service. In general, the collection and use of Usage Data allows for continuing development of the Danger Service and the ability to provide improved features and services to users. Usage Data may be shared with third parties for research, analysis, or other similar purposes. Usage Data will only be shared with third parties if the information is disclosed in a manner that does not identify individual users to the third parties concerned.

Security of your information

Microsoft is committed to helping protect the security of your information. We use a variety of security technologies and procedures to help protect your information from unauthorized access, use, or disclosure. For example, we store the information you provide on computer systems with limited access, which are located in controlled facilities.

Use of Cookies

Cookies are small text files that are placed on the hard drive of your computer by a Web site you visit. These files identify your computer and record your preferences and other data about your visit so that when you return to the site, the site knows who you are and can personalize your visit. The Danger Service Web Site uses cookies to personalize the site, improve users experience at the site, and to determine which areas and features of the site are most popular. You may set your browser to reject cookies, but this may affect your ability to use some parts of the Danger Service Web Site.

When you access the Internet using your wireless device, the Web sites you visit may use cookies. These cookies may be physically placed on your wireless device, they may be transferred to the Danger Service or may be placed on servers operated by third party Web site operators. This cookie-like functionality is in place for the same reasons and designed for the same purposes as cookies installed on your computer, but information collected from cookies by third parties is subject to their privacy practices rather than this privacy statement.

As technology advances and cookies provide more functionality, we may utilize them in different ways in the future. As we do so, this privacy statement will be updated to provide you with more information.

Changes to this privacy statement

We will occasionally update this privacy statement to reflect changes in our products, services, and customer feedback. When we post changes, we will revise the “last updated” date at the top of this statement. If there are material changes to this statement or in how Microsoft will use your personal information, we will notify you either by posting a notice of such changes prior to implementing the change or by directly sending you a notification. We encourage you to periodically review this statement to be informed of how Microsoft is protecting your information.

For More Information

Microsoft welcomes your comments regarding this privacy statement. If you have questions about this statement or believe that we have not adhered to it, please contact us here: privacy@danger.com.

Specific features

The remainder of this document will address the following specific features:

Danger Service

What This Feature Does: The Danger Service, operated on behalf of your wireless operator, provides certain features on your wireless device, including email, Internet access, instant messaging, address book and calendar functions.

Information Collected, Processed, or Transmitted: Certain information that personally identifies you or allows us to contact you may be collected, processed, transmitted and stored by the Danger Service, including your name, which must be entered when you become a user of the Danger Service; the mobile phone number for the device you are registering and the email address assigned to you as a user of the Danger Service. In addition, if you use your wireless device to access third party products and services, such as instant messaging services, your screen name(s) and password(s) for these services will be stored.

You may transmit and store other personal information, such as your address book, calendar information, to do lists, notes, tasks, photographs and the contents of emails you send and receive on the Danger Service, either through your wireless device or by uploading such information at the Danger Service Web Site. If you input such information directly on your wireless device, it is automatically synchronized with

and stored on the Danger Service and is available to you through both the device and the Danger Service Web Site. You may also retrieve email from your existing email accounts with third party services by using protocols such as “POP.” When you set up mail accounts through the Danger Service, the email addresses and other information associated with these accounts and the content of the email messages sent to these accounts is collected and stored.

Use of Information: Personal information is used and collected to (a) operate and deliver the Danger Service, (b) process or collect payments and for other billing purposes, (c) to assist with questions about use of the Danger Service, (d) to anticipate and resolve problems with your use of the Danger Service and (e) to alert you to new products, product upgrades, software upgrades, changes to the service, technical and administrative issues, special offers and other information related to the Danger Service. Personal information may be shared with your wireless network operator to further the purposes described in this “Use of Information” section. Except in the very limited circumstances outlined in this privacy statement, the contents of data you transmit and/or store on the Danger Service, such as the content of your address book, notes, tasks, pictures and the contents of messages and emails you send and receive will not be shared with your wireless network operator. Your Personal Information will not be shared with other third parties without your consent, except in the very limited circumstances outlined in this privacy statement. Your Personal Information is not otherwise sold, marketed, or shared with third parties without your permission.

Choice/Control: You have the right to access and edit the personal information you have provided in connection with your use of the Danger Service. You may make such changes on your wireless device, at the Danger Service Web Site or by contacting your wireless operator.

Location Based Services

What This Feature Does: The geographic location of your device (“Location Information”) may be collected, maintained, stored and displayed in order to enable certain third party location-sharing services that you request on your device.

Information Collected, Processed, or Transmitted: Location Information may be derived from your wireless network operator, certain third party service providers, or directly from your device. This Location Information may be transmitted, even when you are not using a third party location-sharing service.

Use of Information: Location Information is used to deliver the third-party services that you have requested.

Choice/Control: Your Location Information is displayed and shared with others only in accordance with your privacy and opt-in settings.

One-Year Limited Warranty

Personal Communications Devices, LLC (the Company) warrants to the original retail purchaser of this handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company’s option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to Personal Communications Devices, LLC for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e., third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device uses a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, Personal Communications Devices, LLC is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to Personal Communications Devices, LLC for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g., dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: Personal Communications Devices, LLC
555 Wireless Blvd.
Hauppauge, NY 11788
(800) 229-1235

IN CANADA: PCD Communications Canada, LTD
5535 Eglinton Avenue West
Suite# 234
Toronto, ON M9C 5K5
(800) 465-9672

Additional Information

Service not available everywhere; for details see coverage maps at T-Mobile.com. All T-Mobile® rate plans require credit approval, activation on a qualified T-Mobile rate plan, per line activation fee and minimum 1- or 2-year agreement may be required. \$200/line early cancellation fee applies to 1-and 2-year agreements. You will be charged for all data sent by or to you through the network, regardless of whether or not it is received. Character length/file size of messages/attachments may be limited. T-Mobile is not liable for content of messages/attachments, or for any failures, delays or errors in any T-Mobile-generated alerts or notifications. You obtain no rights in preloaded content: duration of use may be limited; may be stored solely for use with your device; may not be sublicensed, transferred to other devices/SIM cards, or otherwise disseminated. Call duration and/or your continued eligibility for service or any rate plan may be limited or terminated for (a) consumer protection purposes, (b) abusive conduct or abnormal call pattern(s), or (c) significant roaming. Device is intended for use on the T-Mobile network. See pricing, services and device brochures, and **T-Mobile's Terms and Conditions** (including mandatory arbitration) at T-Mobile.com for additional rate plan information, charges for features and services, and restrictions and details. T-Mobile, the magenta color, and t-zones are registered trademarks of Deutsche Telekom AG. myFaves, the myFaves design, and Sidekick are registered trademarks of T-Mobile USA, Inc.



Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. or other countries.

Bluetooth is a trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sharp is under license. Other trademarks and trade names are those of their respective owners.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.



microSDHC™ is a trademark.

Copyright © 1985, 1986, 1988, 1992, 1993, 1999 The Regents of the University of California.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions of software licensed under the above license include the following additional copyright notices and additional conditions.

Copyright © 2004 Albert Chin-A-Young. This code is derived from software contributed to Berkeley by Diomidis Spinellis and James A. Woods, derived from original work by Spencer Thomas and Joseph Orost.

Copyright © 1995, 1997 Wolfgang Solfrank. Copyright © 1995 Martin Husemann. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Martin Husemann and Wolfgang Solfrank.

This code is derived from software contributed to Berkeley by Berkeley Software Design, Inc.

Copyright © UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 SYSTEMS PATENT PORTFOLIO LICENSE FOR ENCODING IN COMPLIANCE WITH THE MPEG-4 SYSTEMS STANDARD EXCEPT THAT AN ADDITIONAL LICENSE AND PAYMENT OF ROYALTIES ARE NECESSARY FOR ENCODING IN CONNECTION WITH (i) DATA STORED OR REPLICATED IN PHYSICAL MEDIA WHICH IS PAID FOR ON A TITLE BY TITLE BASIS AND/OR (ii) DATA WHICH IS PAID FOR ON A TITLE BY TITLE BASIS AND IS TRANSMITTED TO AN END USER FOR PERMANENT STORAGE AND/OR USE. SUCH ADDITIONAL LICENSE MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com) FOR ADDITIONAL DETAILS.

Copies of the openmap software files incorporated into this software are available at <http://openmap.bbn.com>.

