

SHARP®

ELECTRONIC CASH REGISTER
CAJA REGISTRADORA ELECTRONICA

MODEL
MODELO **XE-A202**

INSTRUCTION MANUAL

MANUAL DE INSTRUCCIONES



WARNING

FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when this equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION

The AC power socket-outlet should be installed near the equipment and should be easily accessible.

FOR YOUR RECORDS

Please record below the model number and serial number for easy reference in case of loss or theft. These numbers are located on the right side of the unit. Space is provided for further pertinent data.

Model Number _____

Serial Number _____

Date of Purchase _____

Place of Purchase _____

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A202. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference. It will help you if you encounter any operational problems.

CAUTION!

Never install the batteries into the cash register before initializing it. Before you start operating the cash register, you must first initialize it, then install the batteries. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to [page 7](#).

IMPORTANT

- **On the printer, a cutter to cut the paper roll is mounted. Always be careful not to cut yourself by the cutter.**
- **Install your register in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.**
Installation in such locations could cause damage to the cabinet and the electronic components.
- **Never operate the register with wet hands.**
The water could seep into the interior of the register and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The register plugs into any standard wall outlet (120V AC \pm 10%).**
Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **For protection against data loss, please install three “AA” batteries after initializing the cash register. When handling the batteries, never fail to observe the followings:**
Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the cash register.
 - **Be sure that the the positive (+) and negative (-) poles of each battery are facing in the proper direction for installation.**
 - **Never mix batteries of different types.**
 - **Never mix old batteries and new ones.**
 - **Never leave dead batteries in the battery compartment.**
 - **Remove the batteries if you do not plan to use the cash register for long periods.**
 - **Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.**
 - **For battery disposal, follow the corresponding law in your country.**
- **If the register malfunctions, call 1-800-BE-SHARP for service - do not try to repair the register yourself.**
- **For a complete electrical disconnection, disconnect the main plug.**

**Customer Service Hotline
1-800-BE-SHARP**

**For Easy Set-up, see
“GETTING STARTED” ([page 7](#)).**

**The Spanish version (summary of English version) is after the English version.
La versión española (el resumen de la versión inglesa) sigue a la versión inglesa.**

CONTENTS

| | |
|--|----------|
| INTRODUCTION | 1 |
| IMPORTANT | 1 |
| CONTENTS | 2 |
| PARTS AND THEIR FUNCTIONS | 4 |
| 1 External View | 4 |
| 2 Printer | 4 |
| 3 Mode Switch and Mode Keys | 5 |
| 4 Keyboard | 5 |
| 5 Displays | 6 |
| 6 Drawer Lock Key | 6 |
| GETTING STARTED | 7 |

| |
|------------------|
| FOR THE OPERATOR |
|------------------|

| | |
|---|-----------|
| OVERVIEW OF FLOW OF DAILY SALES ENTRIES | 11 |
| BASIC SALES ENTRY | 12 |
| 1 Basic Sales Entry Example | 12 |
| 2 Error Warning | 13 |
| 3 Item Entries | 14 |
| Single item entries | 14 |
| Repeat entries | 15 |
| Multiplication entries | 15 |
| Split pricing entries | 16 |
| Single item cash sale (SICS) entry | 17 |
| 4 Displaying Subtotal | 17 |
| 5 Finalization of Transaction | 17 |
| Cash or check tendering | 17 |
| Cash or check sale that does not require tender entry | 18 |
| Charge (credit) sale | 18 |
| Mixed-tender sale | 18 |
| 6 Tax Calculation | 19 |
| Automatic tax | 19 |
| Manual tax | 19 |
| Tax delete | 19 |
| Tax status shift | 20 |
| OPTIONAL FEATURES | 21 |
| 1 Auxiliary Entries | 21 |
| Discount and premium entries using the percent key | 21 |
| Discount and premium entries using the discount key | 21 |
| Refund entries | 22 |
| Non-add code number entries and printing | 22 |
| 2 Auxiliary Payment Treatment | 23 |
| Currency conversion | 23 |
| Received-on Account and Paid-out Entries | 24 |
| No sale (exchange) | 24 |
| 3 Automatic Sequence Key (AUTO key) Entries | 24 |
| CORRECTION | 25 |
| 1 Correction of the Last Entry (direct void) | 25 |
| 2 Correction of the Next-to-last or Earlier Entry (indirect void) | 25 |
| 3 Subtotal Void | 26 |
| 4 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function | 26 |

| |
|-----------------|
| FOR THE MANAGER |
|-----------------|

| | |
|-----------------------------------|-----------|
| PRIOR TO PROGRAMMING | 27 |
|-----------------------------------|-----------|

| | |
|---|-----------|
| BASIC FUNCTION PROGRAMMING (For Quick Start) | 27 |
| 1 Date and Time Programming | 27 |
| 2 Tax Programming for Automatic Tax Calculation Function | 28 |
| Tax programming using a tax rate | 28 |
| The tax table (applicable to the add-on tax) | 29 |
| Quantity for doughnut tax exempt (for Canadian tax system) | 31 |
| AUXILIARY FUNCTION PROGRAMMING | 32 |
| 1 Department Programming | 32 |
| 2 PLU (Price Look-Up) and Subdepartment Programming | 33 |
| 3 Miscellaneous Key Programming | 35 |
| Rate for [%1], [%2] and [CONV] | 35 |
| Amount for [⊖] | 36 |
| Percent rate limitation for [%1] and [%2] | 36 |
| Function parameters for [%1], [%2] and [⊖] | 36 |
| Function parameters for [CONV] | 37 |
| Entry digit limit for [RA], [RCPT/PO] and [TAX] | 38 |
| Function parameters for [CHK], [CH] and [CAVAT/NS] (when using as CA key) | 38 |
| 4 Text programming | 39 |
| ADVANCED PROGRAMMING | 44 |
| 1 Register Number and Consecutive Number Programming | 44 |
| 2 Electronic Journal (EJ) Programming | 45 |
| 3 Various Function Selection Programming 1 | 47 |
| Function selection for miscellaneous keys | 47 |
| Print format | 48 |
| Receipt print format | 48 |
| Function selection for tax | 48 |
| Other programming | 49 |
| 4 Various Function Selection Programming 2 | 51 |
| Power save mode | 51 |
| Logo message print format | 51 |
| RS-232C interface | 52 |
| Thermal printer density | 53 |
| Language selection | 53 |
| Training clerk specification for training mode | 53 |
| AUTO key programming | 54 |
| 5 Reading Stored Program | 54 |
| TRAINING MODE | 56 |
| READING (X) AND RESETTING (Z) OF SALES TOTALS | 57 |
| EJ REPORT READING AND RESETTING | 60 |
| OVERRIDE ENTRIES | 61 |
| CORRECTION AFTER FINALIZING A TRANSACTION (Void mode) | 61 |
| OPERATOR MAINTENANCE | 62 |
| 1 In Case of Power Failure | 62 |
| 2 In Case of Printer Error | 62 |
| 3 Cautions in Handling the Printer and Recording Paper | 62 |
| 4 Replacing the Batteries | 63 |
| 5 Replacing the Paper Roll | 63 |
| 6 Removing a Paper Jam | 66 |
| 7 Cleaning the Printer (Print Head / Sensor / Roller) | 66 |
| 8 Removing the Drawer | 66 |
| 9 Opening the Drawer by Hand | 66 |
| 10 Before calling for service | 67 |
| Error code table | 67 |
| SPECIFICATIONS | 68 |

PARTS AND THEIR FUNCTIONS

1 External View

■ Front view

Operator display

Printer cover

Receipt paper

Drawer

Drawer lock


■ Rear view

Customer display
(Pop-up type)


Power cord

Mode switch


Keyboard

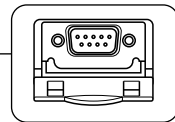

RS-232C connector

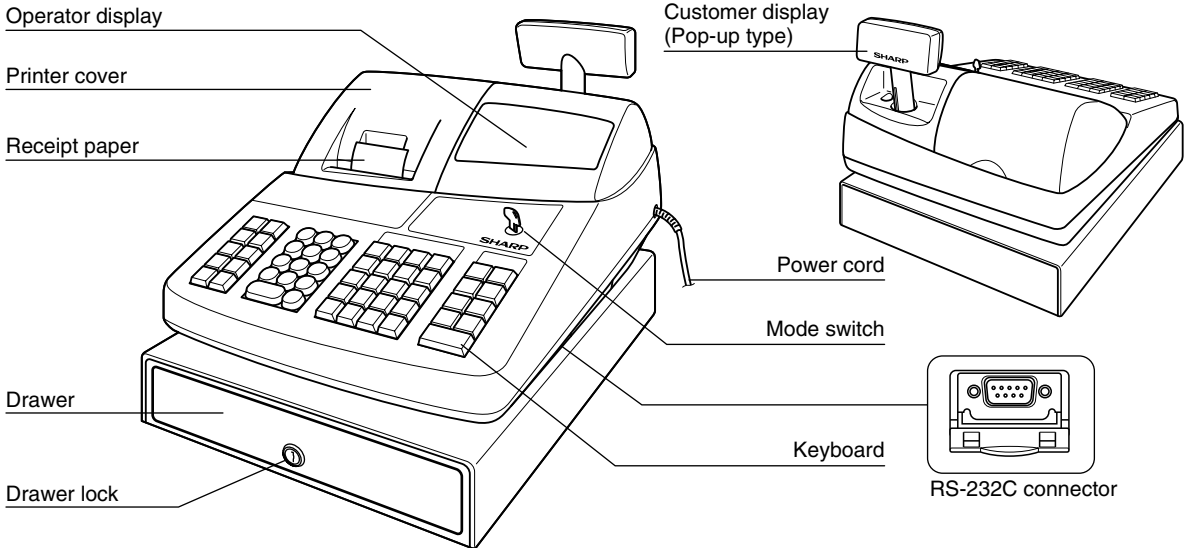


2 Printer

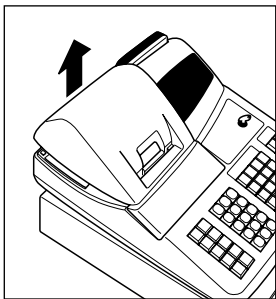

The printer is one station type thermal printer, therefore it does not require any type of ink ribbon or cartridge.

Lift the rear of the printer cover to remove. To re-install, hook the pawls on the cabinet and close.

Caution: The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

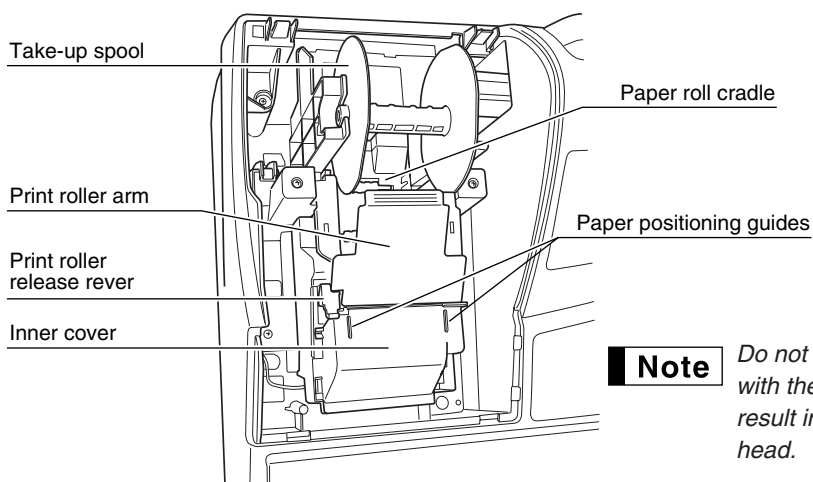


Note

Do not attempt to remove the paper roll with the print roller arm is locked. This may result in damage to the printer and print head.

3 Mode Switch and Mode Keys

The mode switch can be operated by inserting one of the two supplied mode keys - manager (MA) and operator (OP) keys. These keys can be inserted or removed only in the "REG" or "OFF" position.

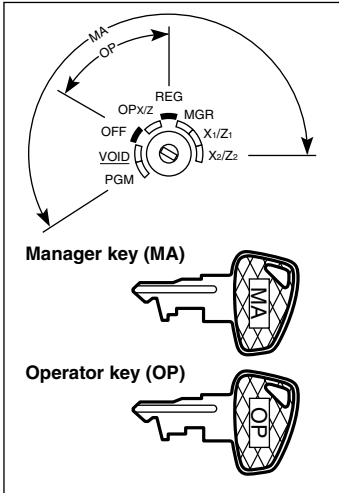

The mode switch has these settings:

- OFF:** This mode locks all register operations. (AC power turns off.) No change occurs to register data.
- OP X/Z:** To take individual clerk X or Z reports, and to take flash reports. It can be used to toggle receipt state "ON" and "OFF" by pressing the **RCPT/PO** key.
- REG:** For entering sales.
- PGM:** To program various items.
- VOID:** Enters into the void mode. This mode allows correction after finalizing a transaction.
- MGR:** For manager's entries. The manager can use this mode for an override entry.
- X1/Z1:** To take the X/Z report for various daily totals
- X2/Z2:** To take the X/Z report for periodic (weekly or monthly) consolidation

4 Keyboard

Keyboard layout

| | | | | | | | | | | |
|---------------|---------------|-------|----|----|---------------|-------------|-----------------|------------|-----------------|-----------------|
| ↑ | CONV | @/FOR | • | CL | PLU /SUB A | DEPT # F | DEPT SHIFT K | CLK# P | TAX U | AUTO X |
| RA I | %1 / | 7 | 8 | 9 | 20 4 B | 24 8 G | 28 12 L | 32 16 Q | TAX1 SHIFT V | TAX2 SHIFT Y |
| RCPT /PO _ | %2 NUMBER | 4 | 5 | 6 | 19 3 C | 23 7 H | 27 11 M | 31 15 R | CHK W | CH Z |
| VOID DC | RFND SHIFT | 1 | 2 | 3 | 18 2 D | 22 6 I | 26 10 N | 30 14 S | MDSE SBTL | #/TM SBTL |
| ESC BS | ⊖ SPACE | 0 | 00 | | 17 1 E | 21 5 J | 25 9 O | 29 13 T | CA/AT/NS | |

Note


The small characters on the bottom or lower right in each key indicates functions or characters which can be used for character entries for text programming. For details, refer to [page 39](#).

Key names


| | | | | | | |
|----------|----------------------------|------------|---------------------------|------------|---|------------------------|
| ↑ | Paper feed key | @/FOR | Multiplication key | TAX | Tax key | |
| RA | Received-on account key | • | Decimal point key | TAX1 SHIFT | TAX2 SHIFT | Tax 1 and 2 shift keys |
| RCPT /PO | Receipt print/Paid-out key | CL | Clear key | AUTO | Automatic sequence key | |
| VOID | Void key | 00 | 0 ~ 9 | CHK | Check key | |
| ESC | Escape key | PLU /SUB | PLU/Subdepartment key | CH | Charge key | |
| CONV | Conversion key | DEPT # | Department code entry key | MDSE SBTL | Merchandise subtotal key | |
| %1 %2 | Percent 1 and 2 keys | DEPT SHIFT | Department shift key | #/TM SBTL | Non-add code/Time display /Subtotal key | |
| RFND | Refund key | CLK# | Clerk code entry key | CA/AT/NS | Total/Amount tender /No sale key | |
| ⊖ | Discount key | 17 1 | ~ | 32 16 | Department keys | |

5 Displays

Operator display

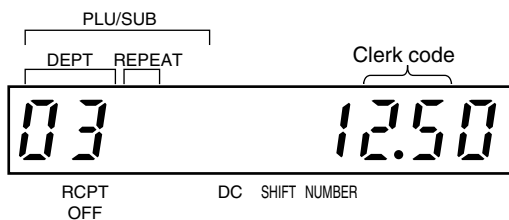

Customer display (Pop-up type)

 

Amount: Appears in the far-right eight (max.) positions. When the amount is negative, the minus symbol “-” appears before the amount.

Number of repeats for repetitive registrations:

The number of repeats is displayed, starting at “2” and incremental with each repeat. When you have registered ten times, the display will show “0.”(2 → 3 …… 9 → 0 → 1 → 2 …)

Receipt function status:

The indicator “_” appears in the RCPT OFF position when the receipt function is in the OFF status.

Time: Appears in the far-right six positions (hour-minute -“*A*” or hour-minute -“*P*”) in the OP X/Z, REG, or MGR mode. “*A*” is displayed in the morning (AM), and “*P*” in the afternoon (PM). In the REG or MGR mode, press the $\boxed{\#/\text{TMS/STL}}$ key to display the time.

Machine state symbols

P : Appears during programming.

E : Appears when an error is detected.

D : Appears when the subtotal is displayed or when the amount tendered is smaller than the sales amount.

C : Appears when the $\boxed{\text{CONV}}$ key is pressed to calculate a subtotal in foreign currency.

F : Appears when a transaction is finalized by pressing the $\boxed{\text{CA/AT/NS}}$, $\boxed{\text{CHK}}$ or $\boxed{\text{CH}}$ key.

\overline{L} : Appears when the change due amount is displayed.

E-E : May appear in the far-left three positions at the timing of key entry when the electronic journal (EJ) memory is full. (Depending on programming.)

\underline{L} : Appears when the voltage of the installed batteries is under the required level. You must replace with new ones within two days. Refer to [page 63](#) for details.

\underline{L} : Appears when the batteries are not installed, or the installed batteries are dead. You must replace with new ones immediately. Refer to [page 63](#) for details.


• : May appear right below the eighth and ninth places at the timing of finalization of a transaction when the electronic journal (EJ) memory is nearly full.
Also appears right below the tenth place when power save mode is effective.

H : Appears when the print roller arm is not locked.

PPPPPPPPPP : Appears when the paper is not set or out.

6 Drawer Lock Key

This key locks and unlocks the drawer. To lock it, turn 90 degrees counterclockwise. To unlock it, turn 90 degrees clockwise.

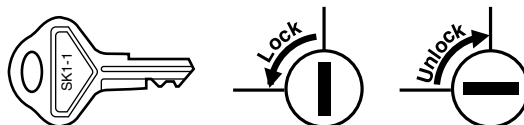

GETTING STARTED

Please follow the procedure shown below. The batteries are not installed and the power is OFF.

1

Installing the cash register

Find a stable surface where the cash register is not subject to water sources or direct sunlight near an AC outlet.


Unpack the cash register and make sure all accessories are included. For details of accessories, please refer to “Specifications” section.

2

Initializing the cash register

In order for your cash register to operate properly, you must initialize it before programming for the first time. Follow this procedure.

1. Insert the manager (MA) key into the mode switch and turn it to the REG position.
2. Insert the plug into the AC outlet. The buzzer will sound three times.
IMPORTANT: This operation must be performed without batteries installed.
3. The cash register has now been initialized. The register display will show “0.00” with “L”.

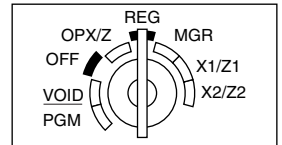

Note

If the buzzer does not sound when the plug is inserted, the initialization has not been done successfully. (This will occur when the voltage is still high because you operated the cash register just before starting initialization.) In this case, wait at least one minute after pulling out the plug, and insert the plug again.


3

Installing batteries


Three new “AA” batteries must be installed in the cash register to prevent the data and user-programmed settings from being erased from the memory, when the AC cord is accidentally disconnected or in case of power failure. Once installed, the batteries will last approximately one year before needing replacement. At this time, the “L” symbol will appear on the display to indicate the batteries are low and must be replaced within two days. If the no battery symbol “L” appears, you must install the batteries at once.

Install three new “AA” batteries according to the procedure shown below with the AC cord connected and the mode switch set to the REG position:

1. Push the printer cover forward and detach it.
Be careful with the paper cutter, so as not to cut yourself.
2. Open the battery compartment cover next to the paper roll cradle.

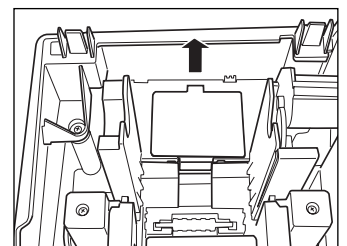

3. Insert three new “AA” batteries as illustrated at the right.
When the batteries are properly installed “L” on the display will disappear.
4. Close the battery compartment cover.

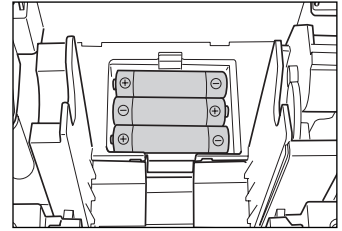


Note Be sure to observe precautions shown on [page 1](#) when handling batteries.

4 Installing a paper roll


Precaution: The paper cutter is mounted on the printer cover. Take caution when removing and installing the cover.

The register can print receipts or journals. For the printer, you must install the paper roll provided with the register, even when you program the register for not printing receipts or journals. Install the paper roll according to the procedure shown below with the AC cord connected and the mode switch set to the REG position:


1. Lift up the print roller release lever to unlock and open the print roller arm.

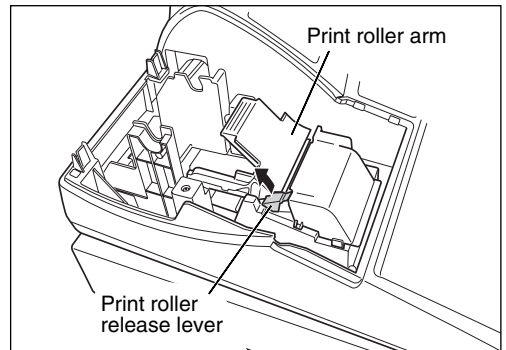


2. Set a paper roll in the paper roll cradle as illustrated at the right.

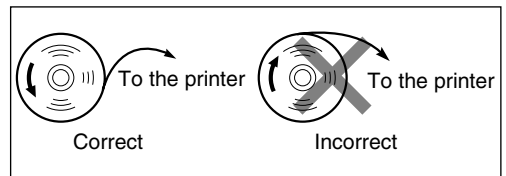

3. Feed the end of the paper along with the paper positioning guides as illustrated at the right.

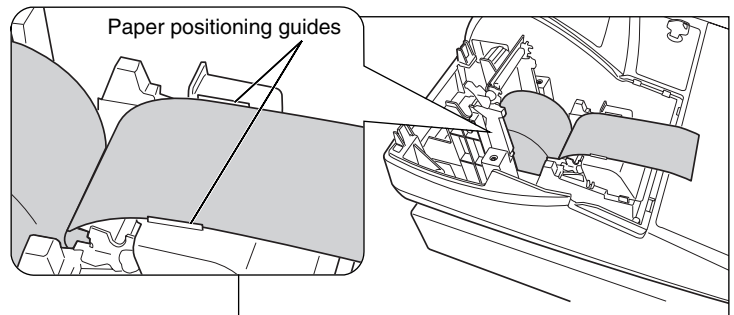


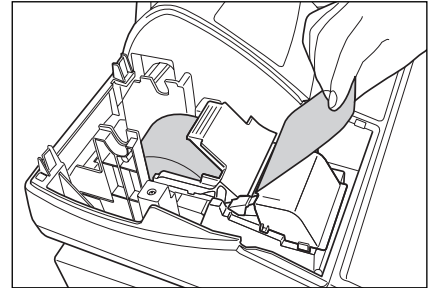
4. While holding down the paper, slowly close the print roller arm, and push down the arm until you hear a click locking the arm. Make sure securely you push down the center of the wing part of the arm as illustrated at the right. The paper will be fed automatically.

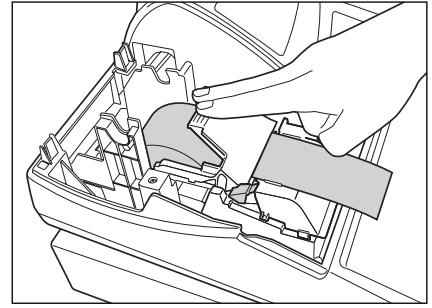

Note *If the print roller arm is not securely locked, printing is not done right. If this problem occurs, open the arm, and close the arm as instructed above.*


 
5. When not using the take-up spool (using as receipt paper):


- Cut off the excess paper using the edge of the inner cover, and replace the printer cover. Press the  key to make sure the paper end comes out of the printer cover and clean paper appears.



Note *If the paper end does not come out, open the printer cover, and pass the paper end between the paper cutter and the paper guide of the printer cover, and replace the cover.*

When using the take-up spool (using as journal paper):

- Insert the end of the paper into the slit in the spool. (Press the  key to feed more paper if required.)
- Wind the paper two or three turns around the spool shaft.
- Set the spool on the bearing, and press the  key to take up excess slack in the paper.
- Replace the printer cover.

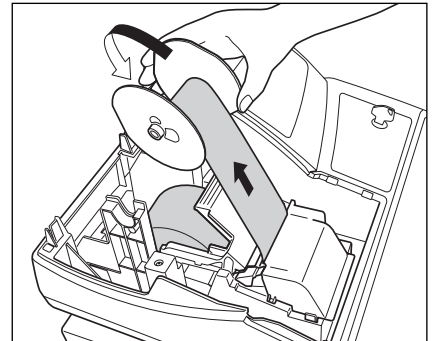

Note *When using a paper roll as journal paper, you must change the printing style. Refer to "Print Format" in "Various Function Selection Programming 1" section ([Job code 6](#)) for changing the printing style.*

5 Programming date, time and tax

Note *The cash register provides text languages of English, French and Spanish. It is preset to English. If you want to change the language, you must change it before programming. Refer to "[Language selection](#)" in "Various Function Selection Programming 2" section for changing the language.*

Before you can proceed with registration of sales, **you must program:**

- date
- time
- tax

Please refer to the BASIC FUNCTION PROGRAMMING section for details ([page 27](#)).

6

Programming other necessary items

While the cash register is pre-programmed so it can be used with minimal setup, it does provide you with optional functions. Before you start programming, please read through the sales operations section to understand optional functions. The main optional functions are listed below.

- PLU (price lookup)
- Consecutive number
- Machine number
- Receipt or journal printing selection (factory setting: receipt printing)
- Power save mode (factory setting: goes into power save mode in 30 minutes)
- Electronic journal (EJ) memory size (factory setting: 2000 lines are storable. Up to 3000 lines)
The memory for electronic journal is commonly used for PLU. If you change the setting, the maximum number of PLU code will decrease from 1200 to 200.
- Text programming for clerk name, department items, PLU/subdepartment items, logo messages printed on the top or bottom of receipts, function texts and foreign currency symbol
- Split pricing entry
This is not factory preset. You must enable this function.
- Foreign currency conversion rate
You must set a conversion rate to use **CONV** key.
- Preset unit price for departments and PLUs
- Preset amount for **⊖**
- Preset rates for **%1** **%2**
You do not have to program these preset prices/amount/rates because you can enter when registration. It might be convenient to preset so you do not have to re-enter every time.
- Amount entry digit limit for PO amount, RA amount, Manual tax amount
The factory setting makes the maximum amount you can enter. You can program to limit the amount.
- Key sequence for AUTO key
- RS-232C programming
- Specification of clerk to be trained

Department programming:

The cash register is pre-programmed for departments as follows:

Department: Allow open price entry, taxable status- taxable 1 for department 1 to 10, and non taxable for department 11 to 99

When you use department 11 or above, and/or you apply taxable status other than taxable 1 for department 1 to 10, you must change department settings. Please refer to the [department programming](#) section for programming details.

7

Starting sales entries

Now you are ready for sales registration.

OVERVIEW OF FLOW OF DAILY SALES ENTRIES

Things to do before you start sales entries:

- Make sure the power cord is securely inserted into the AC outlet.
- Turn the mode switch to OP X/Z position, and check if time is correctly set.
- Replace the drawer, if removed for safety.
- Check if there is enough paper on roll.
- Select receipt ON/OFF function.
- Make any necessary programming for the day in PGM mode.

For details, refer to BASIC SALES ENTRY, [page 12](#). For drawer and paper roll, refer to OPERATOR MAINTENANCE, [page 62](#) and for programming, refer to [programming sections](#).

Things you can do for sales entries:

- Item entries
- Item repeat entries
- Item multiplication entries
- Single item cash sale (SICS), if programmed.
- Split pricing entries, if programmed.
- Displaying subtotals
- Cash/Check/Charge sale
- Cash tendering in a foreign currency, if the currency conversion rate is programmed.
- Manual tax entry
- Discount or premium using and key
- Refund entry
- No sale
- Paid-out entries
- Received on account entries
- Printing non-add code number
- Making corrections
- Checking sales report

For details of sales entry method, refer to BASIC SALES ENTRY ([page 12](#)) and OPTIONAL FEATURES ([page 21](#)). For details of correcting sales entries, refer to CORRECTION ([page 25](#)). For details on reading sales information, refer to READING (X) AND RESETTING (Z) OF SALES TOTAL ([page 57](#)).

Things to do after you close your store:

- Print sales reports, and clear sales data for the day.
- Print Electronic Journal (EJ) reports, and clear Electronic Journal (EJ) data, if necessary.
- Account money - comparing it with the amount in cash in drawer printed on the general report.
- Remove the drawer for safety.
- Turn the mode switch to OFF position.

For details of reading sales information, refer to READING (X) AND RESETTING (Z) OF SALES TOTAL ([page 57](#)) and EJ REPORT READING AND RESETTING ([page 60](#)). For details of removing the drawer and maintenance details, refer to OPERATOR MAINTENANCE ([page 62](#)).

BASIC SALES ENTRY

1 Basic Sales Entry Example


Listed below is a basic sales entry example when selling department items by cash. For operation details, please refer to each section.

Mode switch setting

1. Turn the mode switch to the REG position.

Clerk assignment

2. Enter your clerk code. (For example, clerk code is 1. Press the **1** and **CLK#** key in this order.) The clerk code 1 is automatically selected just after initialization of the cash register.

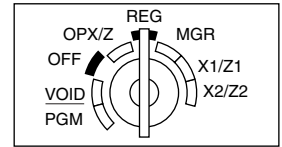

Item entries

3. Enter the price for the first department item. (For example, for 15.00, enter **1****5****00**, and press the appropriate department key.)

For department 17 to department 32, press the **DEPTSHIFT** key first before pressing the department key.

For department 33 and above, enter the department code using numeric keys, and press the **DEPT#** key, then enter the price and press the **DEPT#** key again.

4. Repeat step 3 for all the department items.

Displaying subtotals

5. Press the **#/TM/SBTL** key to display the amount due.

Finalizing the transaction

6. Enter the amount received from the customer. (You can omit this step if the amount tendered is the same as the subtotal.)
7. Press the **CA/AT/NS** key, and the change due is displayed (when the amount received was not entered, the total amount is displayed) and the drawer is opened.
8. Tear off the receipt and give it to the customer with his or her change.
9. Close the drawer.

Key operation example

| | | | |
|----------------------------|---|------------------------------------|-----------------|
| Clerk assignment | → | 1 CLK# | -01- |
| Item entries | { | 1500 1 ¹⁷ | 01 15.00 |
| | | 2300 2 ¹⁸ | 02 23.00 |
| Displaying subtotal | → | #/TM/SBTL | 0 40.38 |
| | | 5000 | 5000 |
| Finalizing the transaction | → | CA/AT/NS | C 9.62 |

(In this example, the tax rate is set to 6.25%.)

Print


| | | |
|-----------------------------------|-------------------|--|
| YOUR RECEIPT THANK YOU | | Graphic logo |
| 08/26/2003 2:32PM 01 | | Date/Time/Clerk code number |
| 123456#1027 CLERK01 | | Register number /Consecutive number/Clerk name |
| | | Items |
| DEPT. 01 | T1 \$15.00 | Price |
| DEPT. 02 | T1 \$23.00 | Merchandise subtotal |
| MDSE ST | \$38.00 | Tax amount |
| TAX1 | \$2.38 | Tax status (T1: taxable 1) |
| ITEMS | 20 | Total quantity |
| ***TOTAL | \$40.38 | Total amount |
| CASH | \$50.00 | Cash tendering/amount received |
| CHANGE | \$9.62 | Change |

Not printed when non-taxable items only are sold.


Clerk assignment

Prior to any item entries, clerks must enter their clerk codes into the register. However, the code entry may not be necessary when the same clerk handles the next transaction.

 ■ Sign-on (in REG, MGR, VOID mode)



■ Sign-off (in REG, MGR, VOID mode)

 

Receipt ON/OFF function

When you use the printer to issue receipts, you can disable receipt printing in the REG mode to save paper using the receipt ON/OFF function. To disable receipt printing, press the **RCPT/PO** key in the OP X/Z position. This key toggles the receipt printing status ON and OFF.

To check the receipt printing status, turn the mode switch to the OP X/Z position or press the **CL** key in the REG mode. When the function is in the OFF status, the receipt off indicator “_” is illuminated. Your register will print reports regardless of the receipt state, so the paper roll must be installed even when the receipt state is “OFF”.

To issue a receipt when receipt ON/OFF function is set to OFF:

If your customer wants a receipt after you finalized a transaction with the receipt ON/OFF function being OFF status, press the **RCPT/PO** key. This will produce a receipt. However, if more than 30 items were entered, the receipt will be issued in the format of summary receipt print.

Power Save Mode

The register will enter into power save mode when no entries are performed based on the pre-programmed time limit (by default, 30 minutes).

When your register goes to the power save mode, it will light off all the display except the decimal point at the leftmost position. Your register will return to the normal operation mode when any key is pressed or a mode is changed with the mode key. Please note when your register is recovered by a key entry, its key entry is invalid. After the recovery, start the key entry from the beginning.


2 Error Warning

In the following examples, your register will go into an error state accompanied with a warning beep and the error symbol “E” on the display. Clear the error state by pressing the **CL** key and take proper action. Please refer to the error code table on [page 67](#).

- You enter over a 32-digit number (entry limit overflow): Cancel the entry and re-enter the correct number.
- You make an error in key operation: Clear the error and continue operation.
- You make an entry beyond a programmed amount entry limit: Check to see if the entered amount is correct. If it is correct, it can be rung up in the MGR mode. Contact your manager.
- An including-tax subtotal exceeds eight digits: Delete the subtotal by pressing the **CL** key and press the **CA/AT/NS**, **CHK** or **CH** key to finalize the transaction.

Error escape function

When you want to quit a transaction due to an error or an unforeseen event, use the error escape function as shown below:

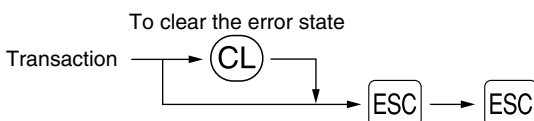

The transaction is voided (treated as a subtotal void) and the receipt is issued by this function. If you have already entered a tendered amount, the operation is finalized as a cash sale.

3 Item Entries

Single item entries

Department entries

 
The cash register provides a maximum of 99 departments for a merchandise classification. Group attributes, such as taxable status, are applied on items when they are entered to the departments.

- **When using the department keys (for department 1 to 32)**

For department 1 to 16, enter a unit price and press a department key. If you use a programmed unit price, press a department key only.

For department 17 to 32, enter a unit price, press the key and press a department key. If you use a programmed unit price, press the key and press a department key.

When using a programmed unit price




*1 Less than the programmed upper limit amounts
When zero is entered, only the sales quantity is added.

*2 For the optional departments 17 through 32, press the key.

- **When using the department code entry key**

Enter a department(dept.) code and press the key, then enter a unit price and press the key again. If the dept. code is programmed to preset price entry style and a unit price is preset, your cash register will finish its registration operation.

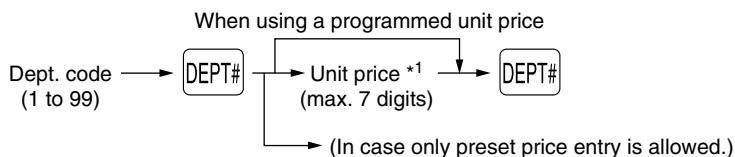

*1 Less than the programmed upper limit amounts
When zero is entered, only the sales quantity is added.

PLU/subdepartment entries

For another merchandise classification, the cash register provides a maximum of 1200 PLUs/subdepartments. PLUs are used to call up preset prices by a code entry. Subdepartments are used to classify merchandise into smaller groups under the departments. Every PLU and subdepartment has a code form 1 to 1200, and should belong to a department to obtain attributes of that department.

 
The cash register is pre-programmed to PLU mode and zero for unit price. To use PLU entries, their preset unit prices should be previously programmed. (Refer to [page 33.](#))

To use subdepartment entries, change to subdepartment mode for the PLU codes.


- **PLU entries**



- **Subdepartment (open PLU) entries**



* Less than the programmed upper limit amounts
When zero is entered, only the sales quantity is added.

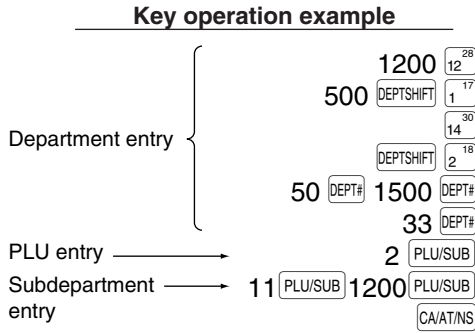


Print

| | |
|-------------|----------------|
| DEPT. 12 | \$12.00 |
| DEPT. 17 | \$5.00 |
| DEPT. 14 | \$8.25 |
| DEPT. 18 | \$3.25 |
| DEPT. 50 | \$15.00 |
| DEPT. 33 | \$2.50 |
| PLU0002 | \$1.50 |
| PLU0011 | \$12.00 |
| ITEMS | 8Q |
| CASH | \$59.50 |

Repeat entries

You can use this function for entering a sale of two or more of the same items. Repeat pressing a department key, DEPT# key or PLU/SUB key as shown on key operation example.

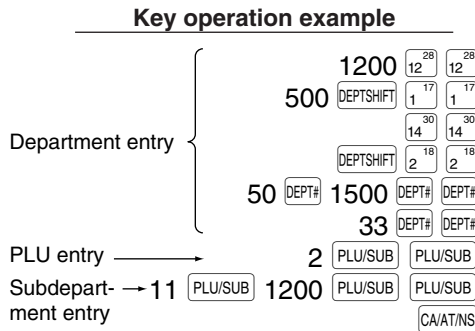

Print


| | |
|-------------|-----------------|
| DEPT. 12 | \$12.00 |
| DEPT. 12 | \$12.00 |
| DEPT. 17 | \$5.00 |
| DEPT. 17 | \$5.00 |
| DEPT. 14 | \$8.25 |
| DEPT. 14 | \$8.25 |
| DEPT. 18 | \$3.25 |
| DEPT. 18 | \$3.25 |
| DEPT. 50 | \$15.00 |
| DEPT. 50 | \$15.00 |
| DEPT. 33 | \$2.50 |
| DEPT. 33 | \$2.50 |
| PLU0002 | \$1.50 |
| PLU0002 | \$1.50 |
| PLU0011 | \$12.00 |
| PLU0011 | \$12.00 |
| ITEMS | 16Q |
| CASH | \$119.00 |

Multiplication entries

When you sell a large quantity of items, it is convenient to use the multiplication entry method. Enter quantity using numeric keys and press the (Q) key before starting item entry as shown in the example below.

Note When programmed to allow fractional quantity entries, you can enter up to four integers and three digit decimal, though the quantity is counted as one for sales reports. To enter a fractional quantity, use the decimal point key between integer and decimal, as (7) (.) (5) for entering 7.5.

Key operation example

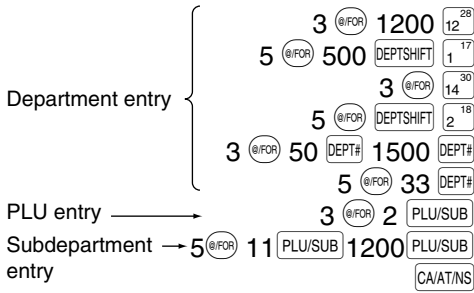


Print

| | | |
|-------------|-----|-----------------|
| | 3 @ | \$12.00 |
| DEPT. 12 | | \$36.00 |
| | 5 @ | \$5.00 |
| DEPT. 17 | | \$25.00 |
| | 3 @ | \$8.25 |
| DEPT. 14 | | \$24.75 |
| | 5 @ | \$3.25 |
| DEPT. 18 | | \$16.25 |
| | 3 @ | \$15.00 |
| DEPT. 50 | | \$45.00 |
| | 5 @ | \$2.50 |
| DEPT. 33 | | \$12.50 |
| | 3 @ | \$1.50 |
| PLU0002 | | \$4.50 |
| | 5 @ | \$12.00 |
| PLU0011 | | \$60.00 |
| ITEMS | 32Q | |
| CASH | | \$224.00 |

Split pricing entries

This function is practical when the customer wants to purchase items normally sold in bulk. To realize this function, you must change the programmed setting. Refer to "Various Function Selection Programming 1" (job code 70) for programming details.

To make split pricing entries, follow the procedure below:

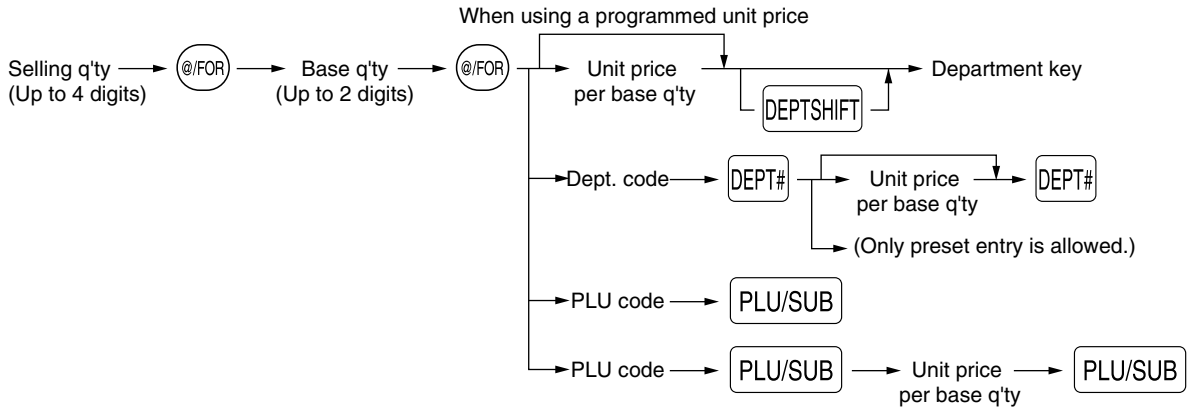

Key operation example



Print

| | | |
|-------------|---------|----------------|
| | 7 @ 10/ | \$6.00 |
| DEPT. 07 | | T1 \$4.20 |
| | 8 @ 12/ | \$10.00 |
| PLU0035 | | T1 \$6.67 |
| MDSE ST | | \$10.87 |
| TAX1 | | \$0.68 |
| ITEMS | 2Q | |
| CASH | | \$11.55 |

■ Single item cash sale (SICS) entry

- This function is useful when a sale is for only one item and is for cash. This function is applicable only to those departments that have been set for SICS or to their associated PLUs or subdepartments.
- The transaction is complete and the drawer opens as soon as you press the department key, **DEPT#** key or **PLU/SUB** key.

Key operation example

For finishing the transaction → 250 **9**²⁵

Print

| | | |
|-------------|----|---------------|
| DEPT. 09 | T | \$2.50 |
| MDSE ST | | \$2.50 |
| TAX1 | | \$0.16 |
| ITEMS | 1Q | |
| CASH | | \$2.66 |

Note

If an entry to a department or PLU/subdepartment set for SICS follows the ones to departments or PLUs/subdepartments not set for SICS, it does not finalize and results in a normal sale.

4 Displaying Subtotals

The register provides three types of subtotals:

Merchandise subtotal

Press the **MDSESBTL** key at any point during a transaction. The net sale subtotal - not including tax - will appear in the display.

Taxable subtotal

Taxable 1 subtotal

Press the **TAX1SHIFT** and **#TMSBTL** keys in this order at any point during a transaction. The sale subtotal of taxable 1 items will appear in the display.

Taxable 2 subtotal

Press the **TAX2SHIFT** and **#TMSBTL** keys in this order at any point during a transaction. The sale subtotal of taxable 2 items will appear in the display.

Including-tax subtotal (full subtotal)

Press the **#TMSBTL** key at any point during a transaction. The sale subtotal including tax and the symbol “**□**” will appear in the display.

5 Finalization of Transaction

■ Cash or check tendering

Press the **#TMSBTL** key to get an including tax subtotal, enter the amount tendered by your customer, then press the **CAI/ATNS** key if it is a cash tender or press the **CHK** key if it is a check tender. When the amount tendered is greater than the amount of the sale, your register will show the change due amount and the symbol “**□**” will light up. Otherwise the register will show a deficit and the symbol “**□**” will light up. You now must make a correct tender entry.

Cash tendering

Key operation example

1000 **#TMSBTL** **CAI/ATNS**

Print

| | | |
|-------------|----|----------------|
| ITEMS | 3Q | |
| ***TOTAL | | \$7.35 |
| CASH | | \$10.00 |
| CHANGE | | \$2.65 |

Check tendering

Key operation example

}
#/TM/SBTL
1000 **CHK**

Print

| | | |
|----------|----|---------------|
| ITEMS | 3Q | |
| ***TOTAL | | \$7.35 |
| CHECK | | \$10.00 |
| CHANGE | | \$2.65 |

■ **Cash or check sale that does not require entry**

Enter items and press the **CA/AT/NS** key if it is a cash sale or press the **CHK** if it is a check sale. Your register will display the total sale amount.

Key operation example

300 **6**²²
10 **PLU/SUB**
CA/AT/NS

Print

| | | |
|-------------|----|----------------|
| DEPT. 06 | T1 | \$3.00 |
| PLU0010 | T1 | \$7.15 |
| MDSE ST | | \$10.15 |
| TAX1 | | \$0.63 |
| ITEMS | 2Q | |
| CASH | | \$10.78 |

In the case of check sale

| | | |
|--------------|----|----------------|
| ITEMS | 2Q | |
| CHECK | | \$10.78 |

■ **Charge (credit) sale**

Enter items and press the charge key (**CH**).

Key operation example

2500 **6**²²
3250 **7**²³
CH

Print

| | | |
|---------------|----|----------------|
| DEPT. 06 | T1 | \$25.00 |
| DEPT. 07 | T1 | \$32.50 |
| MDSE ST | | \$57.50 |
| TAX1 | | \$3.59 |
| ITEMS | 2Q | |
| CHARGE | | \$61.09 |

■ **Mixed-tender sale**

You can perform mixed-tendering of check and cash, cash and charge, and check and charge.

Example: Your customer pays \$9.50 in cash and \$40.00 by charge for an including-tax subtotal of \$49.50.

Key operation example

}
#/TM/SBTL
950 **CA/AT/NS**
CH

Print

| | | |
|---------------|----|----------------|
| ITEMS | 3Q | |
| ***TOTAL | | \$49.50 |
| CASH | | \$9.50 |
| CHARGE | | \$40.00 |

6 Tax Calculation

Automatic tax

When the register is programmed with a tax rate (or tax table) and the tax status of an individual department is set for taxable, it computes the automatic tax on any item that is entered directly into the department or indirectly via a related PLU.

Example: Selling five \$6.70 items (dept. 1, taxable 1) and one \$7.15 item (PLU no. 85, taxable 2) for cash

| Key operation example | Print |
|--|---|
| 5 <input type="button" value="B/FOUR"/> 670 <input type="button" value="1"/> <input type="button" value="T7"/> 85 <input type="button" value="PLU/SUB"/> <input type="button" value="CA/AT/NS"/> | <pre> 5 @ \$6.70 DEPT. 01 T1 \$33.50 PLU0085 T2 \$7.15 MDSE ST \$40.65 TAX1 \$2.09 TAX2 \$0.29 ITEMS 6Q CASH \$43.03 </pre> |

Manual tax

The machine allows you to enter tax manually after it finalizes an item entry.

Example: Selling an \$8.00 item (dept. 12) for cash with 50 cents as tax

| Key operation example | Print |
|---|---|
| 800 <input type="button" value="12"/> <input type="button" value="28"/> 50 <input type="button" value="TAX"/> <input type="button" value="CA/AT/NS"/> | <pre> DEPT. 12 \$8.00 M-TAX \$0.50 ITEMS 1Q CASH \$8.50 </pre> |

Tax delete

You can delete the automatic tax on the taxable 1 and taxable 2 subtotal of each transaction by pressing the key after the subtotal is displayed.

To delete taxable 1 subtotal, press , to get taxable 1 subtotal, and then press to delete the subtotal.

To delete taxable 2 subtotal, press , to get taxable 2 subtotal, and then press to delete the subtotal.

To delete all taxable (1-4) subtotal, press , , and in this order.

Example: Selling a \$7.25 item (dept. 1, taxable 1) and another \$5.15 item (dept. 11, taxable 2) for cash and entering the sale as a non-taxable one

| Key operation example | Print |
|--|---|
| 725 <input type="button" value="1"/> <input type="button" value="T7"/> 515 <input type="button" value="11"/> <input type="button" value="T7"/> <input type="button" value="TAX1SHIFT"/> <input type="button" value="#/TM/SBTL"/> <input type="button" value="TAX"/> <input type="button" value="TAX2SHIFT"/> <input type="button" value="#/TM/SBTL"/> <input type="button" value="TAX"/> <input type="button" value="CA/AT/NS"/> | <pre> DEPT. 01 T1 \$7.25 DEPT. 11 T2 \$5.15 TAX1 ST \$0.00 TAX2 ST \$0.00 ITEMS 2Q CASH \$12.40 </pre> |

■ Tax status shift

The machine allows you to shift the programmed tax status of each department or the PLU key by pressing the **TAX1SHIFT** and/or **TAX2SHIFT** keys before those keys. After each entry is completed, the programmed tax status of each key is resumed.

Example: Selling the following items for cash with their programmed tax status reversed

- One \$13.45 item of dept. 16 (non-taxable) as a taxable 1 item
- One \$7.00 item of PLU no. 25 (non-taxable) as a taxable 1 and 2 item
- One \$4.00 item of dept. 11 (taxable 2) as a non-taxable item
- Two \$10.50 items of dept. 1 (taxable 1) as taxable 2 items

Key operation example

```

1345 TAX1SHIFT 16
25 TAX1SHIFT TAX2SHIFT PLU/SUB
400 TAX2SHIFT 11
1050 TAX1SHIFT TAX2SHIFT 1
1
CA/AT/NS
  
```

Print

```

DEPT. 16      T1 $13.45
PLU0025      T12 $7.00
DEPT. 11      $4.00
DEPT. 01      T2 $10.50
DEPT. 01      T2 $10.50
MOSE ST      $45.45
TAX1          $1.28
TAX2          $1.12

ITEMS        50
CASH        $47.85
  
```

Note

When Canadian tax system is applied:

When using a tax status shift, the entry of a multi-taxable item for PST or GST will be prohibited. Please see below:

In case of; Tax 1: PST, Tax 2: PST,
Tax 3: PST, Tax 4: GST

Taxable 1 and 2 item prohibited
 Taxable 1 and 3 item..... prohibited
 Taxable 2 and 3 item prohibited
 Taxable 1 and 4 item allowed
 Taxable 2 and 4 item allowed
 Taxable 3 and 4 item allowed

In case of; Tax 1: PST, Tax 2: PST,
Tax 3: GST, Tax 4: GST

Taxable 1 and 2 item prohibited
 Taxable 1 and 3 item allowed
 Taxable 2 and 3 item allowed
 Taxable 1 and 4 item allowed
 Taxable 2 and 4 item allowed
 Taxable 3 and 4 item prohibited

OPTIONAL FEATURES

1 Auxiliary Entries

Discount and premium entries using the percent key

The percent key is used to apply a manually entered or preset discount or premium percent rate to individual items or to a merchandise subtotal. In the default setting, you can manually enter a discount percent rate to both individual items and merchandise subtotal. For manual entry of discount or premium percent rate, enter the rate (up to 100.00) with the numeric keys (you need a decimal point when you enter a fractional percent rate), and press a percent key. When using a preset rate (if programmed), just press a percent key. When entry limit is programmed for a percent key, you can not enter a rate over the limit (error code 34 will occur.)

Percent calculation for the merchandise subtotal

| Key operation example | Print | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|------------|----------|-----------|----------|-----------|---------|---------|--|------|-----------|-------|---------|---------|------|--------|------|--|-------|----|-------------|----------------|
| 4 <input type="button" value="@/FOR"/> 140 <input type="button" value="5"/> <input type="button" value="21"/> 570 <input type="button" value="7"/> <input type="button" value="23"/> <input type="button" value="MDSESBTL"/> 10 <input type="button" value="%1"/> <input type="button" value="CA/AT/NS"/> | <table border="0" style="width: 100%;"> <tr> <td style="width: 60%;"></td> <td style="text-align: right;">4 @ \$1.40</td> </tr> <tr> <td>DEPT. 05</td> <td style="text-align: right;">T1 \$5.60</td> </tr> <tr> <td>DEPT. 07</td> <td style="text-align: right;">T1 \$5.70</td> </tr> <tr> <td>MDSE ST</td> <td style="text-align: right;">\$11.30</td> </tr> <tr> <td></td> <td style="text-align: right;">-10%</td> </tr> <tr> <td>%1</td> <td style="text-align: right;">-1.13</td> </tr> <tr> <td>MDSE ST</td> <td style="text-align: right;">\$10.17</td> </tr> <tr> <td>TAX1</td> <td style="text-align: right;">\$0.71</td> </tr> <tr> <td> </td> <td></td> </tr> <tr> <td>ITEMS</td> <td style="text-align: right;">5Q</td> </tr> <tr> <td>CASH</td> <td style="text-align: right;">\$10.88</td> </tr> </table> | | 4 @ \$1.40 | DEPT. 05 | T1 \$5.60 | DEPT. 07 | T1 \$5.70 | MDSE ST | \$11.30 | | -10% | %1 | -1.13 | MDSE ST | \$10.17 | TAX1 | \$0.71 | | | ITEMS | 5Q | CASH | \$10.88 |
| | 4 @ \$1.40 | | | | | | | | | | | | | | | | | | | | | | |
| DEPT. 05 | T1 \$5.60 | | | | | | | | | | | | | | | | | | | | | | |
| DEPT. 07 | T1 \$5.70 | | | | | | | | | | | | | | | | | | | | | | |
| MDSE ST | \$11.30 | | | | | | | | | | | | | | | | | | | | | | |
| | -10% | | | | | | | | | | | | | | | | | | | | | | |
| %1 | -1.13 | | | | | | | | | | | | | | | | | | | | | | |
| MDSE ST | \$10.17 | | | | | | | | | | | | | | | | | | | | | | |
| TAX1 | \$0.71 | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | |
| ITEMS | 5Q | | | | | | | | | | | | | | | | | | | | | | |
| CASH | \$10.88 | | | | | | | | | | | | | | | | | | | | | | |

Percent calculation for item entries

| Key operation example | Print | | | | | | | | | | | | | | | | | | | | | | |
|---|---|--|-----------|----------|-------|-----------|-------|---------|-----------|--|--------|-----------|--------|---------|---------|------|--------|------|--|-------|----|-------------|----------------|
| 800 <input type="button" value="6"/> <input type="button" value="22"/> 7 <input type="button" value="."/> 5 <input type="button" value="%1"/> 15 <input type="button" value="PLU/SUB"/> <input type="button" value="%2"/> <input type="button" value="CA/AT/NS"/> | <table border="0" style="width: 100%;"> <tr> <td style="width: 60%;"></td> <td style="text-align: right;">T1 \$8.00</td> </tr> <tr> <td>DEPT. 06</td> <td style="text-align: right;">-7.5%</td> </tr> <tr> <td>%1</td> <td style="text-align: right;">-0.60</td> </tr> <tr> <td>PLU0015</td> <td style="text-align: right;">T1 \$5.00</td> </tr> <tr> <td></td> <td style="text-align: right;">15.00%</td> </tr> <tr> <td>%2</td> <td style="text-align: right;">\$0.75</td> </tr> <tr> <td>MDSE ST</td> <td style="text-align: right;">\$13.15</td> </tr> <tr> <td>TAX1</td> <td style="text-align: right;">\$0.81</td> </tr> <tr> <td> </td> <td></td> </tr> <tr> <td>ITEMS</td> <td style="text-align: right;">2Q</td> </tr> <tr> <td>CASH</td> <td style="text-align: right;">\$13.96</td> </tr> </table> | | T1 \$8.00 | DEPT. 06 | -7.5% | %1 | -0.60 | PLU0015 | T1 \$5.00 | | 15.00% | %2 | \$0.75 | MDSE ST | \$13.15 | TAX1 | \$0.81 | | | ITEMS | 2Q | CASH | \$13.96 |
| | T1 \$8.00 | | | | | | | | | | | | | | | | | | | | | | |
| DEPT. 06 | -7.5% | | | | | | | | | | | | | | | | | | | | | | |
| %1 | -0.60 | | | | | | | | | | | | | | | | | | | | | | |
| PLU0015 | T1 \$5.00 | | | | | | | | | | | | | | | | | | | | | | |
| | 15.00% | | | | | | | | | | | | | | | | | | | | | | |
| %2 | \$0.75 | | | | | | | | | | | | | | | | | | | | | | |
| MDSE ST | \$13.15 | | | | | | | | | | | | | | | | | | | | | | |
| TAX1 | \$0.81 | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | |
| ITEMS | 2Q | | | | | | | | | | | | | | | | | | | | | | |
| CASH | \$13.96 | | | | | | | | | | | | | | | | | | | | | | |

(When premium and 15% are programmed for the key)

Discount and premium entries using the discount key

The discount key is used to apply a manually entered or preset discount or premium amount to individual items or to a merchandise subtotal. In the default setting, you can manually enter a discount amount to both individual items and merchandise subtotal. For manual entry of discount or premium amounts, enter the amount with the numeric keys, and press the discount key. When using a preset amount (if programmed), press the discount key.

When entry digit limit is programmed for the discount key, you can not enter an amount over the limit (error code 34 will occur.)

Discount for the merchandise subtotal

Key operation example

575 ²²
 10

 100

Print

| | | |
|-------------|----|----------------|
| DEPT. 06 | T1 | \$5.75 |
| PLU0010 | T1 | \$7.15 |
| MDSE ST | | \$12.90 |
| (-) | | -1.00 |
| MDSE ST | | \$11.90 |
| TAX1 | | \$0.81 |
| ITEMS | 20 | |
| CASH | | \$12.71 |

Discount for item entries

Key operation example

675 ²³

(When a discount amount of
\$0.75 is programmed.)

Print

| | | |
|-------------|----|---------------|
| DEPT. 07 | T1 | \$6.75 |
| (-) | | -0.75 |
| MDSE ST | | \$6.00 |
| TAX1 | | \$0.42 |
| ITEMS | 10 | |
| CASH | | \$6.42 |

Refund entries

For departments 1 to 16, enter the refund amount and press the key, and then press the corresponding department key and for departments 17 to 32, enter the refund amount and press the key, then press the key and press the corresponding department key (when using the preset price, omit entering the amount). In case of department 33 to 99, enter the department code and press key and the key, then enter the refund amount and press the key if necessary.

For a refund of a PLU item, enter the PLU code and press the key, then press the key.

For a refund of a subdepartment item, enter the PLU code and press the key and key, then enter the refund amount and press the key.

Key operation example

250 ²²
 33 100
 7
 13
 15 150

Print

| | | |
|---------------|----|----------------|
| DEPT. 06 | T1 | R-2.50 |
| DEPT. 33 | T1 | R-1.00 |
| | | -7 @ \$2.10 |
| PLU0013 | T1 | R-14.70 |
| PLU0015 | T1 | R-1.50 |
| MDSE ST | | -19.70 |
| TAX1 | | -1.23 |
| ITEMS | 00 | |
| CHANGE | | \$20.93 |

Non-add code number entries and printing

You can enter a non-add code number such as a customer's code number and credit card number, a maximum of 16 digits, at any point during the entry of a sale. The cash register will print it at once.

To enter a non-add code number, enter the number and press the key.

Key operation example

1230 #TWSBTL
 1500 6²²
 CH

Print

| | |
|----------|------------|
| #1230 | |
| DEPT. 06 | T1 \$15.00 |
| MDSE ST | \$15.00 |
| TAX1 | \$0.94 |
| | |
| ITEMS | 1Q |
| CHARGE | \$15.94 |

2 Auxiliary Payment Treatment

■ Currency conversion

The register allows payment entries in a foreign currency (only cash payment is available). Pressing the **CONV** key creates a subtotal in the foreign currency.

When using a programmed currency conversion rate, press the **CONV** key after item entries, then enter the tendered amount in foreign currency if not exact amount payment, and press the **CAI/AT/NS** key.

When making a manual entry of currency conversion rate, after item entries, enter the conversion rate (0.0000 to 9999.9999; you need a decimal point when you enter fractional conversion rate) and press the **CONV** key, then enter the tendered amount in foreign currency if not exact amount payment, and press the **CAI/AT/NS** key.

In both cases, the change due will be displayed in domestic currency, and when the amount tendered is short, the deficit is shown in domestic currency.

- Note**
- Press the **CL** key after pressing the **CONV** key to cancel payment in a foreign currency.
 - If programmed, a foreign currency symbol is printed when you use a prest rate.

Applying preset conversion rate

Key operation example

2300 6²²
 4650 7²³
 Currency conversion → **CONV**
 Amount tendered in foreign currency → 10000 **CAI/AT/NS**

(When a currency conversion rate of 0.9275 is programmed for the **CONV** key.)

Print

| | | |
|----------|------------|-------------------|
| DEPT. 06 | T1 \$23.00 | |
| DEPT. 07 | T1 \$46.50 | |
| MDSE ST | \$69.50 | |
| TAX1 | \$4.34 | |
| | | |
| ITEMS | 2Q | |
| ***TOTAL | \$73.84 | Domestic currency |
| CONV 1 | 0.9275 | Conversion rate |
| | €68.49 | Foreign currency |
| CASH | €100.00 | |
| CHANGE | \$33.97 | Domestic currency |

Foreign currency symbol
(Printed if programmed)

Applying manual conversion rate

Key operation example

2300 6²²
 4650 7²³
 Conversion rate → 1 0.275 **CONV**
 10000 **CAI/AT/NS**

Print

| | |
|----------|------------|
| DEPT. 06 | T1 \$23.00 |
| DEPT. 07 | T1 \$46.50 |
| MDSE ST | \$69.50 |
| TAX1 | \$4.34 |
| | |
| ITEMS | 2Q |
| ***TOTAL | \$73.84 |
| CONV 2 | 1.275 |
| | 94.15 |
| CASH | 100.00 |
| CHANGE | \$4.58 |

■ Received-on Account and Paid-out Entries

When you receive on account from a customer or when you pay an amount to a vendor, it is a good idea to use the **RA** key or the **RCPT/PO** key respectively.

For the received-on-account (RA) entry, enter the amount, and press the **RA** key.

For the paid-out (PO) entry, enter the amount and press the **RCPT/PO** key.

Note Cash tendering only available for RA and PO operation.

Key operation example

12345 **#TM/SBTL**
4800 **RA**

Print

| | | |
|-------|--------|---------|
| | #12345 | |
| ***RA | | \$48.00 |

■ No sale (exchange)

When you need to open the drawer with no sale, just press the **CA/AT/NS** key. The drawer will open and printer will print "NO SALE" on the receipt or journal. If you let the machine print a non-add code number before pressing the **CA/AT/NS** key, a no sale entry is achieved and a non-add code number is printed.

| |
|---------|
| #45678 |
| NO SALE |

3 Automatic Sequence Key (**AUTO** key) Entries

You can achieve a programmed transaction simply by pressing the **AUTO** key.

Key operation example

AUTO

(**AUTO**) = 500 **7** **CA/AT/NS**

Print

| | | |
|-------------|----|---------------|
| DEPT. 07 | T1 | \$5.00 |
| HDSE ST | | \$5.00 |
| TAX1 | | \$0.31 |
| ITEMS | 1Q | |
| CASH | | \$5.31 |

CORRECTION

1 Correction of the Last Entry (direct void)

If you make an incorrect entry relating to a department, PLU/subdepartment, percentage (%1 and %2), discount (⊖) or refund, you can void this entry by pressing the **VOID** key immediately after the incorrect entry.

Key operation example

1250 ²²

 2

 600 ²⁴

 328 ²⁵
 28

 250 ²²

Print

| | | |
|-------------|----|---------------|
| DEPT. 06 | T1 | \$12.50 |
| DEPT. 06 | T1 | V-12.50 |
| PLU0002 | T1 | \$1.50 |
| PLU0002 | T1 | V-1.50 |
| DEPT. 08 | T1 | \$6.00 |
| | | 15.00% |
| %2 | | \$0.90 |
| %2 | | V-0.90 |
| DEPT. 09 | T1 | \$3.28 |
| (-) | | -0.28 |
| (-) | | V\$0.28 |
| DEPT. 06 | T1 | R-2.50 |
| DEPT. 06 | T1 | RV\$2.50 |
| MDSE ST | | \$9.28 |
| TAX1 | | \$0.58 |
| ITEMS | 20 | |
| CASH | | \$9.86 |

2 Correction of the Next-to-last or Earlier Entry (indirect void)

You can void any incorrect department entry, PLU/subdepartment entry or item refund entry made during a transaction if you find it before finalizing the transaction (e.g. pressing the **CA/AT/NS** key). This function is applicable to department, PLU/subdepartment and refund entries only.

For the operation, press the **VOID** key just before you press a department key, **DEPT#** key or **PLU/SUB** key. For the refund indirect void, press the **VOID** key after you press the **RFND** key.

Key operation example

Correction of a department entry → 1310 ²²
 1755 ²³
 10
 12
 Correction of a PLU entry → 250 ²²
 825 ²³
 Correction of a refund entry → 1310 ²²
 12
 250 ²²

Print

| | | |
|-------------|----|----------------|
| DEPT. 06 | T1 | \$13.10 |
| DEPT. 07 | T1 | \$17.55 |
| PLU0010 | T1 | \$7.15 |
| PLU0012 | T1 | \$3.00 |
| DEPT. 06 | T1 | R-2.50 |
| DEPT. 07 | T1 | \$8.25 |
| DEPT. 06 | T1 | V-13.10 |
| PLU0012 | T1 | V-3.00 |
| DEPT. 06 | T1 | RV\$2.50 |
| MDSE ST | | \$32.95 |
| TAX1 | | \$2.06 |
| ITEMS | 30 | |
| CASH | | \$35.01 |

3 Subtotal Void

You can void an entire transaction. Once subtotal void is executed, the transaction is aborted and the register issues a receipt. This function does not work when more than 30 items have been entered.

Key operation example

1310 ¹⁸
 ¹⁸
 1755 ²²
 10
 35
 Subtotal void {

Print

| | | |
|----------|----|---------|
| DEPT. 02 | T1 | \$13.10 |
| DEPT. 02 | T1 | \$13.10 |
| DEPT. 06 | T1 | \$17.55 |
| PLU0010 | T1 | \$7.15 |
| PLU0035 | T1 | \$3.00 |
| NDSE ST | | \$53.90 |
| SBTL VD | | -53.90 |
| ***TOTAL | | \$0.00 |

4 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function

Any errors found after the entry of a transaction has been completed or during an amount tendered entry cannot be voided. These errors must be corrected by the manager.

The following steps should be taken:

1. If you are making the amount tendered entry, finalize the transaction.
2. Make correct entries from the beginning.
3. Hand the incorrect receipt to your manager for its cancellation.


PRIOR TO PROGRAMMING

Before starting sales entries, you must first program necessary items so that the cash register suits your sales manner. In this manual, there are three sections, **BASIC FUNCTION PROGRAMMING where required items must be programmed**, **AUXILIARY FUNCTION PROGRAMMING** where you can program for more convenient use of keys on the keyboard, and **ADVANCED FUNCTION PROGRAMMING** where various optional programming features are provided. Find the appropriate features for your needs, and make the necessary programming.

Note You can select the language of text (English, French or Spanish) printed on receipts or journals. For the language selection, please refer to “[Language Selection](#)” described later in this section.

■ Procedure for programming

1. Check to see whether a paper roll is present in the machine. If there is not enough paper on the roll, replace it with a new one (refer to [MAINTENANCE](#) section for the replacement).
2. Put the manager key in the mode switch and turn it to the PGM position.
3. Program necessary items into the cash register.
Every time you program an item, the cash register will print the setting. Please refer to print samples in each section.
4. If necessary, issue programming reports for your reference.

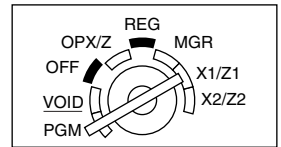

Note

- On the procedures and key operation examples shown in the programming details, numbers such as “08262003” indicates the parameter which must be entered using the corresponding numeric keys.
- Asterisks in the tables shown in the programming details indicate default settings.

BASIC FUNCTION PROGRAMMING

(For Quick Start)

1 Date and Time Programming

■ Date

For setting the date, enter the date in 8 digits using the month-day-year (MM/DD/YYYY) format, then press the **#/TM/SBTL** key.

Procedure Date(MM/DD/YYYY) → **#/TM/SBTL**

Key operation example

08262003 **#/TM/SBTL**
(Aug. 26, 2003)

Print

PGM 08/26/2003 — Date

Note You can use the date format of day-month-year (DD/MM/YYYY) or year-month-day (YYYY/MM/DD) format. To change the format, refer to “Various Function Selection Programming 1” section ([Job code 61](#)).

■ Time

For setting the time, enter the time in 4 digits using the 24-hour format. For example, when the time is set to 2:30 AM, enter 230; and when it is set to 2:30 PM, enter 1430.

Procedure

Time(max. 4 digits in 24-hour format) → #/TM/SBTL

Key operation example

1430 #/TM/SBTL

Print

PGM 2:30PM Time

Note

In the display, current time is displayed in 12-hour format. For AM time, “A” and for PM time “P” will appear in the rightmost position with the current time. If you want to display time in the 24-hour format, refer to “Various Function Selection Programming 1” section (Job code 61).

2 Tax Programming for Automatic Tax Calculation Function

Note

The cash register can support US and Canadian tax systems. If you use the Canadian tax system, you must first change the tax system, then program the tax rate or tax table and quantity for doughnut exempt which are described in this section. For changing your cash register's tax system, please refer to “Various Function Selection Programming 1” section (job code 70).

Before you can proceed with registration of sales, you must first program the tax that is levied in accordance with the law of your state. The cash register comes with the ability to program four different tax rates. In most states, you will only need to program Tax 1. However if you live in an area that has a separate local tax (such as a Parish tax) or a hospitality tax, the register can be programmed to calculate these separate taxes.


When you program the tax status for a department, tax will be automatically added to sales of items assigned to the department according to the programmed tax status for the department. You can also enter tax manually.

There are two tax programming methods. The tax rate method uses a straight percentage rate per dollar. The tax table method requires tax break information from your states or local tax offices. Use the method which is acceptable in your state. You can obtain necessary data for tax programming from your local tax office.


■ Tax programming using a tax rate

The percent rate specified here is used for tax calculation on taxable subtotals.

Procedure

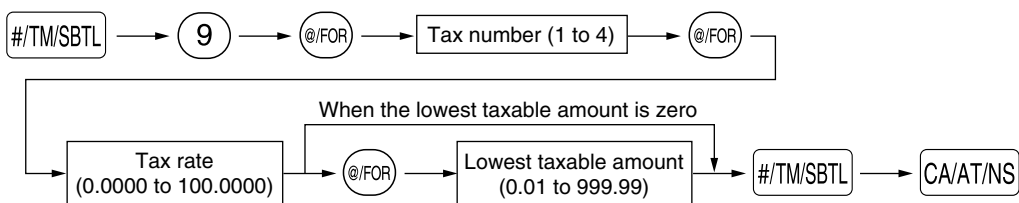


 To delete a tax rate, use the following sequence:



Example: Programming the tax rate 4% as tax rate 2 with tax exempt as 12¢

Key operation example

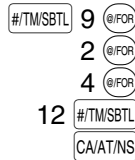

Print

| | |
|--------------|----------------|
| *PGM* | |
| T2 | 4.0000% |
| | 0.12 |

- Note**
- If you make an incorrect entry before pressing the third **@/FOR** key in programming a tax rate, cancel it with the **CL** key.
 - You do not need to enter the trailing zeros of the tax rate (after the decimal point), but you do need to enter the decimal for fractions.
 - The lowest taxable amount setting is ignored when you select VAT system for Canadian tax.

■ The tax table (applicable to the add-on tax)

If you are in an area that uses a tax table for tax calculation, you can program the cash register accordingly. Tax table programming can be performed for Tax 1 through Tax 4.

Sample tax table

New Jersey tax table: 6%

| Taxes | Range of sales amount | |
|----------------|-----------------------|--------------------|
| | Minimum breakpoint | Maximum breakpoint |
| .00 | .01 | to .10 |
| .01 — T | .11 — Q | to .22 |
| .02 | .23 | to .38 |
| .03 | .39 | to .56 |
| .04 | .57 | to .72 |
| .05 | .73 | to .88 |
| .06 | .89 | to 1.10 |
| .07 | 1.11 — M1 | to 1.22 |
| .08 | 1.23 | to 1.38 |
| .09 | 1.39 | to 1.56 |
| .10 | 1.57 | to 1.72 |
| .11 | 1.73 | to 1.88 |
| .12 | 1.89 | to 2.10 |
| .13 | 2.11 — M2 | to 2.22 |




| A: Difference between the minimum breakpoint and the next one (¢) | |
|---|---------------|
| — | |
| 10 (0.11 - 0.01) | B: Non-cyclic |
| 12 (0.23 - 0.11) | C: Cyclic-1 |
| 16 (0.39 - 0.23) | |
| 18 (0.57 - 0.39) | |
| 16 (0.73 - 0.57) | |
| 16 (0.89 - 0.73) | D: Cyclic-2 |
| 22 (1.11 - 0.89) | |
| 12 (1.23 - 1.11) | |
| 16 (1.39 - 1.23) | |
| 18 (1.57 - 1.39) | |
| 16 (1.73 - 1.57) | |
| 16 (1.89 - 1.73) | |
| 22 (2.11 - 1.89) | |


To program a tax table, first make a table like the one shown above right. From the tax table, calculate the differences between a minimum break point and the next one (A). Then, from the differences, find irregular cycles (B) and regular cycles (C and D). These cycles will show you the following items necessary to program the tax table:

- T:** The tax amount collected on the minimum taxable amount (Q)
- Q:** The minimum taxable amount
- M1:** The maximum value of the minimum breakpoint on a regular cycle (C)
We call this point "MAX point."
- M2:** The maximum value of the minimum breakpoint on a regular cycle (D)
We call this point "MAX point."
- M:** Range of the minimum breakpoint on a regular cycle: difference between Q and M1 or between M1 and M2

Procedure

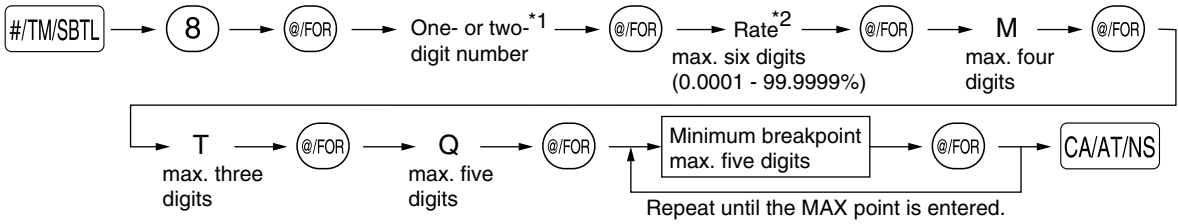

 To delete a tax table, use the following sequence:



***1 First figure:** The first figure to be entered depends upon whether the difference between a minimum breakpoint to be entered and the preceding minimum breakpoint is not less than \$1.00 or more than 99¢. When the difference is not less than \$1.00, enter “1,” and when it is not more than 99¢, enter “0” or nothing.

Second figure: The second figure depends upon whether your tax table is to be programmed as tax table 1, 2, 3 or 4.

***2** If the rate is fractional (e.g. 4-3/8%), then the fractional portion (3/8) would be converted to its decimal equivalent (i.e. .375) and the resulting rate of 4.375 would be entered. Note that the nominal rate (R) is generally indicated on the tax table.

Note If you make an incorrect entry before entering the M in programming a tax table, cancel it with the **CL** key; and if you make an error after entering the M, cancel it with the **#/TM/SBTL** key. Then program again from the beginning.

• Limitations to the entry of minimum breakpoints

The register can support a tax table consisting of no more than 72 breakpoints. (The maximum number of breakpoints is 36 when the breakpoint difference is \$1.00 or more.) If the number of breakpoints exceeds the register’s table capacity, then the manual entry approach should be used.

Example: Programming the sample tax table shown on the previous page as tax table 1

| Key operation example | | Print |
|--------------------------|-------------------|-------------------|
| | #/TM/SBTL 8 @/FOR | *PGM* |
| | 1 @/FOR | T1 6.0000% |
| Tax rate | → 6 @/FOR | / 1.00 |
| M | → 100 @/FOR | 1 0.11 |
| T | → 1 @/FOR | 2 0.23 |
| Q | → 11 @/FOR | 3 0.39 |
| The first cyclic portion | 23 @/FOR | 4 0.57 |
| | 39 @/FOR | 5 0.73 |
| | 57 @/FOR | 6 0.89 |
| | 73 @/FOR | 7 1.11 |
| M1 (MAX point) | → 89 @/FOR | |
| | 111 @/FOR | |
| | CA/AT/NS | |

Note You do not need to enter the trailing zeros of the tax rate (after the decimal point) but you do need to enter the decimal point for fractions.

- If the tax is not provided for every cent, modify the tax table by setting the tax for every cent in the following manner.

When setting the tax, consider the minimum breakpoint corresponding to unprovided tax to be the same as the one corresponding to the tax provided on a large amount.

Sample tax table
Example 8%

| Tax | Minimum breakpoint |
|-----|--------------------|
| .00 | .01 |
| .01 | .11 |
| .02 | .26 |
| .03 | .47 |
| .04 | .68 |
| .06 | .89 |
| .09 | 1.11 |
| .10 | 1.26 |
| .11 | 1.47 |
| .12 | 1.68 |
| .14 | 1.89 |
| .17 | 2.11 |

Modification of the left tax table

| Tax | Minimum breakpoint |
|---------|--------------------|
| .00 | .01 |
| .01 — T | .11 — Q |
| .02 | .26 |
| .03 | .47 |
| .04 | .68 |
| .05 | .89 |
| .06 | .89 |
| .07 | 1.11 — M1 |
| .08 | 1.11 |
| .09 | 1.11 |
| .10 | 1.26 |
| .11 | 1.47 |
| .12 | 1.68 |
| .13 | 1.89 |
| .14 | 1.89 |
| .15 | 2.11 — M2 |
| .16 | 2.11 |
| .17 | 2.11 |




| Breakpoint difference (¢) | |
|---------------------------|---------------|
| 1 | |
| 10 (0.11-0.01) | B: Non-cyclic |
| 15 (0.26-0.11) | |
| 21 (0.47-0.26) | |
| 21 (0.68-0.47) | |
| 21 (0.89-0.68) | |
| 0 (0.89-0.89) | C: Cyclic-1 |
| 22 (1.11-0.89) | |
| 0 (1.11-1.11) | |
| 0 (1.11-1.11) | |
| 15 (1.26-1.11) | |
| 21 (1.47-1.26) | |
| 21 (1.68-1.47) | |
| 21 (1.89-1.68) | |
| 0 (1.89-1.89) | D: Cyclic-2 |
| 22 (2.11-1.89) | |
| 0 (2.11-2.11) | |
| 0 (2.11-2.11) | |

From the modified tax table above;
Rate = 8(%), T = \$0.01 = 1¢, Q = \$0.11 = 11¢, M1 = 1.11, M2 = 2.11, M = 100



Quantity for doughnut tax exempt (for Canadian tax system)

This option is available only when the Canadian tax system is selected.

Procedure

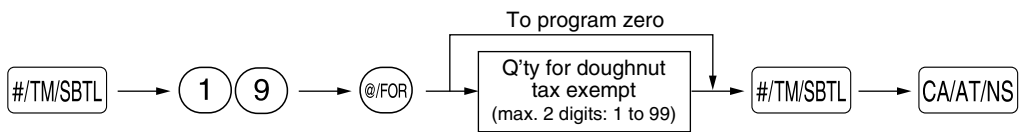

Example: To program the quantity "6"

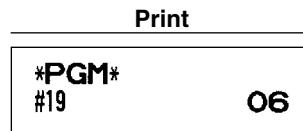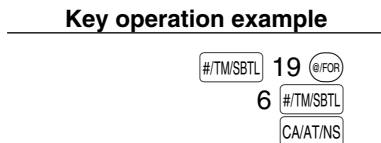

AUXILIARY FUNCTION PROGRAMMING

 
1 Department Programming

Merchandise can be classified into a maximum of 99 departments. Items sold with use of the department keys can later be printed on a report that shows the quantities sold and sales amounts classified by department. The data is useful for making purchasing decisions and other store operations. Departments can be assigned to articles whose prices were set using PLU/subdepartment function.


When using a department key, you must set the parameters to specify the department status, such as positive or negative department. Prices can be assigned directly to departments for frequently purchased items, which enables you to enter the prices by simply pressing the department keys or dept. code entries.

Department status

Procedure



 *To program departments 17 through 32, press the department shift key at this point.



To program another department, start from the beginning without pressing the **CA/AT/NS** key.

| Item: | Selection: | Entry: |
|-----------------------------------|-------------------------------------|------------------|
| A Tax 4 status | Taxable | 1 |
| | Non-taxable* | 0 |
| B Tax 3 status | Taxable | 1 |
| | Non-taxable* | 0 |
| C Tax 2 status | Taxable | 1 |
| | Non-taxable* | 0 |
| D Tax 1 status | Taxable (*for dept. 1 thru 10) | 1 |
| | Non-taxable (*for dept. 11 thru 99) | 0 |
| E SICS / Normal | SICS | 1 |
| | Normal* | 0 |
| F Sign | Negative department | 1 |
| | Positive department* | 0 |
| G Entry digit limit | | 0-7 (default: 7) |
| H Type of unit price entry | Open and preset | 3 |
| | Preset only | 2 |
| | Open only* | 1 |
| | Inhibit department key | 0 |

Tax status (taxable 1 through 4 / non-taxable)

- When any entry of a taxable department is made in a transaction, tax is automatically computed according to the associated tax table or rate.

SICS (Single Item Cash Sale)

- If an entry of a department programmed for SICS is made first, the sale will be finalized as a cash sale as soon as the department key is pressed. If the entry is made after entering a department not programmed for SICS, the sale will not be finalized until the **CA/AT/NS** key is pressed.

Entry digit limit


- 32** Set the number of allowable digits for the maximum entry amount for each department. The limit is effective for operations in the REG mode and can be overridden in the MGR mode.

Example: Programming department 2 as taxable 1, SICS, negative department, entry digit limit - 7 digits, and allowing open & preset entry. (ABCDEFGH: 00011173)

| | | | | | | | |
|--|--|---|-----------|-----------------------------|--|------------|---------|
| Key operation example | Print | | | | | | |
| 00011173 @IFOR 2 ¹⁸ CA/AT/NS | <table border="1" style="margin: auto;"> <tr> <td style="padding: 5px;"> *PGM* DO2 DEPT. 02 </td> <td style="padding: 5px; text-align: center;"> T1 </td> <td style="padding: 5px; text-align: right;"> 173 -13.10 </td> </tr> <tr> <td></td> <td style="text-align: center; font-size: small;">Tax status</td> <td style="text-align: center; font-size: small;">Sign(F)</td> </tr> </table> | *PGM* DO2 DEPT. 02 | T1 | 173 -13.10 | | Tax status | Sign(F) |
| *PGM* DO2 DEPT. 02 | T1 | 173 -13.10 | | | | | |
| | Tax status | Sign(F) | | | | | |

From left, EGH

■ Preset unit price

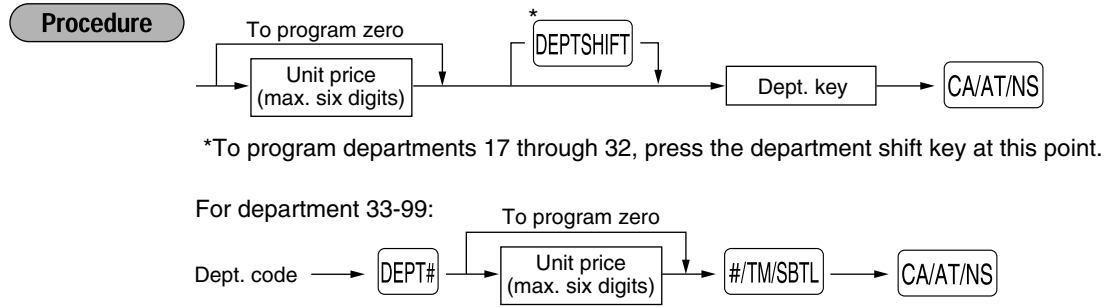

To program another department, start from the beginning without pressing the CA/AT/NS key.

| | | | | | | | |
|--|--|---|-----------|----------------------------|--|--|------------|
| Key operation example | Print | | | | | | |
| 1000 1 ¹⁷ CA/AT/NS | <table border="1" style="margin: auto;"> <tr> <td style="padding: 5px;"> *PGM* DO1 DEPT. 01 </td> <td style="padding: 5px; text-align: center;"> T1 </td> <td style="padding: 5px; text-align: right;"> 073 10.00 </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center; font-size: small;">Unit price</td> </tr> </table> | *PGM* DO1 DEPT. 01 | T1 | 073 10.00 | | | Unit price |
| *PGM* DO1 DEPT. 01 | T1 | 073 10.00 | | | | | |
| | | Unit price | | | | | |

 
Note Even if a department is not programmed to allow the entry of preset unit prices in functional programming, the department is automatically changed to allow the entry of preset unit prices by this programming entry.

2 PLU (Price Look-Up) and Subdepartment Programming

The PLU function allows speedy key entries whereby a price is automatically called up when a code is entered. The subdepartment is a kind of “open PLU”, which requires you to enter a price after the PLU code is entered. A maximum of 1200 PLU/subdepartment settings are possible. Each one belongs to a department and acquires the department’s parameters (tax status, SICS and sign). The cash register is preprogrammed so all 1200 codes are assigned as PLUs associated with department 1 and preset unit price “0”.


■ Unit price and associated department assignment

Procedure



*1: To assign departments 17 through 32, press the department shift key at this point.

When the associated department is department 33-99:

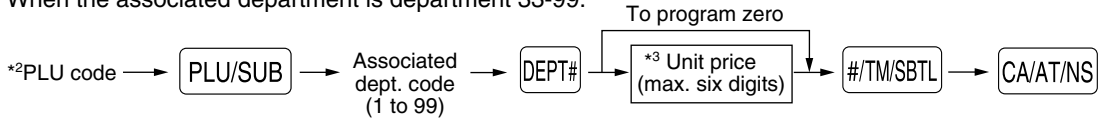

*2: 1 through 1200 (Depending on the EJ memory size setting, up to 200)

*3: For a subdepartment, set the limit amount of unit price entry.

To program the following PLU, start from entering a unit price or an associated department code without pressing the CA/AT/NS key.

To program another PLU, start from the beginning without pressing the CA/AT/NS key.

Key operation example

```

1 [PLU/SUB]
125 [3] [19]
[CA/AT/NS]
    
```

Print

```


*PGM*
P0001 (03)
PLU0001      1
              1.25
    
```

Unit price
Associated dept.

PLU code


To delete a PLU code, use the following sequence:

Procedure

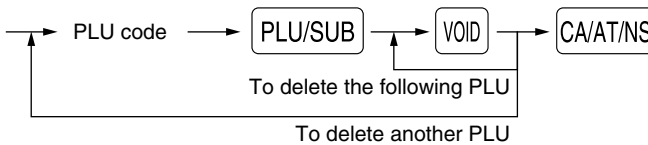

■ PLU/subdepartment selection

Procedure

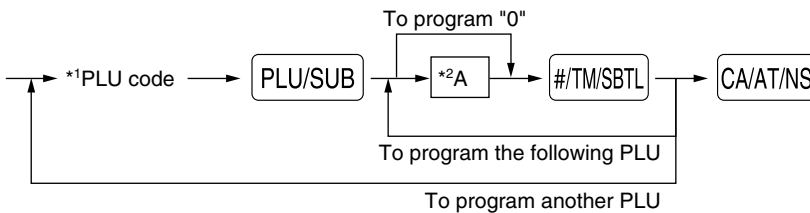

*1: 1 through 1200 (Depending on the EJ memory size setting, up to 200)

*2: 0 for subdepartment or 1 for PLU (default: 1)

Key operation example

```

1 [PLU/SUB]
0 [#/TM/SBTL] [CA/AT/NS]
    
```

Print

```

*PGM*
P0001 (03)
PLU0001      0
              1.25
    
```

PLU/subdept.

Note

When you program the last PLU code, the programming sequence will be complete with a press of the #/TM/SBTL key.


3 Miscellaneous Key Programming

The cash register provides miscellaneous keys such as **%1**, **%2**, **⊖**, **RFND**, **RA**, **RCPTPO**, **CONV**, **TAX**, **CHK**, **CH** and **CA/AT/NS**. While the cash register is pre-programmed so you can use these keys, you must set a currency conversion rate to use **CONV** key. You can also program these keys for more convenient use. Please refer to the data below for programming these keys. Factory setting is indicated with parentheses.

- %1**, **%2** Percent rate (0.00%), tax status (non-taxable), sign (minus), item % and subtotal % entry* (both are allowed), percent rate limitation (100 %)
- ⊖** Amount (0.00), tax status (non-taxable), sign (minus), item ⊖ and subtotal ⊖ entry* (both are allowed), entry digit limit (7 digits)
- RFND** Not necessary to program
- RA**, **RCPTPO** Entry digit limit (9 digits)
- CONV** Currency conversion rate (0.0000), currency conversion rate entry method - open or preset (both are enabled)
- CHK**, **CH** and **CA/AT/NS** Compulsory entry of amount tender (not compulsory), entry digit limit (8 digits), footer printing (not printed)
- TAX** (Manual tax) Entry digit limit (7 digits)

- * Item %/Item ⊖: Percent/discount calculation is applied to individual department and PLU/subdepartment.
- * Subtotal %/Subtotal ⊖: Percent/discount calculation is applied to subtotals.

■ Rate for **%1**, **%2** and **CONV**

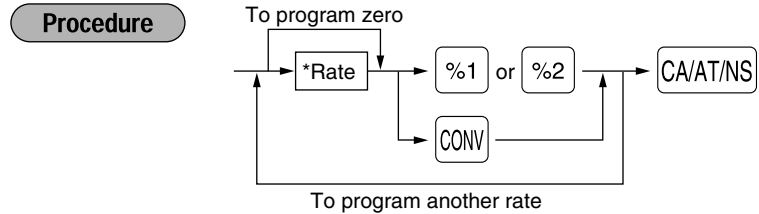

*: Rate
 0.00 — 100.00 (% rate)
 0.0000 — 9999.9999 (Currency conversion rate)

Key operation example


10 • 25 **%1**
 0 • 9275 **CONV**
CA/AT/NS

Print

| | | |
|-------------------|---------|--------------------------|
| *PGM* | | |
| F02 %1 | 000 | |
| L100.00% | -10.25% | Percent rate |
| F48 CONV 1 | 00 | |
| | 0.9275 | Currency conversion rate |

Note You must use a decimal point when setting fractional rates.

 ■ Amount for ⊖



Key operation example


200 ⊖
CA/AT/NS

Print

```
*PGM*
F01 (-)          007
                  -2.00
                  |
                  |----- Discount amount
```

■ Percent rate limitation for %1 and %2

Procedure

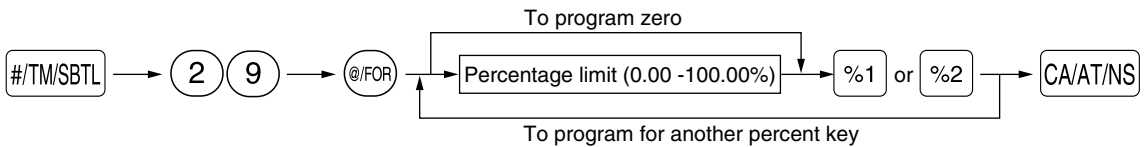

- Note**
- Percent entries that exceed the upper limit may be overridden in the MGR mode.
 - 10.00% can be entered as 1 0 or 1 0 • 0 0 . The • key is needed only for fractional entry.

Key operation example


#/TM/SBTL 29 @/FOR
15 • 00 %1
CA/AT/NS

Print

```
*PGM*
F02 %1          000
L 15.00%       -10.25%
                |
                |----- Percentage limit
```

■ Function parameters for %1, %2 and ⊖

Procedure

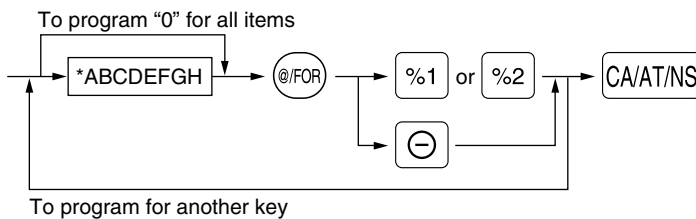

| *: Item: | Selection: | Entry: |
|---|--------------------|------------------|
| A Tax 4 status | Taxable | 1 |
| | Non-taxable* | 0 |
| B Tax 3 status | Taxable | 1 |
| | Non-taxable* | 0 |
| C Tax 2 status | Taxable | 1 |
| | Non-taxable* | 0 |
| D Tax 1 status | Taxable | 1 |
| | Non-taxable* | 0 |
| E +/- sign | + (premium) sign | 0 |
| | - (discount) sign* | 1 |
| F Item % / Item ⊖ | Allow* | 0 |
| | Disallow | 1 |
| G Subtotal % / Subtotal ⊖ | Allow* | 0 |
| | Disallow | 1 |
| H Entry digit limit for discount key | | 0-7 (default: 7) |

When programming for percent keys, always enter 0 for H.

Tax status (taxable 1 through 4 / non-taxable)

- When taxable is selected, tax is applied to the amount obtained after premium or discount calculation.



+/- sign

- Programming of the +/- sign assigns the premium or discount function for each key.

Entry digit limit (For discount key only)

- The entry digit limit is in effect for the REG mode operations but can be overridden in the MGR mode. The entry digit limit is represented by the number of allowable digit for the maximum entry amount for discount key.

Key operation example

00011006 
 CA/AT/NS


Print

```
*PGM*
F01 (-)      006
             |  -2.00
             |  Tax status
```

From left, FGH
Sign(E)

Function parameters for

 Procedure



| *: Item: | Selection: | Entry: |
|----------------------------|------------|--------|
| A Open rate entry | Allow* | 0 |
| | Disallow | 1 |
| B Preset rate entry | Allow* | 0 |
| | Disallow | 1 |

Key operation example

00 
 CA/AT/NS


Print

```
*PGM*
F48 CONV 1      00
                |  0.9275
```

From left, AB

■ Entry digit limit for **RA**, **RCPT/PO** and **TAX**

 Procedure



- For **RA** **RCPT/PO**, enter 0 to 9 (digits), and for **TAX** (manual tax), enter 0 to 7 (digits). By default, 9 for **RA** and **RCPT/PO** and 7 for **TAX** are set.

Entry digit limit is in effect for REG mode operation but can be overridden in the MGR mode. The entry digit limit is represented by the number of allowable digits for maximum entry or total amount. When "0" is set, the operation of the corresponding key is prohibited.

Key operation example




Print

```

*PGM*
F41 ***P0      4
  
```

■ Function parameters for **CHK**, **CH** and **CA/AT/NS** (when using as CA key)

Procedure

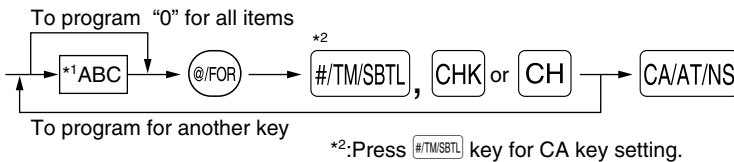

| *1:Item: | Selection: | Entry: |
|-------------------------|--|------------------|
| A Footer printing | Allow | 1 |
| | Disallow* | 0 |
| B Amount tendered entry | Compulsory | 1 |
| | Non-compulsory (for the CA or CHK keys)* | 0 |
| | Inhibit (for the CH key)* | 0 |
| C Entry digit limit | | 0-8 (default: 8) |

Footer printing

- This programming decides whether or not the machine should print a message at the foot of a receipt when a specified media key is used. With regard to programming method of footer logo message, refer to "Logo messages" section on [page 43](#).

Amount tendered entry

- You may select amount tendered, compulsory or optional, for the **CA/AT/NS** and **CHK** keys.
- You may select amount tendered, compulsory or inhibited, for the **CH** key.

Entry digit limit

- For the **CH** and **CHK** keys, program upper limit entry amount for the tendered amount. For the **CA/AT/NS** key, program upper limit entry for total cash amount which can be handled on the register. The entry digit limit is in effect for REG mode operation but can be overridden in the MGR mode. The entry digit limit is represented by the number of allowable digits for the maximum entry or total amount. When "0" is set, the operation of the corresponding key is prohibited.

Key operation example



Print

```

*PGM*
F45 CHECK
00000000018
  
```

ABC (A:0, B:1, C:8)

4 Text Programming

The register allows you to program the text for clerk names, department item names, PLU/subdepartment item names, and so on, if necessary. There are two ways for programming text: using character keys on the keyboard or entering character codes with numeric keys on the keyboard.

Using character keys on the keyboard

You can enter characters according to the small figures printed in the lower right position of the key tops. For the layout, please refer to “Keyboard” section on [page 5](#).

The following are used as control keys for character entry:

- SHIFT** Toggles between upper-case and lower-case letters. By default, the upper-case letter is selected. Once the **SHIFT** key is pressed, you are locked in for entering lower-case letters. “_” lights up at the SHIFT position of the display when lower-case letters entry is selected.
- NUMBER** Press the **NUMBER** key to enter numeric characters. For example to enter “1”, press the **NUMBER** and **1** key. If you press the **1** key without pressing the **NUMBER** key, the cash register goes to character codes entry mode. Once the **NUMBER** key is pressed, you are locked in for entering numeric characters. “_” lights up at the NUMBER position of the display when numeric characters entry is selected.
- DC** Toggles between single-size and double-size characters. By default, the single-size character is selected. Once the **DC** key is pressed, you are locked in for entering double size characters. “_” lights up at the DC position of the display when double-size characters entry is selected.
- BS** Backs up the cursor, erasing the character to the left.

Example

To program the word “Clerk01” with the letter “C” being double size.

| | |
|--|-------------------------------------|
| To make the letter “C” double size character | DC C |
| To make character size return to normal size | DC |
| To toggle the characters to lower-case letters | SHIFT |
| | L E R K |
| To enter numbers | NUMBER 0 1 |

Entering character codes with numeric keys on the keyboard

Numerals, letters and symbols are programmable by entering the character code and the **00** key. (If numeric characters entry is selected, that is, “_” lights up at the NUMBER position of the display, press the **NUMBER** key to release it.) Set the alphanumeric character code table on the next page. By doing this, you can program characters other than those on the key tops.

- Double-size characters can be made by entering the character code 253.
- All three digits of the character code MUST be entered (even if it starts with zero).

Example

To program the word “SHARP” in double-size characters

253 **00** 083 **00** 072 **00** 065 **00** 082 **00** 080 **00**

S
H
A
R
P

When you press an appropriate number key (job code number) and press the **0** key for text entry just after you start programming with the **#TMSBTL** key, the cash register will be automatically ready for text entry.

Listed below is an overview of what you can program and the allowable number of single sized characters for each text entry.

- Department text 12 characters
- PLU text (item label) 12 characters
- Function text 8 characters
- Logo message 6 lines and 24 characters for each line
- Clerk name 8 characters
- Foreign currency symbol 4 characters

Alphanumeric character code table

| Code | Character | Code | Character | Code | Character | Code | Character | Code | Character |
|------|-----------|------|-----------|------|-----------|------|-----------|------|-----------|
| 001 | á | 046 | . | 091 | Ä | 136 | → | 193 | ı |
| 002 | â | 047 | / | 092 | Ö | 137 | ƒ | 194 | Ġ |
| 003 | ê | 048 | 0 | 093 | Ü | 138 | Œ | 195 | Ş |
| 004 | î | 049 | 1 | 094 | ^ | 139 | ◀ | 196 | Ğ |
| 005 | ì | 050 | 2 | 095 | _ | 140 | ▶ | 197 | ġ |
| 006 | í | 051 | 3 | 096 | ‘ | 141 | F | 198 | Ɔ |
| 007 | ô | 052 | 4 | 097 | a | 142 | T | 199 | ƙ |
| 008 | ó | 053 | 5 | 098 | b | 143 | ↓ | 200 | L |
| 009 | û | 054 | 6 | 099 | c | 144 | ç | 201 | J |
| 010 | ú | 055 | 7 | 100 | d | 145 | ° | 202 | Ž |
| 011 | œ | 056 | 8 | 101 | e | 146 | ı | 203 | Đ |
| 012 | û | 057 | 9 | 102 | f | 147 | ù | 204 | đ |
| 013 | ú | 058 | : | 103 | g | 148 | à | 205 | Ć |
| 014 | ø | 059 | ; | 104 | h | 149 | Æ | 206 | ć |
| 015 | ó | 060 | < | 105 | i | 150 | ø | 207 | € |
| 016 | Λ | 061 | = | 106 | j | 151 | Å | 208 | Ɔ |
| 017 | Ψ | 062 | > | 107 | k | 152 | □ | 209 | ˘ |
| 018 | Γ | 063 | ? | 108 | l | 153 | é | 210 | ě |
| 019 | ˘ | 064 | @ | 109 | m | 154 | è | 211 | š |
| 020 | Ω | 065 | A | 110 | n | 155 | Pt | 212 | č |
| 021 | Δ | 066 | B | 111 | o | 156 | i | 213 | ž |
| 022 | θ | 067 | C | 112 | p | 157 | Ñ | 214 | ý |
| 023 | Ξ | 068 | D | 113 | q | 158 | ò | 215 | ù |
| 024 | Π | 069 | E | 114 | r | 159 | £ | 216 | ň |
| 025 | Σ | 070 | F | 115 | s | 160 | ¥ | 217 | ˘ |
| 026 | Υ | 071 | G | 116 | t | 161 | ◦ | 218 | ˘ |
| 027 | Φ | 072 | H | 117 | u | 162 | Γ | 219 | ř |
| 028 | Ú | 073 | I | 118 | v | 163 | ┘ | 224 | * |
| 029 | Ú | 074 | J | 119 | w | 164 | ˘ | 225 | § |
| 030 | Ŏ | 075 | K | 120 | x | 165 | . | 226 | Ø |
| 031 | Ó | 076 | L | 121 | y | 177 | Á | 227 | ˘ |
| 032 | (space) | 077 | M | 122 | z | 178 | í | 228 | ↑ |
| 033 | ! | 078 | N | 123 | { | 180 | Ā | 229 |] |
| 034 | ” | 079 | O | 124 | | 181 | ā | 230 | [|
| 035 | # | 080 | P | 125 | } | 182 | Ē | 231 | “ |
| 036 | \$ | 081 | Q | 126 | β | 183 | ē | 232 | ä |
| 037 | % | 082 | R | 127 | ç | 184 | Ī | 233 | ö |
| 038 | & | 083 | S | 128 | !! | 185 | ī | 234 | ü |
| 039 | , | 084 | T | 129 | ₁ | 186 | Ū | 235 | æ |
| 040 | (| 085 | U | 130 | ₂ | 187 | ū | 236 | á |
| 041 |) | 086 | V | 131 | ₃ | 188 | Ŋ | 237 | É |
| 042 | * | 087 | W | 132 | ₄ | 189 | ŋ | 238 | ñ |
| 043 | + | 088 | X | 133 | 1/2 | 190 | Č | 253 | *(DC) |
| 044 | , | 089 | Y | 134 | F₊ | 191 | Š | | |
| 045 | - | 090 | Z | 135 | ← | 192 | Č | | |


*(DC): Double-size character code

◻ : The shaded character cannot be displayed (displayed as space).

Note The character “!!” (code 128) cannot be displayed (displayed as “!”).


Department text

Procedure

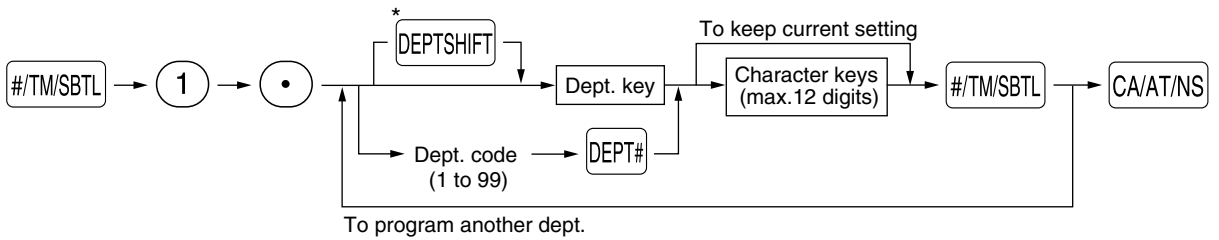


*To program departments 17 through 32, press the department shift key.

Key operation example

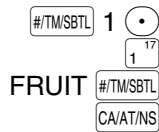

(Programming FRUIT for dept.1)


Print

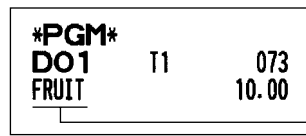


Text programmed for dept. 1

PLU text (item label)

Procedure

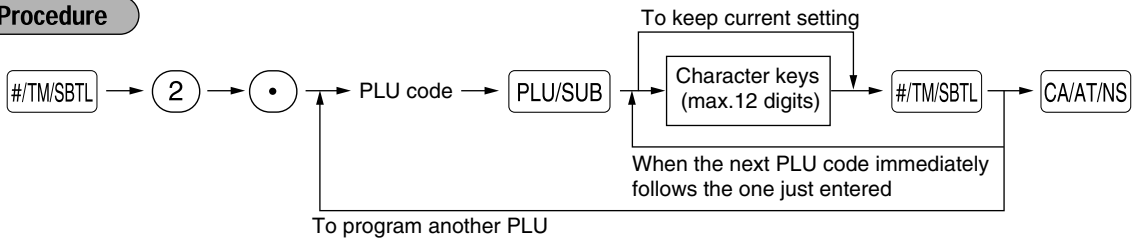


Key operation example

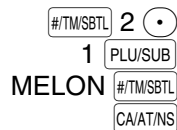

(Programming MELON to PLU1)


Print

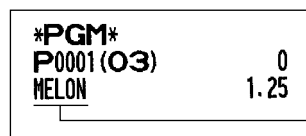

Text programmed for PLU code 1

Function text

Procedure

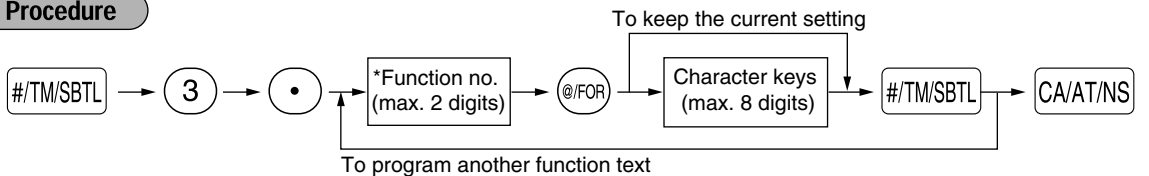

* Function no.: See "List of function texts" shown on the following page.

Key operation example

#TWSBTL 3
 46 @FOR
 CARD #TWSBTL
 CA/AT/NS

Print

PGM
 F46 CARD
 000000000008

(Programming CARD for gross charge)

■ List of function texts


| Function no. | Key or function | Default setting | Function no. | Key or function | Default setting |
|--------------|---------------------------------|-----------------|--------------|-------------------------------|-----------------|
| 1 | ⊖ | (-) | 36 | Void mode | VOID |
| 2 | %1 | %1 | 37 | Manager void | MGR VD |
| 3 | %2 | %2 | 38 | Subtotal void | SBTL VD |
| 4 | Net sales total | NET1 | 39 | No sale | NO SALE |
| 5 | Net taxable 1 subtotal | TAX1 ST | 40 | RA | ***RA |
| 6 | Gross tax 1 total | GRS TAX1 | 41 | PO | ***PO |
| 7 | Tax 1 total of refund entries | RFD TAX1 | 42 | Customer counter | TRANS CT |
| 8 | Net tax 1 total | TAX1 | 43 | Sales total | NET 3 |
| 9 | Exempt tax 1 | TX1 EXPT | 44 | Cash | CASH |
| 10 | Net taxable 2 subtotal | TAX2 ST | 45 | Check | CHECK |
| 11 | Gross tax 2 total | GRS TAX2 | 46 | Gross charge | CHARGE |
| 12 | Tax 2 total of refund entries | RFD TAX2 | 47 | Refund charge | CHARGE- |
| 13 | Net tax 2 total | TAX2 | 48 | Currency conversion1 (Preset) | CONV 1 |
| 14 | Exempt tax 2 | TX2 EXPT | 49 | Currency conversion2 (Open) | CONV 2 |
| 15 | Net taxable 3 subtotal | TAX3 ST | 50 | Cash in drawer | **** CID |
| 16 | Gross tax 3 total | GRS TAX3 | 51 | Cash+check in drawer | CA+CH ID |
| 17 | Tax 3 total of refund entries | RFD TAX3 | 52 | Check change | CHK/CG |
| 18 | Net tax 3 total | TAX3 | 53 | Exempt VAT | VAT EXPT |
| 19 | Exempt tax 3 | TX3 EXPT | 54 | (+)Dept. total | *DEPT TL |
| 20 | Net taxable 4 subtotal | TAX4 ST | 55 | (-)Dept. total | DEPT(-) |
| 21 | Gross tax 4 total | GRS TAX4 | 56 | Subtotal | SUBTOTAL |
| 22 | Tax 4 total of refund entries | RFD TAX4 | 57 | Merchandise subtotal | MDSE ST |
| 23 | Net tax 4 total | TAX4 | 58 | Total | *** TOTAL |
| 24 | Exempt tax 4 | TX4 EXPT | 59 | Change | CHANGE |
| 25 | Gross manual tax total | GRS MTAX | 60 | Items | ITEMS |
| 26 | Refund manual tax total | RFD MTAX | 61 | Department report title | DEPT |
| 27 | Net manual tax total | M-TAX | 62 | PLU report title | PLU |
| * 28 | Exempt total from GST | GST EXPT | 63 | Transaction report title | TRANS. |
| * 29 | PST total | PST TTL | 64 | Clerk report title | CLERK |
| * 30 | GST total | GST TTL | 65 | Hourly report title | HOURLY |
| 31 | Tax total | TTL TAX | 66 | Non add symbol | # |
| 32 | Net | NET | 67 | Copy receipt title | COPY |
| 33 | Sales total including tax total | NET2 | 68 | EJ report title | EJ |
| 34 | Refund | REFUND | 69 | EJ report end title | EJ END |
| 35 | Item void | VOID | | | |

Note

- The items marked with “*” are for Canada only.
- The function no. 53 “Exempt VAT” is only effective for the Canadian tax system (2 GST, VAT type).

■ Clerk names

Procedure

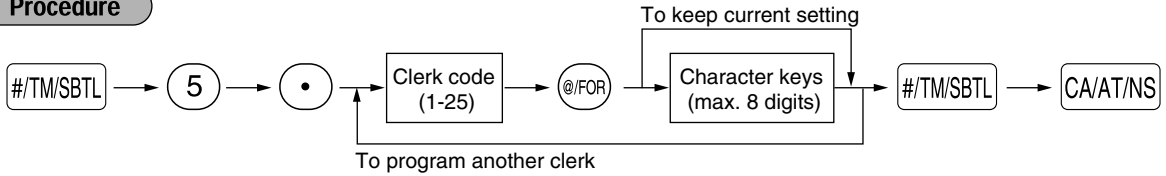

Key operation example



DAVID


Print



■ Logo messages


The register can print programmed messages on every receipt. On the standard model, the graphic logo is printed on the receipt. If you want to print logo messages, please change the logo message print format. (See [page 51](#) for the programming details.) The options are listed below:

Procedure

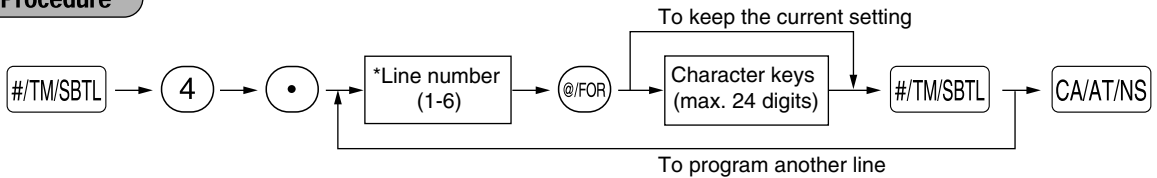


- * "Header 3-line message" type: 1 to 3
- "Footer 3-line message" type : 4 to 6
- "Header 6-line message" type: 1 to 6
- "Header 3-line and footer 3-line message" type: 1 to 6 (1 to 3 as header, 4 to 6 as footer)

Logo print format (6 types)

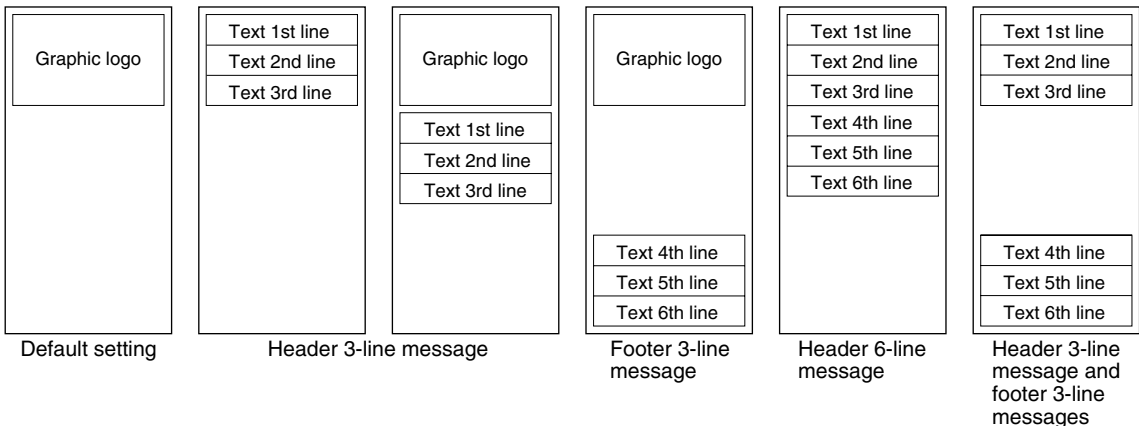


To print the logo message “THANK YOU” using double sized characters and centering on the third line.

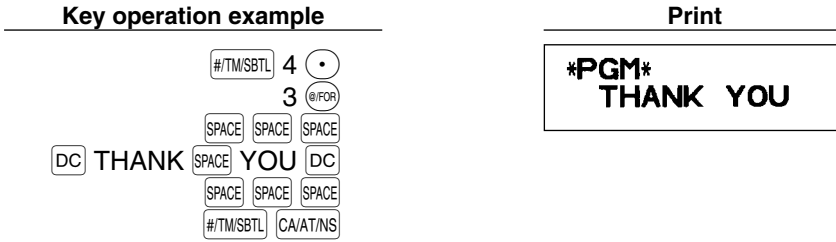

Note A 6-line logo message is preprogrammed when shipped. Please start entering from the first line when you first program a logo message.

Foreign currency symbol

Foreign currency symbol for **CONV** key is printed with a foreign currency exchange amount.

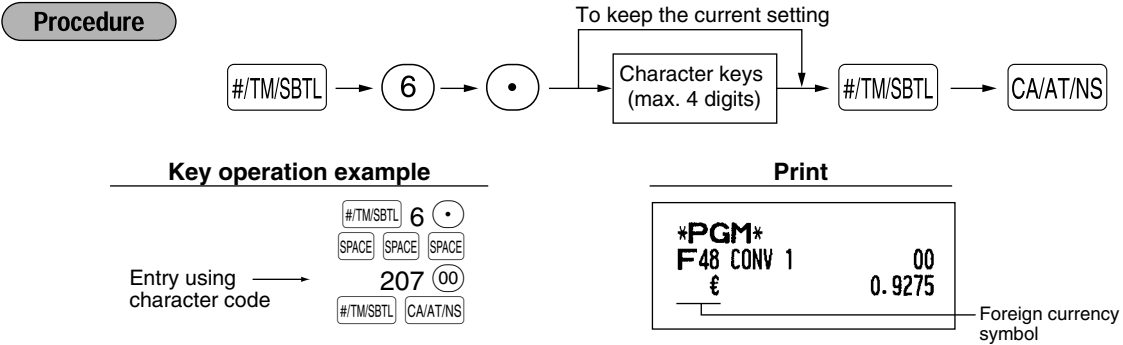


ADVANCED PROGRAMMING


1 Register Number and Consecutive Number Programming

The register number and consecutive numbers are printed on every receipt or journal. When your store has two or more registers, it is practical to set separate register numbers for their identification. The consecutive number is increased by one each time a receipt is issued or when a journal print occurs. For consecutive number programming, enter a number (max. 4 digits) that is one less than the desired starting number.

Register number

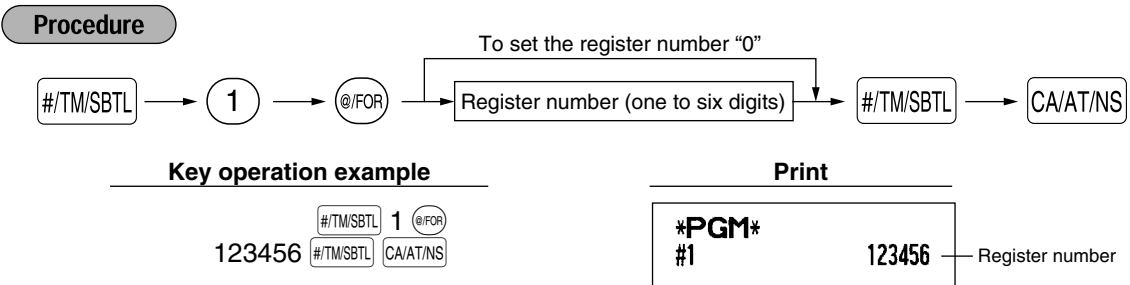

■ Consecutive numbers

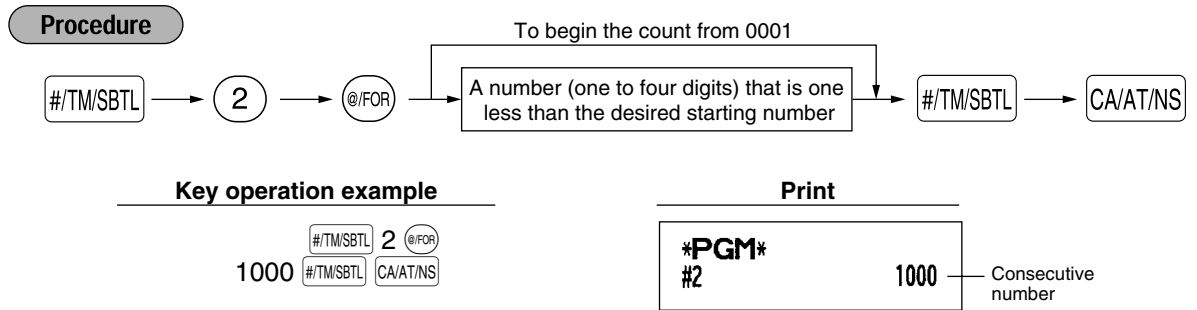

2 Electronic Journal (EJ) Programming

The cash register provides the electronic journal (EJ) function. By default, a maximum of 2000 lines can be stored in memory. If you want to store more journal data, you can expand to a maximum of 3000 lines, although the maximum number of PLUs is decreased to 200 codes because the memory is shared with PLU settings.

You can also program various options for EJ, such as availability of EJ memory nearly full warning, availability of printing EJ data during a transaction, data type to be stored in memory, and printing format.

For reading journal data, refer to “EJ REPORT READING AND RESETTING” (page 60).

■ EJ memory type

Caution When this procedure is executed, EJ data is cleared, and PLU data (programming data and sales data) are reset to the default after all data is cleared even if the same memory type is selected.

 


*A: 0 for EJ 2000 lines and PLU 1200 codes (default)
1 for EJ 3000 lines and PLU 200 codes



■ Function parameters for EJ

Procedure



| * Item: | Selection: | Entry: |
|---------|---|-------------------------------|
| A | Always enter 0. (Fixed position) | 0 |
| B | Always enter 0. (Fixed position) | 0 |
| C | Temporary EJ printing during a transaction | Disallow |
| | | Allow* |
| D | EJ printing and clearing EJ data when issuing general Z1 report | No* |
| | | Yes |
| E | PGM mode operation records type | Details* |
| | | Header information only |
| F | REG/MGR/VOID modes operation records type | Details* |
| | | Total |
| G | Compressing printing for EJ data | No (normal size) |
| | | Yes (small size)* |
| H | Action when EJ memory area is full | Continue |
| | | Warning (near full warning)* |
| | | Lock (with near full warning) |

On the default setting, an asterisk is marked.

Temporary EJ printing during a transaction

- If selecting "yes", you can print journal data of a current transaction recorded in EJ memory by pressing the **RCPT/PO** key during the transaction. To realize this function completely, the cash register is programmed to receipt printing and set Receipt ON/OFF function to OFF.

PGM mode operation records type

- The header information only is printed during the program reading operation. The header information only is printed for X/Z reports.
(Receipt sample for Header Information only)

```

08/25/2003  2:36PM  01
123456#1008  CLERK01
**X1**
**DEPT**
** TRANS. **
  
```

Action when EJ memory area is full

- By default, when the memory for EJ becomes nearly full, the cash register shows decimal points at the 8th and 9th positions of the display (EJ memory nearly full message), and the cash register keeps storing new data while erasing the oldest data. When "0" is selected, the cash register will no longer show EJ memory nearly full message. When "2" is selected, the cash register shows EJ memory nearly full message and when the memory is totally full, the cash register locks the sales/data entry with a display of the memory full message "E-E". You will only be able to issue an EJ report.

Key operation example

```

          #/TM/SBTL 68 @/FOR
00100002 #/TM/SBTL CA/AT/NS
  
```

Print

```

*PGM*
#68  00100002
  
```


3 Various Function Selection Programming 1

The cash register provides various detailed functions listed below.

- Function selection for miscellaneous keys
- Print format
- Receipt print format
- Function selection for tax
- Others

For this programming, job code entry style is applied. You can continue programming until you press the **CA/AT/NS** key for the programming described in this section. To continue programming, repeat from a job code entry.



*1 Enter job code using numeric keys specified in each section below.

*2 Data entry details are listed on each table in each section below.

Example: When programming for job code 5 as ABCDEFGH: 00000100.

| | |
|---|---|
| Key operation example | Print |
| 00000100 #/TM/SBTL 5 @/FOR #/TM/SBTL CA/AT/NS | *PGM* #5 00000100 |

■ Function selection for miscellaneous keys

Job code: 5

| * Item: | Selection: | Entry: |
|---|--|--------|
| A PO in REG mode | Allow the PO operation in REG mode* | 0 |
| | Disallow it | 1 |
| B RA in REG mode | Allow the RA operation in REG mode* | 0 |
| | Disallow it | 1 |
| C Subtotal void in REG mode | Allow the REG mode subtotal void* | 0 |
| | Disallow it | 1 |
| D Indirect void in REG mode | Allow the REG mode indirect void* | 0 |
| | Disallow it | 1 |
| E Direct void in REG mode | Allow the REG mode direct void* | 0 |
| | Disallow it | 1 |
| F Refund key availability | Allow the REG mode refund entry* | 0 |
| | Disallow it | 1 |
| G No sale in REG mode | Allow the no sale operation in REG mode* | 0 |
| | Disallow it | 1 |
| H Fractional quantity availability | Allow fractional quantity entry | 0 |
| | Disallow it* | 1 |

■ Print format

Job code: 6

| * Item: | Selection: | Entry: | |
|---------|---|---------------------------------------|---|
| A | Printing style | Use the printer for journal printing | 0 |
| | | Use the printer for receipt printing* | 1 |
| B | Receipt print format | Total | 0 |
| | | Detailed* | 1 |
| C | Time print on all receipts/journals | Allow time printing* | 0 |
| | | Disallow it | 1 |
| D | Date print on all receipts/journals | Allow date printing* | 0 |
| | | Disallow it | 1 |
| E | Consecutive no. print on all receipts/journals | Allow consecutive no. printing* | 0 |
| | | Disallow it | 1 |
| F | Always enter 0. | (Fixed position) | 0 |
| G | Zero skip for PLU report | Disallow zero skip | 0 |
| | | Allow zero skip* | 1 |
| H | Zero skip for general, clerk and hourly reports | Disallow zero skip | 0 |
| | | Allow zero skip* | 1 |

Printing style

- Even when receipt printing is selected, the journal rewind motor will be driven in PGM, OP X/Z, X1/Z1 and X2/Z2 modes so you can wind sales and programming reports.

■ Receipt print format

Job code: 7

| * Item: | Selection: | Entry: | |
|---------|--|---|---|
| A | Always enter 0. | (Fixed position) | 0 |
| B | Always enter 0. | (Fixed position) | 0 |
| C | Subtotal print with a press of subtotal key | Disallow subtotal printing* | 0 |
| | | Allow it | 1 |
| D | Merchandise print with a press of merchandise subtotal key | Disallow merchandise subtotal printing* | 0 |
| | | Allow it | 1 |
| E | Always enter 0. | (Fixed position) | 0 |
| F | Always enter 0. | (Fixed position) | 0 |
| G | Always enter 0. | (Fixed position) | 0 |
| H | Number of purchases print | Allow printing of number of purchases* | 0 |
| | | Disallow it | 1 |

■ Function selection for tax

Job code: 15

| * Item: | Selection: | Entry: | |
|---------|---|-------------------------------------|---|
| A to F | Always enter 0. | (Fixed position) | 0 |
| G | Tax delete in REG mode availability | Allow tax delete in REG mode* | 0 |
| | | Disallow it | 1 |
| H | Manual tax entry in REG mode availability | Allow manual tax entry in REG mode* | 0 |
| | | Disallow it | 1 |

■ Other programming

Job code: 61

| * Item: | Selection: | Entry: |
|---------|--|--|
| A | Always enter 0. (Fixed position) | 0 |
| B | Always enter 0. (Fixed position) | 0 |
| C | Minus dept. and PLU/subdept. availability | Disallow to program minus dept. and PLU/subdept. 0 Allow it* 1 |
| D | Fractional treatment | Round off (4 down, 5 up)* 0 Raising to unit 1 Disregarding fractional treatment 2 |
| E | Use of (00) key | Use (00) key as 00 key* 0 Use (00) key as 000 key 1 |
| F | Time format | Use 12-hour format* 0 Use 24-hour format 1 |
| G | Date format | Use month-day-year format* 0 Use day-month-year format 1 Use year-month-day format 2 |
| H | Position of decimal point (from right) (TAB) | 0 to 3 (default 2) |

Job code: 62

| * Item: | Selection: | Entry: |
|---------|--|--|
| A | Always enter 0. (Fixed position) | 0 |
| B | Error beep activation | By lock error* 0 By misoperation 1 |
| C | Key touch sound availability | Allow to sound* 0 Disallow it 1 |
| D | Buffered keyboard | Yes* 0 No 1 |
| E | Void mode operation availability | Allow void mode operation* 0 Disallow it 1 |
| F | Void mode entry data print in Z2 reports | Allow printing of void mode entry data in Z2 reports* 0 Disallow it 1 |
| G | Void mode entry data print in Z1 reports | Allow printing of void mode entry data in Z1 reports* 0 Disallow it 1 |
| H | Addition of hourly sales total data in void mode | No* 0 Yes 1 |

Job code: 66

| * Item: | Selection: | Entry: |
|---------|--|--|
| A | Printing a receipt after transaction | Total only 0 Details* 1 |
| B | Amount printing when PLU/subdept. unit price is zero | Disallow printing* 0 Allow it 1 |
| C | Subtotal printing for conversion of deficit | Allow printing* 0 Disallow it 1 |
| D | Always enter 0. (Fixed position) | 0 |
| E | Compression printing on journals in PGM, OP X/Z, X1/Z1 and X2/Z2 modes | Disallow compression printing (normal size) 0 Allow compression printing (small size)* 1 |
| F | Compression printing on journals in REG, MGR and VOID modes | Disallow compression printing (normal size) 0 Allow compression printing (small size)* 1 |
| G | Logo message printing on journals | Disallow logo message printing on journals* 0 Allow logo message printing on journals 1 |
| H | Footer printing | Printing footer on all receipts* 0 Printing footer with selected function key at the time of finalization 1 |

Compression printing

- This programming is valid only when journal printing is selected. This does not affect EJ printing. (For EJ programming, please refer to [page 46](#).)

Job code: 70

| * Item: | Selection: | Entry: |
|-----------|---|--|
| A | Split pricing counting | Quantity* |
| | | Package |
| B | Multiplication/split pricing entry availability | Allow multiplication entry only* |
| | | Allow both of multiplication and split pricing |
| C | Always enter 0. | (Fixed position) |
| D | Always enter 0. | (Fixed position) |
| E | Tax printing when GST is VAT | Allow tax printing* |
| | | Disallow it |
| F | GST exempt printing on X/Z reports | Allow printing of GST exempt* |
| | | Disallow it |
| GH | Tax calculation system | Auto tax* |
| | | Canadian tax (tax type number) |

Tax calculation system

- For US tax system, select “auto-tax”.
- For Canadian tax, from the table below, specify a tax system suitable for your province (if necessary contact your local tax office for correct sales tax information) and for your type of retail business. In the cash register, four kinds of tax can be set and each tax is arranged to match GST or PST as follows:

Tax 1: PST Tax 2: PST
 Tax 3: PST or GST Tax 4: GST

| Canadian tax type number | Tax 4 method | Tax 3 method | | Tax 2 and 1 method |
|--------------------------|--------------|--------------|-------------------|--------------------|
| | GST | GST | PST | PST |
| 01 | VAT | VAT | - | Tax on tax |
| 02 | VAT | VAT | - | Tax on base |
| 03 | VAT | - | Tax on tax | Tax on tax |
| 04 | VAT | - | Tax on base | Tax on base |
| 05 | Add on Tax | - | Tax on tax | Tax on Tax |
| 06 | Add on Tax | - | Tax on base | Tax on base |
| 07 | Add on Tax | VAT | - | Tax on tax |
| 08 | Add on Tax | VAT | - | Tax on base |
| 09 | Add on Tax | Add on Tax | - | Tax on tax |
| 10 | Add on Tax | Add on Tax | - | Tax on base |
| 11 | VAT | - | VAT (Tax on base) | Tax on tax |

(The most common type for Canada is type number 06.)

Note

- To program a GST, use Tax 4; and to program two GSTs, use Tax 3 and 4. To program a PST, use Tax 1; to program two PSTs, use Tax 1 and 2; and to program three PSTs, use Tax 1, 2 and 3.
- The entry of a multi-taxable item for PST or GST is prohibited as follows for the Canadian tax system. When programming for departments, avoid programming the prohibited multi-taxable status.

In case of; Tax 1: PST, Tax 2: PST,
 Tax 3: PST, Tax 4: GST

Taxable 1 and 2 item prohibited
 Taxable 1 and 3 item prohibited
 Taxable 2 and 3 item prohibited
 Taxable 1 and 4 item allowed
 Taxable 2 and 4 item allowed
 Taxable 3 and 4 item allowed

In case of; Tax 1: PST, Tax 2: PST,
 Tax 3: GST, Tax 4: GST

Taxable 1 and 2 item prohibited
 Taxable 1 and 3 item allowed
 Taxable 2 and 3 item allowed
 Taxable 1 and 4 item allowed
 Taxable 2 and 4 item allowed
 Taxable 3 and 4 item prohibited

4 Various Function Selection Programming 2

 
The cash register provides various options so you can use the register to suit your sales needs.

In this section, you can program the following features (parameters within parentheses indicates default setting):

- Power save mode (entering the power save mode in 30 minutes)
- Logo message print format (graphic logo only)
- Thermal printer density (standard density)
- RS-232C interface
- Language selection (English)
- Training clerk specification (none) - If you specify a clerk code who is trained for use on this cash register, the cash register will go into training mode when the clerk code is registered for sales entries. The sales operations done by the trained clerk does not affect sales total. For details, refer to [TRAINING MODE](#) section.

Power save mode

Procedure



| * Item: | Selection: | Entry: |
|--|------------|---------------------------------|
| A Entering power save mode when time is displayed | Yes* | 0 |
| | No | 1 |
| B-D Time(min.) to entering power save mode since no operation is made | | 001-254 or 999 (Default 030) |

 
Note

When 999 is set for B to D, entering into power save mode is inhibited.

Key operation example




Print



Logo message print format

You can select the number of lines for your logo message, and the position to print it on receipt or journal.

 Procedure




*A: Logo message type

- 0: Header 3-line message without graphic logo
- 1: Graphic logo only (default)
- 2: Footer 3-line message with graphic logo
- 3: Header 6-line message
- 4: Header 3-line message with graphic logo
- 5: Header 3-line message and footer 3-line message

Key operation example



 
Print



■ RS-232C interface

(1) RS-232C terminal number

 
Procedure



Default: 1

(2) RS-232C transmission form

 
Procedure



| * Item: | Selection: | Entry: |
|--------------------------|---------------------|--------|
| A Transmission line form | Half duplex system | 1 |
| | Full duplex system* | 0 |

(3) RS-232C baud rate

 
Procedure



| * Item: | Selection: | Entry: |
|-------------------|------------|--------|
| A Always enter 0. | | 0 |
| B Baud rate (bps) | 2400 | 3 |
| | 4800 | 4 |
| | 9600* | 5 |
| | 19200 | 6 |

(4) RS-232C start code and end code

 Procedure




*A-C: Start code 000-127 (default: 002)

D-F: End code 000-127 (default: 013)

(5) RS-232C time out setting

 Procedure



Default: 007

Key operation example

 
```
#/TM/SBTL 35 @/FOR
30 #/TM/SBTL CA/AT/NS
```

Print

```
*PGM*
#35 030
```

Thermal printer density

Procedure



* 50 is the default setting. To make the print darker, set a larger number, and to make the print lighter, set a smaller number.

Key operation example

 


Print

```
*PGM*
#50      00
```

Language selection

Procedure



*Language: 0: English 2: French 3: Spanish (default: English)

Key operation example



Print

```
*PGM*
#88      2
```

 
Caution

When you change the language, the texts such as clerk names, logo messages and function texts (refer to [page 42](#)), which you programmed, will be reset to the default settings. The language selection must be made before programming clerk names, logo messages and function texts.

Training clerk specification for training mode

For the details of clerk training, please refer to "TRAINING MODE" on [page 56](#).

Procedure



Key operation example




Print

```
*PGM*
#86      25
```

■ AUTO key programming — Automatic sequence key —


If you program frequently performed transactions or report sequences for the **AUTO** key, you can recall those transactions and/or reports simply by pressing the **AUTO** key in key operations.

Procedure

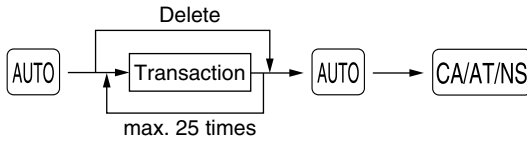


Programming for **AUTO**; entering a PLU 2 item (programmed unit price: 1.50) and a dept. 6 item (unit price: 1.00)

Key operation example

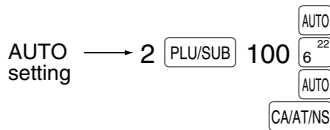

Print

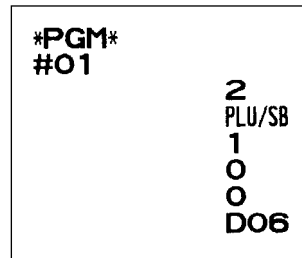

Note

When the **AUTO** key has been programmed to execute a report job function, the mode switch must be in the appropriate position (OPX/Z for individual clerk reports, X1/Z1 for daily reports or X2/Z2 for weekly or monthly reports).

5 Reading Stored Programs

The machine allows you to read every program stored in the PGM mode.

■ Key sequence for reading stored program

| Report name | Key sequence |
|------------------------------------|---|
| Programming report 1 | CA/AT/NS |
| Programming report 2 | 2 → CA/AT/NS |
| Auto key programming report | 1 → CA/AT/NS |
| Printer density programming report | 3 → CA/AT/NS |
| PLU programming report | Start PLU code → @/FOR → End PLU code → PLU/SUB |

Note

- To stop reading programming report 1 or PLU programming report, turn the mode switch to the MGR position.
- When printing is performed continuously, the printing may be intermitted several seconds. After the intermission, the printing will be restarted.

Sample printouts

1 Programming report 1

| | | | |
|---------------------|----|--------------|------------------------------|
| *PGM* | | | Mode |
| DO1 | T1 | 073 | Dept. code |
| FRUIT | | 10.00 | Dept. text |
| DO2 | T1 | 173 | Dept. unit price w/sign |
| DEPT.02 | | -13.10 | Dept. function |
| DO3 | T1 | 071 | Minus department |
| DEPT.03 | | 0.00 | Tax status |
| D99 | | 071 | Function no. & its text |
| DEPT.99 | | 0.00 | Tax status |
| F01 (-) | | 006 | Function parametrs (F-H) |
| | T1 | -2.00 | Discount amt. w/sign |
| F02 %1 | | 000 | Function parametrs (F-H) |
| L 15.00% | | -15.25% | Percent rate with sign |
| F03 %2 | | 000 | |
| L100.00% | | -0.00% | Percent limit |
| F04 NET1 | | | |
| F05 TAX1 ST | | | |
| F26 RFD MTAX | | | |
| F27 M-TAX | | 7 | Entry digit limit |
| F28 GST EXPT | | | |
| F39 NO SALE | | | |
| F40 ***RA | | 9 | Entry digit limit |
| F41 ***PO | | 4 | Entry digit limit |
| F42 TRANS CT | | | |
| F43 NET3 | | | |
| F44 CASH | | 000000000008 | |
| F45 CHECK | | 000000000018 | Function parameters (A-C) |
| F46 CHARGE | | 000000000008 | |
| F47 CHARGE- | | | Function parameters |
| F48 CONV 1 | | 00 | Foreign currency symbol/Rate |
| £ | | 0.9275 | |
| F49 CONV 2 | | | |
| F50 ***CID | | | |

| | | | |
|---------------------|----------|--|---|
| F68 EJ | | | |
| F69 EJ END | | | |
| SHARP | | | Logo Message |
| PRESENTS THE | | | |
| XE-A202 | | | |
| SHARP | | | |
| IS | | | |
| THE BEST | | | |
| #5 | 00000100 | | Function selection for miscellaneous keys (A-H) |
| #6 | 11000011 | | Print format (A-H) |
| #7 | 00000000 | | Receipt print format(A-H) |
| #10 | 0060 | | Power save mode(A-D) |
| #11 | 0 | | Logo message print format |
| #15 | 00000000 | | Function selection for tax (A-H) |
| #19 | 00 | | Doughnut tax exempt |
| #30 | 000002 | | RS-232C terminal no. |
| #31 | 0 | | RS-232C transmission form (A) |
| #32 | 05 | | RS-232C baud rate(AB) |
| #33 | 002 013 | | RS-232C Start-End code |
| #35 | 007 | | RS-232C timeout |
| #40 | 0 | | |
| #41 | 00000000 | | |
| #42 | 000000 | | |
| #43 | 030 | | |
| #44 | 099 | | |
| #45 | 0099 | | |
| #50 | 99 | | Thermal printer density |
| T1 | 6.0000% | | Tax table |
| | / 1.00 | | |
| | 1 0.11 | | |
| | 2 0.23 | | |
| | 3 0.39 | | |
| | 4 0.57 | | |
| | 5 0.73 | | |
| | 6 0.89 | | |
| | 7 1.11 | | |
| T2 | 4.0000% | | Tax rate |
| | 0.12 | | Min. taxable amount |
| T3 | ----- | | |
| T4 | ----- | | |
| C#01 | DAVID | | Clerk code/name |
| C#02 | CLERK02 | | |
| C#24 | CLERK24 | | |
| C#25 | CLERK25 | | |

2 Programming report 2

| | | |
|--------------|-----------------|---|
| *PGM* | | |
| #61 | 00100002 | Job code |
| #62 | 00000000 | |
| #63 | 01000001 | A to H from the left |
| #64 | 00000000 | |
| #65 | 00000000 | * Job code #63, 64, 65, 67, 69, 71, 72, 76, 77, 85, 87 and 95 are fixed settings, for which you cannot change the settings. |
| #66 | 10001100 | |
| #67 | 00000000 | |
| #68 | 00100002 | |
| #69 | 00100000 | |
| #70 | 00000000 | |
| #71 | | |
| GT2 | \$0000000000.00 | |
| #72 | | |
| GT3 | \$0000000000.00 | |
| #76 | Z1 0000 | |
| #77 | Z2 0000 | |
| #85 | \$ | |
| #86 | 25 | Training clerk specification |
| #87 | TRAINING | |
| #88 | 0 | Language selection |
| #90 | 1 | EJ memory type |
| #95 | 99 | |

3 Auto key programming report

| | |
|--------------|--------|
| *PGM* | |
| #01 | |
| | 2 |
| | PLU/SB |
| | 1 |
| | 0 |
| | 0 |
| | D06 |

4 Printer density programming report

| | | |
|--------------|----------------|--------------------------|
| *PGM* | | |
| #50 | 50 | Entered Value |
| | | Printer density |
| 10 | : 0123456789AB | Printing density example |
| 20 | : 0123456789AB | |
| 30 | : 0123456789AB | |
| 40 | : 0123456789AB | |
| 50 | : 0123456789AB | |
| 60 | : 0123456789AB | |
| 70 | : 0123456789AB | |
| 80 | : 0123456789AB | |
| 90 | : 0123456789AB | |

5 PLU programming report

| | | | |
|--------------|-----------|-------|-----------------------|
| *PGM* | | | |
| | 0001-0015 | Range | |
| PLU code | P0001(03) | 0 | Mode parameter |
| PLU text | MELON | 1.25 | Unit price |
| | P0002(01) | 1 | |
| | PLU0002 | 1.25 | |
| | P0003(32) | 1 | |
| | PLU0003 | -0.15 | Associated dept. code |
| | PLU0014 | 0.00 | |
| | P0015(01) | 1 | |
| | PLU0015 | 0.00 | |

TRAINING MODE

The training mode is used when the operator or the manager practices register operations.

When a clerk in training is selected, the machine automatically enters the training mode. To specify a clerk to be trained, refer to "Training clerk specification for training mode" in "ADVANCED PROGRAMMING" in [page 53](#).

The training operation is valid only in REG, MGR and VOID mode.

The corresponding clerk memory is only updated in the training mode.

Key operation example

A clerk set in training → 25

1000

3

Print

| | | |
|-----------------|---------|----------------|
| 08/26/2003 | 3:51PM | 25 |
| 123456#1050 | CLERK25 | |
| TRAINING | | |
| DEPT. 05 | T1 | \$10.00 |
| | 3 @ | \$24.00 |
| DEPT. 03 | T1 | \$72.00 |
| MDSE ST | | \$82.00 |
| TAX1 | | \$5.13 |
| ITEMS | 4Q | |
| CASH | | \$87.13 |

READING (X) AND RESETTING (Z) OF SALES TOTALS


 
- Use the reading function (X) when you need to take a reading of sales information entered since the last reset. You can take this reading any number of times. It does not affect the register's memory.
- Use the resetting function (Z) when you need to clear the register's memory. Resetting prints all sales information and clears the entire memory except for the GT1 through GT3, Training GT, reset count, and consecutive number.

1 Summary of Reading (X) and Resetting (Z) Reports

X1 and Z1 reports: Daily sales reports

X2 and Z2 reports: Periodic (monthly) consolidation reports

When you take a X or Z report, turn the mode switch to the appropriate position referring to the column of "Mode switch position" shown on the table below, and use the following corresponding key sequence.

| Item | Mode switch position | | | Key operation |
|---|----------------------|--------|--------|---|
| | OPX/Z | X1/Z1 | X2/Z2 | |
| Flash report: (Only display) To clear the display, press the CL key or turn the mode switch to another position. | X | - | - | Dept. code → DEPT# : Department sales total <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> [For dept. 1 to 16; Dept. key (1¹⁷ to 16³²) For dept. 17 to 32; DEPTSHIFT → Dept. key (1¹⁷ to 16³²) </div> |
| | | | | @/FOR key: Amount of cash in drawer |
| | | | | CA/AT/NS key: Sales total |
| Full sales report | - | X1, Z1 | X2, Z2 | Reading: CA/AT/NS Resetting: • → CA/AT/NS |
| Individual clerk report | X, Z | - | - | Reading: CLK# Resetting: • → CLK# (The report of the current clerk) |
| Full clerk report | - | X1, Z1 | - | Reading: CLK# Resetting: • → CLK# |
| PLU sales report | - | X1, Z1 | - | Reading:  Resetting:  |
| Hourly report | - | X1, Z1 | - | Reading: #/TM/SBTL Resetting: • → #/TM/SBTL |

- Note**
- When both sales quantities and sales amounts are zero, printing is skipped. If you do not want to skip, change the programming. (Refer to "Print format" of "Various Function Selection Programming 1".)
 - "X" represents read symbol and "Z" represents reset symbol in the reports.
 - To stop reading and resetting the PLU sales report, turn the mode switch to the MGR position. The data will not be erased when you reset.
 - When printing is performed continuously, the printing may be intermitted several seconds. After the intermission, the printing will be restarted.

2 Daily Sales Totals

Full sales report

• Sample report

| | | |
|----------------------|--|---|
| *Z1 * | | Mode title*1 |
| Z1 0001 | | Reset counter |
| GT1 \$00000002489.99 | | Net grand total(GT2-GT3) |
| GT2 \$00000002644.05 | | Grand total of plus registration |
| GT3 -00000000154.06 | | Grand total of minus registration |
| TR \$00000000076.50 | | Grand total of training mode registration |
| *DEPT* | | Dept. code |
| D01 70Q | | Sales q'ty |
| FRUIT \$317.17 | | Sales amount |
| D03 14Q | | |
| DEPT.03 \$221.00 | | |
| D05 11Q | | |
| DEPT.05 \$36.20 | | |
| DEPT.50 \$150.00 | | |
| D99 1Q | | |
| DEPT.99 \$12.50 | | |
| *DEPT TL 276Q | | "+" dept. counter and total |
| \$2273.67 | | |
| D02 7Q | | |
| DEPT.02 \$164.00 | | "-" dept. counter and total |
| DEPT(-) 7Q | | |
| \$164.00 | | |
| * TRANS. * | | |
| (-) 3Q | | Subtotal counter and total |
| -3.00 | | |
| %1 4Q | | Subtotal percent 1 counter and total |
| -4.72 | | |
| %2 1Q | | |
| \$1.88 | | |
| NET 1 \$2431.83 | | Next sales total |
| TAX1 ST \$1536.20 | | Taxable 1 total |
| GRS TAX1 \$57.61 | | Gross tax 1 total |
| RFD TAX1 -1.86 | | Refund tax 1 total |
| TAX1 \$55.75 | | Net tax 1 total |
| TX1 EXPT \$7.25 | | |
| TAX2 ST \$35.15 | | |
| GRS TAX2 \$1.41 | | |
| TAX2 \$1.41 | | |
| M-TAX \$1.00 | | Manual tax total |
| TTL TAX \$58.16 | | Tax total |
| NET \$2431.83 | | Net total without tax |
| NET2 \$2489.99 | | Net total with tax |
| (-) 4Q | | Item counter and total |
| -6.50 | | |
| %1 6Q | | Item percent 1 counter and total |
| -1.80 | | |
| %2 5Q | | |
| \$2.62 | | |
| VOID 9Q | | REG-mode void counter and total |
| \$48.78 | | |
| SBTL VD 4Q | | Subtotal void counter and total |
| \$157.05 | | |
| MGR VD 2Q | | Manager item void counter and total |
| \$12.22 | | |
| VOID 1Q | | Void-mode transaction counter and total |
| \$12.22 | | |
| REFUND 17Q | | Refund counter and total |
| \$73.60 | | |
| ***RA 1Q | | Received on account counter and total |
| \$48.00 | | |
| ***PD 1Q | | Paid out counter and total |
| \$15.00 | | |
| NO SALE 5Q | | No-sales counter |
| TRANS CT 88Q | | Customer counter |
| NET3 \$2489.99 | | Sales total |
| CASH 79Q | | Cash counter and total |
| \$2223.59 | | |
| CHECK 2Q | | Check sales counter and total |
| \$20.15 | | |
| CHARGE 7Q | | Charge sales counter and total |
| \$259.53 | | |
| CHARGE- 1Q | | Charge refund counter and total |
| -10.63 | | |
| CONV 1 500.00 | | Foreign currency total (preset) |
| CONV 2 200.00 | | Foreign currency total (open) |
| ***CID \$1719.77 | | Cash in drawer |
| CA+CH ID \$1739.92 | | Cash + check in drawer |
| CHK/CG \$2.65 | | Change total for check tendering |

*1: When you take X1 report, "X1" is printed.

*2: Printed in the Z1 report only.

*3: When the Canadian tax system is selected, the following is printed here.

| | |
|-------------------|-----------------------|
| GST EXPT \$292.11 | Exempt total from GST |
| PST TTL \$26.60 | PST total |
| GST TTL \$8.86 | GST total |

■ Clerk reports

Individual clerk report

• Sample report

| | | |
|-----------|-----------|------------------|
| *OPX* | | Mode title* |
| * CLERK * | | Report title |
| O1# | CLERK01 | Clerk code |
| TRANS CT | 87Q | Clerk name |
| NET3 | \$2402.86 | Customer counter |
| ****CID | \$1632.64 | |
| CA+CH ID | \$1652.79 | |
| CHK/CG | \$2.65 | |

Full clerk report

The printout occurs in the same format as in the sample report of individual clerk, but all clerk's sales data are printed in the order of clerk code number (from #1 to #25).

■ Hourly report

• Sample report

| | | |
|------------|----------|------------------|
| *X1* | | Mode title* |
| * HOURLY * | | Report title |
| 10:00AM | 12Q | Customer counter |
| | \$116.89 | Sales total |
| 11:00AM | 18Q | |
| | \$183.75 | |
| 12:00PM | 25Q | |
| | \$199.91 | |
| | | |
| 5:00PM | 18Q | |
| | \$134.63 | |
| 6:00PM | 16Q | |
| | \$92.27 | |

*: When you take Z1 report, "Z1" is printed.

■ PLU sales report

• Sample report

| | | |
|------------|-----------|--------------|
| *X1* | | Mode title* |
| * PLU * | | Report title |
| | 0001-0015 | Range |
| PLU code | P0001 | 35Q |
| Item label | PLU0001 | \$52.50 |
| | P0002 | 24Q |
| | PLU0002 | \$35.00 |
| | P0010 | 9Q |
| | PLU0010 | \$64.35 |
| | P0011 | 10Q |
| | PLU0011 | \$120.00 |
| | P0012 | 1Q |
| | PLU0012 | \$0.00 |
| | P0013 | -21Q |
| | PLU0013 | -44.10 |
| | P0015 | 1Q |
| | PLU0015 | \$22.12 |
| | ***TOTAL | 59Q |
| | | \$249.87 |

*: When you take Z1 report, "Z1" is printed.

3 Periodic Consolidation

■ Full sales report

• Sample report

| | | |
|------|------------------|------------------------------|
| *Z2* | | Mode title*1 |
| | Z1 0001 | Reset counter of daily total |
| | Z2 0001 | Reset counter of periodic *2 |
| GT1 | \$00000003457.54 | Grand total |
| GT2 | \$00000003621.60 | |
| GT3 | -00000000164.06 | |
| TR | \$00000000076.50 | |

The subsequent printouts are the same in format as in the X1/Z1 full sales report.

*1: When you take X2 report, "X2" is printed.

*2: Printed in the Z2 report only

EJ REPORT READING AND RESETTING

The cash register provides an electronic journal (EJ) function. This function is intended to record the journal data in a memory instead of journal paper, and print the data as an EJ report. The register records the journal data in REG, PGM, VOID, X1/Z1 and X2/Z2 modes. By default, a maximum of 2000 lines are stored in the memory, but you can expand it to 3000 lines. For details of EJ programming, please refer to "Electronic Journal Programming" section (page 45).

■ Printing journal data on the way of a transaction

You can print journal data of a current transaction recorded in EJ memory by pressing the **RCPT/PO** key during the transaction.

Note This function is valid when the printing style is programmed to receipt, and the receipt ON/OFF function is set to OFF.

• Sample print

| | |
|----------------------|---------------------|
| *EJ * | EJ report title |
| 08/26/2003 2:31PM 01 | |
| 123456#1004 CLERK01 | |
| DEPT. 03 T1 \$10.00 | |
| DEPT. 04 T1 \$45.00 | |
| *EJ END* | EJ report end title |

■ Reading and resetting the electronic journal data (Issuing EJ report)

You can read the journal data stored in the EJ memory in the journal format by executing the following procedure in the X1/Z1 or OP X/Z mode.

To read all of the data:

7 00 → @/FOR → CA/AT/NS

To reset all of the data:

7 00 → • → @/FOR → CA/AT/NS

To read the last 10 records:

7 1 0 → @/FOR → CA/AT/NS

Note

- On the EJ memory, a maximum of 2000 (or 3000, if programmed) lines of data can be stored. When executing all data reading, all of the data stored in the EJ memory will be printed. To save paper, compression print is available.
- To stop reading or resetting the data, turn the mode switch to "MGR" position. The data will not be erased when resetting.
- When printing is performed continuously, the printing may be intermitted several seconds. After the intermission, the printing will be restarted.

• Sample EJ report


| | | |
|----------------------------|------------|--|
| *OPX* | | |
| *EJ * | | |
| 08/26/2003 2:34PM 01 | | |
| 123456#1006 CLERK01 | | |
| ***PO | \$15.00 | |
| 08/26/2003 2:35PM 01 | | |
| 123456#1007 CLERK01 | | |
| DEPT. 99 | \$12.50 | |
| ITEMS | 10 | |
| CHARGE | \$12.50 | |
| 08/26/2003 2:36PM 01 | | |
| 123456#1008 CLERK01 | | |
| *X1* | | |
| *DEPT* | | |
| * TRANS. * | | |
| 08/26/2003 2:39PM 01 | | |
| 123456#1009 CLERK01 | | |
| } Header information print | | |
| MUSE ST | \$50.00 | |
| TAX1 | \$3.13 | |
| ITEMS | 40 | |
| CASH | \$53.13 | |
| 08/26/2003 2:41PM 01 | | |
| 123456#1014 CLERK01 | | |
| DEPT. 03 | T1 \$10.00 | |
| DEPT. 04 | T1 \$45.00 | |
| MUSE ST | \$55.00 | |
| TAX1 | \$3.44 | |
| ITEMS | 20 | |
| CASH | \$58.44 | |
| 08/26/2003 2:41PM 01 | | |
| 123456#1015 CLERK01 | | |
| NO SALE | | |
| *EJ END* | | |

OVERRIDE ENTRIES

Programmed limit for functions (such as for maximum amounts) can be overridden by making an entry in the MGR mode.

Procedure

1. Turn the mode switch to the MGR position.
2. Make an override entry.

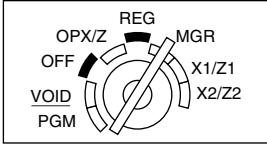

Example

On this example, the register has been programmed not to allow discounts entries over \$1.00.

Key operation example

REG-mode 1500 ¹⁹
 entries 250 ...Error

Turn the mode switch to the MGR position.

250

Return the mode switch to the REG position.


Print

| | | |
|-------------|----|----------------|
| DEPT. 03 | T1 | \$15.00 |
| (-) | | -2.50 |
| MDSE ST | | \$12.50 |
| TAX1 | | \$0.94 |
| | | |
| ITEMS | 1Q | |
| CASH | | \$13.44 |

CORRECTION AFTER FINALIZING A TRANSACTION (Void mode)

When you need to void incorrect entries that clerks cannot correct (incorrect entries found after finalizing a transaction or cannot be corrected by direct or indirect void), follow this procedure:

1. Turn the mode switch to the VOID position using the manager key (MA), to enter into the void mode.
2. Repeat the entries that are recorded on an incorrect receipt. (All data for the incorrect receipt are removed from register memory; the voided amounts are added to the void-mode transaction totalizer.)

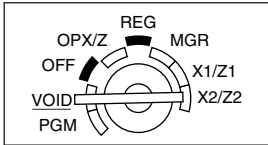

Incorrect receipt

| | | |
|-------------|----|----------------|
| DEPT. 04 | T1 | \$10.00 |
| DEPT. 03 | T1 | \$1.50 |
| MDSE ST | | \$11.50 |
| TAX1 | | \$0.72 |
| | | |
| ITEMS | 2Q | |
| CASH | | \$12.22 |



Cancellation receipt


| | | |
|---------------|----|----------------|
| *VOID* | | |
| DEPT. 04 | T1 | \$10.00 |
| DEPT. 03 | T1 | \$1.50 |
| MDSE ST | | \$11.50 |
| TAX1 | | \$0.72 |
| | | |
| ITEMS | 2Q | |
| CASH | | \$12.22 |

OPERATOR MAINTENANCE

1 In case of Power Failure

When power is lost, the machine retains its memory contents and all information on sales entries.

- When power failure is encountered in register idle state or during an entry, the machine returns to normal operation after power recovery.
- When power failure is encountered during a printing cycle, the register prints “=====” and then carries out the correct printing procedure after power recovery. (See the sample print.)

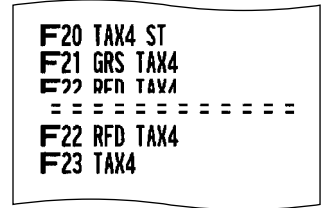

2 In Case of Printer Error

If the printer runs out of paper, the printer will stall, and “PPPPPPPPPP” will appear on the display. Key entries will not be accepted. Refer to [section 5](#) in this chapter, install a new roll, then press the (CL) key. The printer will print the power failure symbol and resume printing.

If the print roller arm is not locked, the printer stalls, “H” will appear on the extreme left of the display. Key entries will not be accepted. Push down the arm until it is securely locked, then press the (CL) key. The printer will print the power failure symbol and resume printing.

3 Cautions in Handling the Printer and Recording Paper

■ Cautions in handling the printer

- Avoid dusty and humid environments, direct sunlight and iron powder. (A permanent magnet and electromagnet are used in this machine.)
- Never pull the paper when the print roller arm is locked. First lift up the arm, and then remove the paper.
- Never touch the surface of the print head and print roller.

■ Cautions in handling the recording paper (thermal paper)

- Use only the paper specified by SHARP.
- Do not unpack the thermal paper until you are ready to use it.
- Avoid heat. The paper will color at around 70°C.
- Avoid dusty and humid storage places. Avoid direct sunlight.
- The printed text on the paper can discolor under conditions of high humidity and temperature, exposure to the direct sunlight, contact with glue, thinner or a freshly copied blueprint, and heat caused by friction from scratching or other such means.
- Be very careful when handling the thermal paper. If you want to keep a permanent record, copy the printed text with a photocopier.

4 Replacing the Batteries


This cash register displays a low battery symbol (L) when the batteries are low, and displays a no battery symbol (L) when batteries are extremely low or batteries are not installed.

When the low battery symbol is displayed, replace the batteries with new ones as soon as possible. The existing batteries will be dead in about two days.

When the no battery symbol is displayed, replace the batteries immediately. Otherwise, if the AC power cord is disconnected or a power failure occurs, all the programmed settings will be reset to the default settings and any data stored in memory will be cleared.

Note Be sure to observe precautions shown on [page 1](#) when handling batteries.

To replace the batteries:

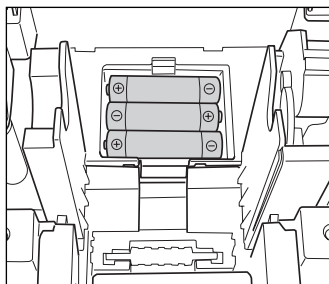

1. Make sure that the cash register is plugged in.
2. Turn the mode switch to the REG position.
3. Remove the printer cover.
4. Open the battery compartment cover next to the paper roll cradle and remove the old batteries.
5. Install three new "AA" batteries in the battery compartment. Be sure the positive and negative poles of each battery are facing in the proper direction. When they are installed correctly, the " L " or " L " symbol will disappear.
6. Close the battery compartment cover.
7. Replace the printer cover.

5 Replacing the Paper Roll

Be sure to use paper rolls specified by SHARP.

The use of any other paper rolls other than those specified could cause paper jamming, resulting in register malfunction.

Paper specification

Paper width: 2.25 ± 0.02 in (57.5 ± 0.5 mm)


Max. outside diameter: 3.15 in (80 mm)

Quality: Thermal paper

- Be sure to set the paper roll prior to using your machine, otherwise it may cause a malfunction.

Install the paper roll in the printer. Be careful to set the roll correctly.

(How to set the paper roll)

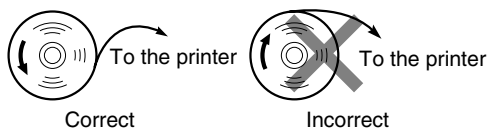


■ Removing the paper roll

When a red dye appears on the paper roll, it is time to replace it. Replace the paper roll with a new one. If you plan on not using the register for an extended period of time, remove the paper roll, and store it in an appropriate place.

Caution: The paper cutter is mounted on the printer cover. Be careful not to cut yourself.


When not using the take-up spool (using as receipt paper):

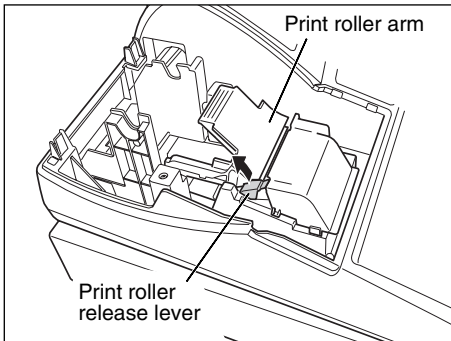


1. Remove the printer cover.
2. Lift up the print roller release lever to unlock and open the print roller arm.
3. Remove the paper roll from the paper roll cradle.


Note Do not pull the paper through the printer.

When using the take-up spool (using as journal paper):

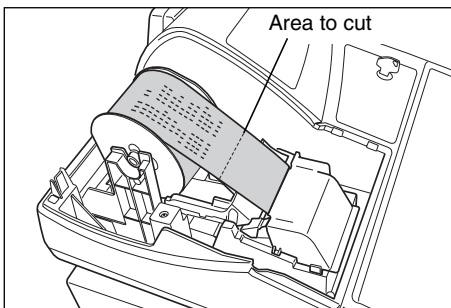

1. Turn the mode switch to a position other than OFF with the power cord connected.
2. Remove the printer cover.
3. Press the  key to advance the journal paper until its printed part is out of the way.
4. Cut the paper and remove the take-up spool.
5. Lift up the print roller release lever to unlock and open the print roller arm.
6. Remove the paper roll from the paper roll cradle.

Note Do not pull the paper through the printer.

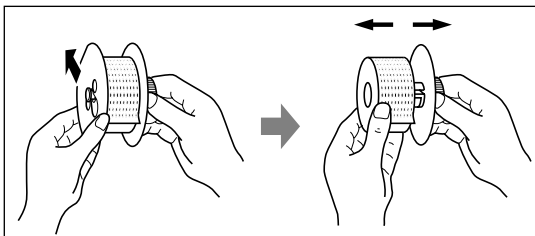


7. Remove the outer side of the take-up spool as shown on the left.
8. Remove the printed journal roll from the take-up spool.


■ Installing the paper roll

Caution: The paper cutter is mounted on the printer cover. Be careful not to cut yourself.

Installing the receipt paper roll:

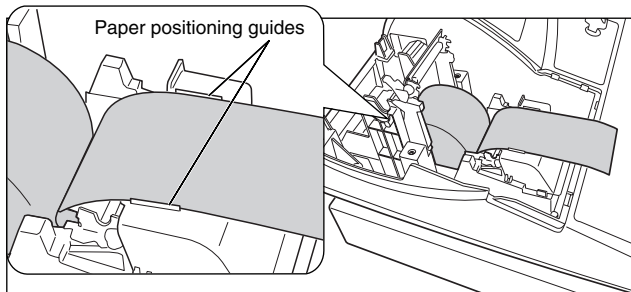


1. Turn the mode switch to a position other than OFF with the power cord connected.
2. Remove the printer cover.
3. Lift up the print roller release lever to unlock and open the print roller arm.
4. Set the paper correctly in the paper roll cradle.
5. Feed the end of the paper along with the paper positioning guides.

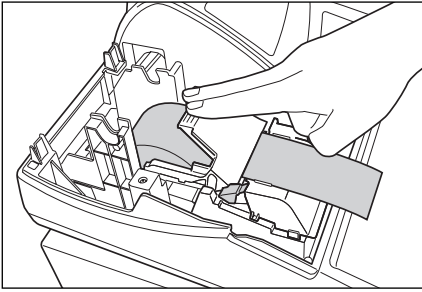


6. While holding down the paper, slowly close the print roller arm, and push down the arm until you hear a click locking the arm. Make sure securely you push down the center of the wing part of the arm as illustrated at the left. The paper will be fed automatically.

Note

If the print roller arm is not securely locked, printing is not done right. If this problem occurs, open the arm, and close the arm as instructed above.

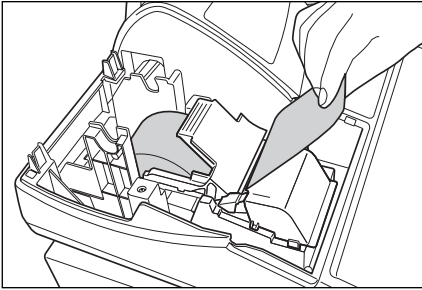



 
7. Cut off the excess paper using the edge of the inner cover, and replace the printer cover. Press the  key to make sure the paper end comes out of the printer cover and clean paper appears.

Note

If the paper end does not come out, open the printer cover, and pass the paper end between the paper cutter and the paper guide of the printer cover, and replace the cover.

Installing the journal paper roll:

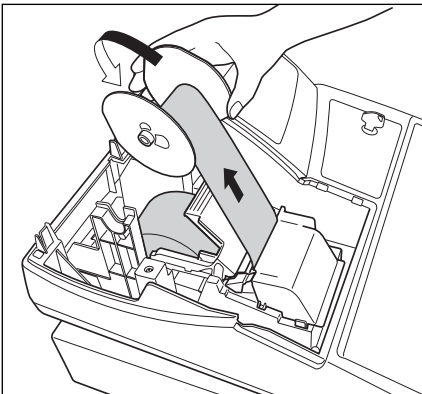

1. Turn the mode switch to a position other than OFF with the power cord connected.
2. Remove the printer cover.
3. Lift up the print roller release lever to unlock and open the print roller arm.
4. Set the paper correctly in the paper roll cradle.
5. Feed the end of the paper along with the paper positioning guides.
6. While holding down the paper, slowly close the print roller arm, and push down the arm until you hear a click locking the arm. Make sure securely you push down the center of the wing part of the arm as illustrated at the left. The paper will be fed automatically.
7. Insert the end of the paper into the slit in the spool. (Press the  key to feed more paper if required.)
8. Wind the paper two or three turns around the spool shaft.
9. Set the spool on the bearing, and press the  key to take up excess slack in the paper.
10. Replace the printer cover.

Note

You can wind the roll paper in OP X/Z, X1/Z1, and X2/Z2 modes even if you programmed so that the printer is used for issuance of receipts. This may be convenient to wind reports. In this case, set the roll paper to the take-up spool.


6 Removing a Paper Jam

Caution: The paper cutter is mounted on the printer cover. Be careful not to cut yourself. Never touch the print head immediately after printing, as the head may still be hot.

1. Remove the printer cover.
2. Lift up the print roller release lever to unlock the print roller arm, and open the print roller arm.
3. Remove the paper jam. Check for and remove any shreds of paper that may remain in the printer.
4. Reset the paper roll correctly by following the steps in “Installing the paper roll”.

7 Cleaning the Printer (Print Head / Sensor / Roller)

When the printed text is getting dark or faint, paper dust may be stuck to the print head, sensor and/or roller. Clean them as follows:

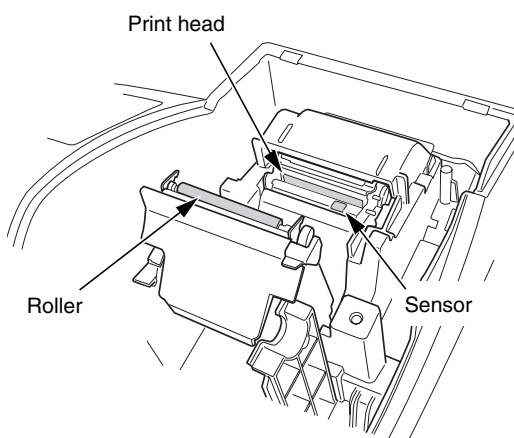


Caution:

- Never touch the print head with a tool or anything hard as it may damage the head.
- The paper cutter is mounted on the printer cover. Be careful not to cut yourself.


1. Turn the mode switch to the OFF position.
2. Remove the printer cover.
3. Lift up the print roller release lever to unlock and open the print roller arm.
4. Remove the paper roll referring to the “Removing the paper roll” section.
5. Clean the print head with a cotton swab or soft rag moistened with ethyl alcohol or isopropyl alcohol. Clean the roller and the sensor in the same manner.
6. Reset the paper roll correctly by following the steps in “Installing the paper roll”.

8 Removing the Drawer

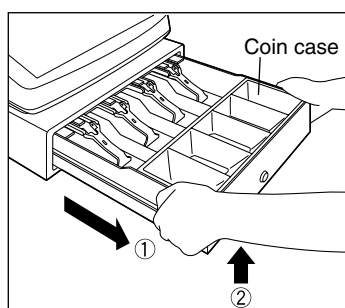

The drawer in the register is detachable. After closing your business for the day, remove the drawer. To detach the drawer, pull it forward fully, and remove it by lifting it up. The 5-denomination coin case is detachable.

9 Opening the Drawer by Hand

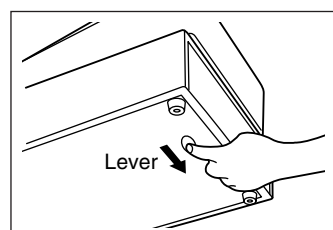

The drawer automatically opens. However, when a power failure occurs or the machine becomes out of order, slide the lever located on the bottom of the machine in the direction of the arrow. (See the figure at the left.) The drawer will not open if it is locked with the key.

10 Before Calling for Service

The malfunctions shown in the left-hand column below, labelled “Fault,” do not necessarily indicate functional faults of the machine. It is therefore advisable to refer to “Checking” shown in the right-hand column before calling for service.

| Fault | Checking |
|--|---|
| (1) The display shows symbols that do not make sense. | <ul style="list-style-type: none"> • Has the machine been initialized properly as shown “GETTING STARTED”? (Note that initialization clears all the data and programmed settings stored in memory.) |
| (2) The display won't be illuminated even when the mode switch is turned to any other position than “OFF”. | <ul style="list-style-type: none"> • Is power supplied to the electrical outlet? • Is the power cord plug out or loosely connected to the electrical outlet? |
| (3) The display is illuminated, but the whole machine refuses registrations. | <ul style="list-style-type: none"> • Is a clerk code assigned to the register? • Is the mode switch set properly at the “REG” position? |
| (4) No receipt is issued. | <ul style="list-style-type: none"> • Is the paper roll properly installed? • Is there a paper jam? • Is the receipt function in the “OFF” status? • Is the print roller arm securely locked? |
| (5) No journal paper is taken up. | <ul style="list-style-type: none"> • Is the take-up spool installed on the bearing properly? • Is there a paper jam? • Is the journal printing selected in the printing style programming? (If the receipt printing is selected, the paper is not wound around the take-up spool.) |
| (6) Printing is unusual. | <ul style="list-style-type: none"> • Is the print roller arm securely locked? • Is the paper roll properly installed? • Are the print head/sensor/roller clean? |

■ Error code table

When the following error codes are displayed, press the $\text{\textcircled{CL}}$ key and take a proper action according to the table below.

| Error code | Error status | Action |
|------------|---|--|
| E01 | Registration error | Make a correct key entry. |
| E02 | Misoperation error | Make a correct key entry. |
| E03 | Undefined code is entered. | Enter a correct code |
| E07 | Memory is full (in the $\text{\textcircled{AUTO}}$ key programming). | Program the $\text{\textcircled{AUTO}}$ key within 25 steps. |
| E11 | Compulsory depression of the $\text{\textcircled{\#TM/SBTL}}$ key for direct finalization | Press the $\text{\textcircled{\#TM/SBTL}}$ key and continue the operation. |
| E12 | Compulsory tendering | Make a tendering operation. |
| E32 | No entry of a clerk code | Make a clerk code entry. |
| E34 | Overflow limitation error | Make a registration within a limit of entry. |
| E35 | The open price entry is inhibited. | Make a preset price entry. |
| E36 | The preset price entry is inhibited. | Make an open price entry. |
| E37 | The direct finalization is inhibited. | Make a tendering operation. |
| E67 | Subtotal void is not allowed. | Finalize the transaction, and correct the wrong entries in the void mode. |


SPECIFICATIONS

| | | |
|----------------------|---|--------|
| Model: | XE-A202 | |
| Dimensions: | 13.0 (W) x 16.9 (D) x 11.0 (H) in. (330 (W) x 428 (D) x 280 (H) mm) | |
| Weight: | 16.3 lb (7.4 kg) | |
| Power source: | 120V AC \pm 10%, 60 Hz | |
| Power consumption: | Stand-by 7.7 W Operating 30 W (max.) | |
| Working temperature: | 32 °F to 104 °F (0 °C to 40 °C) | |
| Electronics: | LSI (CPU) etc. | |
| Display: | | |
| Operator display: | 7-segment display (10 positions) | |
| Customer display: | 7-segment display (7 positions) | |
| Printer: | | |
| Type: | One-station thermal printer | |
| Printing speed: | Approx. 12 lines/second | |
| Printing capacity: | 24 digits each for receipt and journal paper | |
| Other functions: | <ul style="list-style-type: none"> • Graphic logo printing function • Logo message function • Receipt (ON-OFF) function, compression printing function | |
| Paper roll: | Width: 2.25 \pm 0.02 in (57.5 \pm 0.5 mm) Max. diam.: 3.15 in (80 mm) Quality: High quality (0.06 to 0.08 mm thickness) | |
| Cash drawer: | 4 slots for bill and 5 for coin denominations | |
| Accessories: | | |
| | Manager key | 2 |
| | Operator key | 2 |
| | Drawer lock key | 2 |
| | Paper roll | 1 |
| | Take-up spool | 1 |
| | RS-232C cable (QCNWG3190BHZZ) | 1 |
| | Fixing tape for peripherals | 1 set |
| | Customer support tool | 1 disk |
| | Quick Start Guide | 1 copy |
| | Instruction manual | 1 copy |

* Specifications and appearance subject to change without notice for improvement.

Use these labels with the department keys. Write department names on the labels and attach them to the department keys by first removing the transparent key covers. (Please make a copy of this page.)

Example:

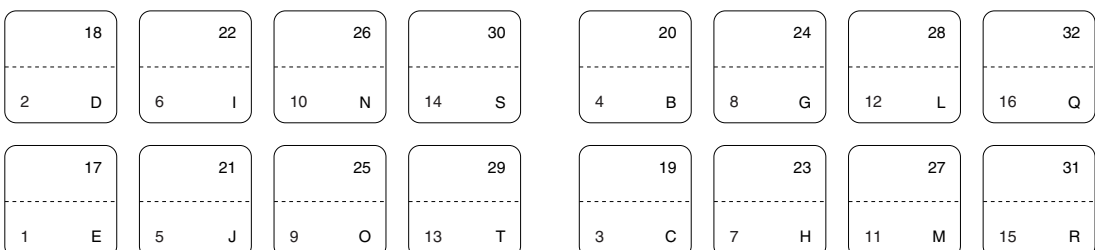

INTRODUCCION

Le agradecemos la adquisición de la caja registradora electrónica SHARP modelo XE-A202. Sírvase leer este manual detenidamente antes de hacer funcionar la caja registradora para familiarizarse y comprender por completo sus funciones y características. Guarde este manual para futura referencia dado que le servirá de ayuda en caso de tener algún problema de funcionamiento con la caja registradora.

¡PRECAUCION!

No instale nunca las pilas en la caja registradora antes de haberla inicializado. Antes de poner en funcionamiento la caja registradora, ésta deberá ser inicializada, y luego deben instalarse las pilas. De lo contrario, se perturbará el contenido de la memoria y se producirá el mal funcionamiento de la caja registradora. Para ver los procedimientos, consulte la [página 4](#).


IMPORTANTE

- **La impresora tiene instalado un cortador para cortar el papel del rollo. Tenga mucho cuidado de no cortarse con el cortador.**
- **Instale la caja registradora en un lugar en el que no esté expuesta a radiaciones directas, cambios anormales de temperatura, alta humedad o en contacto con agua.**
Si la instala en estos lugares, podría originar daños en la caja y en los componentes electrónicos.
- **No opere nunca la caja registradora con las manos mojadas.**
El agua podría filtrarse al interior de la registradora y causar averías en sus componentes.
- **Cuando limpie la caja registradora, utilice un paño suave y seco. No use nunca líquidos volátiles como por ejemplo bencina y/o disolventes.**
La utilización de estos productos químicos hará que la caja pierda color o sufra daños.
- **La registradora debe enchufarse a cualquier tomacorriente normal de pared (120V CA \pm 10%).**
Otros aparatos eléctricos enchufados en el mismo circuito eléctrico pueden hacer que la registradora funcione mal.
- **Para protegerse contra la pérdida de datos, instale tres pilas del tamaño "AA" después de haber inicializado la caja registradora. Cuando manipule las pilas, no se olvide nunca de observar lo siguiente:**
Las pilas usadas incorrectamente pueden reventar o provocar pérdidas y dañar posiblemente el interior de la caja registradora.
 - **Asegúrese de que los polos positivo (+) y negativo (-) de cada pila estén colocados en el sentido correcto para la instalación.**
 - **No mezcle nunca pilas de diferentes tipos.**
 - **No mezcle nunca pilas nuevas y usadas.**
 - **No deje nunca pilas agotadas en el compartimiento de las pilas.**
 - **Saque las pilas, si no piensa usar la caja registradora durante mucho tiempo.**
 - **Si una pila perdiera, limpie inmediatamente el compartimiento de las pilas, teniendo cuidado de que el líquido que sale de la pila no entre en contacto directo con la piel.**
 - **Para deshacerse de las pilas, siga las leyes vigentes en su país.**
- **Si la caja registradora no funciona como debiera, solicite el servicio llamando al 1-800-BE-SHARP. No intente reparar la caja registradora usted mismo.**
- **Para desconectar por completo la alimentación eléctrica, desenchufe la clavija del tomacorriente.**

Línea directa de asistencia a los clientes 1-800-BE-SHARP

Para realizar la configuración con facilidad, vea el apartado "PARA EMPEZAR" ([página 4](#)).

INDICE

| | |
|---|-----------|
| INTRODUCCION..... | 1 |
| IMPORTANTE..... | 1 |
| INDICE | 2 |
| PARTES Y SUS FUNCIONES | 3 |
| PARA EMPEZAR..... | 4 |
| REGISTRO BASICO DE VENTAS | 5 |
| 1 Ejemplo de registro básico de ventas | 5 |
| 2 Aviso de error | 6 |
| 3 Registros de artículos | 6 |
| Registros de un solo artículo | 6 |
| Registros repetidos | 7 |
| Registros de multiplicación..... | 7 |
| Registros de precios divididos | 7 |
| Registros de venta en metálico de un solo artículo (SICS) | 8 |
| 4 Visualización de los subtotales | 8 |
| 5 Finalización de una transacción | 8 |
| 6 Cálculo de los impuestos | 9 |
| CARACTERISTICAS OPCIONALES | 9 |
| 1 Registros auxiliares | 9 |
| 2 Tratos de pagos auxiliares | 10 |
| 3 Registros con tecla de secuencia automática (tecla )..... | 11 |
| CORRECCION..... | 11 |
| PROGRAMACION DE LAS FUNCIONES BASICAS (Para el inicio rápido)..... | 12 |
| 1 Programación de la fecha y de la hora..... | 12 |
| 2 Programación de los impuestos para la función de cálculo automático de los impuestos..... | 12 |
| PROGRAMACION DE FUNCIONES AUXILIARES | 14 |
| 1 Programación de secciones..... | 14 |
| 2 Programación de PLU (codificación de precios) y subsección | 15 |
| 3 Programación de teclas misceláneas..... | 16 |
| 4 Programación de texto | 18 |
| PROGRAMACION AVANZADA..... | 22 |
| 1 Programación de número de caja registradora y de números consecutivos | 22 |
| 2 Programación del registro diario electrónico (EJ) | 22 |
| 3 Programación 1 de selección de diversas funciones | 23 |
| 4 Programación 2 de selección de diversas funciones | 26 |
| 5 Lectura de programas almacenados..... | 29 |
| MODO DE INSTRUCCION | 29 |
| LECTURA (X) Y REPOSICION (Z) DE LOS TOTALES DE VENTAS | 29 |
| LECTURA Y REPOSICION DE INFORMES EJ..... | 30 |
| REGISTROS DE ANULACION..... | 31 |
| CORRECCION DESPUES DE FINALIZAR UNA TRANSACCION (Modo de cancelación)..... | 31 |
| MANTENIMIENTO PARA EL OPERADOR..... | 31 |
| 1 En caso de corte de la alimentación | 31 |
| 2 En el caso de error de impresora | 32 |
| 3 Precauciones al manejar la impresora | 32 |
| 4 Reemplazo de las pilas | 32 |
| 5 Reemplazo del rollo de papel..... | 33 |
| 6 Extracción del papel atascado | 34 |
| 7 Limpieza de la impresora (cabezal de impresión / sensor / rodillo) | 34 |
| 8 Extracción del cajón | 35 |
| 9 Abertura manual del cajón | 35 |
| 10 Antes de solicitar el servicio de un técnico..... | 35 |

PARTES Y SUS FUNCIONES

1 Selector de modo y llaves de modo

El selector de modo funciona insertando una de las dos llaves de modo suministradas: la llave del administrador (MA) y la del operador (OP). Estas llaves pueden insertarse o sacarse sólo cuando el selector esté en la posición "REG" u "OFF".

El selector de modo tiene estos ajustes:

- OFF:** Este modo bloquea todas las operaciones de la caja. (La alimentación de CA está desconectada.) No hay cambios en los datos registrados.
- OP X/Z:** Para sacar informes X o Z de dependiente individual, y para sacar informes rápidos. Puede usarse para alternar el estado "ON" u "OFF" de emisión de recibos pulsando la tecla **RCPT/PO**.
- REG:** Para registrar ventas.
- PGM:** Para programar diversos artículos.
- VOID:** Para establecer la caja registradora en el modo de cancelación. Este modo permite la corrección después de haber finalizado una transacción.
- MGR:** Para los registros del administrador. El administrador puede usar este modo para un registro de anulación.
- X1/Z1:** Para sacar el informe X/Z de varios totales diarios.
- X2/Z2:** Para sacar el informe X/Z de consolidación periódica (semanal o mensual).

2 Visualizadores

- Importe:** Aparece en las ocho posiciones (máx.) de la derecha. Cuando el importe es negativo, aparece el signo de menos "-" delante del importe.
- Número de repeticiones para registros repetitivos:**
Se visualiza el número de repeticiones, empezando por "2" y se incrementa con cada repetición. Cuando haya registrado diez veces, la visualización mostrará "0". (2 → 3 9 → 0 → 1 → 2 ...)
- Estado de la función de recibo:**
Aparece el indicador "-" en la posición RCPT OFF cuando se pone la función de recibo en el estado OFF.
- Hora:** Aparece en las seis posiciones de la derecha (hora-minutos-"*P*" u hora-minutos-"*P*") en el modo OP X/Z, REG, o MGR. En los modos REG o MGR, pulse la tecla **#/TM/SBTL** para visualizar la hora.

■ Símbolos del estado de la máquina

- P* : Aparece durante la programación.
- E* : Aparece cuando se detecta un error.
- : Aparece cuando se visualiza el subtotal o cuando se entrega un importe menor que el importe de las ventas.
- C* : Aparece cuando se pulsa la tecla **CONV** para calcular un subtotal en moneda extranjera.
- F* : Aparece cuando se finaliza una transacción pulsando la tecla **CA/AT/NS**, **CHK** o **CH**.
- L* : Aparece cuando se visualiza el importe del cambio.
- E-E* : Puede aparecer en las tres posiciones de la izquierda al efectuar una entrada de teclas cuando la memoria del registro diario electrónico (EJ) está llena. (Dependiendo de la programación.)
- L* : Aparece cuando la tensión de las pilas instaladas está por debajo del nivel necesario.
- L* : Aparece cuando las pilas no están instaladas, o cuando las pilas instaladas están gastadas.
- : Es posible que aparezca justo debajo de las posiciones octava y novena al realizar la finalización de una transacción cuando la memoria del registro diario electrónico (EJ) está casi llena. También aparece justo debajo de la décima posición cuando está activada el modo de ahorro de energía.
- H* : Aparece cuando el brazo del rodillo impresor no está bloqueado.
- PPPPPPPPPP* : Aparece cuando no está colocado el papel o cuando se ha terminado.

PARA EMPEZAR

Siga el procedimiento mostrado a continuación. Las pilas no están instaladas y la alimentación está desconectada.

1. Inicialice la caja registradora

Para que la caja registradora pueda funcionar correctamente, deberá inicializarla antes de ponerla en funcionamiento por primera vez. Siga el procedimiento siguiente.

1. Inserte la llave de administrador (MA) en el selector de modo y gírelo a la posición REG.
2. Enchufe la clavija a la toma de corriente de CA. El zumbador sonará tres veces.
IMPORTANTE: Esta operación debe efectuarse antes de haber instalado las pilas.
3. La caja registradora habrá quedado ahora inicializada.
El visualizador de la caja registradora mostrará "0.00" con " L ".

2. Instale las pilas

Las tres pilas nuevas del tamaño "AA" se deben colocar en la caja registradora para evitar que los datos y ajustes de programación se borren de la memoria, cuando se desconecte accidentalmente el cable de alimentación de CA, o en caso de un corte de corriente.

Instale las tres pilas nuevas del tamaño "AA" de acuerdo con el siguiente procedimiento con el cable de CA enchufado y con el selector de modo puesto en la posición REG. Asegúrese de observar las precauciones indicadas en la [página 1](#) sobre la manipulación de las pilas.


1. Empuje la cubierta de la impresora hacia delante y sepárela.
Tenga mucho cuidado con el cortador de papel, porque podría cortarse.
2. Abra la cubierta del compartimiento de las pilas que se encuentra al lado del soporte del rollo de papel.
3. Inserte tres pilas nuevas del tamaño "AA".
Cuando las pilas están correctamente instaladas, desaparecerá " L " del visualizador.
4. Cierre la cubierta del compartimiento de las pilas.

3. Instale un rollo de papel



1. Levante la palanca de liberación del rodillo impresor para desbloquear y abrir el brazo del rodillo impresor.
2. Ponga un rollo de papel en el soporte del rollo de papel.
3. Haga avanzar el extremo del papel junto con las guías de papel.
4. Mientras mantiene retenido el papel, cierre lentamente el brazo del rodillo impresor, y empuje el brazo hacia abajo hasta oír un sonido seco de confirmación. Asegúrese que empuja con seguridad el centro de la parte del ala del brazo. El papel avanzará automáticamente.

Nota *Si el brazo del rodillo impresor no está bloqueado correctamente, no se podrá imprimir con éxito. Si ocurre este problema, abra el brazo, y ciérrelo de nuevo como se ha indicado arriba.*

5. Cuando no emplee el carrete de toma (empleo como papel de recibos):

- Corte el papel sobrante empleando el borde de la cubierta interior, y vuelva a colocar la cubierta de la impresora. Pulse la tecla  para asegurarse que el papel sale por la cubierta de la impresora y que aparece papel limpio.

Cuando emplee el carrete de toma (empleo como papel de registro diario):

- Inserte el extremo del papel en la ranura del carrete. (Pulse la tecla  para hacer avanzar más el papel si es necesario.)
- Bobine el papel dos o tres vueltas en torno al eje del carrete.
- Coloque el carrete en el rodamiento, y pulse la tecla  para tensar el papel.
- Vuelva a colocar la cubierta de la impresora.

4. Programe la fecha, la hora y los impuestos

Nota *La caja registradora le ofrece los idiomas inglés, francés y español para el texto. El idioma preajustado es el inglés. Si desea cambiar el idioma, deberá cambiarlo antes de realizar la programación. Consulte el apartado de "Selección del idioma" de la sección "Programación 2 de selección de diversas funciones" para cambiar el idioma.*

Antes de poder seguir con el registro de las ventas, **deberá programar:**

- la fecha
- la hora
- los impuestos

Consulte la sección de PROGRAMACION DE LAS FUNCIONES BASICAS para encontrar más detalles ([página 12](#)).

5. Programe otros elementos necesarios

Aunque la caja registradora viene ya programada para poderla utilizar con la mínima configuración, la máquina le ofrece las funciones opcionales. Antes de comenzar la programación, lea la sección de operaciones de ventas para entender las funciones opcionales.

REGISTRO BASICO DE VENTAS

1 Ejemplo de registro básico de ventas

A continuación se muestra un ejemplo de registro básico de ventas de artículos de sección en metálico. Para los detalles de la operación, consulte cada sección respectiva.

Ajuste del selector de modo

1. Gire el selector de modo a la posición REG.

Asignación de dependientes

2. Introduzca su código de dependiente. (Por ejemplo, si el código de dependiente es el 1. Pulse las teclas **1** y **CLK#** en este mismo orden.)

Registros de artículos

3. Introduzca el precio para el primer artículo de sección. (Por ejemplo, para 15,00, introduzca **1** **5** **00**, y pulse la tecla de la sección correspondiente.)

Para las secciones 17 a la 32, pulse primero la tecla **DEPTSHIFT** antes de pulsar la tecla de la sección.

Para la sección 33 y posteriores, introduzca el código de sección empleando las teclas numéricas, y pulse la tecla **DEPT#**, y luego introduzca el precio y pulse de nuevo la tecla **DEPT#**.

4. Repita el paso 3 para todos los artículos de sección.

Visualización de subtotales

5. Pulse la tecla **#/TM/SBTL** para visualizar el importe a cobrar.


Finalización de la transacción

6. Introduzca el importe recibido del cliente. (Podrá omitir este paso si el importe recibido es el mismo que el subtotal.)

7. Pulse la tecla **CA/AT/NS** y se visualizará la vuelta (cuando no se ha introducido el importe recibido, se visualizará el importe total) y se abrirá el cajón.

8. Corte el recibo y déselo al cliente con su vuelta.

9. Cierre el cajón.

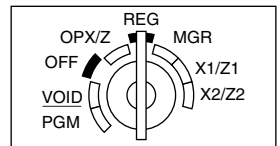

Ejemplo de operación de teclas

| | | |
|--------------------------------|--------------------------------|-----------------|
| Asignación de dependiente | → 1 CLK# | -01- |
| Registros de artículos | 1500 1 17 | 01 15.00 |
| | 2300 2 18 | 02 23.00 |
| Visualización del subtotal | → #/TM/SBTL | 0 40.38 |
| Finalización de la transacción | 5000 | 5000 |
| | CA/AT/NS | € 9.62 |

(En este ejemplo, la tasa de impuestos está ajustada a 6,25%.)

Impresión

| | | |
|-----------------------------------|--|--|
| YOUR RECEIPT THANK YOU | | Membrete gráfico |
| 08/26/2003 2:32PM 01 | | Fecha/hora/número de código de dependiente |
| 123456#1027 CLERK01 | | Número de caja registradora/número consecutivo/nombre de dependiente |
| DEPT. 01 T1 \$15.00 | | Artículos |
| DEPT. 02 T1 \$23.00 | | Precio |
| MOSE ST \$38.00 | | Subtotal de mercancías |
| TAX1 \$2.38 | | Importe de impuestos |
| | | Estado de impuestos (T1: imponible 1) |
| ITEMS 2Q | | Cantidad total |
| ***TOTAL \$40.38 | | Importe total |
| CASH \$50.00 | | Pago en metálico/importe recibido |
| CHANGE \$9.62 | | Vuelta |

No se imprime cuando sólo se venden artículos no imponibles.

Función ON/OFF (de emisión/no emisión) de recibos

Cuando emplea la impresora para emitir recibos, podrá inhabilitar la impresión de recibos en el modo REG. Pulse la tecla **RCPT/PO** en la posición OP X/Z. Esta tecla cambia el estado de impresión de recibos de ON a OFF.

Para emitir un recibo cuando la función de recibo ON/OFF está desactivada (OFF):

Si el cliente quiere el recibo después de haber finalizado la transacción con la función de recibo ON/OFF desactivada (OFF), pulse la tecla **RCPT/PO**.

Modo de ahorro de energía

La caja registradora se establecerá en el modo de ahorro de energía cuando no se efectúe ningún registro basándose en el límite de tiempo ya programado (ajuste inicial de 30 minutos). Cuando la caja registradora se establezca en el modo de ahorro de energía, se apagará toda la visualización excepto el punto decimal de la posición de la izquierda. La caja registradora volverá al modo de operación normal al pulsar alguna tecla o al cambiar un modo.

2 Aviso de error


En los siguientes ejemplos, la caja registradora se coloca en estado de error haciendo sonar un aviso audible y visualizando el símbolo de error “E” en el visualizador. Anule el estado de error pulsando la tecla **CL** y tome las medidas oportunas.

Consulte la tabla de códigos de error en la [página 36](#).

- Registra un número de más de 32 dígitos (desborde del límite de registro): Cancele el registro y vuelva a introducir un número correcto.
- Se equivoca en la operación de teclas: Borre el error y continúe la operación.
- Hace un registro más allá del límite de registro de importes programado: Vea si el importe registrado es correcto. Si es correcto, puede introducirse en el modo MGR. Llame al administrador.
- Un subtotal con impuestos incluido excede de ocho dígitos: Borre el subtotal pulsando la tecla **CL** y pulse la tecla **CAVAT/INS**, **CHK** o **CH** para finalizar la transacción.

Función de escape de error

Cuando desee abandonar una transacción debido a un error o a un imprevisto, emplee la función de escape de error como se muestra a continuación:

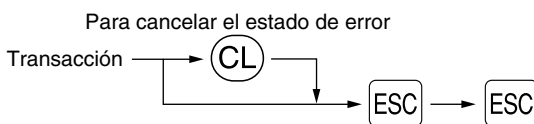

La transacción se cancela (se trata como un subtotal cancelado) y se emite el recibo mediante esta función. Si ya había introducido el importe entregado para el pago, la operación se finaliza como una venta en metálico.

 
3 Registros de artículos

Registros de un solo artículo

Registros de sección

- **Cuando se emplean las teclas de sección (para las secciones 1 a 32)**


Cuando utilice un precio unitario programado



*1 Menos que los importes de límite superior programado
Cuando se introduce cero, sólo se añade la cantidad de ventas.

*2 Para las secciones opcionales 17 a 32, pulse la tecla **DEPTSHIFT**.

• **Cuando se emplea la tecla de registro de código de sección**

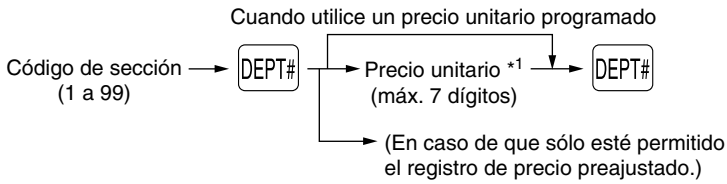


*1 Menos que los importes de límite superior programado
 Cuando se introduce cero, sólo se añade la cantidad de ventas.


Registros de PLU/subsecciones

La caja registradora ya está programada para el modo PLU y cero para el precio unitario. Para emplear entradas de PLU, deberán haberse programado de antemano sus precios unitarios preajustados. (Consulte la [página 15.](#)) Para emplear los registros de subsecciones, cambie al modo de subsección para los códigos de PLU.

 • **Registros de PLU**



 • **Registros de subsección (PLU abierta)**



* Menos que los importes de límite superior programado
 Cuando se introduce cero, sólo se añade la cantidad de ventas.

■ **Registros repetidos**


Puede utilizar esta función para registrar una venta de dos o más artículos iguales. Repita la pulsación de una tecla de sección, tecla **DEPT#** o tecla **PLU/SUB**.

■ **Registros de multiplicación**

Cuando venda una gran cantidad de artículos, es conveniente emplear el método de registro de multiplicación. Introduzca la cantidad empleando las teclas numéricas y pulse la tecla **@/FOR** antes de comenzar el registro de artículos.

■ **Registros de precios divididos**

Esta función es práctica cuando un cliente desea comprar artículos que normalmente se venden en lotes. Para llevar a cabo esta función, deberá cambiar el ajuste programado. Consulte el apartado “Programación 1 de selección de diversas funciones” ([código de tarea 70](#)) para ver los detalles de la programación.

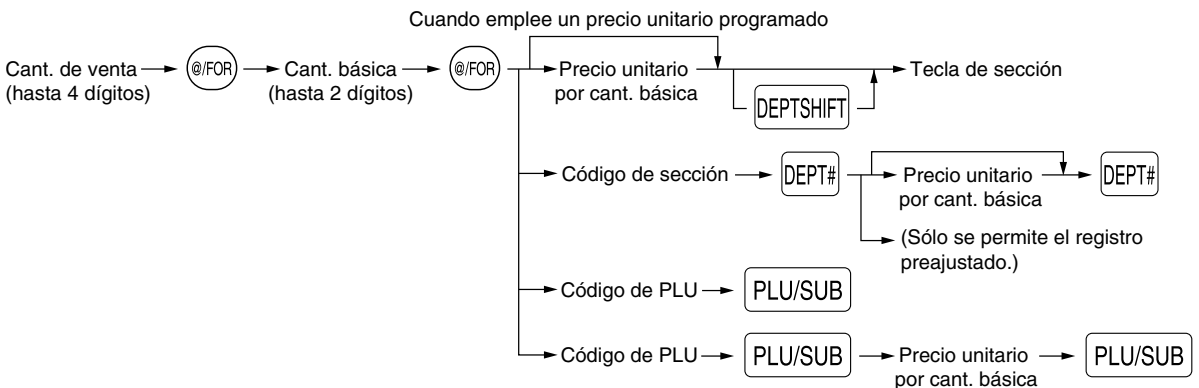

■ Registros de venta en metálico de un solo artículo (SICS)

- Esta función es útil cuando se vende solamente un artículo en metálico. Esta función es aplicable sólo a las secciones que se han ajustado para SICS o a sus PLU o subsecciones asociadas.
- Se completa la transacción y el cajón se abre tan pronto como pulse la tecla de sección, la tecla **DEPT#** o la tecla **PLU/SUB**.

4 Visualización de los subtotales

La caja registradora ofrece tres tipos de subtotales:

Subtotal de mercancías

Pulse la tecla **MDSESRTL** en cualquier momento durante la transacción. Aparecerá el subtotal de venta neto, sin incluir los impuestos, en el visualizador.

Subtotal imponible

Subtotal de imponible 1

Pulse las teclas **TAX1SHIFT** y **#/TM/SBTL** en este orden en cualquier momento durante la transacción. Aparecerá el subtotal de venta de los artículos de imponible 1 en el visualizador.

Subtotal de imponible 2

Pulse las teclas **TAX2SHIFT** y **#/TM/SBTL** en este orden en cualquier momento durante la transacción. Aparecerá el subtotal de venta de los artículos de imponible 2 en el visualizador.

Subtotal incluyendo los impuestos (subtotal completo)

Pulse la tecla **#/TM/SBTL** en cualquier momento durante la transacción. Aparecerán el subtotal de venta con los impuestos incluidos y el símbolo “□” en el visualizador.

5 Finalización de una transacción

■ Importe recibido en metálico o cheque

Pulse la tecla **#/TM/SBTL** para obtener un subtotal con impuestos incluidos, registre el importe entregado por el cliente, y entonces pulse la tecla **CA/AT/NS** si el importe es en metálico o pulse la tecla **CHK** si el importe es un cheque. Cuando el importe recibido es mayor que el importe de la venta, la registradora le mostrará el importe del cambio y se encenderá el símbolo “⌈”. De lo contrario, la registradora mostrará un déficit y se encenderá el símbolo “□”. Ahora deberá hacer el registro correcto del importe recibido.

■ Ventas en metálico o cheque que no necesitan un registro

Registre los artículos y pulse la tecla **CA/AT/NS** si se trata de una venta en metálico o pulse la tecla **CHK** si es una venta con cheque. La caja registradora visualizará el importe total de la venta.

■ Venta a cargo en cuenta (crédito)

Registre los artículos y pulse la tecla de cargo (**CH**).

■ Ventas con importe recibido mixto

Podrá efectuar la mezcla de pagos con cheques y metálico, metálico y a cargo en cuenta, y cheque y a cargo en cuenta.

Por ejemplo: Su cliente paga \$9,50 en metálico y \$40,00 a cargo a su cuenta para un subtotal de \$49,50 con impuestos incluidos.

Ejemplo de operación de teclas

~ **#/TM/SBTL** 950 **CA/AT/NS** **CH**

6 Cálculo de los impuestos

■ Impuestos automáticos

Cuando se ha programado una tasa de impuestos (o tabla de impuestos) en la caja registradora y el estado de impuestos para una sección individual está ajustado a imponible, la caja calcula los impuestos automáticos para cualquier artículo que se introduzca directamente en la sección o indirectamente mediante una PLU relacionada.

■ Impuestos manuales

La máquina le permite introducir manualmente los impuestos después de haber terminado el registro de artículos.

Ejemplo: Venta en metálico de un artículo de \$8,00 (sección 12) con 50 centavos como impuestos

Ejemplo de operación de teclas

800 12 50

■ Borrado de los impuestos

Podrá borrar los impuestos automáticos en el subtotal de imponible 1 y de imponible 2 de cada transacción pulsando la tecla después de haberse visualizado el subtotal.

Para efectuar el borrado del subtotal de imponible 1, pulse , para obtener el subtotal de imponible 1, y entonces pulse para borrar el subtotal.

Para efectuar el borrado del subtotal de imponible 2, pulse , para obtener el subtotal de imponible 2, y entonces pulse para borrar el subtotal.

Para borrar todo el subtotal de imponible (1-4), pulse , , y en este orden.

■ Cambio del estado de impuestos

La máquina le permitirá cambiar el estado de impuestos programado de cada tecla de sección o de PLU pulsando las teclas y/o antes de tales teclas. Después de completar cada registro, el estado de impuestos programado de cada tecla se repondrá al programado.

CARACTERÍSTICAS OPCIONALES

1 Registros auxiliares

■ Registros de descuento y recargo empleando la tecla de porcentaje

La tecla de porcentaje se emplea para aplicar un porcentaje de descuento o recargo manualmente introducido o preajustado a artículos individuales o a un subtotal de mercancías. Para el registro manual del porcentaje de descuento o de recargo, introduzca el porcentaje (hasta 100,00) con las teclas numéricas (necesitará un punto decimal cuando introduzca una tasa porcentual fraccionaria), y pulse la tecla de porcentaje. Cuando emplee un porcentaje preajustado (si se ha programado), pulse tan sólo una tecla de porcentaje.

Cálculo porcentual para el subtotal de mercancías

Ejemplo de operación de teclas

~ **MDSESBTL** 10 **%1** **CA/AT/NS**

Cálculo porcentual para registros de artículos

Ejemplo de operación de teclas

800 **6**²² 7 **•** 5 **%1** **CA/AT/NS**

■ Registros de descuento y recargo empleando la tecla de descuento

La tecla de descuento se emplea para aplicar un importe de descuento o recargo manualmente introducido o preajustado a artículos individuales o a un subtotal de mercancías. Para el registro manual de los importes de descuento o de recargo, introduzca el importe con las teclas numéricas, y pulse la tecla de descuento. Cuando emplee un importe preajustado (si se ha programado), pulse una tecla de descuento.

Descuento para el subtotal de mercancías

Ejemplo de operación de teclas

~ **MDSESBTL** 100 **⊖** **CA/AT/NS**

Descuento para registros de artículos

Ejemplo de operación de teclas

675 **7**²³ **⊖** **CA/AT/NS**

■ Registros de devolución

Para las secciones 1 a 16, introduzca el importe de devolución y pulse la tecla **RFND**, y luego pulse la tecla de la sección correspondiente, y para las secciones 17 a 32, introduzca el importe de devolución y pulse la tecla **RFND**, y luego pulse la tecla **DEPTSHIFT** y pulse la tecla de la sección correspondiente (cuando emplee el precio preajustado, omita la introducción del importe). En el caso de las secciones 33 a 99, introduzca el código de sección y pulse la tecla **RFND** y la tecla **DEPT#**, y luego introduzca el importe de devolución y pulse la tecla **DEPT#** cuando sea necesario.

Para la devolución de un artículo de PLU, introduzca el código de PLU y pulse la tecla **RFND**, y luego pulse la tecla **PLU/SUB**.

Para la devolución de un artículo de subsección, introduzca el código de PLU y pulse la tecla **RFND** y la tecla **PLU/SUB**, y luego introduzca el importe de devolución y pulse la tecla **PLU/SUB**.

■ Registros e impresión de números de código de no suma

Podrá introducir un número de código de no suma, como pueda ser un número de código de cliente o número de tarjeta de crédito, con un máximo de 16 dígitos, en cualquier momento durante el registro de una venta. La caja registradora lo imprimirá.

Para introducir un número de código de no suma, introduzca el número y pulse la tecla **#TM/SBTL**.

2 Tratos de pagos auxiliares

■ Conversión de divisas

La caja registradora permite registros de pago con divisas (sólo está disponible el pago en metálico). Pulsando la tecla **CONV** se crea un subtotal en la divisa en cuestión.

Cuando emplee una tasa de cambio de divisas programada, pulse la tecla **CONV** después de los registros de los artículos, e introduzca entonces el importe recibido en la divisa si no se trata de un pago con el importe justo, y pulse la tecla **CA/AT/NS**.

Cuando efectúe un registro manual de la tasa de cambio de divisas, después de los registros de todos los artículos, introduzca la tasa de cambio (0,0000 a 9999,9999; necesitará un punto decimal cuando introduzca una tasa de cambio fraccionaria), y pulse la tecla **CONV**, y luego introduzca el importe en la divisa en cuestión si no es un pago del importe justo, y pulse la tecla **CA/AT/NS**.

En ambos casos, la vuelta se visualizará en moneda nacional y, cuando el importe recibido sea insuficiente, el déficit se mostrará en moneda nacional.

Nota

- Pulse la tecla **CL** después de pulsar la tecla **CONV** para cancelar el pago en una divisa.
- Si se programa, se imprime un símbolo de moneda extranjera cuando emplea una tasa preajustada.

■ Registros de recibido a cuenta y de pagado

Cuando recibe un pago a cuenta o cuando usted paga a un abastecedor, es aconsejable emplear la tecla **RA** o la tecla **RCP/PO** respectivamente. Los pagos en metálico sólo están disponibles en la operación RA y PO.

Para el registro de recibido a cuenta, introduzca el importe y pulse la tecla **RA**.

Para el registro de pagado, introduzca el importe y pulse la tecla **RCP/PO**.

■ Sin ventas (cambios)

Cuando deba abrir el cajón para algo que no sea una venta, pulse tan sólo la tecla **CA/AT/NS**. El cajón se abrirá y la registradora imprimirá "NO VENTA" en el registro diario o en el recibo.

3 Registros con tecla de secuencia automática (tecla **AUTO**)

Puede lograr una transacción programada pulsando simplemente la tecla **AUTO**.

CORRECCION

1 Corrección del último registro (cancelación directa)

Si hace un registro incorrecto relativo a una sección, PLU/subsección, porcentaje (**%1** y **%2**), descuento (**⊖**) o devolución, puede cancelar este registro pulsando la tecla **VOID** inmediatamente después del registro incorrecto.

2 Corrección del registro siguiente al último o anterior (cancelación indirecta)

Podrá cancelar cualquier registro de sección incorrecto, registro de PLU/subsección o registro de devolución de artículo hechos durante una transacción, si lo encuentra antes de finalizar la transacción (por ejemplo, pulsando la tecla **CA/AT/NS**). Esta función es aplicable sólo a los registros de sección, PLU/subsección y de devolución.

Para la operación, pulse la tecla **VOID** justo antes de pulsar una tecla de sección, la tecla **DEPT#**, o la tecla **PLU/SUB**.

Para la cancelación indirecta de devolución, pulse la tecla **VOID** después de haber pulsado la tecla **RFND**.

3 Cancelación del subtotal

Puede cancelar una transacción completa. Una vez ejecutada la cancelación del subtotal, la transacción se detiene y la registradora emite un recibo. Esta función no funciona cuando se han introducido más de 30 artículos.

Ejemplo de operación de teclas

1310 **2**¹⁸ 10 **PLU/SUB** **#/TM/SBTL** **VOID** **#/TM/SBTL**

Cancelación de subtotal

PROGRAMACION DE LAS FUNCIONES BASICAS (Para el inicio rápido)

Para programar la caja registradora, ponga la llave del administrador en el selector de modo y gírela a la posición PGM.

- Los asteriscos en las tablas mostradas en los detalles de programación indican los ajustes iniciales.

1 Programación de la fecha y de la hora

Fecha

Para ajustar la fecha, introduzca la fecha con 8 dígitos empleando el formato de mes-día-año (MM/DD/AAAA), y pulse entonces la tecla .

Ejemplo de operación de teclas

08262003
(Agosto 26, 2003)

Hora

Para ajustar la hora, introduzca la hora con 4 dígitos empleando el formato de 24 horas. Por ejemplo, para ajustar la hora a las 2:30 AM, introduzca 230; y para ajustarla a las 2:30 PM, introduzca 1430.

Ejemplo de operación de teclas

1430

2 Programación de los impuestos para la función de cálculo automático de los impuestos

Antes de poder proceder al registro de ventas, primero deberá programar los impuestos que se cargan de acuerdo con las leyes de su estado. En esta caja registradora pueden programarse cuatro tasas de impuestos distintas. En la mayor parte de estados, sólo será necesario programar los impuestos 1. Sin embargo, si vive en una zona que tiene impuestos locales propios o impuestos de hospitalidad, podrá programar la caja registradora para que calcule estos impuestos por separado.


Cuando programe el estado de impuestos para una sección, los impuestos se añadirán automáticamente a los artículos de venta asignados a la sección de acuerdo con el estado de impuestos programado para la sección. También podrá introducir manualmente los impuestos.

Hay dos métodos para programar los impuestos. El método de la tasa de impuestos emplea una tasa porcentual directa por dólar. El método de tabla de impuestos requiere la información detallada de impuestos para las oficinas de impuestos estatales o locales. Emplee el método que sea aceptable para su estado. Podrá obtener los datos necesarios en la oficina de impuestos local para efectuar la programación de los impuestos.

Programación de los impuestos empleando una tasa de impuestos

La tasa porcentual aquí especificada se emplea para calcular los impuestos sobre subtotales imponibles.

Procedimiento

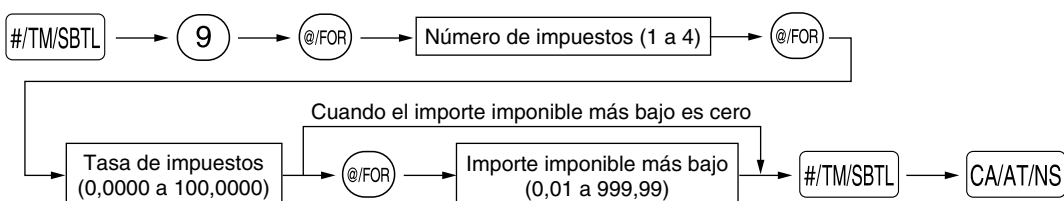

Ejemplo: Programación de la tasa de impuestos del 4% como tasa de impuestos 2 con exención de impuestos de 12¢

Ejemplo de operación de teclas

#/TM/SBTL 9 @/FOR 2 @/FOR 4 @/FOR 12 #/TM/SBTL CA/AT/NS

Tabla de impuestos (aplicable al impuesto añadido)

Si se encuentra en una localidad que emplea una tabla de impuestos para el cálculo de los impuestos, podrá programar consecuentemente la caja registradora. La programación de la tabla de impuestos puede efectuarse para impuestos 1 a impuestos 4.

Tabla de impuestos de muestra

Tabla de impuestos de New Jersey: 6%

| Impuestos | Margen de importe de venta | | |
|-----------|----------------------------|---|--------------------------|
| | Punto de división mínimo | | Punto de división máximo |
| .00 | .01 | a | .10 |
| .01 — T | .11 — Q | a | .22 |
| .02 | .23 | a | .38 |
| .03 | .39 | a | .56 |
| .04 | .57 | a | .72 |
| .05 | .73 | a | .88 |
| .06 | .89 | a | 1.10 |
| .07 | 1.11 — M1 | a | 1.22 |
| .08 | 1.23 | a | 1.38 |
| .09 | 1.39 | a | 1.56 |
| .10 | 1.57 | a | 1.72 |
| .11 | 1.73 | a | 1.88 |
| .12 | 1.89 | a | 2.10 |
| .13 | 2.11 — M2 | a | 2.22 |




| A: Diferencia entre el punto de división mínimo y el siguiente (¢) | |
|--|---------------|
| — | B: No cíclico |
| 10 (0.11 - 0.01) | C: Cíclico 1 |
| 12 (0.23 - 0.11) | |
| 16 (0.39 - 0.23) | |
| 18 (0.57 - 0.39) | |
| 16 (0.73 - 0.57) | |
| 16 (0.89 - 0.73) | D: Cíclico 2 |
| 22 (1.11 - 0.89) | |
| 12 (1.23 - 1.11) | |
| 16 (1.39 - 1.23) | |
| 18 (1.57 - 1.39) | |
| 16 (1.73 - 1.57) | |
| 16 (1.89 - 1.73) | |
| 22 (2.11 - 1.89) | |

Para programar una tabla de impuestos, primero haga una tabla como la tabla de la derecha arriba mostrada. Partiendo de la tabla de impuestos, calcule las diferencias entre el punto de división mínimo y el siguiente (A). Luego, partiendo de las diferencias, busque ciclos irregulares (B) y ciclos regulares (C y D). Estos ciclos le mostrarán los elementos necesarios para programar la tabla de impuestos:

- T:** El importe de impuestos recolectados en el importe imponible mínimo (Q)
- Q:** El importe imponible mínimo
- M1:** El valor máximo del punto de división mínimo en un ciclo regular (C)
A esto lo denominamos "punto MAX".
- M2:** El valor máximo del punto de división mínimo en un ciclo regular (D)
A esto lo denominamos "punto MAX".
- M:** Margen del punto de división mínimo en un ciclo regular: diferencia entre Q y M1 o entre M1 y M2.

Procedimiento

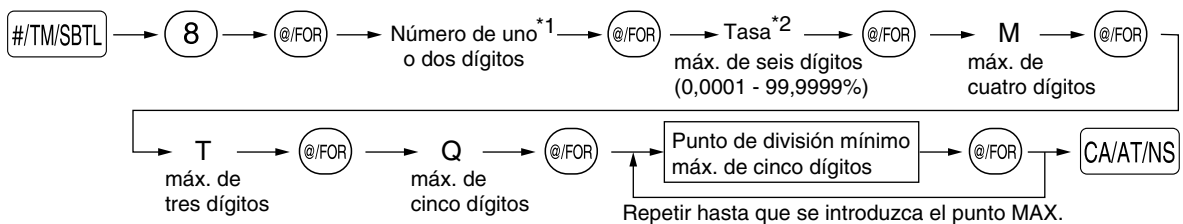

- *1 Primer número: (1 ó 0)** Este primer número que se introduce depende de si la diferencia entre un punto de división mínimo a introducirse y el punto de división mínimo anterior no son de menos de \$1,00 ni de más de 99¢. Cuando la diferencia no sea de menos de \$1,00, introduzca "1", y cuando no sea de más de 99¢, introduzca "0" o no introduzca nada.
- Segundo número: (1 a 4)** El segundo número depende de si su tabla de impuestos debe programarse como tabla de impuestos 1, 2, 3, ó 4.
- *2** Si la tasa es fraccionaria (por ejemplo 4-3/8%), la fracción (3/8) se convierte a su equivalente decimal (es decir, 0,375) y se introduce la tasa resultante de 4,375. Tenga presente que la tasa nominal (R) generalmente se indica en la tabla de impuestos.

• **Limitaciones para el registro de puntos de división mínimos**


La caja registradora puede trabajar con una tabla de impuestos que conste hasta de 72 puntos de división como máximo. (El número máximo de puntos de división es de 36 cuando la diferencia de puntos de división es de \$1,00 o más.) Si el número de puntos de división excede la capacidad de tablas de la caja registradora, deberá emplear entonces el registro manual.

PROGRAMACION DE FUNCIONES AUXILIARES

1 Programación de secciones

La mercancía se puede clasificar en un máximo de 99 secciones.

■ Estado de sección

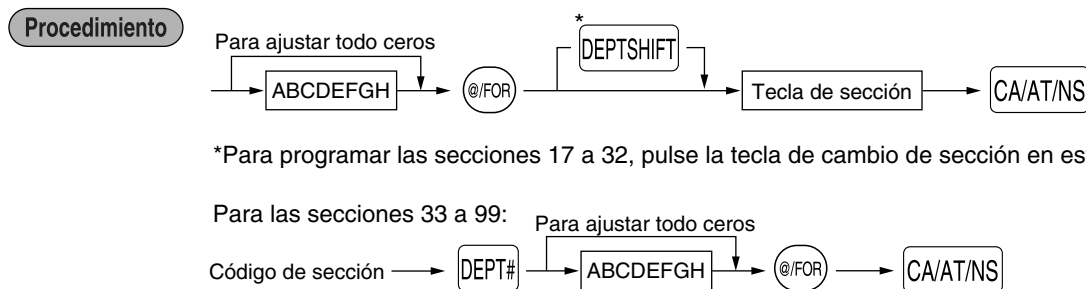

Para programar otra sección, comience desde el principio sin pulsar la tecla CA/AT/NS.

| Elemento: | Selección: | Registro: |
|---|--|-------------------------|
| A Estado de impuestos 4 | Imponible | 1 |
| | No imponible* | 0 |
| B Estado de impuestos 3 | Imponible | 1 |
| | No imponible* | 0 |
| C Estado de impuestos 2 | Imponible | 1 |
| | No imponible* | 0 |
| D Estado de impuestos 1 | Imponible (*para las secciones 1 a 10) | 1 |
| | No imponible (*para las secciones 11 a 99) | 0 |
| E SICS / Normal | SICS | 1 |
| | Normal* | 0 |
| F Signo | Sección negativa | 1 |
| | Sección positiva* | 0 |
| G Límite de dígitos de entrada | | 0-7 (ajuste inicial: 7) |
| H Tipo de registros de precio unitario | Abertura y preajuste | 3 |
| | Sólo preajuste | 2 |
| | Sólo abertura* | 1 |
| | Tecla de sección invalidada | 0 |

Estado de impuestos (imponible 1 a 4 / no imponible)

- Cuando se efectúa un registro de una sección imponible en una transacción, los impuestos se calculan automáticamente de acuerdo con la tabla o tasa de impuestos asociada.

SICS (Venta en metálico de un solo artículo)

 
- Si se efectúa primero un registro de una sección programada para SICS, la venta se finalizará como venta de pago en metálico así que se pulse la tecla de la sección.

Límite de dígitos de entrada

- El límite es eficaz para operaciones en el modo REG y puede pasarse por alto en el modo MGR.


■ Precio unitario preajustado

Procedimiento



*Para programar las secciones 17 a 32, pulse la tecla de cambio de sección en este punto.

 Para las secciones 33 a 99:



Para programar otra sección, comience desde el principio sin pulsar la tecla **CA/AT/NS**.

 
2 Programación de PLU (codificación de precios) y subsección

La función de PLU permite realizar registros rápidos con las teclas en los que el precio se busca automáticamente al introducir un código. La subsección es un tipo de "PLU abierta", que requiere que usted introduzca un precio detrás del código de PLU. Pueden realizarse un máximo de 1.200 ajustes de PLU/subsección. Cada una pertenece a una sección y adquiere los parámetros de la sección (estado de impuestos, SICS y signo).

La caja registradora ya está programada de modo que los 1.200 códigos están asignados a las PLU asociadas con la sección 1 y precio unitario preajustado "0".


■ Asignación de precios unitarios y de secciones asociadas

Procedimiento



*1: Para asignar las secciones 17 a 32, pulse la tecla de cambio de sección en este punto.

Cuando la sección asociada es una de las secciones 33 a 99:

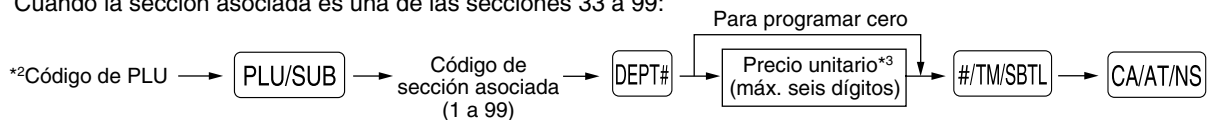


*2: 1 a 1.200 (Dependiendo del ajuste del tamaño de la memoria EJ, hasta 200)

*3: Para una subsección, ajuste el importe de límite del registro de precio unitario.


Para borrar un código de PLU, emplee la secuencia siguiente:

Procedimiento

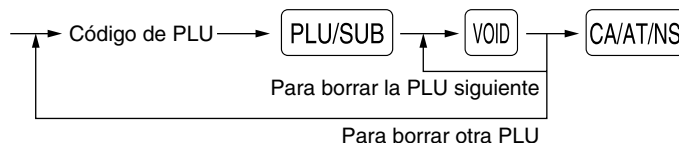

■ Selección de PLU/subsección

Procedimiento

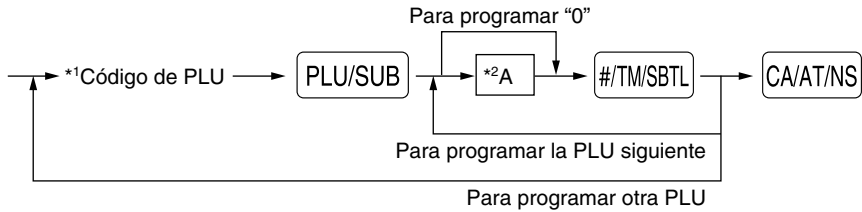


*1: 1 a 1.200 (Dependiendo del ajuste del tamaño de la memoria EJ, hasta 200)

*2: 0 para la subsección o 1 para PLU (ajuste inicial: 1)

3 Programación de teclas misceláneas

■ Tasa para %1, %2 y CONV

Procedimiento

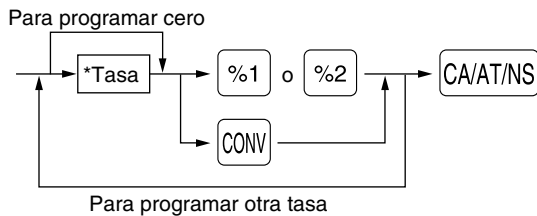

*: Tasa

 
0,00 – 100,00 (Tasa de porcentaje)

0,0000 – 9999,9999 (Tasa de conversión de divisas)

Deberá emplear un punto decimal para ajustar tasas fraccionarias.


■ Importe para ⊖

Procedimiento



■ Límite de tasa porcentual para %1 y %2

Procedimiento

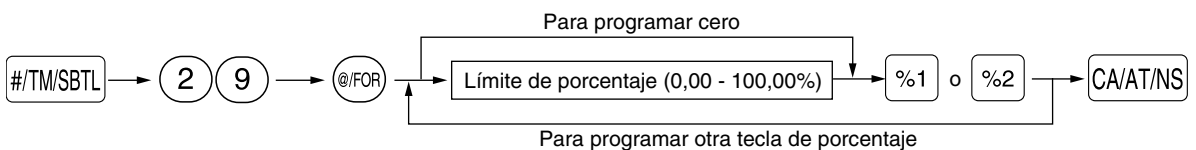


Nota

- Los registros porcentuales que exceden al límite superior pueden suprimirse en el modo MGR.
- 10,00% puede registrarse como (1)(0) o (1)(0)(•)(0)(0). La tecla (•) es necesaria sólo para los registros fraccionarios.

■ Parámetros de función para %1, %2 y ⊖

Procedimiento

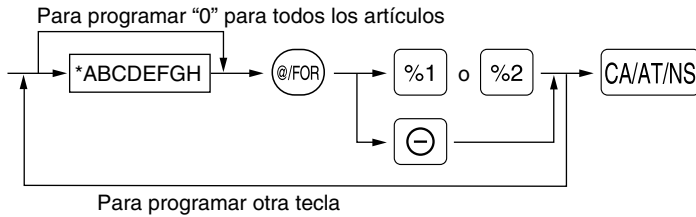


| *: Elemento: | Selección: | Registro: |
|--|----------------------|-------------------------|
| A Estado de impuestos 4 | Imponible | 1 |
| | No imponible* | 0 |
| B Estado de impuestos 3 | Imponible | 1 |
| | No imponible* | 0 |
| C Estado de impuestos 2 | Imponible | 1 |
| | No imponible* | 0 |
| D Estado de impuestos 1 | Imponible | 1 |
| | No imponible* | 0 |
| E Signo +/- | Signo + (recargo) | 0 |
| | Signo - (descuento)* | 1 |
| F % de artículo / ⊖ de artículo | Habilitar* | 0 |
| | Inhabilitar | 1 |
| G % de subtotal / ⊖ de subtotal | Habilitar* | 0 |
| | Inhabilitar | 1 |
| H Límite de dígitos de entrada para la tecla de descuento | | 0-7 (ajuste inicial: 7) |

Cuando se programen las teclas de porcentaje, introduzca siempre 0 para H.

El límite de dígitos de entrada es eficaz para operaciones en el modo REG, pero puede suprimirse en el modo MGR.

■ Parámetros de función para CONV

 
Procedimiento



| *: Elemento: | Selección: | Registro: |
|---------------------------------------|-------------|-----------|
| A Registro de tasa abierta | Habilitar* | 0 |
| | Inhabilitar | 1 |
| B Registro de tasa preajustada | Habilitar* | 0 |
| | Inhabilitar | 1 |

■ Límite de dígitos de entrada para RA, RCPT/PO y TAX

 Procedimiento




- Para RA, RCPT/PO, introduzca 0 a 9 (dígitos), y para TAX (impuestos manuales), introduzca 0 a 7 (dígitos). Como ajuste inicial, se ajustan 9 para RA y RCPT/PO y 7 para TAX.

El límite de dígitos de entrada es de hecho para operaciones en el modo REG, pero puede suprimirse en el modo MGR.

■ Parámetros de función para **CHK**, **CH** y **CA/AT/NS** (cuando se usa como tecla CA)

Procedimiento

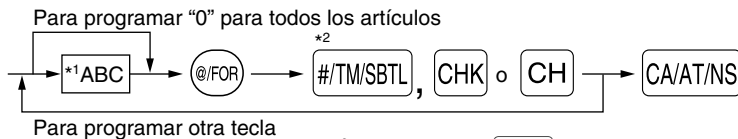

*2: Pulse la tecla **#/TM/SBTL** para ajustar la tecla CA.

| *1:Elemento: | Selección: | Registro: |
|---------------------------------------|--|-----------|
| A Impresión de pie del recibo | Habilitar | 1 |
| | Inhabilitar* | 0 |
| B Registro de importe recibido | Obligatorio | 1 |
| | No obligatorio (para la tecla CA o CHK)* | 0 |
| | Invaldar (para la tecla CH)* | 0 |
| C Límite de dígitos de entrada | | 0-8 |

Impresión de pie del recibo

- Esta programación decide si la registradora debe imprimir un mensaje en la parte inferior del recibo cuando se usa una de estas teclas de finalización especificada. Con respecto al método de programación del mensaje del membrete del pie de recibo, consulte la sección "Mensajes de membrete" en la [página 21](#).

Límite de dígitos de entrada

- Para las teclas **CH** y **CHK**, programe un importe de entrada de límite superior para el importe recibido. Para la tecla **CA/AT/NS**, programe un importe de entrada de límite superior para el importe total en metálico que puede manipularse en la caja registradora.

4 Programación de texto

La caja registradora le permite programar el texto para los nombres de dependiente, nombres de artículos de sección, nombres de artículos de PLU/subsección, etc., cuando sea necesario. Hay dos formas de programar el texto: empleando las teclas de caracteres del teclado o introduciendo los códigos de los caracteres con las teclas numéricas del teclado.

Empleo de las teclas de caracteres del teclado

Podrá introducir caracteres de acuerdo con los caracteres pequeños que hay en la esquina inferior derecha de las teclas. Para ver la disposición, consulte la sección "Teclado" de la [página 5](#) de la versión inglesa.

Las teclas siguientes se emplean como teclas de control para la entrada de caracteres:

- SHIFT** Cambia entre letras mayúsculas y minúsculas. El ajuste inicial es el de letras mayúsculas seleccionadas. Una vez se ha pulsado la tecla **SHIFT**, se fija la entrada para letras minúsculas. "_" se enciende en la posición SHIFT del visualizador cuando se selecciona la entrada de letras minúsculas.
- NUMBER** Pulse la tecla **NUMBER** para introducir caracteres numéricos. Por ejemplo para introducir "1", pulse la tecla **NUMBER** y la tecla **1**. Si pulsa la tecla **1** sin pulsar la tecla **NUMBER**, la caja registradora se establece en el modo de entrada de códigos de caracteres. Una vez se ha pulsado la tecla **NUMBER**, se fija la entrada para caracteres numéricos. "_" se enciende en la posición NUMBER del visualizador cuando se selecciona la entrada de caracteres numéricos.
- DC** Cambia entre caracteres de tamaño normal y de tamaño doble. En el ajuste inicial se han seleccionado los caracteres de tamaño normal. Una vez se pulsa la tecla **DC**, se fija la entrada para caracteres de tamaño doble. "_" se enciende en la posición DC del visualizador cuando se selecciona la entrada de caracteres de tamaño doble.
- BS** Hace retroceder el cursor, borrando el carácter de la izquierda.

Ejemplo

Para programar la palabra "Clerk01" con la letra "C" de tamaño doble.

Para que la letra "C" sea de tamaño doble

DC C

Para que el tamaño de los caracteres vuelva al normal

DC

Para cambiar a letras minúsculas

SHIFT

L E R K

Para introducir números

NUMBER 0 1

Introducción de códigos de caracteres con las teclas numéricas del teclado

Los números, las letras y los símbolos pueden programarse introduciendo el código de carácter y la tecla $\text{\textcircled{00}}$. (Si se selecciona la entrada de caracteres numéricos, es decir, "_" se enciende en la posición NUMBER del visualizador, pulse la tecla $\text{\textcircled{NUMBER}}$ para que se apague.) Prepare la tabla de códigos de caracteres alfanuméricos de la página siguiente. De este modo, podrá programar caracteres distintos a los que hay en las teclas.

- Pueden obtenerse caracteres de tamaño doble introduciendo el código de caracteres 253.
- DEBEN introducirse los tres dígitos del código del carácter (aunque empiece con cero).

Ejemplo

Para programar la palabra "SHARP" en caracteres de tamaño doble.

253 $\text{\textcircled{00}}$ 083 $\text{\textcircled{00}}$ 072 $\text{\textcircled{00}}$ 065 $\text{\textcircled{00}}$ 082 $\text{\textcircled{00}}$ 080 $\text{\textcircled{00}}$
S H A R P


Cuando pulsa una tecla del número apropiado (número de código de tarea) y pulsa la tecla $\text{\textcircled{\bullet}}$ para entrada de texto justo después de haber comenzado la programación con la tecla $\text{\textcircled{\#/TM/SBTL}}$, la caja registradora quedará automáticamente preparada para la entrada siguiente.

Nota

Para los códigos de los caracteres alfanuméricos, consulte la tabla de la [página 40](#) de la versión inglesa.

■ Texto de sección

Procedimiento

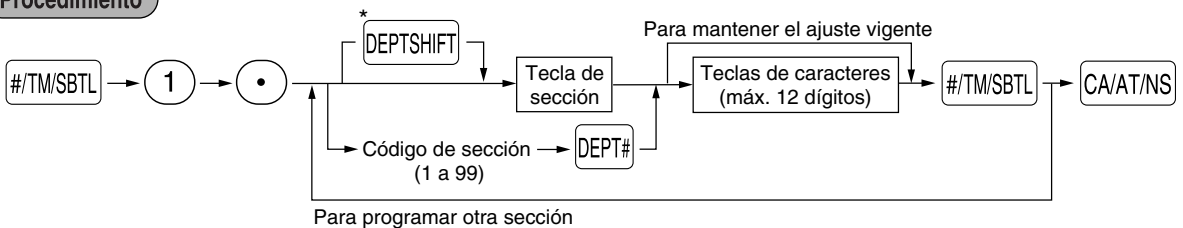

*Para programar las secciones 17 a 32, pulse la tecla de cambio de sección.


Ejemplo de operación de teclas

$\text{\textcircled{\#/TM/SBTL}}$ 1 $\text{\textcircled{\bullet}}$ $\text{\textcircled{1}^{17}}$ FRUTA $\text{\textcircled{\#/TM/SBTL}}$ CA/AT/NS

(Programación de FRUTA para la sección 1)


■ Texto de PLU (etiqueta de artículo)

Procedimiento

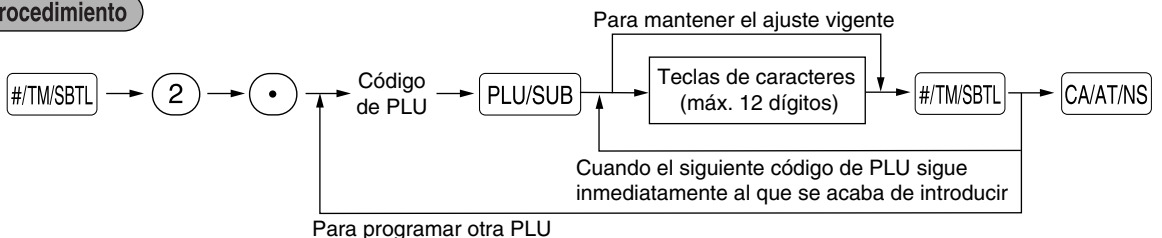

■ Texto de función

Procedimiento

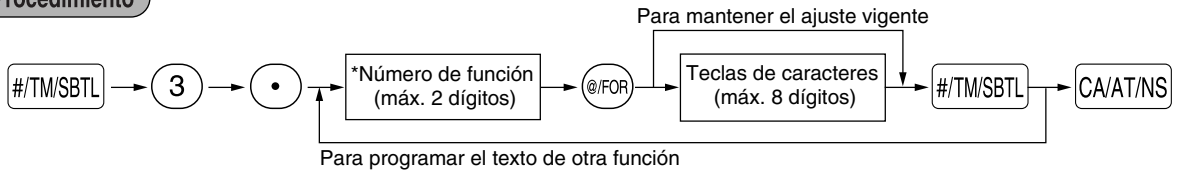

* Número de función: Vea la “Lista de textos de función” mostrada a continuación.


■ Lista de textos de función

| Número de función | Tecla o función | Ajuste inicial | Número de función | Tecla o función | Ajuste inicial |
|-------------------|---|----------------|-------------------|---------------------------------------|----------------|
| 1 | ⊖ | (-) | 36 | Modo de cancelación | ANULA |
| 2 | %1 | %1 | 37 | Cancelación del administrador | ANUL MGR |
| 3 | %2 | %2 | 38 | Cancelación de subtotal | ANUL ST |
| 4 | Total neto de ventas | NETO 1 | 39 | Sin venta | NO VENTA |
| 5 | Subtotal neto de imponible 1 | TASABLE1 | 40 | Recibido a cuenta | RECI. CTA |
| 6 | Total bruto de impuestos 1 | TAX1 GRS | 41 | Pagos | PAGOS |
| 7 | Total de impuestos 1 de registros de devoluciones | TAX1 DEV | 42 | Contador de clientes | TRANSAC. |
| 8 | Total neto de impuestos 1 | TAX1 | 43 | Total de ventas | NETO 3 |
| 9 | Exención de impuestos 1 | TX1 EXNT | 44 | Metálico | CAJA |
| 10 | Subtotal neto de imponible 2 | TASABLE2 | 45 | Cheque | CHEQUE |
| 11 | Total bruto de impuestos 2 | TAX2 GRS | 46 | Cargo bruto | CREDITO |
| 12 | Total de impuestos 2 de registros de devoluciones | TAX2 DEV | 47 | Cargo de devoluciones | CREDITO- |
| 13 | Total neto de impuestos 2 | TAX2 | 48 | Conversión de divisas 1 (preajustada) | DIVISA 1 |
| 14 | Exención de impuestos 2 | TX2 EXNT | 49 | Conversión de divisas 2 (abierta) | DIVISA 2 |
| 15 | Subtotal neto de imponible 3 | TASABLE3 | 50 | Metálico en el cajón | EFEC. CAJ |
| 16 | Total bruto de impuestos 3 | TAX3 GRS | 51 | Metálico+cheque en el cajón | CACH CAJ |
| 17 | Total de impuestos 3 de registros de devoluciones | TAX3 DEV | 52 | Cambio de cheques | CAMB. CH |
| 18 | Total neto de impuestos 3 | TAX3 | * 53 | Exento de IVA | IVA EXNT |
| 19 | Exención de impuestos 3 | TX3 EXNT | 54 | Total de secciones (+) | *DEPT TL |
| 20 | Subtotal neto de imponible 4 | TASABLE4 | 55 | Total de secciones (-) | DEPT(-) |
| 21 | Total bruto de impuestos 4 | TAX4 GRS | 56 | Subtotal | SUBTOTAL |
| 22 | Total de impuestos 4 de registros de devoluciones | TAX4 DEV | 57 | Subtotal de mercancías | ST MERCA |
| 23 | Total neto de impuestos 4 | TAX4 | 58 | Total | *** TOTAL |
| 24 | Exención de impuestos 4 | TX4 EXNT | 59 | Cambio | CAMBIO |
| 25 | Total bruto de impuestos manuales | MTAX GRS | 60 | Artículos | ARTICULO |
| 26 | Total de impuestos manuales de devoluciones | MTAX DEV | 61 | Título de informe de secciones | DEPT |
| 27 | Total neto de impuestos manuales | M-TAX | 62 | Título de informe de PLU | PLU |
| * 28 | Total de exención desde GST | GST EXNT | 63 | Título de informe de transacciones | TRANS. |
| * 29 | Total de PST | PST TTL | 64 | Título de informe de dependientes | EMPLEADO |
| * 30 | Total de GST | GST TTL | 65 | Título de informe horario | HORARIO |
| 31 | Total de impuestos | TTL TAX | 66 | Símbolo de no adición | # |
| 32 | Neto | NETO | 67 | Título de copia de recibo | COPIA |
| 33 | Total de ventas incluyendo el total de impuestos | NETO 2 | 68 | Título de informe EJ | EJ |
| 34 | Devoluciones | DEVOLUC. | 69 | Título de fin de informe EJ | FIN EJ |
| 35 | Cancelación de artículos | ANUL ART | | | |

Los elementos marcados con “ * ” son sólo para Canadá.

■ Nombres de dependiente


Procedimiento

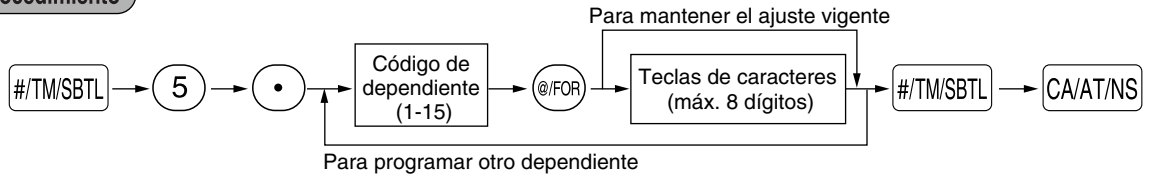

■ Mensajes de membrete

La caja registradora puede imprimir mensajes programados en cada recibo. En el modelo estándar, se imprime el membrete gráfico en el recibo. Si desea imprimir mensajes de membrete, cambie el formato de impresión de mensajes de membrete. (Para los detalles de la programación, vea la [página 27](#).) A continuación se enumeran las opciones:

Procedimiento

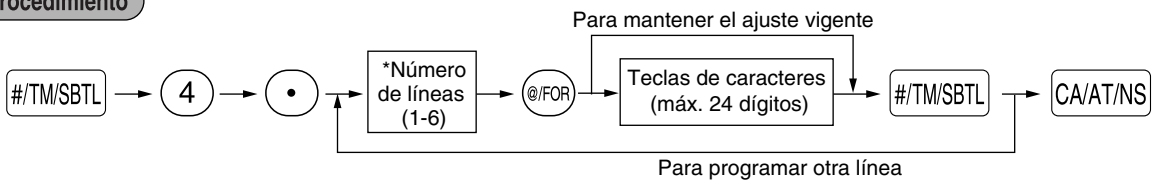

* Tipo de "Mensaje de 3 líneas de encabezamiento": 1 a 3

Tipo de "Mensaje de 3 líneas de pie de recibo": 4 a 6


Tipo de "Mensaje de 6 líneas de encabezamiento": 1 a 6

Tipo de "Mensaje de 3 líneas de encabezamiento y 3 líneas de pie de recibo": 1 a 6 (1 a 3 como encabezamiento, 4 a 6 como pie de recibo)

■ Símbolo de divisas

El símbolo de divisas para la tecla `CONV` se imprime con un importe de cambio de divisas.

Procedimiento

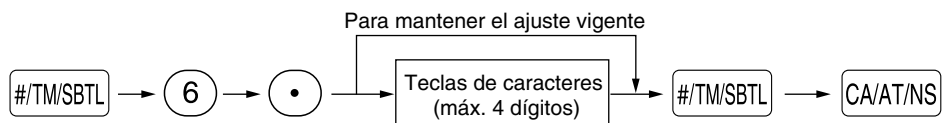


PROGRAMACION AVANZADA

1 Programación de número de caja registradora y de números consecutivos

El número de caja registradora y los números consecutivos se imprimen en el recibo o en el registro diario.


■ Número de caja registradora

 Procedimiento



■ Números consecutivos

 Procedimiento



2 Programación del registro diario electrónico (EJ)

 
La caja registradora incorpora la función de registro diario electrónico (EJ). En el ajuste inicial, pueden almacenarse un máximo de 2.000 líneas en la memoria. Si desea almacenar más datos de registro diario, podrá ampliarla hasta un máximo de 3.000 líneas.

Para leer los datos del registro diario, consulte el apartado de “LECTURA Y REPOSICION DE INFORMES EJ” (página 30).

■ Tipo de memoria de EJ

Precaución Cuando se ejecuta este procedimiento, los datos de EJ se borran y los datos de PLU (datos de programación y datos de ventas) se reponen a los valores de ajuste inicial después de haber borrado todos los datos aunque se seleccione el mismo tipo de la memoria.

Procedimiento




*A: 0 para 2.000 líneas de EJ y 1.200 códigos de PLU (ajuste inicial)

1 para 3.000 líneas de EJ y 200 códigos de PLU

■ Parámetros de función para el EJ

 Procedimiento



| * Elemento: | Selección: | Registro: |
|---|------------------------------------|-----------|
| A Introduzca siempre 0. | (Posición fija) | 0 |
| B Introduzca siempre 0. | (Posición fija) | 0 |
| C Impresión temporal de EJ durante una transacción | Inhabilitar | 0 |
| | Habilitar* | 1 |
| D Impresión de EJ y borrado de datos de EJ cuando se emite el informe Z1 general | No* | 0 |
| | Sí | 1 |
| E Tipo de registros de operación en el modo PGM | Detalles* | 0 |
| | Sólo información de encabezamiento | 1 |
| F Tipo de registros de operación en el modo REG/MGR/VOID | Detalles* | 0 |
| | Total | 1 |
| G Impresión comprimida para datos de EJ | No (tamaño normal) | 0 |
| | Sí (tamaño pequeño)* | 1 |
| H Acción cuando el área de memoria de EJ está llena | Continuar | 0 |
| | Avisar (aviso de casi llena)* | 1 |
| | Bloqueo (con aviso de casi llena) | 2 |

En el ajuste inicial, se marca un asterisco.

Impresión temporal de EJ durante una transacción

- Si selecciona "Sí", podrá imprimir los datos del registro diario de la transacción actual registrada en la memoria de EJ pulsando la tecla **RCPTIPO** durante la transacción. Para poder realizar esta función por completo, la caja registradora está programada para la impresión del recibo y la función de activación/desactivación (ON/OFF) de recibo está desactivada (OFF).

Tipo de registros de operación en el modo PGM

- Se imprime sólo la información del encabezamiento durante la operación de lectura de datos de programación.

Para informes X/Z, se imprime sólo la información del encabezamiento.

Acción cuando el área de memoria de EJ está llena

- Según el ajuste inicial, cuando la memoria para EJ está casi llena, la caja registradora muestra puntos decimales en las posiciones octava y novena del visualizador (mensaje de memoria EJ casi llena), y la caja registradora sigue almacenando nuevos datos mientras va borrando los más antiguos. Cuando se seleccione "0", la caja registradora ya no mostrará el mensaje de memoria EJ casi llena. Cuando se seleccione "2", la caja registradora mostrará el mensaje de memoria EJ casi llena y cuando se llene totalmente la memoria, la caja registradora bloqueará la entrada de ventas/datos con una visualización del mensaje de memoria llena "E-E". Sólo podrá emitir un informe EJ.

 
3 Programación 1 de selección de diversas funciones

La caja registradora ofrece varias funciones detalladas como las que se mencionan a continuación.

- Selección de función para teclas misceláneas
- Formato de impresión
- Formato de impresión de recibos
- Selección de función para impuestos
- Otras

Para esta programación, se aplica el estilo de entrada de código de tarea. Podrá seguir la programación hasta que pulse la tecla **CA/AT/NS** para la programación que se describe a continuación. Para seguir la programación, repita desde la entrada de un código de tarea.

Procedimiento



*1 Introduzca el código de tarea empleando las teclas numéricas especificadas en cada sección de abajo.

*2 Los detalles de la entrada de datos se enumeran en cada tabla de cada sección de abajo.

■ Selección de función para teclas misceláneas

Código de tarea: 5

| * Elemento: | Selección: | Registro: | |
|-------------|--|---|---|
| A | PO en el modo REG | Habilitar la operación PO en el modo REG* | 0 |
| | | Inhabilitarla | 1 |
| B | RA en el modo REG | Habilitar la operación RA en el modo REG* | 0 |
| | | Inhabilitarla | 1 |
| C | Cancelación de subtotal en el modo REG | Habilitar la cancelación de subtotal en el modo REG* | 0 |
| | | Inhabilitarla | 1 |
| D | Cancelación indirecta en el modo REG | Habilitar la cancelación indirecta en el modo REG* | 0 |
| | | Inhabilitarla | 1 |
| E | Cancelación directa en el modo REG | Habilitar la cancelación directa en el modo REG* | 0 |
| | | Inhabilitarla | 1 |
| F | Disponibilidad de la tecla de devoluciones | Habilitar registros de devolución en el modo REG* | 0 |
| | | Inhabilitarlos | 1 |
| G | No venta en el modo REG | Habilitar las operaciones de no venta en el modo REG* | 0 |
| | | Inhabilitarlas | 1 |
| H | Disponibilidad de cantidades fraccionarias | Habilitar el registro de cantidades fraccionarias | 0 |
| | | Inhabilitarlo* | 1 |

■ Formato de impresión

Código de tarea: 6

| * Elemento: | Selección: | Registro: | |
|-------------|--|---|---|
| A | Estilo de impresión | Empleo de la impresora para impresión del registro diario | 0 |
| | | Empleo de la impresora para impresión de recibos* | 1 |
| B | Formato de impresión de recibos | Total | 0 |
| | | Detallado* | 1 |
| C | Impresión de la hora en todos los recibos/registro diario | Habilitar la impresión de la hora* | 0 |
| | | Inhabilitarla | 1 |
| D | Impresión de la fecha en todos los recibos/registro diario | Habilitar la impresión de la fecha* | 0 |
| | | Inhabilitarla | 1 |
| E | Impresión del N.º consecutivo en todos los recibos/registro diario | Habilitar la impresión del N.º consecutivo* | 0 |
| | | Inhabilitarla | 1 |
| F | Introduzca siempre 0. | (Posición fija) | 0 |
| G | Salto de ceros para informe de PLU | Inhabilitar el salto de ceros | 0 |
| | | Habilitar el salto de ceros* | 1 |
| H | Salto de ceros para informes generales, de dependientes y horarios | Inhabilitar el salto de ceros | 0 |
| | | Habilitar el salto de ceros* | 1 |

Estilo de impresión

- Incluso cuando se selecciona la impresión de recibos, el motor de rebobinado del registro diario será accionado en los modos PGM, OP X/Z, X1/Z1 y X2/Z2 para poder bobinar los informes de ventas y de programación.

■ Formato de impresión de recibos

Código de tarea: 7

| * Elemento: | Selección: | Registro: | |
|-------------|---|---|---|
| A | Introduzca siempre 0. | (Posición fija) | 0 |
| B | Introduzca siempre 0. | (Posición fija) | 0 |
| C | Impresión de subtotal con una pulsación de la tecla de subtotal | Inhabilitar la impresión de subtotales* | 0 |
| | | Habilitarla | 1 |
| D | Impresión de mercancías con una pulsación de la tecla de subtotal de mercancías | Inhabilitar la impresión de subtotal de mercancías* | 0 |
| | | Habilitarla | 1 |
| E | Introduzca siempre 0. | (Posición fija) | 0 |
| F | Introduzca siempre 0. | (Posición fija) | 0 |
| G | Introduzca siempre 0. | (Posición fija) | 0 |
| H | Impresión del número de compras | Habilitar la impresión del número de compras* | 0 |
| | | Inhabilitarla | 1 |

■ Selección de función para impuestos

Código de tarea: 15

| * Elemento: | Selección: | Registro: |
|---|--|-----------|
| A a F Introduzca siempre 0. | (Posición fija) | 0 |
| G Disponibilidad de borrado de los impuestos en el modo REG | Habilitar el borrado de impuestos en el modo REG* | 0 |
| | Inhabilitarlo | 1 |
| H Disponibilidad de entrada de impuestos manuales en el modo REG | Habilitar la entrada de impuestos manuales en el modo REG* | 0 |
| | Inhabilitarla | 1 |

■ Otras programaciones

Código de tarea: 61

| * Elemento: | Selección: | Registro: |
|---|---|------------------------------|
| A Introduzca siempre 0. | (Posición fija) | 0 |
| B Introduzca siempre 0. | (Posición fija) | 0 |
| C Disponibilidad de sección y PLU/subsección negativas | Inhabilitar la programación de sección y PLU/subsección negativas | 0 |
| | Habilitarla* | 1 |
| D Trato fraccionario | Redondeo (4 por defecto, 5 por exceso)* | 0 |
| | Aumento a la unidad | 1 |
| | Descartar el trato fraccionario | 2 |
| E Empleo de la tecla (00) | Empleo de la tecla (00) como tecla 00* | 0 |
| | Empleo de la tecla (00) como tecla 000 | 1 |
| F Formato de la hora | Empleo del formato de 12 horas* | 0 |
| | Empleo del formato de 24 horas | 1 |
| G Formato de la fecha | Empleo del formato de mes-día-año* | 0 |
| | Empleo del formato de día-mes-año | 1 |
| | Empleo del formato de año-mes-día | 2 |
| H Posición del punto decimal (desde la derecha) (TAB) | | 0 a 3 (ajuste inicial: 2) |

Código de tarea: 62

| * Elemento: | Selección: | Registro: |
|--|---|-----------|
| A Introduzca siempre 0. | (Posición fija) | 0 |
| B Activación del pitido de error | Por error de bloqueo* | 0 |
| | Por operación incorrecta | 1 |
| C Disponibilidad del sonido de accionamiento de teclas | Habilitar el sonido* | 0 |
| | Inhabilitarlo | 1 |
| D Teclado con memoria intermedia | Sí* | 0 |
| | No | 1 |
| E Disponibilidad de la operación del modo de cancelación | Habilitar la operación del modo de cancelación* | 0 |
| | Inhabilitarla | 1 |
| F Impresión de datos de entradas en el modo de cancelación en los informes Z2 | Habilitar la impresión de datos de entradas en el modo de cancelación en los informes Z2* | 0 |
| | Inhabilitarla | 1 |
| G Impresión de datos de entradas en el modo de cancelación en los informes Z1 | Habilitar la impresión de datos de entradas en el modo de cancelación en los informes Z1* | 0 |
| | Inhabilitarla | 1 |
| H Adición de datos de total de ventas horario en el modo de cancelación | No* | 0 |
| | Sí | 1 |

Código de tarea: 66

| * Elemento: | Selección: | Registro: |
|-------------|--|---|
| A | Impresión de un recibo después de la transacción | Sólo el total 0 |
| | | Detalles* 1 |
| B | Impresión del importe cuando el precio unitario de PLU/subsección es cero | Inhabilitar la impresión* 0 |
| | | Habilitarla 1 |
| C | Impresión del subtotal para conversión de déficit | Habilitar la impresión* 0 |
| | | Inhabilitarla 1 |
| D | Introduzca siempre 0. | (Posición fija) 0 |
| E | Impresión comprimida en el registro diario en los modos PGM, OP X/Z, X1/Z1 y X2/Z2 | Inhabilitar la impresión comprimida (tamaño normal) 0 |
| | | Habilitar la impresión comprimida (tamaño pequeño)* 1 |
| F | Impresión comprimida en el registro diario en los modos REG, MGR y VOID | Inhabilitar la impresión comprimida (tamaño normal) 0 |
| | | Habilitar la impresión comprimida (tamaño pequeño)* 1 |
| G | Impresión del mensaje del membrete en el registro diario | Inhabilitar la impresión del mensaje del membrete en el registro diario* 0 |
| | | Habilitar la impresión del mensaje del membrete en el registro diario 1 |
| H | Impresión de pie de recibo | Impresión de pie de recibo en todos los recibos* 0 |
| | | Impresión de pie de recibo con la tecla de función seleccionada en el momento de la finalización 1 |

Impresión comprimida

- Esta programación sólo es válida cuando se selecciona la impresión del registro diario. No afecta la impresión de E.J. (Para la programación de E.J, consulte la [página 22.](#))

Código de tarea: 70

| * Elemento: | Selección: | Registro: |
|-------------|--|---|
| A | Cómputo de precios divididos | Cantidad* 0 |
| | | Paquete 1 |
| B | Disponibilidad de entrada de precios con multiplicación/división | Habilitar sólo la entrada de multiplicación* 0 |
| | | Habilitar la entrada de multiplicación y la de división de precios 1 |
| C | Introduzca siempre 0. | (Posición fija) 0 |
| D | Introduzca siempre 0. | (Posición fija) 0 |
| E | Impresión de impuestos cuando GST es IVA | Habilitar la impresión de impuestos* 0 |
| | | Inhabilitarla 1 |
| F | Impresión de exención de GST en informes X/Z | Habilitar la impresión de exención de GST* 0 |
| | | Inhabilitarla 1 |
| G y H | Sistema de cálculo de impuestos | Impuestos automáticos* 00 |
| | | Impuestos canadienses (número del tipo de impuestos) 01 a 11 |

 
Sistema de cálculo de impuestos

- Para el sistema de impuestos de EE.UU., seleccione “auto-tax” (impuestos automáticos).

4 Programación 2 de selección de diversas funciones

■ Modo de ahorro de energía

Procedimiento



| * Elemento: | Selección: | Registro: |
|-------------|--|--|
| A | Entrar en el modo de ahorro de energía cuando se visualice la hora | Sí* 0 |
| | | No 1 |
| B a D | Tiempo (mín.) para entrar en el modo de ahorro de energía desde que se efectuó la última operación | 001-254 ó 999 (Ajuste inicial: 030) |

 
Nota

Quando se ajusta 999 para B a D, se inhabilita el establecimiento en el modo de ahorro de energía.

■ Formato de impresión del mensaje del membrete

Podrá seleccionar el número de líneas del mensaje del membrete, y la posición en la que se imprime en el recibo o registro diario.

Procedimiento




*A: Tipo de mensaje del membrete

- 0: Mensaje de 3 líneas de encabezamiento sin membrete gráfico
- 1: Sólo membrete gráfico (ajuste inicial)
- 2: Mensaje de 3 líneas de pie de recibo con membrete gráfico
- 3: Mensaje de 6 líneas de encabezamiento
- 4: Mensaje de 3 líneas de encabezamiento con membrete gráfico
- 5: Mensaje de 3 líneas de encabezamiento y mensaje de 3 líneas de pie de recibo

■ Interfaz RS-232C

(1) Número de terminal RS-232C

 
Procedimiento



Ajuste inicial: 1

(2) Forma de transmisión RS-232C

 
Procedimiento



| * Elemento: | Selección: | Registro: |
|-------------|----------------------------------|-----------|
| A | Forma de la línea de transmisión | |
| | Sistema semidúplex | 1 |
| | Sistema dúplex* | 0 |

(3) Velocidad de transmisión RS-232C

 
Procedimiento



| * Elemento: | Selección: | Registro: |
|-------------|--------------------------------|-----------|
| A | Introduzca siempre 0. | 0 |
| B | Velocidad de transmisión (bps) | |
| | 2400 | 3 |
| | 4800 | 4 |
| | 9600* | 5 |
| | 19200 | 6 |

(4) Código de inicio y código de fin de RS-232C

 Procedimiento




* A-C: Código inicial 000-127 (ajuste inicial: 002)

D-F: Código final 000-127 (ajuste inicial: 013)

(5) Ajuste de tiempo vencido de RS-232C

 
Procedimiento



Ajuste inicial: 007

■ Densidad de impresora térmica

 
Procedimiento



* El ajuste inicial es 50. Para oscurecer la impresión, ajuste un número mayor, y para que sea más clara, ajuste un número menor.

■ Selección del idioma

 Procedimiento



*Idioma: 0: Inglés 2: Francés 3: Español (ajuste inicial: Inglés)


Precaución

Cuando cambie el idioma, los textos como los del nombre de dependiente, mensaje de membrete y los textos de funciones, que usted haya programado, se repondrán a los ajustes iniciales. Por lo tanto, antes de programar nombres de dependiente, mensajes de membrete y textos de funciones, se debe hacer la selección del idioma.

■ Especificación de dependientes de instrucción para el modo de instrucción

Para los detalles sobre la instrucción de dependientes, consulte el "MODO DE INSTRUCCION" en la [página 29](#).


Procedimiento

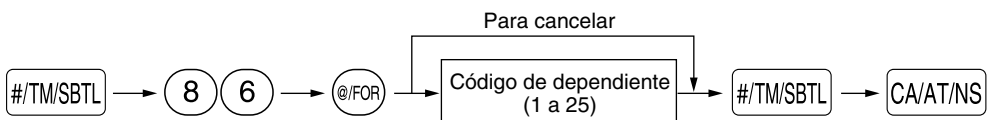

■ Programación de la tecla AUTO — Tecla de secuencia automática —


Si se programan transacciones que se realizan con frecuencia o secuencias de informes para la tecla **AUTO**, puede volver a llamar estas transacciones y/o informes pulsando simplemente la tecla **AUTO** en las operaciones de teclas.

Procedimiento

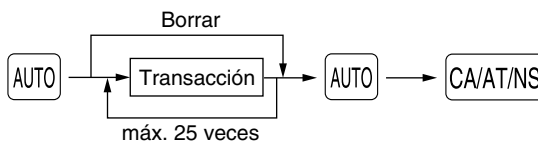

Programación para **AUTO**; registro de un artículo de PLU 2 (precio unitario programado: 1,50) y de un artículo de la sección 6 (precio unitario: 1,00)

Ejemplo de operación de teclas

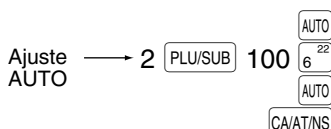

5 Lectura de programas almacenados

La máquina le permitirá leer todos los programas almacenados en el modo PGM.

■ Secuencia de las teclas para la lectura de programas almacenados

| Nombre del informe | Secuencia de teclas |
|--|---|
| Informe de programación 1 | CA/AT/NS |
| Informe de programación 2 | 2 → CA/AT/NS |
| Informe de programación de tecla automática | 1 → CA/AT/NS |
| Informe de programación de densidad de impresora | 3 → CA/AT/NS |
| Informe de programación de PLU | Código inicial de PLU → @/FOR → Código final de PLU → PLU/SUB |

Nota

- Para detener la lectura del informe de programación 1 o del informe de programación de PLU, gire el selector de modo a la posición MGR.
- Cuando se efectúa continuamente la impresión, se interrumpe una vez. Sin embargo, la impresión se reiniciará algunos segundos después.

MODO DE INSTRUCCION

El modo de instrucción se utiliza cuando el operador o el administrador practica las operaciones de la caja registradora.

Cuando se selecciona un dependiente que está en instrucción, la máquina se establece automáticamente en el modo de instrucción. Para especificar un dependiente que deba recibir instrucción, consulte el apartado de “Especificación de dependientes de instrucción para el modo de instrucción” en “PROGRAMACION AVANZADA” en la [página 28](#).

La operación de instrucción sólo es válida en el modo REG, MGR y VOID.

La memoria del dependiente correspondiente sólo se actualiza en el modo de instrucción.

LECTURA (X) Y REPOSICION (Z) DE LOS TOTALES DE VENTAS

- Utilice la función de lectura (X) cuando necesite leer la información de ventas registrada desde la última reposición. Puede obtener esta lectura todas las veces que quiera dado que no afecta a la memoria de la registradora.
- Utilice la función de reposición (Z) cuando necesite borrar la memoria de la registradora. La reposición imprime toda la información de ventas y borra toda la memoria excepto para GT1 a GT3, GT de modo de instrucción, cuenta de reposición y número consecutivo.

1 Resumen de informes de lectura (X) y reposición (Z)

Informes X1 y Z1: Informes de ventas diarias

Informes X2 y Z2: Informes de consolidación periódica (mensual)

Para hacer un informe X o Z, gire el selector de modo a la posición apropiada consultando la columna de “Posición del selector de modo” mostrada en la tabla de la página siguiente, y emplee la siguiente secuencia de teclas correspondiente.

| Elemento | Posición del selector de modo | | | Operación de teclas |
|---|-------------------------------|--------|--------|--|
| | OPX/Z | X1/Z1 | X2/Z2 | |
| Informe rápido: (Sólo visualización) Para borrar la visualización, pulse la tecla CL o gire el selector de modo a otra posición. | X | - | - | Código de sección → DEPT# : Total de ventas de sección <div style="border: 1px solid black; padding: 5px; display: inline-block;"> Para las secciones 1 a 16; Tecla de sección (1¹⁷ a 16³²) Para las secciones 17 a 32; DEPTSHIFT → Tecla de sección (1¹⁷ a 16³²) </div> |
| | | | | Tecla @/FOR : Importe de metálico en el cajón |
| | | | | Tecla CA/AT/NS : Total de ventas |
| Informe de ventas completo | - | X1, Z1 | X2, Z2 | Lectura: CA/AT/NS Reposición: • → CA/AT/NS |
| Informe de dependiente individual | X, Z | - | - | Lectura: CLK# Reposición: • → CLK# (El informe del dependiente actual) |
| Informe de todos los dependientes | - | X1, Z1 | - | Lectura: CLK# Reposición: • → CLK# |
| Informe de ventas de PLU | - | X1, Z1 | - | Lectura: Reposición: |
| Informe horario | - | X1, Z1 | - | Lectura: #/TM/SBTL Reposición: • → #/TM/SBTL |

Nota

- Cuando las cantidades de ventas y los importes de ventas son cero, se pasa por alto la impresión. Si no desea que se pase por alto, cambie la programación. (Consulte el apartado de **"Formato de impresión"** de la sección **"Programación 1 de selección de diversas funciones"**.)
- "X" representa el símbolo de lectura y "Z" representa el símbolo de reposición en los informes.
- Para dejar de leer y reponer el informe de ventas de PLU, gire el selector de modo a la posición MGR. Los datos no se borrarán al efectuar la reposición.
- Cuando se efectúa continuamente la impresión, se interrumpe una vez. Sin embargo, la impresión se reiniciará algunos segundos después.

LECTURA Y REPOSICIÓN DE INFORMES EJ

La caja registradora está provista de una función de registro diario electrónico (EJ). Esta función sirve para registrar los datos del registro diario en una memoria en lugar de hacerlo en el papel de registro diario, y para imprimir los datos como un informe EJ. La caja registradora registra los datos de registro diario en los modos REG, PGM, VOID, X1/Z1 y X2/Z2. En el ajuste inicial, se pueden almacenar un máximo de 2.000 líneas en la memoria, pero usted podrá ampliarla hasta 3.000 líneas. Para los detalles sobre la programación de EJ, consulte la sección de "Programación del registro diario electrónico" (página 22).

■ Impresión de los datos del registro diario en forma de una transacción

Podrá imprimir los datos del registro diario de una transacción actual registrada en la memoria EJ pulsando la tecla **RCPTIPO** durante la transacción.

Nota

Esta función es válida cuando se programa el estilo de impresión para recibos, y la función de activación/desactivación (ON/OFF) de recibo se ajusta a OFF (desactivación).

 
■ Lectura y reposición de los datos del registro diario electrónico (emisión de informe EJ)

Podrá leer los datos del registro diario almacenados en la memoria EJ en el formato del registro diario ejecutando el procedimiento siguiente en el modo X1/Z1 u OP X/Z.


Para leer todos los datos:



Para reponer todos los datos:



Para leer los 10 registros últimos:

 

Nota

- Para dejar de leer o reponer los datos, gire el selector de modo a la posición "MGR". Los datos no se borrarán al efectuar la reposición.
- Cuando se efectúa continuamente la impresión, se interrumpe una vez. Sin embargo, la impresión se reiniciará algunos segundos después.

REGISTROS DE ANULACION

El límite programado para las funciones (tales como importes máximos) puede anularse haciendo un registro de anulación en el modo MGR.

Procedimiento

1. Gire el selector de modo a la posición MGR.
2. Haga el registro de anulación.

CORRECCION DESPUES DE FINALIZAR UNA TRANSACCION (Modo de cancelación)

Cuando necesite cancelar los registros incorrectos que los dependientes no pueden corregir (registros incorrectos que se encuentran después de finalizar una transacción o que no pueden corregirse mediante cancelación directa o indirecta), siga este procedimiento:

1. Gire el selector de modo a la posición VOID empleando la llave del administrador (MA) para establecer la máquina en el modo de cancelación.
2. Repita los registros anotados en el recibo incorrecto. (Todos los datos del recibo incorrecto se suprimirán de la memoria de la registradora y los importes cancelados se añadirán al totalizador de transacción del modo de cancelación.)

MANTENIMIENTO PARA EL OPERADOR

1 En caso de corte de la alimentación

Si se corta la alimentación, la registradora retiene el contenido de su memoria y toda la información sobre las entradas de ventas.

- Cuando el corte de la alimentación ocurre en el estado libre de la registradora o cuando está realizando una entrada, la máquina retorna al funcionamiento normal después de recuperarse la alimentación.
- Cuando el corte de la alimentación ocurre durante un ciclo de impresión, la registradora imprime "=====" y lleva a cabo después el procedimiento de impresión correcto después de recuperarse la alimentación.

2 En el caso de error de impresora

Si se termina el papel de la impresora, se parará la impresora, y aparecerá “PPPPPPPPPP” en el visualizador. No pueden aceptarse los registros de teclas. Instale el rollo de papel nuevo, y luego pulse la tecla (CL). Si el brazo del rodillo impresor no está bloqueado, se parará la impresora y aparecerá “H” en el extremo izquierdo del visualizador. No pueden aceptarse los registros de teclas. Empuje el brazo hacia abajo hasta que se bloquee con seguridad, y entonces pulse la tecla (CL). La impresora imprimirá el símbolo de falla de la alimentación y reanudará la impresión.

3 Precauciones al manejar la impresora

- Evite los lugares polvorientos y húmedos, la luz directa del sol y el polvo metálico. (En esta máquina se emplean un imán permanente y un electroimán.)
- No tire nunca del papel cuando esté bloqueado el brazo del rodillo impresor. Levante primero el brazo, y luego quite el papel.
- No toque nunca la superficie del cabezal de impresión ni el rodillo impresor.

4 Reemplazo de las pilas

Esta caja registradora muestra un símbolo de pilas gastadas (\int) cuando las pilas están casi gastadas, y visualiza un símbolo de que no hay pilas (\perp) cuando las pilas están demasiado gastadas o cuando no se han instalado las pilas.

Cuando se visualice el símbolo de pilas gastadas, reemplace las pilas por otras nuevas lo antes posible. Las pilas existentes se gastarán por completo en unos dos días.

Cuando se visualice el símbolo de que no hay pilas, reemplace inmediatamente las pilas. De lo contrario, si se desenchufa el cable de alimentación de CA o si ocurre un corte de la corriente, todos los ajustes programados se repondrán a los ajustes de fábrica y se borrarán los datos almacenados en la memoria.

Nota Asegúrese de observar las precauciones indicadas en la [página 1](#) sobre la manipulación de las pilas.

Para reemplazar las pilas:


1. Asegúrese de que la caja registradora está enchufada.
2. Gire el selector de modo a la posición REG.
3. Extraiga la cubierta de la impresora.
4. Abra la cubierta del compartimiento de las pilas que se encuentra al lado del soporte del rollo de papel y extraiga las pilas gastadas.
5. Instale tres pilas nuevas del tamaño “AA” en el compartimiento de las pilas. Asegúrese de que las polaridades positiva y negativa de cada pila estén encaradas en la dirección adecuada.
Cuando las pilas estén correctamente instaladas, desaparecerá el símbolo “ \int ” o “ \perp ”.
6. Cierre la cubierta del compartimiento de las pilas.
7. Vuelva a colocar la cubierta de la impresora.

5 Reemplazo del rollo de papel

Utilice siempre rollos de papel especificados por SHARP.

Si usa otros rollos de papel que no sean los especificados, pueden originarse atascos de papel y funcionar mal la registradora.

(Forma de colocar el rollo de papel)

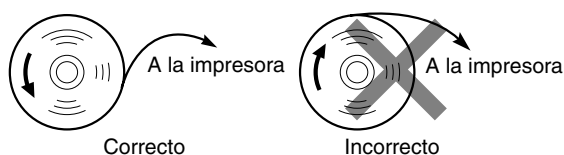

■ Extracción del rollo de papel

Cuando aparezca tinta de color rojo en el rollo de papel, será indicación de que tiene que cambiarlo. Sustituya el rollo de papel por uno nuevo. Si no piensa utilizar la registradora durante mucho tiempo, extraiga el rollo de papel y guárdelo en el lugar apropiado.

Precaución: El cortador de papel está montado en la cubierta. Tenga cuidado de no cortarse.

Cuando no emplee el carrete de toma:

1. Extraiga la cubierta de la impresora.
2. Levante la palanca de liberación del rodillo impresor para desbloquear y abrir el brazo del rodillo impresor.
3. Extraiga el rollo de papel del soporte del rollo de papel.

Nota No tire del papel por la impresora.

Cuando emplee el carrete de toma:

1. Gire el selector de modo a una posición que no sea la posición OFF con el cable de alimentación enchufado.
2. Extraiga la cubierta de la impresora.
3. Pulse la tecla para hacer avanzar el papel de registro diario hasta que la parte impresa salga del paso.
4. Corte el papel y extraiga el carrete de toma.
5. Levante la palanca de liberación del rodillo impresor para desbloquear y abrir el brazo del rodillo impresor.
6. Extraiga el rollo de papel del soporte del rollo de papel.
7. Extraiga el lado exterior del carrete de toma.
8. Extraiga el rollo de registro diario impreso del carrete de toma.

■ Instalación del rollo de papel

Precaución: El cortador de papel está montado en la cubierta de la impresora. Tenga cuidado de no cortarse.



1. Gire el selector de modo a una posición que no sea la posición OFF con el cable de alimentación enchufado.
2. Extraiga la cubierta de la impresora.
3. Levante la palanca de liberación del rodillo impresor para desbloquear y abrir el brazo del rodillo impresor.
4. Coloque correctamente el papel en el soporte del rollo de papel.
5. Haga avanzar el extremo del papel junto con las guías de papel.
6. Mientras mantiene retenido el papel, cierre lentamente el brazo del rodillo impresor, y empuje el brazo hacia abajo hasta oír un sonido seco de confirmación. Asegúrese que empuja con seguridad el centro de la parte del ala del brazo. El papel avanzará automáticamente.

Nota Si el brazo del rodillo impresor no está bloqueado correctamente, no se podrá imprimir con éxito. Si ocurre este problema, abra el brazo, y ciérrelo de nuevo como se ha indicado arriba.

7. Cuando no emplee el carrete de toma (empleo como papel de recibos):

- Corte el papel sobrante empleando el borde de la cubierta interior, y vuelva a colocar la cubierta de la impresora. Pulse la tecla para asegurarse que el papel sale por la cubierta de la impresora y que aparece papel limpio.

Quando emplee el carrete de toma (empleo como papel de registro diario):

- Inserte el extremo del papel en la ranura del carrete. (Pulse la tecla  para hacer avanzar más el papel si es necesario.)
- Bobine el papel dos o tres vueltas en torno al eje del carrete.
- Coloque el carrete en el rodamiento, y pulse la tecla  para tensar el papel.
- Vuelva a colocar la cubierta de la impresora.

Nota

Podrá bobinar el papel de rollo en los modos OP X/Z, X1/Z1 y X2/Z2 aunque haya programado para utilizar la impresora para emisión de recibos. Esto puede ser conveniente para bobinar los informes. En este caso, ajuste el papel de rollo en el carrete de toma.

6 Extracción del papel atascado

Precaución: El cortador de papel está montado en la cubierta. Tenga cuidado de no cortarse. No toque nunca el cabezal de impresión inmediatamente después de imprimir, porque éste estará aún caliente.


1. Extraiga la cubierta de la impresora.
2. Levante la palanca de liberación del rodillo impresor para desbloquear y abrir el brazo del rodillo impresor.
3. Extraiga el papel atascado. Compruebe si quedan restos de papel en la impresora y, si los hubiera, quítelos.
4. Ponga correctamente el rollo de papel siguiendo los pasos mencionados en “Instalación del rollo de papel”.

7 Limpieza de la impresora (cabezal de impresión / sensor / rodillo)

Quando el texto impreso se oscurece o aparece borroso, el polvo del papel puede pegarse en el cabezal de impresión, el sensor y/o el rodillo. Límpielos de la forma siguiente:


Precaución:

- No toque nunca el cabezal de impresión con una herramienta ni nada que sea duro porque podría estropear el cabezal.
- El cortador de papel está montado en la cubierta de la impresora. Tenga cuidado de no cortarse.

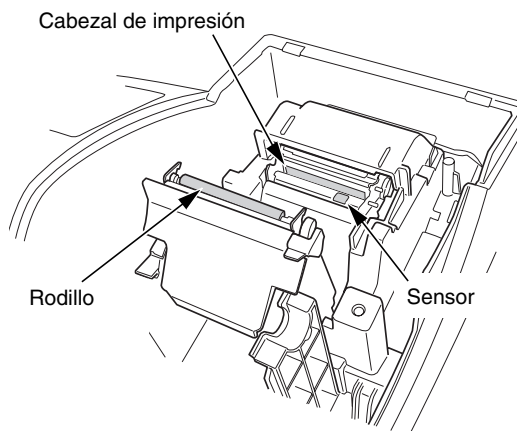


1. Gire el selector de modo a la posición OFF.
2. Extraiga la cubierta de la impresora.
3. Levante la palanca de liberación del rodillo impresor para desbloquear y abrir el brazo del rodillo impresor.
4. Extraiga el rollo de papel consultando la sección “Extracción del rollo de papel”.
5. Limpie el cabezal de impresión con un palillo de algodón o un paño blando humedecido en alcohol etílico o alcohol isopropílico. Limpie el rodillo y el sensor de la misma manera.
6. Ponga correctamente el rollo de papel siguiendo los pasos mencionados en “Instalación del rollo de papel”.

8 Extracción del cajón

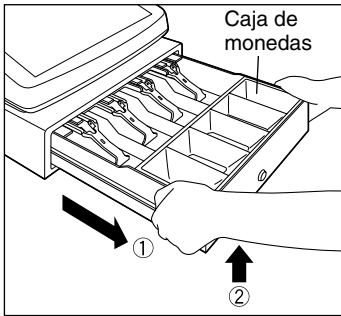

El cajón de la caja registradora es extraíble. Después de terminar la jornada laboral, extraiga el cajón. Para extraer el cajón, tire del mismo completamente hacia delante y extráigalo levantándolo. La caja de monedas de 5 denominaciones también es extraíble.

9 Abertura manual del cajón

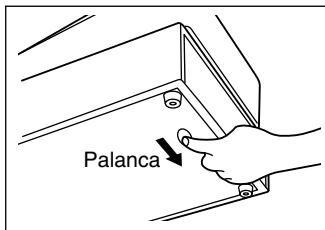

El cajón se abre automáticamente. Sin embargo, cuando haya un fallo o corte de la corriente o la registradora quede fuera de servicio, deslice la palanca situada en la parte inferior de la registradora en la dirección de la flecha. (Vea la figura a la izquierda.)

El cajón no se abrirá, sin embargo, si está cerrado con la llave.

10 Antes de solicitar el servicio de un técnico

Los casos de mal funcionamiento de la columna de la izquierda de la tabla siguiente, indicados bajo el título "Fallo", no son necesariamente averías de la registradora. Se recomienda pues consultar la sección "Comprobación" de la columna de la derecha antes de llamar al servicio técnico.

| Fallo | Comprobación |
|---|--|
| (1) El visualizador muestra los símbolos que no tienen ningún sentido. | <ul style="list-style-type: none"> ¿Se ha inicializado correctamente la máquina como se muestra en "PARA EMPEZAR"? (Tenga presente que la inicialización borra todos los datos y ajustes programados que están almacenados en la memoria.) |
| (2) El visualizador no se ilumina aunque el selector de modo esté colocado en cualquier otra posición que no sea "OFF". | <ul style="list-style-type: none"> ¿Se suministra alimentación en la toma de corriente? ¿Está la clavija del cable de alimentación desenchufada o mal conectada a la toma de corriente? |
| (3) El visualizador se ilumina, pero la registradora no responde a los registros. | <ul style="list-style-type: none"> ¿Está el código del dependiente asignado a la registradora? ¿Está el selector de modo bien colocado en la posición "REG"? |
| (4) No se emiten recibos. | <ul style="list-style-type: none"> ¿Está el rollo de papel bien instalado? ¿Hay algún atasco de papel? ¿Está la función de recibos en el estado "OFF"? ¿Está la palanca de liberación del rodillo impresor bloqueado con seguridad? |
| (5) No sale el papel del registro diario. | <ul style="list-style-type: none"> ¿Está el carrete de toma bien instalado en el rodamiento? ¿Hay algún atasco de papel? ¿Se ha seleccionado la impresión del registro diario en la programación del estilo de impresión? (Si se ha seleccionado la impresión de recibos, el papel no se bobinará en torno al carrete de toma.) |
| (6) La impresión no es normal. | <ul style="list-style-type: none"> ¿Está la palanca de liberación del rodillo impresor bloqueado con seguridad? ¿Está el rollo de papel correctamente instalado? ¿Están limpios el cabezal de impresión/sensor/rodillo? |


■ Tabla de códigos de error

Cuando se visualicen los siguientes códigos de error, pulse la tecla (CL) y tome la acción apropiada de acuerdo con la tabla siguiente.

| Código de error: | Estado de error | Acción |
|------------------|--|--|
| E01 | Error de registro | Haga el registro con las teclas correctas. |
| E02 | Error de operación incorrecta | Haga el registro con las teclas correctas. |
| E03 | Se ha introducido un código no definido. | Introduzca un código correcto. |
| E07 | La memoria está llena (en la programación de la tecla AUTO). | Programe la tecla AUTO con 25 pasos. |
| E11 | Pulsación obligatoria de la tecla #TMSBTL para finalización directa | Pulse la tecla #TMSBTL y prosiga la operación. |
| E12 | Importe recibido obligatorio | Efectúe una operación de importe recibido. |
| E32 | Falta el registro de un código de dependiente. | Efectúe un registro de código de dependiente. |
| E34 | Error de límite de rebose | Haga el registro dentro del límite de registro. |
| E35 | La entrada de precio abierto está inhibida. | Haga un registro de precio preajustado. |
| E36 | La entrada de precio preajustado está inhibida. | Haga un registro de precio abierto. |
| E37 | La finalización directa está inhibida. | Haga una operación de importe recibido. |
| E67 | No se permite la cancelación del subtotal. | Finalice la transacción y corrija las entradas erróneas en el modo de cancelación. |

Emplee estas etiquetas con las teclas de sección. Escriba los nombres de sección en las etiquetas y adhiéralas a las teclas de sección sacando primero las cubiertas transparentes de las teclas. (Haga una copia de esta página.)

Ejemplo:

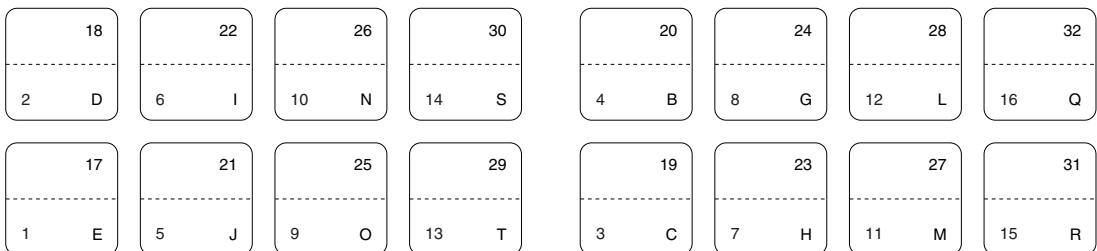

LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof at no charge to the purchaser for parts or labor for the time period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced, which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable, or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion or incidental or consequential damages, so the above exclusion may not apply to you.

THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

| | |
|--|--|
| <u>Your Product:</u> | XE series Electronic Cash Register |
| <u>Warranty Period of this Product:</u> | One (1) year for parts and ninety (90) days parts and labor from the date of purchase. |
| <u>Additional items excluded from warranty coverage:</u> | Any consumable items such as paper supplied with the Product. |
| <u>Where to obtain service:</u> | At a Sharp Authorized Servicer located in the United States. To find the location of the nearest Sharp Authorized Servicer, call toll free at 1-800-BE-SHARP. |
| <u>What to do to obtain service:</u> | Ship (prepaid) or carry your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully. |

TO OBTAIN SUPPLIES, ACCESSORIES OR PRODUCT INFORMATION, CALL 1-800-BE-SHARP.

SHARP®

SHARP ELECTRONICS CORPORATION

Sharp Plaza, Mahwah, New Jersey 07430-2135

1-800-BE-SHARP

<http://www.sharp-usa.com>

SHARP CORPORATION