

FULL ONE-YEAR WARRANTY

What is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or replacement of batteries.

What The Sharper Image Will Do

The Sharper Image will either repair any defects in materials or workmanship, or exchange the defective unit with a reconditioned unit. In the event repair or exchange is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If You Have Questions

 
Please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

c legal rights, and you may have other legal rights that vary from state to state.

Copyright 2001, 2002 Sharper Image Corporation

Printed in China

(MD)

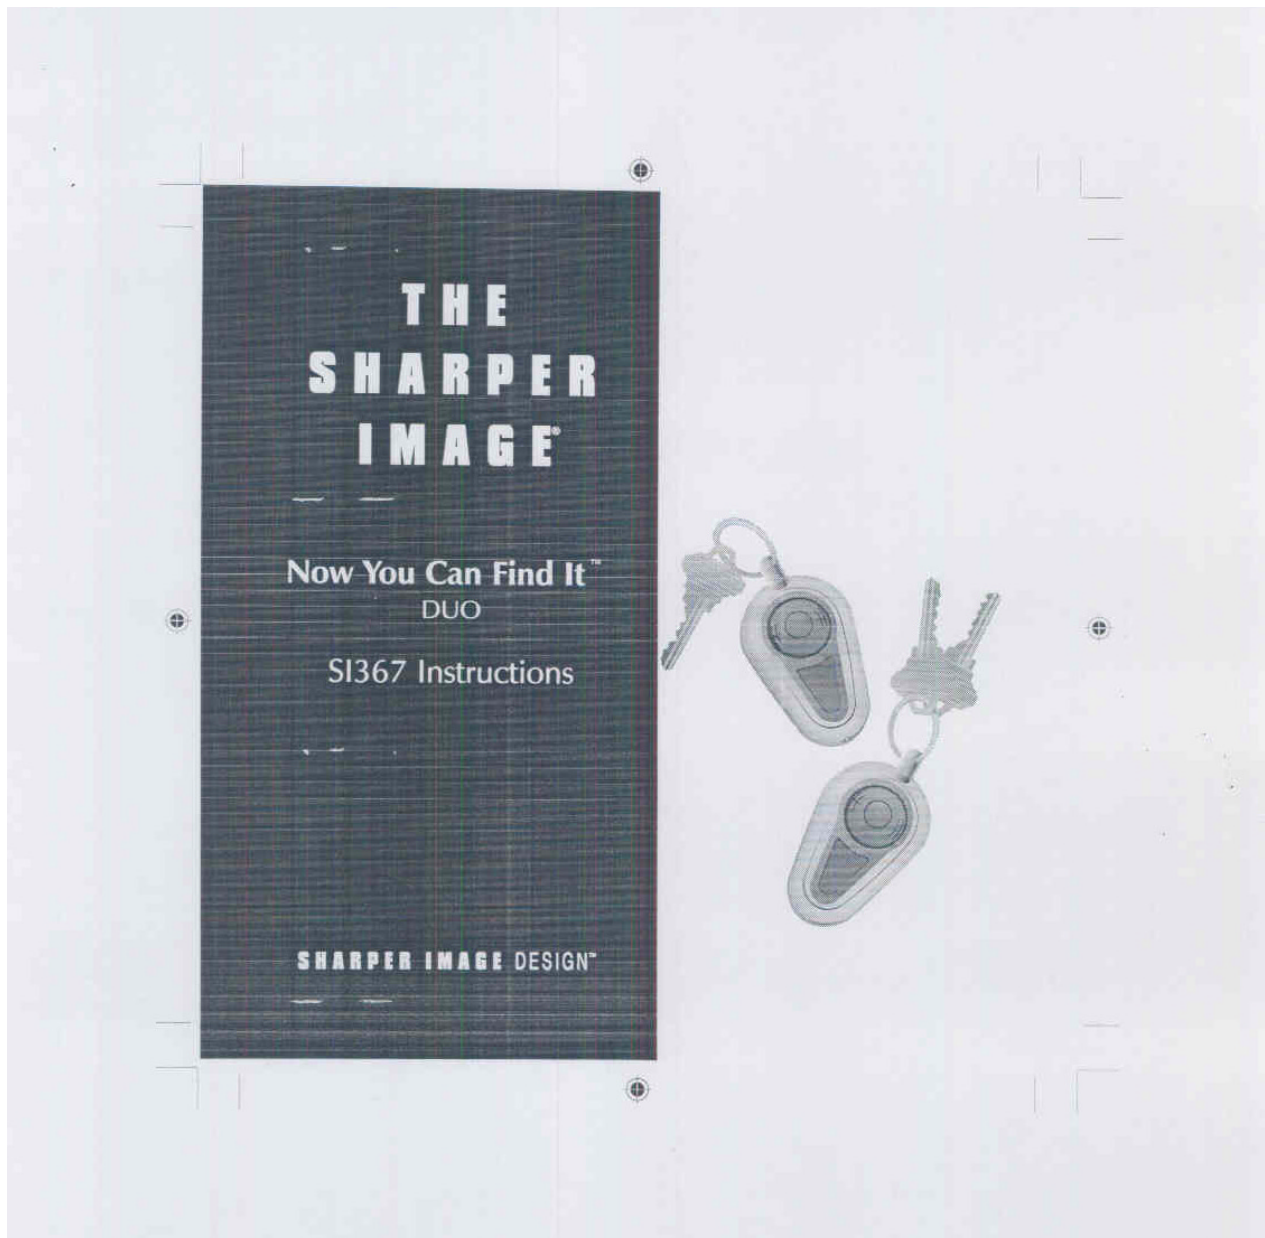

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image Design product.
We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction
with this product's quality and performance. We offer generous
return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun
of discovering innovative products that make life easier and more
enjoyable. We've been in business a long time because we are
an exciting place to shop and - just as importantly - we strive to
deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer

 
Founder, Chairman and Chief Executive Officer

www.sharperimage.com

Shop our complete Internet catalog.

Description


Either of the two companion locators in the Now You Can Find It™ Duo set finds the other. If your keys are in hand but your spouse can't find theirs, press your search button and it will signal theirs to beep and flash.

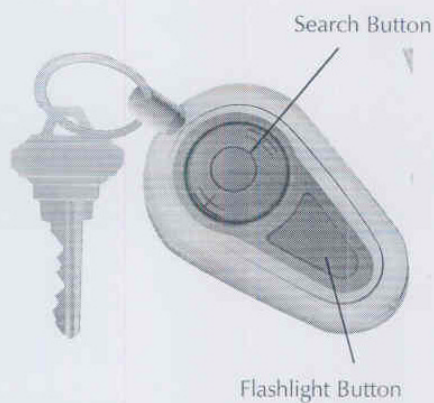

Batteries

The battery compartment slides from the side of the main housing. Use a fingernail or the tip of a small flat tool to lift and pry the edge of the compartment out.

 
Replace batteries anytime the locating function begins to weaken. One CR2032 lithium battery is required for each unit.

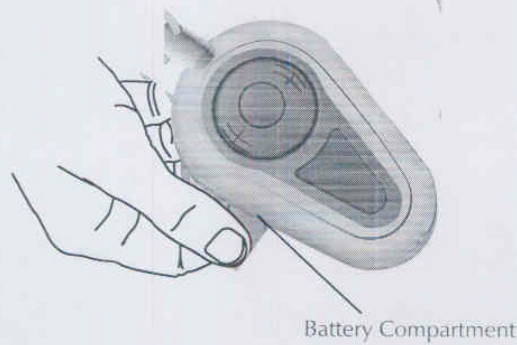

Operation

Search and Alert Feature

 
Press the round SEARCH button to send out the search signal. If the other device is within 30-40 feet, its alarm will trigger and it will begin to beep and flash.

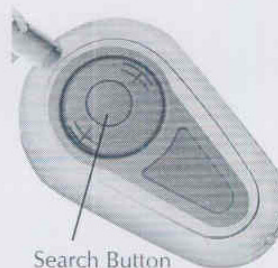


Search Button

LED Flashlight

 Press and hold the arrowhead-shaped FLASHLIGHT button to turn the LED flashlight on.

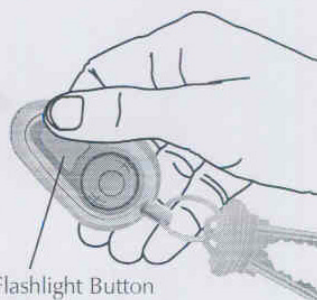

Flashlight Button

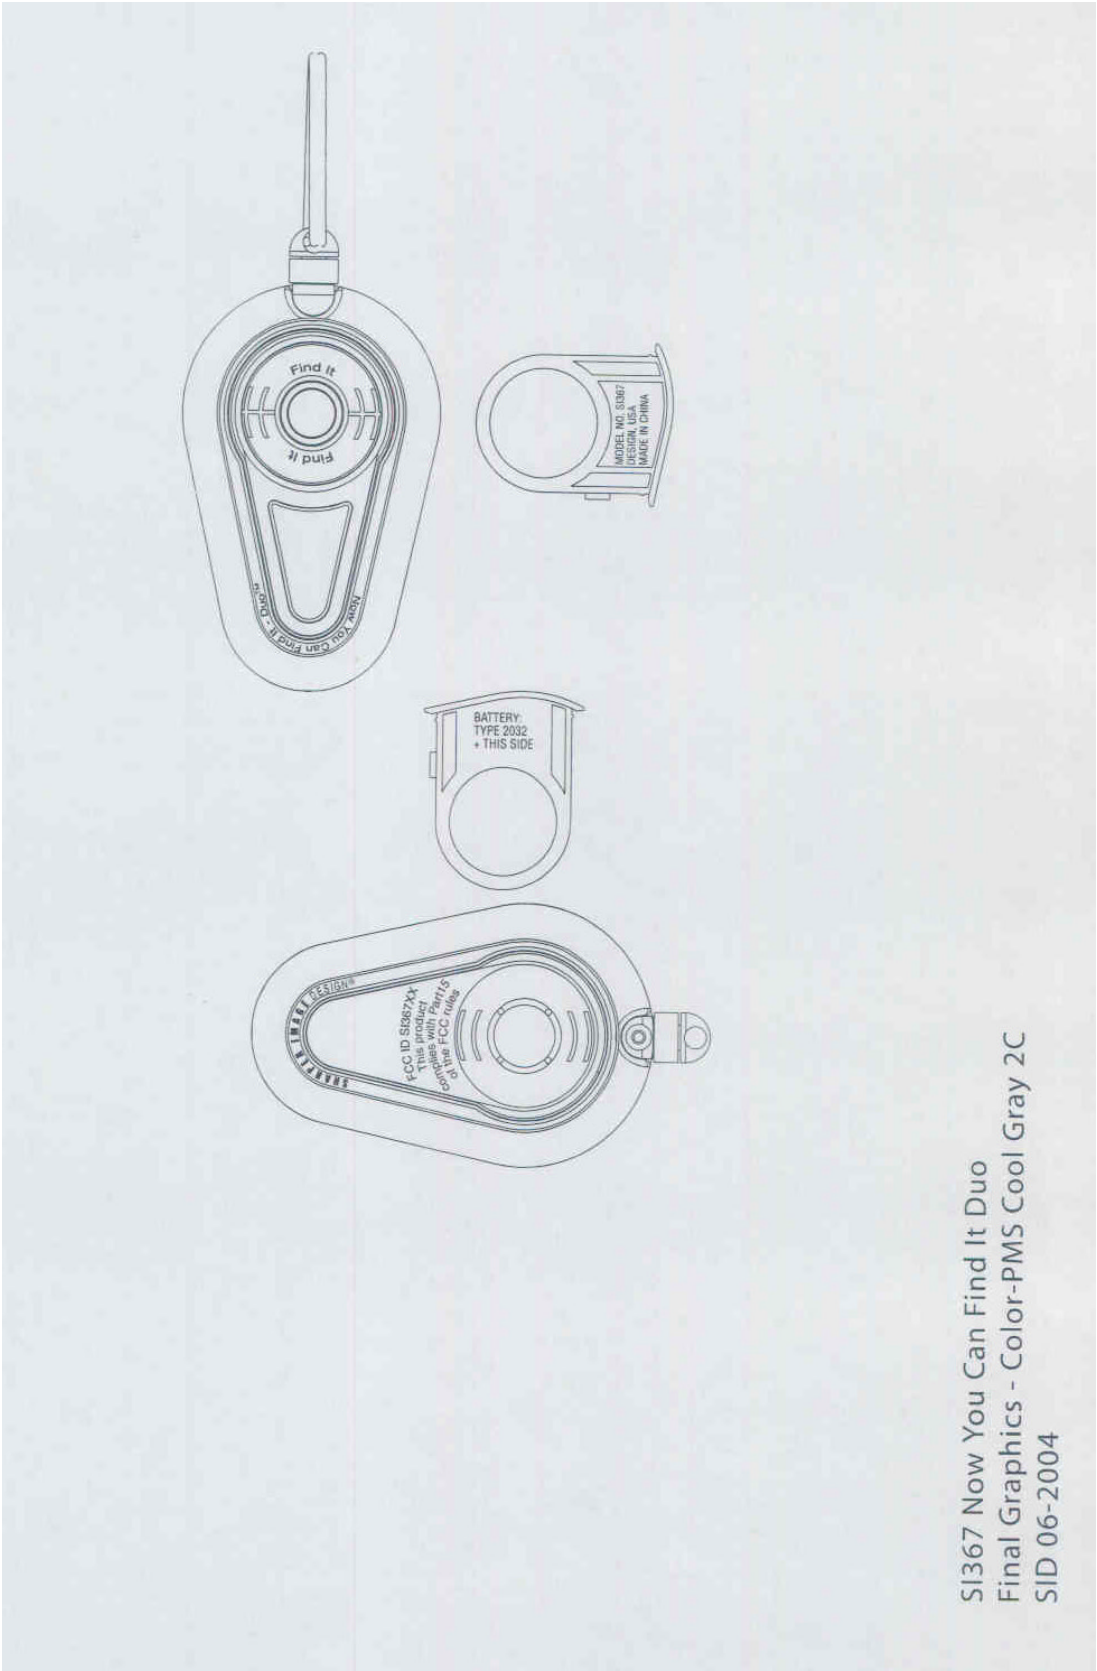 

SI367 Now You Can Find It Duo
Final Graphics - Color-PMS Cool Gray 2C
SID 06-2004

Statement of FCC compliance

Model : SI367

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for assistance.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.