

 
 
 
 
THE SHARPER IMAGE®

Wireless Stereo Speaker System

SI494 Instructions

INCLUDES IMPORTANT SAFETY INFORMATION
READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE
SAVE THESE INSTRUCTIONS

SHARPER IMAGE DESIGN®



Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image Design product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life easier and more enjoyable. We've been in business a long time because we are an exciting place to shop and - just as importantly - we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer
Founder, Chairman and Chief Executive Officer

www.sharperimage.com

Shop our complete Internet catalog.

Important Safety Instructions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

CAUTION: TO AVOID THE HAZARDS OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR OTHER MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

READ AND SAVE THESE INSTRUCTIONS



Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched at plugs, convenience receptacles and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

READ AND SAVE THESE INSTRUCTIONS





Important Safety Instructions

- Unplug this apparatus during lightning storms or when unused for a long period of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.



READ AND SAVE THESE INSTRUCTIONS





Connecting the Transmitter

Connect the transmitter AC adapter to the transmitter DC power input jack and plug the adapter into any 110-120V wall outlet.



Connecting to RCA stereo jacks

Use the RCA cables to connect the AUDIO OUT jacks of your stereo, TV or other audio source to the input jacks of the wireless transmitter. Slide the power switch to "RCA."

Using Zipconnect to hook up through a headphone jack.

Pull to extend the Zipconnect cable the desired length and connect the plug to the headphone jack of your audio device or MP3 player. Slide the power switch to "Zipconnect."

WARNING: DO NOT connect the RCA plugs to a speaker output on the audio source. Using the speaker output of an audio source to connect the transmitter, could permanently damage the transmitter. It is designed to work with RCA-type line/variable outputs only.





Connecting the Speakers and Subwoofer

Plug the speakers into the speaker jacks at the rear of the subwoofer unit.

Plug the subwoofer power cord into a standard wall outlet.

Press POWER to switch the subwoofer on. The blue power LED will light to indicate that the subwoofer has power.


Tuning the subwoofer (first time)

Turn the audio source on and make sure that it is playing.

Turn the transmitter on.

Turn the subwoofer on.

Press and hold the AUTO TUNE button until the audio source can be clearly heard and the reception is clear.



Volume Control Options

Use the volume knob on the transmitter to control overall volume and on the subwoofer to control the bass intensity.

It is possible to lower the transmitter volume and use only the controls for the audio device connected to the speaker system. This is particularly useful for devices with remote controls.

Additional Information

If there is no sound coming from the system:

Confirm that the transmitter, speakers and woofer are switched on. (The power indicator light should be lit.)

Check that the audio source (stereo, TV, etc.) is turned on and providing sound as it normally should.

Check that the audio source, transmitter, woofer and speaker volume are turned up.


Confirm that the RCA plugs are correctly connected to the audio out jacks on the source.




Speaker Mounts

Mounting brackets are included for use with the speakers. Unscrew and remove the table stand brackets from the back of the speakers.

Secure the wall brackets to the wall. (It is important that the bracket screws be affixed to a stud in the wall or that proper mounting hardware is purchased and used to secure the brackets and speakers.)



Cover the screws (if desired) using the plastic covers provided in the package.




 

Attach the speakers to the wall mount.

The subwoofer cannot be wall mounted and should be placed on the floor or very low in the same room as the speakers.

Note: Always unplug the speaker power adapter from the wall outlet while mounting the speakers.

Changing the Speaker Angle

Press and hold the silver button on the wall mount to allow the speaker angle to be changed to any of the seven speaker position options. Release the button to lock the position.



Statement of FCC compliance
Model: SI494

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Full One-Year Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for one year from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the instruction manual, or damage caused by failure to properly clean and maintain this product.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. Or, The Sharper Image will have the option to either replace this product with a fully warranted, reconditioned unit, or refund the purchase price of the product.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If You Have Questions

Please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2004
Sharper Image Corporation

Printed in China