 


**THE
SHARPER
IMAGE™**

RoboCub™

SI685 Instructions

SHARPER IMAGE DESIGN™

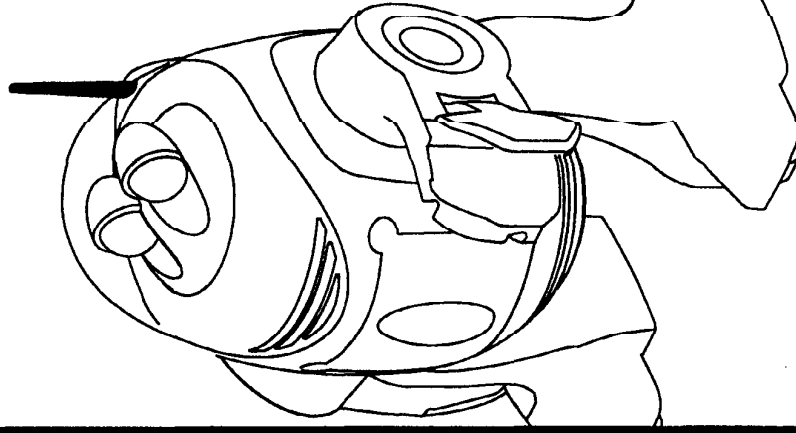

FOR REFERENCE ONLY
只作參考

Dear Customer,

Thank you for your purchase of a Sharper Image Design™ product. You have received a quality product, backed with a 90 day warranty. Your satisfaction as a Sharper Image customer means everything to us. We look forward to serving you now and in the future.

Many other affordable, fun, and useful products are available through The Sharper Image® catalog, sharperimage.com, and The Sharper Image® retail stores. To receive a copy of our catalog or for the address of the store nearest you, please call our toll-free number 1-800-344-4444.

Enjoy your purchase!

Richard
Richard Thalheimer
Founder and Chairman

www.sharperimage.com

Shop our complete Internet catalog.

Online ordering is protected by

Secure Sockets Layer technology.

Important Safety Information

WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

Children should not be allowed to install or exchange batteries without adult supervision.

IMPORTANT:

- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals (battery contacts) are not to be short circuited.
- Non-rechargeable batteries are not to be recharged.

BATTERY SAFETY

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

Batteries may leak or explode if recharged, inserted improperly, inserted in the wrong direction, disposed of in fire, or mixed with different battery types.

Battery Information

 
Remove the security screw from RoboCub's battery compartment (located at the back of the unit). Press up on the tab and remove the compartment cover.

Install six AA alkaline batteries as indicated inside the compartment.

Replace the cover and secure the screw.

Remove the security screw from the controller battery compartment and slide to remove the cover.


Install one 9V alkaline battery. Replace cover and security screw.

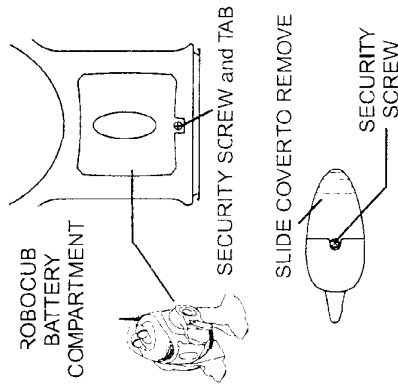

If RoboCub does not respond properly:
Press the MAIN POWER button to confirm that the battery save feature has not turned the unit off.

If the problem continues
Remove all batteries and wait 10 seconds before reinserting.

 
Controls

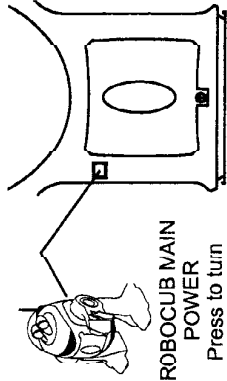

**ROBOCUB MAIN
POWER**
Press to turn
ON or OFF

Unit automatically
turns off 2 minutes
after receiving last
command

 Press to move
FORWARD

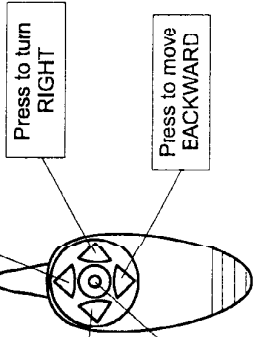

Press to turn
LEFT

Press to turn
RIGHT

Press to
make
RoboCub
SPEAK

Press to move
BACKWARD

Statement of FCC compliance

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: MNI-SI685
MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

and

(2) This device must accept any interference received, including interference that may cause undesired operation.

WARRANTY

We warrant to the original user that this product shall be free from all defects in material or workmanship for 90 days from the date of purchase. This warranty does not apply to any product that has been subject to abuse, misuse, negligence or accident, nor does it apply to any batteries that may be supplied with the product. Defects caused by tampering, unauthorized alterations or repairs are not covered by this warranty. We may elect to replace the entire unit, at no extra cost to you, with the same model or a similar model rather than repair it.

If a defect covered by this warranty should occur, promptly return the product along with proof of purchase, a check or money order for \$5.00 to cover shipping and handling, and a brief explanation of the problem to:

The Sharper Image
Attn: Return Department
2112 East 145th Street
Little Rock, AR 72206

We have found through experience that many problems thought to be product defects are often caused by weak batteries. To avoid any inconvenience, we encourage you to try replacement batteries before you return the product. Please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2001
Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
IM72

Printed in China