

# SHARPER IMAGE®

## Motorized Tie Rack

Item No: 201858



### USER'S GUIDE

Congratulations on your purchase of the world's favorite tie rack — the **Sharper Image Motorized Tie Rack**! You now have a modern and efficient way to store, organize and select your favorite ties and accessories. Please take a moment to read these instructions and store them for future reference.

### PRODUCT FEATURES

- Easy to use
- Holds up to 45 ties + 4 belts
- Fast installation: clamps on to any standard closet rod
- Tightens with included Tension Screw
- 3 bright LEDs illuminate your ties
- Suitable for closet poles 1" to 1.33" in diameter (maximum diameter 1.33")
- No outlet needed: runs on 4 C batteries (not included)
- Automatic shutoff to conserve batteries

*Note: The Motorized Tie Rack is recommended for closets at least 14" deep (requires a minimum of 5.5" clearance space, from the rear edge of the closet rod to the back of the closet).*

### SET-UP GUIDE

#### Attaching Accessory Hooks

1. Insert the two Accessory Hooks (included) on the bottom of the unit as shown.

#### Installing the Batteries

1. Remove the Battery Box Cover by sliding it rearward.
2. Insert 4 C batteries (not included), making sure the polarity (+ or -) matches the image inside.
3. Replace the Battery Box Cover.

#### Mounting on a Closet Rod

1. Slide out the black Cover Plate as shown in the diagram.
2. Align the unit under your closet rod.
3. Replace the black Cover Plate.
4. Tighten the Tension Screw on the bottom of the unit until the device is level and secure on your closet rod.

#### Product Operation

1. Press the left button to rotate clockwise and turn on the LED.
2. Press the right button to rotate counter-clockwise and turn on the LED.
3. Press the stopper button to halt the rotation.

*Note: The carousel and LED will turn off automatically in approximately 20 seconds to conserve battery power.*

#### Battery Safety Warnings

1. Do not mix old and new batteries.
2. Replace the entire set of batteries at the same time.
3. Do not mix alkaline batteries and disposable batteries.
4. Do not dispose of batteries in a fire. This may cause them to leak or explode.
5. Never attempt to disassemble or open batteries, as this can lead to electrolyte burns.
6. Keep all batteries out of the reach of children.

### CUSTOMER SERVICE

If you need any assistance with your **Sharper Image Motorized Tie Rack**, please call 1 (877) 714-7444, and select **Option 3**.

