


# SHARPER IMAGE®

## 36" TOWER FAN WITH REMOTE



**1 YEAR LIMITED WARRANTY**  
Printed in China

### FEATURES

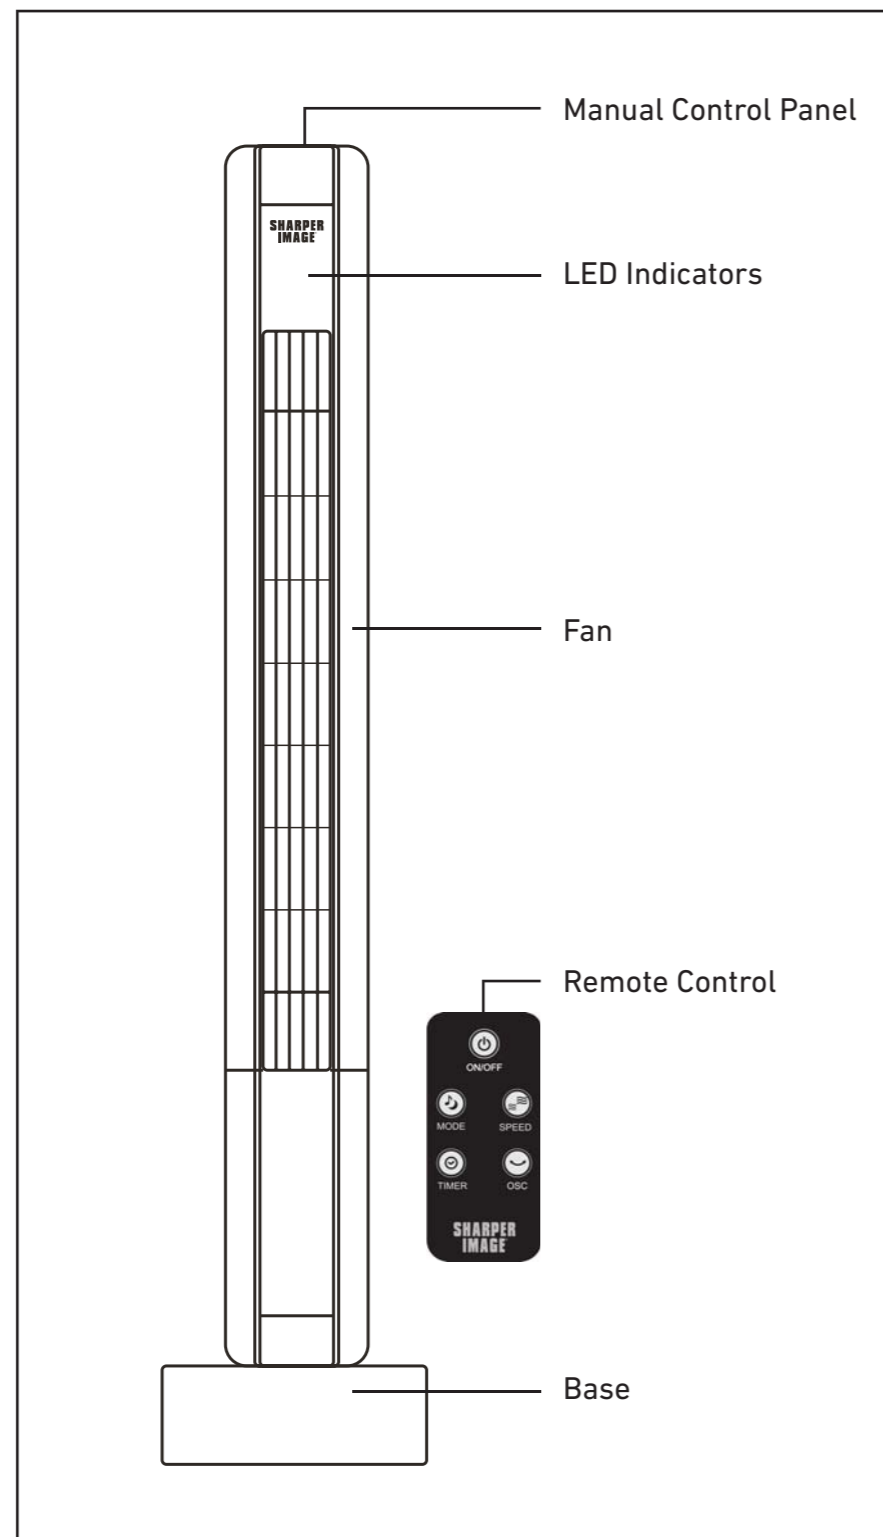

### OPERATION INSTRUCTIONS

#### Control Panel

Remove the cable tie and unravel the power cord. Place the fan on a flat surface and plug the power cable into an outlet.

The fan can be operated by using the manual control panel located at the top of the fan (Fig. 1) or by using the remote control.



Fig. 1

#### POWER

To turn the tower fan on, press the ON/OFF button.

#### SPEED

Press the SPEED button to scroll through fan speeds. The fan will start at speed 1 then increase to 3 and cycle through again.

#### TIMER

Press the TIMER button to set the fan timer. You can set the timing in two ways. The first way, press the TIMER button quickly to increase the timer setting in half hour increments from 0.5 to 8 hours. Press and HOLD the TIMER button for 3 seconds to change the time increments to 1 hour increments. When you reach the desired timer setting, wait the set time to appear on the LED display. The fan will automatically turn off after the timer is complete.

#### OSCILLATE

To start/stop oscillation, press the OSC button.

#### MODE

To set fan modes, press the MODE button to switch between the three preset fan modes of Normal, Nature or Sleep.

When the fan is first turned on, it will automatically use Normal mode.

- Normal - constant fan speed
- Nature - simulates the flow of a natural breeze
- Sleep - intersperses natural breezes with longer periods of stillness

Once the unit is plugged into a power source and switched on, the LED display panel will automatically display the room temperature, and if the timer is set, will display the set timer.

Unplug the fan from the electrical outlet when it is not in use or will be left unattended. Do not leave this product unattended while it is in use.

#### Remote Control

Remote control functions are identical to the functions on the fan's manual control panel.

One CR2032 button cell battery is included in the remote control. For first time use, remove the insulating safety strip from the battery compartment.

#### CAUTION

Different types of batteries or new and used batteries are not to be mixed. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product will be stored for an extended period of time.

#### CLEANING

1. Be sure to unplug the power cord from the outlet before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Do not submerge the unit to clean it. Thoroughly remove soap film with clean water.
3. Be sure not to get water or other liquid inside the fan motor.
4. Dry all parts completely before reassembling and reconnecting to a power source.

### SAFETY INSTRUCTIONS

#### ⚠ WARNING

READ ALL INSTRUCTIONS BEFORE USING THIS FAN.  
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- To use the fan, follow the descriptions in this manual.
- Never carry out any maintenance other than described in this manual.
- The fan is suitable for dry location only. Do not use it in outdoor or in wet area.
- The fan must be assembled securely before operating.
- Turn off all controls before unplugging.
- Unplug from outlet when not in use for extended period.
- Clean the outer part of the fan regularly with dry cloth.
- Do not use any cleaning agents, lubricants or any other chemicals for cleaning.
- Do not carry the base part of the fan. Always carry the square head part with both hands.
- Do not place or use the fan near the furnaces, fireplace or other sources of heat.
- Do not route cord under furniture or appliances.
- Arrange cord away from traffic area and where it will not be tripped over.
- Do use common sense when using this fan and/or any electrical appliances.
- Do not cover the cord with throw rugs or similar coverings.
- Do not put anything into air inlet.
- Do not use the fan or handle the plug with wet hands.
- Do not unplug by pulling on cord.
- Do not use other adapters without authorization.
- Do not hang or mount fan on a wall or ceiling.
- Do not dismantle or modify the fan.
- This fan is not intended for use by young children or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the appliance to ensure that they can use the appliance safely.
- Never insert fingers, pencils or any other object through the grill when the fan is running.
- Disconnect fan when moving from one location to another.
- Disconnect fan when removing grills for cleaning.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window. Rain may create an electrical hazard.

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. DO NOT force the plug into the outlet.
2. To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control devices.
3. Do not leave the fan running unattended.

# SHARPER IMAGE®

ONE YEAR LIMITED WARRANTY

C.HUSA Licensed Manufacturer sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. C.HUSA Licensed Manufacturer warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your C.HUSA Licensed Manufacturer product, first email or call the return center to secure a Return Material Authorization number (RMA). Returns will not be accepted without RMA. When authorized to proceed with the return, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

Comfort Home USA Return Center  
195 Raritan Center Parkway  
Edison, NJ 08837  
Email: support@comforhomeusa.com  
Phone: 1-877-698-5245

#### Mail to:

Comfort Home USA  
Return Center  
195 Raritan Center Pkwy  
Edison, NJ 08837

email:  
support@comforhomeusa.com

phone:  
1-877-698-5245

No COD's will be accepted.

C.HUSA Licensed Manufacturer does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchase of the product from a Retailer or remote purchasers, to obligate C.HUSA Licensed Manufacturer in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of C.HUSA Licensed Manufacturer.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. C.HUSA Licensed Manufacturer SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, C.HUSA Licensed Manufacturer RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express written consent of C.HUSA Licensed Manufacturer.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: [www.sipproducts.com](http://www.sipproducts.com)

SHARPER IMAGE® name and logo are registered trademarks.  
Manufactured and marketed by Comfort Home USA under license.  
© Sharper Image All rights reserved.