

# 100g铜版纸, 正反面印刷

 
**SHARPER  
IMAGE®**

**BLADELESS TOWER  
FAN AND HEATER**



**1 YEAR LIMITED WARRANTY**  
Printed in China

## FEATURES

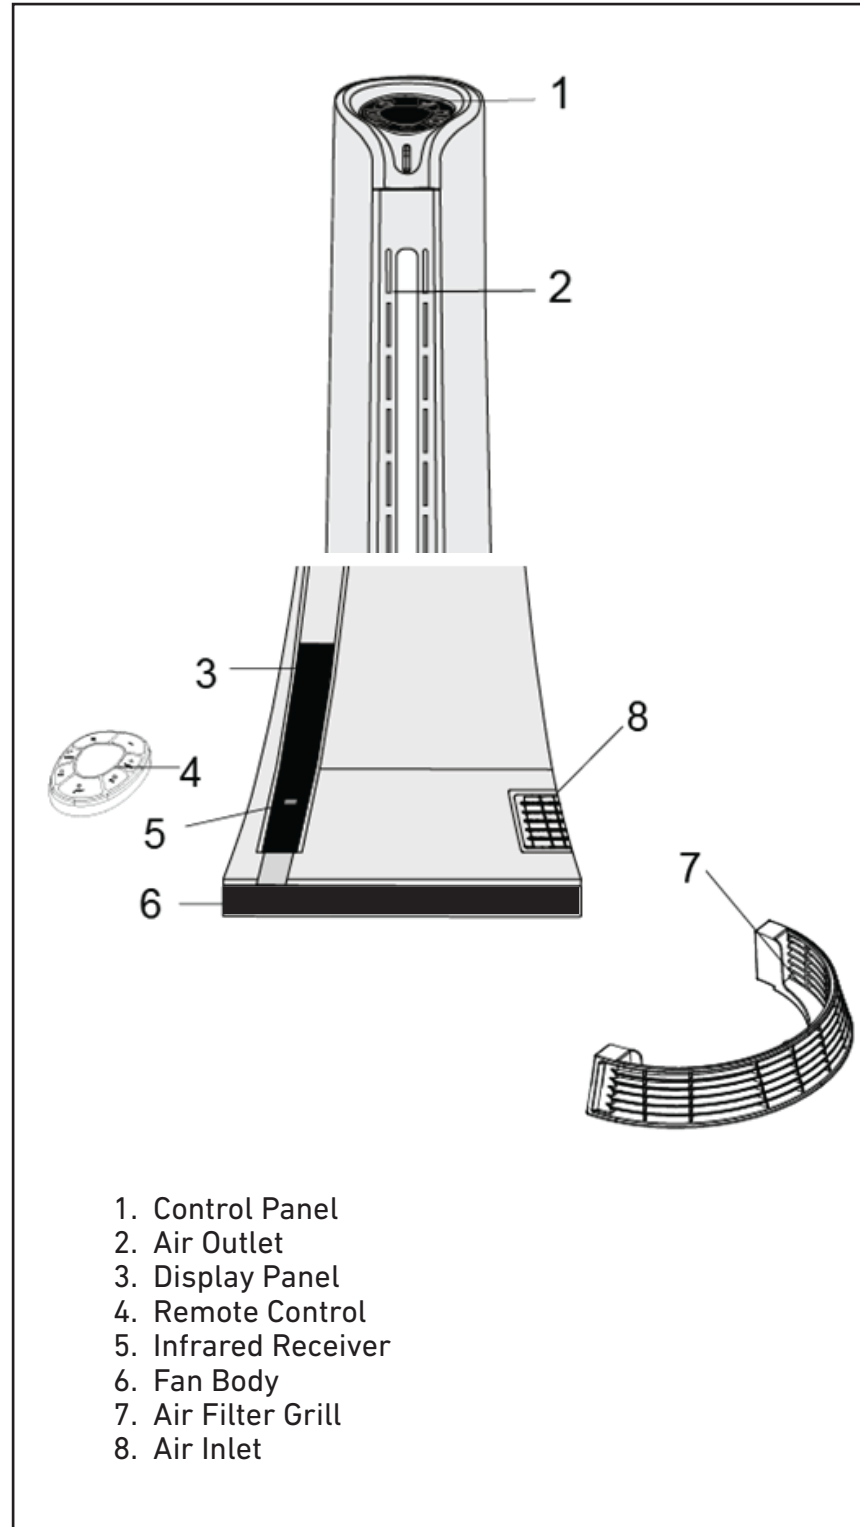


1. Control Panel
2. Air Outlet
3. Display Panel
4. Remote Control
5. Infrared Receiver
6. Fan Body
7. Air Filter Grill
8. Air Inlet

## OPERATION INSTRUCTIONS

### Control Panel

Remove the cable tie and unravel the power cord. Place the fan on a flat surface and plug the power cable into an outlet.

The fan can be operated by using the manual control panel located at the top of the fan (Fig. 1) or by using the remote control (Fig. 2).

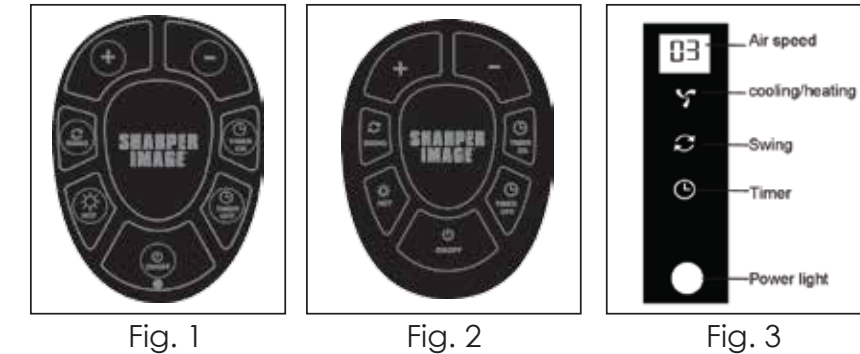

### POWER

To turn the tower fan on, press the ON/OFF button.

### HEAT

Press and hold the HEAT button for 3 seconds. The fan will begin to emit hot air. Press the HEAT button again to switch to cool air. Repeat if you would like to switch to hot air.

### TIMER/TIMER OFF

Press the TIMER button to set the fan timer. Continue to press the TIMER button until the LED display shows the desired length of time. The fan has a range of 1-8 hours. To cancel the timer, press the TIMER OFF button.

### AIR FLOW

Press the "+" button to increase airflow. Press the "-" button to decrease air flow.

### SWING/OSCILLATE

Press the SWING button to choose the degree of oscillation on the fan. The LED display will show you the following numbers to reference the degrees the fan will turn.

"12" - 120°, "90" - 90°, "60" - 60°, "30" - 30°


To cancel oscillation, press the SWING button until the display reads "00."

## Remote Control

Remote control functions are identical to the functions on the fan's manual control panel.

One CR2032 button cell battery is included in the remote control. For first time use, remove the insulating safety strip from the battery compartment.

## BATTERY REPLACEMENT

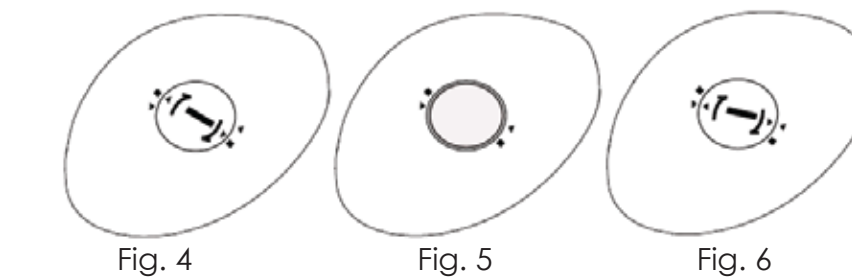


1. Rotate the battery compartment door with your hand or with a screwdriver in the direction indicated by the arrows.
2. Align the triangle mark with the square to remove the battery cap.
3. Install the CR2032 battery, paying close attention to polarities.
4. Fit the cap and rotate the battery compartment door counterclockwise to align the two triangles to lock the battery compartment.

## NOTE

The infrared receiver is located in the bottom of the LED display and at the top of the fan. The remote control can also be used when it is attached to the top of the fan. For best results, the remote should be pointed at the LED display when pressing any button on the remote for the best signal transmission. Do not place any objects that may obstruct the infrared signal between the remote and the fan.

## CLEANING

1. Be sure to unplug the power cord from the outlet before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Do not submerge the unit to clean it. Thoroughly remove soap film with clean water. (Fig. 7)
3. Be sure not to get water or other liquid inside the fan motor.
4. Dry all parts completely before reassembling and reconnecting to a power source.
5. To clean the air filter, please use a soft brush or warm water. The air filter grill can be washed in clear water and air-dried before it is reinstalled into the fan. (Fig. 8)
6. To clean the air outlet, use a soft brush to clean the debris inside. (Fig. 9)

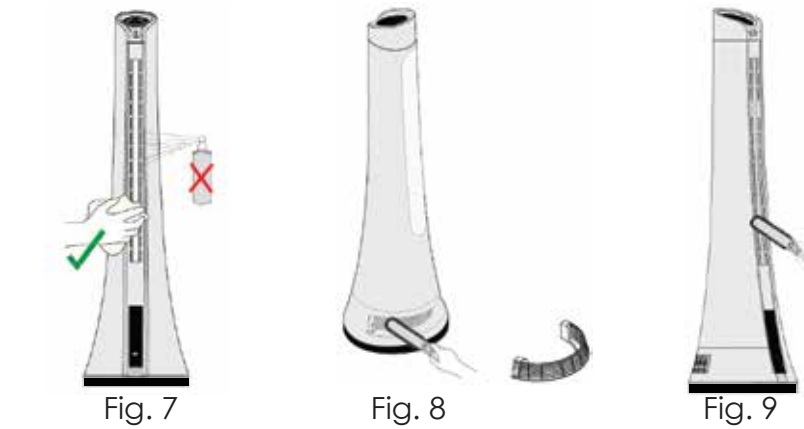

## SAFETY INSTRUCTIONS

### ⚠ WARNING

READ ALL INSTRUCTIONS BEFORE USING THIS FAN.  
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- To use the fan, follow the descriptions in this manual.
- Never carry out any maintenance other than described in this manual.
- The fan is suitable for dry location only. Do not use it in outdoor or in wet area.
- The fan must be assembled securely before operating.
- Turn off all controls before unplugging.
- Unplug from outlet when not in use for extended period.
- Clean the outer part of the fan regularly with dry cloth.
- Do not use any cleaning agents, lubricants or any other chemicals for cleaning.
- Do not carry the base part of the fan. Always carry the square head part with both hands.
- Do not place or use the fan near the furnaces, fireplace or other sources of heat.
- Do not route cord under furniture or appliances.
- Arrange cord away from traffic area and where it will not be tripped over.
- Do use common sense when using this fan and/or any electrical appliances.
- Do not cover the cord with throw rugs or similar coverings.
- Do not put anything into air inlet.
- Do not use the fan or handle the plug with wet hands.
- Do not unplug by pulling on cord.
- Do not use other adapters without authorization.
- Do not hang or mount fan on a wall or ceiling.
- Do not dismantle or modify the fan.
- This fan is not intended for use by young children or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the appliance to ensure that they can use the appliance safely.
- Never insert fingers, pencils or any other object through the grill when the fan is running.
- Disconnect fan when moving from one location to another.
- Disconnect fan when removing grills for cleaning.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window. Rain may create an electrical hazard.

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. DO NOT force the plug into the outlet.
2. To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control devices.
3. Do not leave the fan running unattended.

**SHARPER  
IMAGE®**

## ONE YEAR LIMITED WARRANTY

C.H.USA Licensed Manufacturer sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below.

C.H.USA Licensed Manufacturer warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your C.H.USA Licensed Manufacturer product, first email or call the return center to secure a Return Material Authorization number (RMA). Returns will not be accepted without RMA. When authorized to proceed with the return, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

Comfort Home USA Return Center  
195 Raritan Center Parkway  
Edison, NJ 08837  
Email: support@comforthehomeusa.com  
Phone: 1-877-698-5245

No COD's will be accepted.

C.H.USA Licensed Manufacturer does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchase of the product from a Retailer or remote purchasers, to obligate C.H.USA Licensed Manufacturer in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of C.H.USA Licensed Manufacturer.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. C.H.USA Licensed Manufacturer SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, C.H.USA Licensed Manufacturer RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express written consent of C.H.USA Licensed Manufacturer.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

SHARPER IMAGE® name and logo are registered trademarks.  
Manufactured and marketed by Comfort Home USA under license.  
© Sharper Image All rights reserved.