

# SHARPER IMAGE®

## RESPIRATORY STEAM INHALER

Item No. 206050


### Owner's Manual

Thank you for purchasing the Sharper Image Respiratory Steam Inhaler. With proper care and use, it will provide you with many years of therapeutic relief. Please read these instructions prior to using this device for the first time. In addition, please store this guide for future reference.

## INTRODUCTION

This unit operates on standard AC power. Treatments are delivered quickly, safely and conveniently with the use of tap water. We encourage you to thoroughly read this guidebook to learn about the features of this product.

## PRODUCT IDENTIFICATIONS

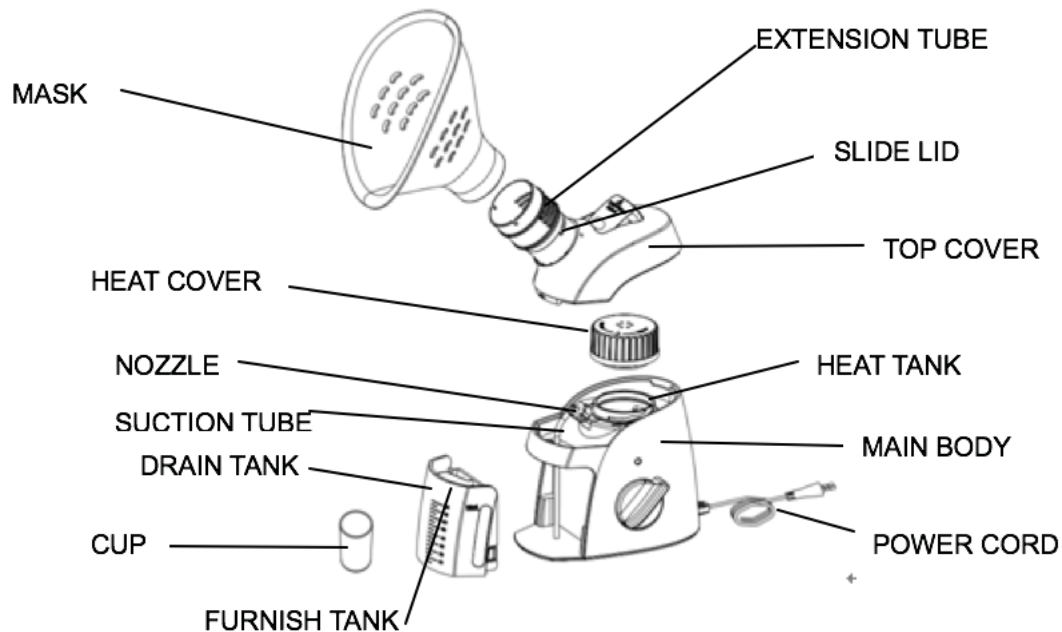

## CAUTIONS

### Note:

- Read all instructions carefully before use.
- The following basic precautions are needed when using an electrical product:

### Product Cautions:

To avoid electrical shock: Keep the unit away from water. Do not handle the unit or power cord with wet hands. Do not immerse the unit in liquid. Do not use while bathing. Do not reach for a unit that has fallen into water – immediately unplug the unit.

- Do not use the unit if it has any damaged parts (including power cord or plug), if it has been dropped or submersed in water. Promptly send the unit to for examination and repair.
- Do not use extension cords.
- The unit should not be used where flammable gas, oxygen or aerosol spray products are being used.
- Keep the air vents open. Do not place the unit on a soft surface where the openings can be blocked.
- Do not operate the unit if the water tank is empty.
- If any abnormality occurs, discontinue use until the unit has been examined and repaired.
- Never use without water in the water heater tank.
- The unit should not be left unattended while plugged in.
- Do not tilt or shake the unit when in operation.
- Disconnect the unit from the electrical outlet before cleaning, filling and after each use.
- Do not use other attachments unless recommended by manufacturer.

### Operating Cautions:

- Close adult supervision is highly recommended when this unit is used by invalids or children.
- Keep your eyes away from the output of vapor mist.
- The maximum capacity of the water heater tank is 25ml and should not be overfilled.
- The maximum capacity of the aromatherapy tank is 60ml and should not be overfilled.
- Do not use this unit while operating a vehicle.
- If any discomfort or abnormality occurs, stop using the unit immediately.

### Storage Cautions:

- Do not store the unit in direct sunlight, high temperature or humidity.
- Keep the unit out of reach of small children.
- Always keep the unit unplugged while not in use.

### Cleaning Cautions:

- Check the mask, extension tube, tank, suction tube and any other optional components before each use.
- Dirty or worn parts should be replaced.

- Do not immerse the unit in water. It may damage the unit.
- Disconnect the unit from electrical outlet before cleaning.
- Clean all necessary parts after each use as instructed in this guidebook.

## OPERATING YOUR STEAM INHALER

Follow the cleaning instructions in this guidebook under “Cleaning Technique” prior to using your Steam Inhaler for the first time or after it has been stored for an extended period of time.

Remember: Always unplug the inhaler and make sure the POWER switch is turned to the “OFF” position before cleaning, assembling and before or after each use.

1. Place the unit on a flat and stable surface within reach, with the mask facing towards you, Fig. 1.
2. Gently pull straight up on the cover of the inhaler to remove lid.
3. Remove the cap to the water heater tank by turning it counterclockwise, Fig. 2.



Fig.1



Fig.2

4. Using the included measuring cup, fill the water heater tank with approximately 25ml of tap water, Fig. 5. Do not fill water above the five square-shaped vents on the wall of the tank.
5. Reattach the cap and the cover.
6. If desired, remove the aromatherapy/drain tank from the unit. Fill the aromatherapy tank with up to 60ml of saline or aromatherapy water, Fig.6.



Fig. 3

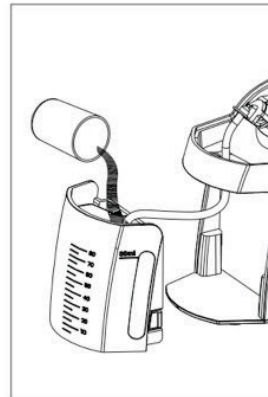


Fig. 4

7. Return the aromatherapy/drain tank to the unit making sure that the suction tube makes contact with the bottom of the tank.
8. Position the extension tube to a comfortable position by manually extending or retracting the tube.
9. Slide the variable steam control down for small-sized particles of steam. Smaller particles are ideal when inhaling steam through the nose. Slide the control up and large-sized particles will result. Larger particles are ideal when inhaling through the mouth.  
*Note: Extending the tube also lowers the temperature of the steam.*
10. Check that the POWER switch is in the "OFF" position. Plug the power cord into a main outlet.
11. Turn the POWER switch to the "ON" position.
12. Start your treatment.
13. The Steam Inhaler will begin to output steam in approximately 75 seconds. Once the level of steam becomes weak [approximately 6-8 minutes], turn the POWER switch to the "OFF" position and unplug the power cord from the outlet.

## IMPORTANT!

The Inhaler will automatically shut off if it becomes overheated. If/When this happens, immediately:


1. Turn the POWER switch to the "OFF" position.
2. Unplug the power cord from the outlet.
3. Allow the unit to cool for approximately 30 minutes.

Before restarting the unit, make sure that the air vents on the extensions tube are not obstructed.

## AFTER EVERY USE

1. Unplug the unit from the power source.
2. Allow the unit to completely cool [approximately 10 minutes].
3. Carefully remove the aromatherapy/drain tank and pour out any remaining water.
4. Follow the cleaning procedures provided in this guidebook.

*NOTE: Occasionally the nozzle that directs the steam into extension tube may become obstructed. If the Steam Inhaler begins to produce a significantly smaller amount of steam or no steam at all, the nozzle needs to be cleaned. To clean the nozzle, remove the cover from the Steam Inhaler. Firmly grasp the nozzle and twist clockwise to remove, Fig.*

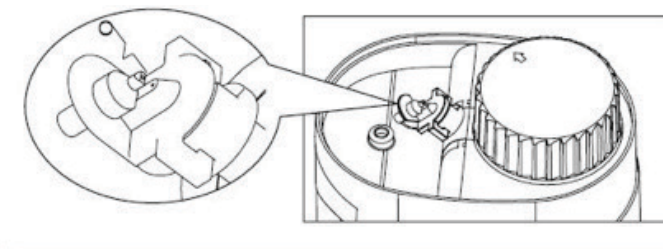

**Fig. 5**

*5. To reattach the nozzle, align the nozzle base. Turn counterclockwise until the nozzle locks into place.*

## CLEANING PROCEDURES

### Rinsing Technique [Performed after each use]:

1. Make sure that the unit has cooled [approx. 10 minutes], the POWER switch has been turned to the "OFF" position and the unit has been disconnected from the power source.
2. Remove the cover from the body of the Steam Inhaler. Remove the cap to the water heater tank, Fig. 6.



Fig.6

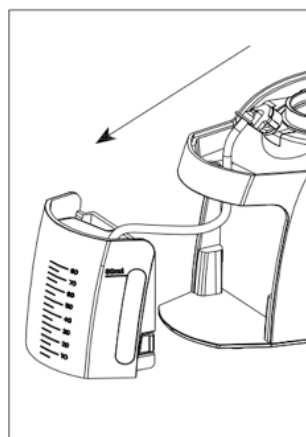


Fig.7

3. Carefully remove the one-piece aromatherapy/drain tank from the unit, Fig. 7.
4. Rinse aromatherapy/drain tank with hot tap water.
5. Empty any remaining water from the water heater tank.
6. Dry with clean towels or allow to completely air dry.
7. Reassemble the Steam Inhaler and store in a cool, dry place.

### Cleaning Technique [Performed once a week or before first time use]:

1. Follow steps 1-5 under "Rinsing Technique".
2. Wash aromatherapy/drain tank, cover, water heater tank cover, extension tube and mask in warm water and a mild detergent. Thoroughly rinse and allow to completely dry.

### Cleaning the Steam Inhaler

**NEVER** submerge the main unit in water.

Wipe the Steam Inhaler using a soft, slightly water-moistened cloth.

*NOTE: Any other form of cleaning or cleaning agents may damage the unit and void your warranty.*

## TROUBLESHOOTING

Condition	Checking points	Corrective actions
Lamp is not lit	<ul style="list-style-type: none"> <li>▲ Check whether power cord is well connected to the electrical outlet</li> <li>▲ Check whether power switch is at "ON" status</li> </ul>	<ul style="list-style-type: none"> <li>▲ Firmly insert power cord</li> <li>▲ Press on power switch</li> </ul>
No steam output	<ul style="list-style-type: none"> <li>▲ Check whether lamp is lit</li> <li>▲ Check if there is no water in heater or furnish tank</li> <li>▲ Check if the suction tube is bending</li> <li>▲ Check if the nozzles are blocked</li> </ul>	<ul style="list-style-type: none"> <li>▲ Insert power cord and press on power switch</li> <li>▲ Fill water</li> <li>▲ Straighten the tube</li> <li>▲ Use attached nozzle pin to make them through</li> </ul>
Water leakage	<ul style="list-style-type: none"> <li>▲ Check if the furnish tank is overfilled</li> <li>▲ Check if the unit is tilted.</li> </ul>	<ul style="list-style-type: none"> <li>▲ Pour out some water</li> <li>▲ Set flat the unit</li> </ul>
Steam leakage	<ul style="list-style-type: none"> <li>▲ Check if the heater tank cover is firmly locked</li> <li>▲ Check if nozzle is firmly locked</li> </ul>	<ul style="list-style-type: none"> <li>▲ Lock the heater tank cover firmly</li> <li>▲ Lock the nozzle firmly</li> </ul>

## SPECIFICATIONS

Power consumption: Max. 300 Watt.	Steam Temperature[Ideal]: 38~43°C, ±1°C
Heater tank capacity: 25ml	Measuring Cup Capacity: 25ml
Furnish tank capacity: 60ml	Dimensions: 212*199*105mm
Water boiling time: about 60 seconds	Weight: 800g
Operating time: ≥6 minutes	

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 [877] 210-3449.

# SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.