

SHARPER IMAGE®

 
TRUE NIGHT VISION BINOCULARS

Item No. 206061

User Manual


Thank you for purchasing the Sharper Image True Night Vision Binoculars.
Please read this guide carefully and keep it for future reference.

PACKAGE CONTENTS

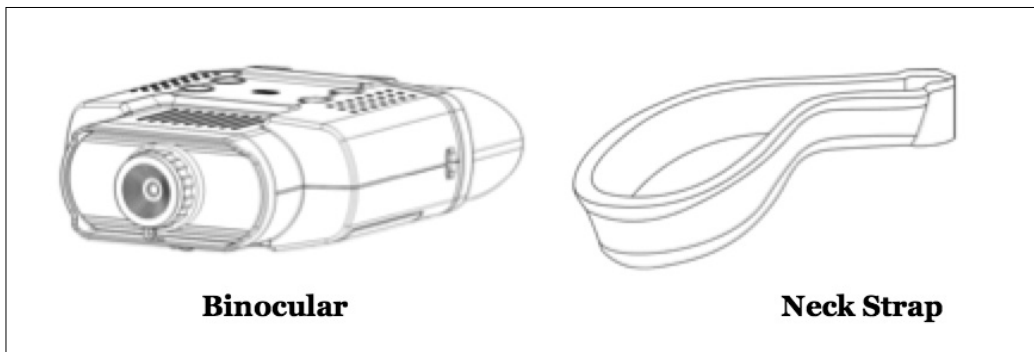

ABOUT THE BINOCULAR

 1. **POWER:** Long press for power on and off.
2. **IR:** Press IR for 3 levels of brightness [0->1->2->3] when using the binoculars at night.
3. **ZOOM:** Press Zoom to zoom in at multiple levels. The maximum zoom is 2X. Once reaching 2X, keep pressing Zoom to go back to 1X.

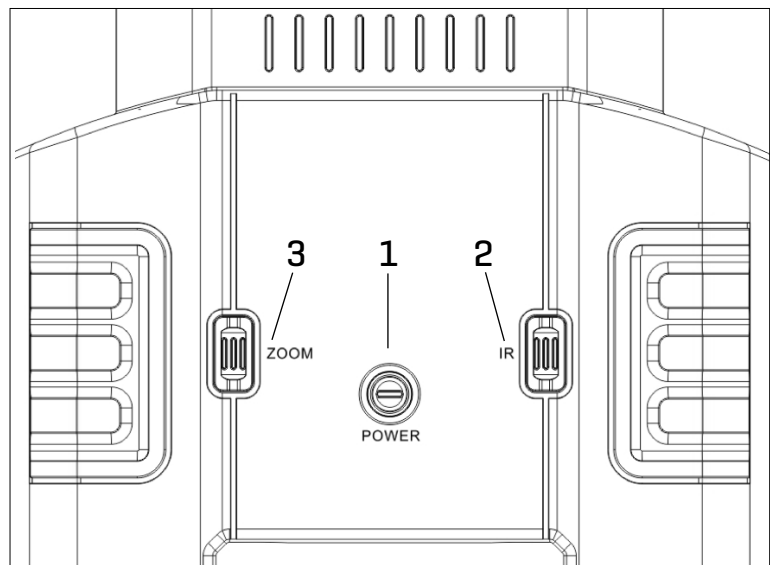

ABOUT THE BINOCULAR (CONT.)

- 4. PROTECTION LID: Long press for power on and off.
- 5. VIEW AREA
- 6. STRAP HOOK
- 7. FOCUS WHEEL
- 8. BATTERY COMPARTMENT
- 9. TRIPOD HOLDER

QUICK START

Install batteries

 
 
 
 
1. Open the covers.
2. Put in 4 AA Alkaline batteries in each compartment in the directions of + and -.
3. Close the battery compartments.

Turn on the Binocular:

1. For day use, first cover the lens with the lid. For night use, take off the lid.

[Note: Uncovering the lid during the day time will NOT damage the lens, but it will affect the image quality.]

2. Long press the Power button to turn on the binocular. Once the power is on, look into the LCD screen inside for preview.
3. Adjust the focus by turning the focus wheel at the front bottom. See below arrow for "focus wheel".
4. For night use, turn on the IR by pressing the IR button. Increase the brightness by pressing the button repeatedly. It has 3 levels of brightness [0->1->2->3]
5. Long press the Power button to shut down the binocular.

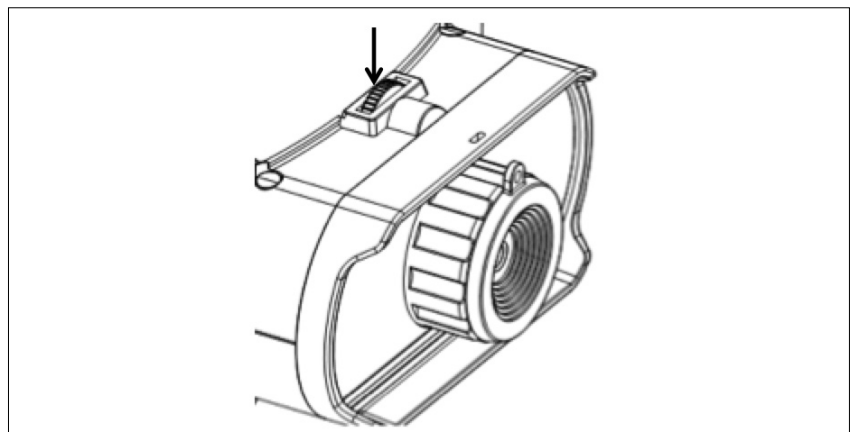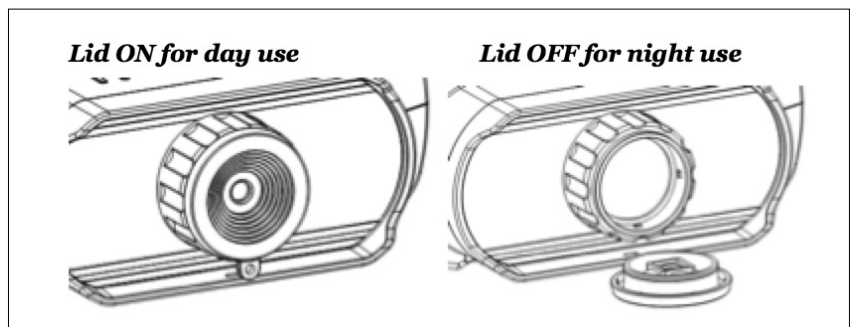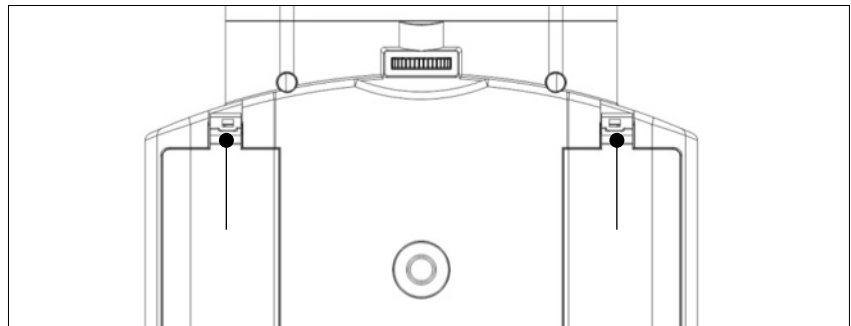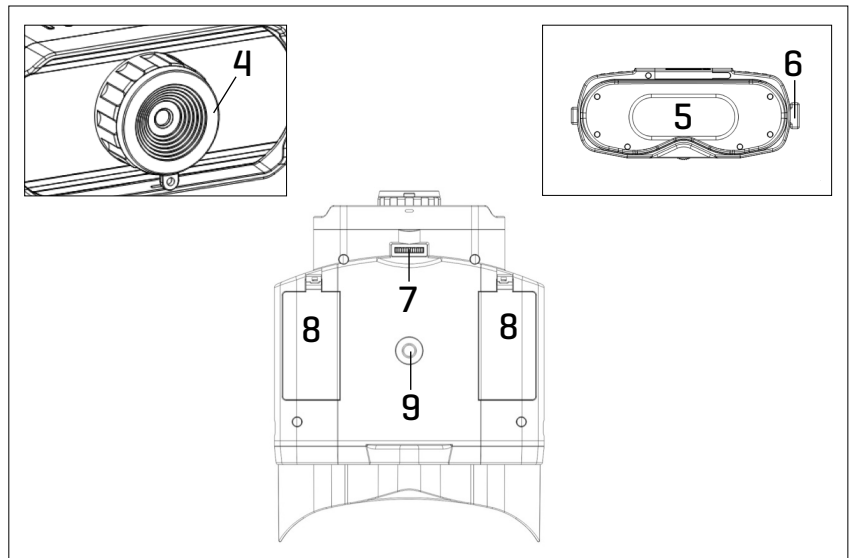


QUICK START [CONT.]

Use Digital Zoom

Press Zoom to zoom in at multiple levels up to 2X. Once reaching 2X, keep pressing to go back to 1X.

 
DISPLAY INFORMATION

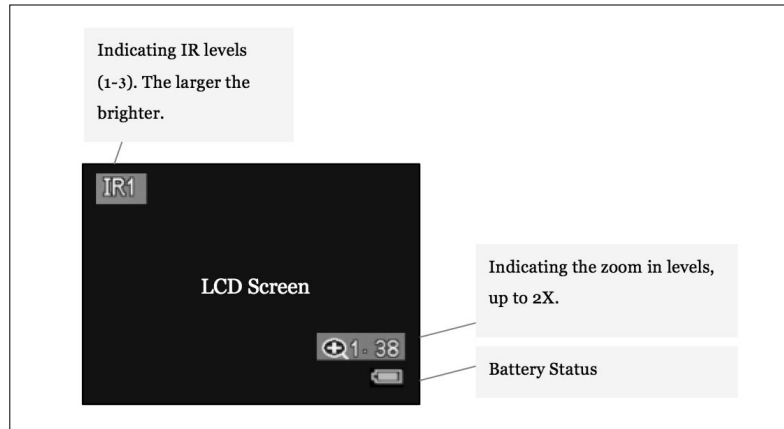

TROUBLE SHOOTING

Binocular Power Off

 If the binocular fails to activate, check for defective, missing or improperly-installed batteries. Replace or install batteries correctly. Please make sure to use Alkaline batteries.

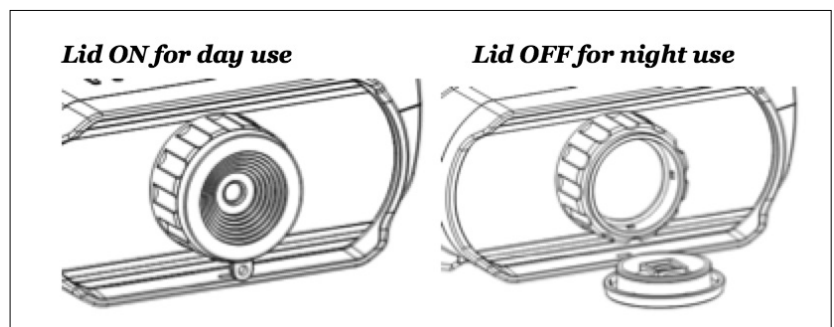

Poor Image

- If you wear glasses, please keep them on while using the binocular.
- If at day, make sure the protection lid is on. If at night, make sure the protection lid is off.
- Adjust the focus by slowly turning the Focus Wheel at the front bottom of the binocular. Make sure it is focused.

SPECIFICATIONS

Viewfinder	EVF mode
Aspect ratio	4:3
Aperture	F1.4 with adjustable aperture Day and Night dual mode
Operation	Preview
Visual distance	60M [66 yards] at Night, 400M [440 yards] at Day
Zoom	Up to 2X
Object lens Focus	Manually adjust
Visual angle	10° degrees

SPECIFICATIONS (CONT.)

Luminance	IR LED / total 1W
Power Supply	Alkaline AA battery x 8
Power consumption	1.5W with IR LED fully on
Size	18.5cm X 14.5cm X 5.5cm [approx.]/7.28" X 5.70" X 2.16" [approx.]
Net Weight	603g [approx.]/ 1.33lbs [approx.]
Color	Black

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you require any assistance with your True Night Vision Binoculars, please call 1 (877) 210-3449.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.