

SHARPER IMAGE®

HEATED INSOLES

Item No. 206172

Owner's Guide

Thank you for choosing the Sharper Image Heated Insoles.
Please take a moment to read this guide and store it for future reference.

FEATURES


- One pair of heated insoles
- 1 USB charging cable
- 1 Adaptor
- 1 Remote controller

HOW TO MATCH REMOTE CONTROLLER WITH INSOLES

- On the first use, please switch the button on the insole to turn it on, you will see the blue light flash.
- Next, long press "off" on the remote controller until the light flashes again. The controller and insole will match successfully.
- Check and make sure the two insoles match the remote controller. Use the control off/on and temperature levels of insoles with remote controller.

REMOTE CONTROL INSTRUCTIONS

- Press 1 for heating temperature of 140°F [High/Normal Blue Light].
- Press 2 for heating temperature of 122°F [Medium/Slow flashing Blue Light].
- Press 3 for heating temperature of 104°F [Low/Fast flashing Blue Light].
- Press off to turn off.

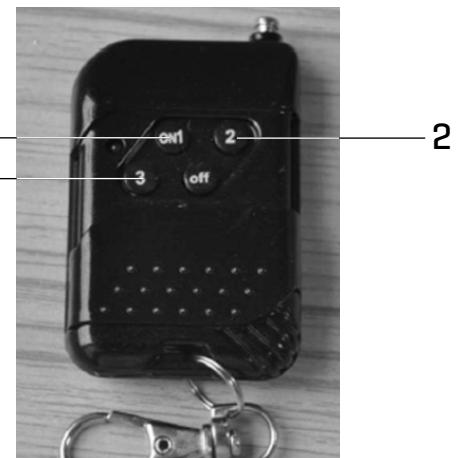

CHARGING

- When the heated insoles are charging the LED illuminates red. When it is fully charged the LED light will turn off.
- On the first use charge for 4-5 hours.

SAFETY WARNING

- Before charging make sure to turn off the heated insoles.
- Recharge device at any time.
- Do not put into water or fire.
- Clean with a damp cloth only.
- Do not wear while playing with ball games or other sports activities.
- Do not disassemble the heated insoles.
- Please turn off the insoles when not to use.

SIZING CHART

Mens:

Small: 5-6.5
Medium: 7-9.5
Large: 10-11.5
XLarge: 12-12.5

Womens:

Small: 5.5-7.5
Medium: 8-9.5
Large: 10-11.5

ELECTRICAL SPECIFICATIONS

- Output Power: 2.8W [Max] *2 pcs
- Battery: 3.7V 1400 mAH Lithium Polymer battery
- Charging voltage: 5.0V [USB plug]
- 4 hours auto shut off
- Synthetic upper, overcharge protection

WORKING TEMPERATURE AND TIME

Setting 1: 140° F ±37.4°F [4 ± 0.2H]

Setting 2: 122° F±37.4°F [5 ± 0.2H]

Setting 3: 104° F±37.4°F [6 ± 0.2H]

Note: Working temperature and time depends on ambient temperature. These times are calculated on an ambient temperature of -4° F to 50° F.

WARRANTY/CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 (877) 210-3449.