

Kids Smart Watch



USER MANUAL

- ① **ON/OFF SWITCH:** Switch the button to turn the Smart Watch ON or OFF.
- ② **CAMERA/SHUTTER BUTTON:** Press to take a photo or record a video.
- ③ **HOME BUTTON:** Press and hold for 3 seconds to turn Smart Watch LCD ON or OFF, Press to switch between Main Menu and Sub Menu.
- ④ **USB PORT:** Use to connect the Smart Watch to a computer, to recharge the battery, or upload your photos/videos to your computer.
- ⑤ **1.5" Colorful Touch Screen:** Press, Slide Left/Right/Up/Down to use the capacitive touch screen operation to access activities.
- ⑥ **Turn-able CMOS Sensor :** 0.3 Mega Pixels Resolution.
- ⑦ **Built-in Microphone:** to pick up ambient sounds while recording.

INCLUDED IN THE BOX:

- 1 Smart Watch With Silicone Wristband
- 1 USB cable
- 1 Instruction Manual

BEFORE USING SMART WATCH:

- **Rechargeable Battery:** Before using the Smart Watch, please charge the battery by connecting to a computer with the included USB cable (an icon "Charging" shows in the display). Insure the ON/OFF switch is turned to the ON position.

To access the ON/OFF switch, use your nails or a sharp object. It is recommended that the battery be initially charged for approximately **3 hours**.

Note: It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature is 0 C - 40° C (32° F - 104° F). If the Smart Watch needs longer than 3 hours to fully charge, please try charging from a different USB power source.

Note: When the battery is being charged an icon "Charging" shows in the display. When the battery is fully charged the "Charging" icon stops "charging" and shows a fully charged icon.

Note: Charging the battery should only be done under adult supervision.

Battery Status: A battery icon in the display indicates if the battery is running low.

Preserving Battery Life: To avoid wasting battery energy the Smart Watch has a physical ON/OFF switch located at the right side of the watch and the watch will automatically turn OFF after certain seconds/minutes without using it. To turn it ON again, simply press the HOME button.

AUTOMATIC SCREEN OFF

- To preserve battery life, the screen will automatically shut off after a short period of time when in clock mode.
- Note: The auto screen off time can be set in Settings / Advanced / Auto Screen Off. Please refer to the Settings section in this manual.
- In other activities, it will return to CLOCK mode automatically if there is no input for 1 minute. When in CAMERA mode, it will auto exit after 3 minutes.

- When in SLIDESHOW mode, the auto exit time is 15 minutes.
- If you have a timer running, it will return to the screen instead of the watch mode. The Smart Watch will not shut off automatically when the timer is running.

Battery time for reference

Condition	Battery Time
Low Usage	2-weeks
Typical Usage	2-3days
Heavy Usage	1 day

Note: The above battery time is based on the assumption that the screen is turned off when not in use.

Note: it is not necessary to move the ON/OFF switch to OFF in daily use.

We recommend to switch the ON/OFF switch to OFF, only when the watch isn't in use for an extended period of time. Switch it to ON position before charging the battery.

Note: The Smart Watch is physically turned OFF at its origin; user needs to turn the Smart Watch ON in order to start using the Smart Watch.

Note: Charge the battery regularly to keep it at optimum performance, even when the watch isn't in use(charge the Smart Watch at least every 6 months).

BATTERY NOTICE

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions:

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.
- Do not handle damaged or leaking batteries.
- Keep the battery out of the reach of children.
- Keep the battery dry.
- If you find the time between charges is considerably shortened with no change in usage, the battery could be nearing the end of its life. please dispose of the used battery as described in this manual.

Connecting to a Computer:

- The Micro USB connector with a rubber cover is located on the left side of the Smart Watch.
- Lift the rubber cover and insert the smaller end of the included USB cable into the Micro-USB connector of the Smart Watch and insert the larger end into a USB socket of a computer

Note: Whenever the Smart Watch is connected to a computer the following occurs:

1. An icon "Charging" shows in the display.
2. The battery is charged while the connection is maintained.
3. The "PHOTO" and "VIDEO" folders are uploaded to the computer.

To view the photos or videos locate the folders on your computer and open the selected folder. If you wish you may save any or all of the photos or videos to a location of your choice on your computer.

TO START USING SMART WATCH:

Switch the ON/ OFF switch located in the right side of the Smart Watch to ON position. Press the HOME button or Shutter Button to wake the Smart Watch up. Press and Hold the Home button for 3 seconds to wake up the Smart Watch from standby.

Note: It is not necessary to move the ON/OFF switch to off in daily use.

When the clock is displayed on screen, press the HOME button to go to the Main menu. Press the Shutter button to take photos and videos.

NOTE: Once Time and Date are set, if the Smart Watch is switched OFF then user has to set Time and Date again. User doesn't need to switch OFF the Smart Watch to turn it OFF, the Smart Watch is in "Sleep" mode automatically when it is not in use(see AUTOMATIC SCREEN OFF in this manual). To prevent inadvertently switching OFF, The ON/OFF switch is designed a way that it is not easily accessible. To access the ON/OFF switch, use your nails or a sharp object.

ACTIVITIES:

Clock Display

When the HOME button is pressed, the clock will be displayed. Tap the center of the screen to switch the clock face between analog and digital.

Swipe left or right on the screen to see more clock faces.

Press the HOME button to display the main menu for selecting other activities.

Press the Shutter button to enter CAMERA mode.

Main MENU

Press the HOME button to display the Main MENU. The various functions of the Smart Watch are accessible on the 1.5" Colorful Touch Screen. There are 12 different functions each with different icon. There are sub-menus in each function.

- | | |
|-------------------|-----------------|
| 1. Camera | 7. Stopwatch |
| 2. Video | 8. Alarm |
| 3. Voice Recorder | 9. Playback |
| 4. Talking hippo | 10. Menu Layout |
| 5. Timer | 11. Games |
| 6. Time Master | 12. Settings |

- Tap the icon to enter the activity.
- Swipe left or right to scroll through the menu pages.
- To change the menu layout to small/big icons, go to Settings/Menu Layout.

FUNCTIONS:

1. Camera

The camera can be moved 90 degrees Up and Downs. Move the camera with your fingers Up and Down to take SELFIE photos and videos. Press the SHUTTER button to enter CAMERA mode.

You can also switch to VIDEO mode here.

- Press the SHUTTER button or shutter icon on the screen to take a photo.
- Swipe the screen (from down to up) to invert the focus.
- Tap the MODE icon on the screen to change to VIDEO mode.
- Tap the MAGIC icon on the screen to preview photo with effect, then press the left or right arrow icons or swipe the screen to go through different photo effects.
- Tap the PLAYBACK icon on the screen to view the photos or videos. Press the SHUTTER button or tap the screen to exit playback and return to CAMERA mode.

2. Video

Tap the MODE icon on the screen in CAMERA mode at any time to go to VIDEO mode. The time limit per video file is 1 minute.

- Press the SHUTTER button or RECORD icon on the screen to start recording. While recording, press the SHUTTER button again or the STOP icon on the screen to stop recording.
- Tap the MODE icon on the screen to change to CAMERA mode.

• Tap the MAGIC icon on the screen to preview video with effect, then press the left or right arrow icons or swipe the screen to go through different video effects.

• Tap the PLAYBACK icon on the screen to view videos. When you finish recording a video, the playback screen will be shown.

• Tap the PLAY icon on the screen to play the last recorded video.

• Tap the TRASH icon on the screen to display the delete menu.



3. Voice Recorder

Tap the RECORD icon on the screen to start the voice recording. While recording, tap the STOP icon on the screen to stop.

Swipe the screen to see the previous or next file.



4. Talking Hippo

Tap Hippo's head (upper part), it shows a happy look and movement. Tap Hippo's head (lower part), it shows an angry look and movement.

Tap Hippo's tummy, it shows a sad look and movement. Tap Hippo's hands, it claps its hands.

Tap Hippo's feet, it loses its balance. Hippo will go to sleep when there is no operation for 50 seconds.

Imitation

Speak to Hippo, it will put its hand beside its ear, this specific movement indicate to user that Hippo gets what he or she said. After that, Hippo will distort and repeat what it heard.



5. Timer

Set countdown timer here.

- Tap the PLAY icon on the screen to start the timer immediately.
- Tap the STYLE icon or swipe the screen left or right to change the timer style. There are 5 different timers for you to try out.
- Tap the TIME to enter the timer settings. Swipe up or down on the minutes and seconds to change the time. Once set, press HOME button to go back and save.
- While the timer is running, tap PAUSE icon on the screen to pause the countdown, tap it again to resume. Tap to stop the countdown and reset the timer.



6. Time Master

This function allows user to make the penguin telling the set analog or digital time.

- Tap the HOUR icon or MINUTE icon to select the time you want the penguin to say.
- Tap to increase an hour/ minute.
- Tap to decrease an hour/ minute.
- Tap the clock or the penguin to tell the time.



7. Stopwatch

Access the stopwatch function.

- Tap the PLAY icon on the screen to start the stopwatch.
- Tap the STYLE icon or swipe the screen left or right to change the stopwatch style. There are 5 fun stopwatch styles to select!
- While the stopwatch is running, tap PAUSE icon to pause the timer, tap it again to resume. Tap to stop the timer and reset the stopwatch to zero.

INTRODUCTION:

Note: Safety Precautions:

- Please keep this instruction manual in a safe place for future reference.
- It is not necessary to insert any batteries in Smart Watch as it has a "Lithium Rechargeable Battery" sealed inside.
- After long periods of storage without being used, Smart Watch should be charged before it is used.
- Do not attempt to alter, disassemble or repair Smart Watch yourself. In case of problem please refer only to a qualified technician.


Note: Turn the Smart Watch ON and OFF:

- There is an ON/OFF switch at the right side of the Smart Watch. The Smart Watch is shipped from the factory with the switch on OFF position.
- Before the Smart Watch can be used or the lithium battery in charging mode, the switch must be turned to the ON position.

Note: WARNING:

- A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns.
- While the Smart Watch does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and go to see a doctor. Please note that focusing on at close range and handling a game controller for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

PRODUCT USER INTERFACE:

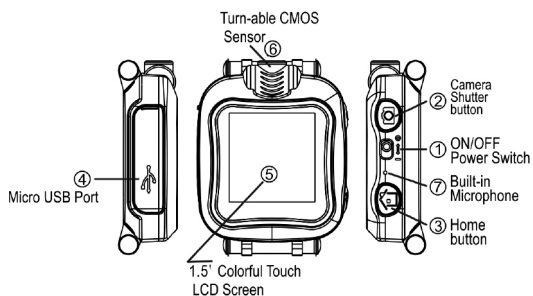



8. Alarm

You can set an alarm, choosing from a selection of alarm tones and animations.

- Tap the TIME or ALARM icon to change the alarm time.

- Tap the BELL icon on the screen to toggle the alarm on or off.

To change the alarm time:

- Select the HOUR and MINUTE by swiping up or down on the hours, minutes or AM/PM.
- Tap the TONE icon on the screen to display the alarm tone selection menu. There are 5 built-in alarms. Swipe left or right to preview the different tones and animations.
- Tap on the screen to confirm the selection. Once you've chosen your alarm, tap to confirm.
- Note: If the battery is too low, the alarm will need to be set again.



9. Playback

It allows you to browse the captured photos or play the recorded videos.

- The latest file will be shown first, tap the ARROW icons or swipe the screen to see the previous or next file.

- Tap the SLIDESHOW icon on the screen to view the photos in slideshow mode.
- Tap the PLAY icon on the screen to play the video.
- Tap the TRASH icon on the screen to display the delete menu.



10. Menu Layout

Tap to change the color scheme of menu.

- Tap or to select a menu layout option.



11. Games

There are 3 built-in games in Smart Watch. Hit mouse, Memory testing and Percussion. Swipe the screen to see the game icons, then tap on the chosen one to play.

A. Hit mouse

Hit the mouse that comes out from the holes, if hitting enough before the end of the game, the user has won the game. This game require fast tapping, if too slow, the mouse goes back to the hole.



B. Memory Testing

Remember all cards quickly as they are exposed. After unexposed, turn over the cards one by one, when two cards are the same, user will obtain points. If getting enough points before the end of the game, user has won the game.



C. Percussion

Tap the icon in the middle to select any of the 6 tones in all. Tap any of the instruments and play with the Songs, Tones and Rhythms!



12. Settings

In settings mode, swipe left or right on the screen to scroll through different settings items. User can adjust the following items:

- (A)Volume
- Tap + to increase the volume.
 - Tap - to decrease the volume.



(B)Brightness

- Tap + to increase the LCD brightness.
- Tap - to decrease the LCD brightness.



(C)Date

- Tap the screen to enter the date setup screen.
- On the date setup screen, swipe up or down the month, day and year to scroll through the options.
- Tap the date format icon on the screen to change the date format (DD/MM/YYYY or MM/DD/YYYY).



(D)Time

- Tap the screen to enter the time setup screen.
- On the time setup screen, swipe up or down the hours, minutes, or AM/PM to scroll through the options.



Note: • If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging. • When the battery level is low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

(E)Advanced



(i)Image Display

As the saved photos and videos are in 4:3 ratio, user can select 2 options for displaying the image in the preview screen and playback screen.

Mode1: Image displayed to actual scale with the left and right side of the image unseen.
Mode2: Image scaled to fit the screen, whole image displayed, but not to actual scale.



(ii)Video Resolution

There are 2 options here:
160×120:The video size is smaller and user can record and save more videos.
320×240:The video quality is better and takes up more memory so less videos can be recorded and saved.



(iii)Auto Screen Off

This function allows user to set the time for an Auto Screen Off.
There are 5 options: 5 seconds, 10seconds, 1minute, 3minutes and disable to turn it off(The auto screen off will be disabled after selecting this option. The clock will always be displayed, but the screen will become dim if there is no input for 10 seconds in clock display mode).
Tips: If the Auto Screen Off time is set to a longer time, then the battery consumption will increase and the time the battery lasts will become shorter.



(iv)Factory Reset

Factory Reset will erase the contents stored in the memory and reset all system settings to factory default, e.g. file index, frequency, video resolution, game level and clock face. Follow the instructions on screen to confirm the action.



(v)Language

Tap to select a language, and tap the icon to confirm.

Clock face

Tap the screen to choose your favorite clock display: analog or digital clock face.
Swipe the screen left or right to look at the different clock faces.



TROUBLESHOOTING:

Go through this section if you experience difficulty in operating

Problem	solution
The Smart Watch has stopped working	<ol style="list-style-type: none"> 1. Turn the ON/OFF power switch to OFF position for 30 seconds. 2. Turn the ON/OFF power switch to ON position again and then press the HOME button to turn it ON. It should now work properly. 3. If it doesn't work, try to recharge the battery and try again. (Refer to the battery recharging section for details)
Screen display is abnormal	<ol style="list-style-type: none"> 1. Turn the ON/OFF power switch to OFF position for 30 seconds. 2. Turn the ON/OFF power switch to ON position again and then press the HOME button to turn it ON. The screen display should be normal again.
Cannot connect to computer	<ul style="list-style-type: none"> • Check the connections on the USB cable between the watch and the computer and review the appropriate connection procedures in this manual. • Turn the ON/OFF power switch to ON position and connect to the computer again.
Image taken is not clear	<ol style="list-style-type: none"> 1. Make sure the lighting conditions of the shooting environment are good. 2. Check to see if the camera lens is clean. If you find some dust or dirt on it, please see the steps to clean the lens in Care and Maintenance.

SMART WATCH SPECIFICATIONS:

Display	1.5"sensitive color touch screen
Photo Resolution	640×480(0.3MP)
Video Resolution	320×240 pixel or 160×120 pixel @ 15 fps
Focus Range	1.5 feet - ∞
Internal Memory	128 MB built-in memory (shared with program data, actual memory available for user storage will be less)
Storage capacity	Photos:approx.800 Videos: approx. 6 minutes at 320×240 pixels,approx. 15 minutes at 160×120 pixels Note: The above numbers are approximations, the actual number depends on the shooting environments. The video length limit is 1 minute per file.
File Format	Photos : Standard Baseline JPEG Video : AVI (Motion JPEG)
Connectivity	Micro USB 2.0 cable (included) for connection with computer
Battery	Li-ion Polymer battery (battery is not replaceable)
Optimum Operating and Charging Temperature	0° C-40°C (32° F - 104°F)

Product specifications are subject to change without notice.

Note: This product is not designed to be immune from the effects of electrostatic discharge, strong electromagnetic radiation or other electrical disturbances since malfunction under such conditions is non-critical. The "Power Switch" is included in the design to allow the unit to be reset to normal operation in the event of malfunction, to reset the unit, just switch the Power Switch to OFF then switch it to ON again.

SYSTEM REQUIREMENTS:

PC Requirements:

PC with 486/66 MHz microprocessor or Pentium® Processor.
Operating System: Microsoft Windows XP®, Windows Vista® or Windows 7®.
50 MB hard disk space available.
USB Port: 2.0.

*Microsoft® Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Intel®, Pentium® are trademarks of Intel Corporation in the United States and other countries.
Mac Computer Requirements:
Mac OS® X10.0 or above
50MB hard disk space available
USB port: 2.0

*Mac, Apple, Mac OS are trademarks of Apple Inc., registered in the United States and other countries.

FCC CLASS B:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

CARE, MAINTENANCE & CAUTIONS:

- Keep Smart Watch in dry place and away from heat.
- Keep the rubber cover of the micro USB port closed tightly while it is not in use in order to prevent dust or water from getting into the micro USB port.
- Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by: • Blowing on the lens. • Gently wiping the lens with a dry cloth.
- Do not subject the device to severe impact or drop it from heights. Do not drop the watch on a hard surface and do not expose it to moisture or immerse it in water.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry and soft and clean cloth.

- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if: a) The battery level icon displays an empty battery. b) The device powers off automatically when restarted. c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- Do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- Do not dispose Smart Watch with normal household waste. Please obey your local regulations when disposing the Smart Watch.

NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This product conforms to safety requirements of ASTM F963.
This product conforms to PROP 65.
This product conforms to the EMC-Requirements as laid down by the Council directive 89/336/EEC



This is an electrical/electronic product and MUST not be disposed of in normal waste bins. When you wish to dispose of it please discard it at a collection point for electrical/electronic scrap.

PI-0GMT01-1E(Rev.1) Printed in China