 


Size: 80X120mm



## User Manual of Android MID



**MD7081**

---

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.





## Table of Contents

Important Safety Instructions.....	2
Connectors.....	4
User Operations.....	5
1. Boot and shutdown.....	5
2. Screen of opening and closing.....	5
3. Home menu.....	6
4. Application.....	6
5. Music.....	7
6. Settings.....	7
Specification.....	10



## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Only use attachments/accessories specified provided by the manufacturer, the product is supplied by AC adapter, the AC adapter is used as disconnect device, the disconnect device shall remain readily operable
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.



WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Never place heavy or sharp objects on the LCD panel or frame.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: The excessive sound pressure from earphones and headphones can cause hearing loss.



The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



CAUTION:

When the apparatus was in electrostatic circumstance, it may be malfunction and need to reset by user.

 
The USB memory stick should be plug in the unit directly. USB extension cable should not be used to avoid failing of data transferring and interference caused.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



## Connectors

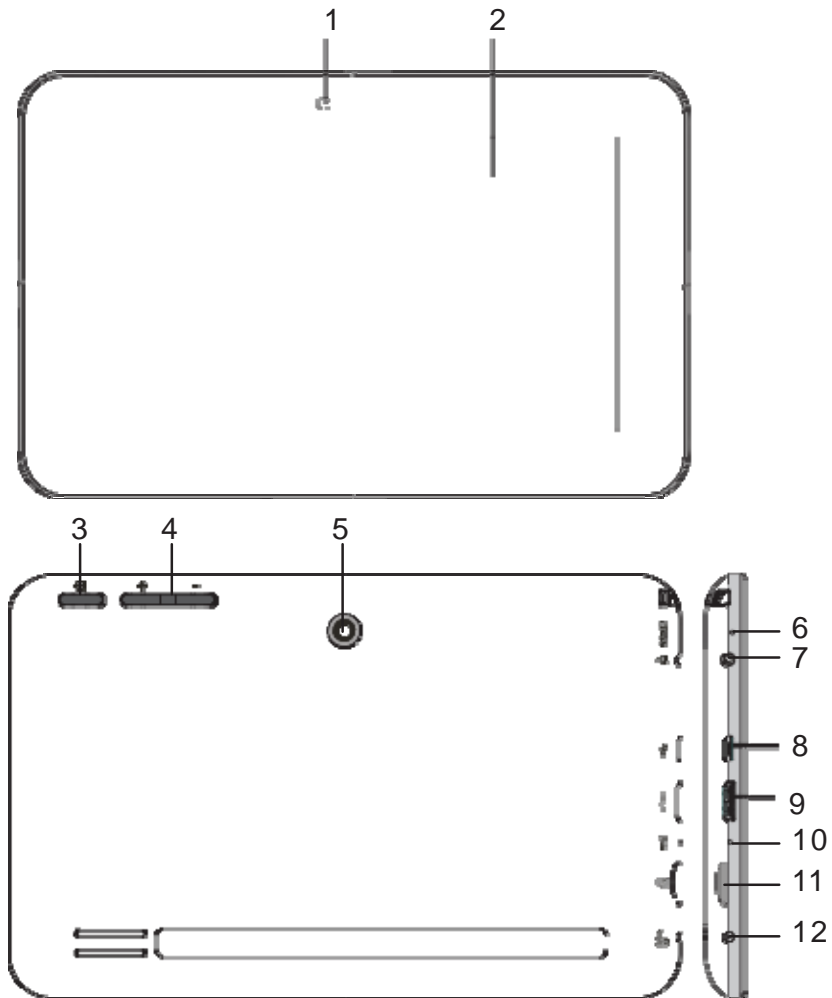

1. Front Camera
2. LCD Display+Touch Panel
3. Power
4. Vol+ / Vol-
5. Back Camera
6. Reset
7. Earphone
8. USB
9. HDMI
10. Mic
11. TF-Card
12. DC IN 5V

## User Operations

### 1. Boot and shutdown

#### Boot

After long pressing 4 seconds for the power button, you can see the boot logo. The system is access into screen locking status after opening.

 
#### Shutdown

1. Long press the power button, then will popup the "Power off" options.
2. Click "OK" button to shutdown.

### 2. Screen of opening and closing

It will be closed during the screen idling.

1. After idling period of time, screen will be automatically closed to save the battery.
2. In the screen opening condition, press the power button, the screen can immediately shutdown. Opening in screen closed condition. If screen is in the closed position, you can long press power button to activate the screen. Enter locked condition after opening it, press "lock" icon and slide right for unlocking.

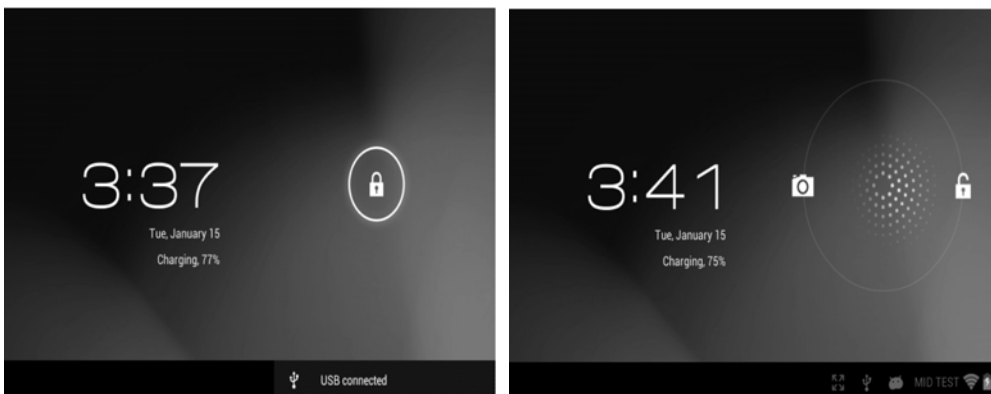

### 3. Home menu

The home menu screen will show the common application.

You can use the application short cut and customize your home menu interface. and press the application icon can directly run the application.



#### 4 . Application

- 1.Choose to visit the application.
2. If you want to quit the application menu , press the return icon to a page or press home icon to directly returns home menu.

 
#### 4.1 Install Applications

- (1) Install the apk file in external mass storage device by AppInstaller.
- (2) Download and install various applications in Android market or local app market.



#### 4.2 Uninstall Applications

Enter Settings application, select Apps->All, then select the application which you want to uninstall then press Disable button.

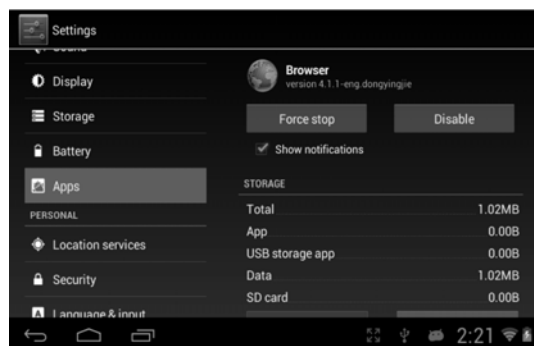

## 5. Music

Press the Music item to enter music player, choose the music files, then start to playback the file.

Your music is divided into five categories: artists, albums, songs, playlists and .Now playing. Choose a classification to check list contents. If you enter a classification, always choose until you

have to play songs. For example, if you choose the artist category, you will see A to Z

sequence of a list of names of art. If you choose a artist, the list will be presented artist

album songs and lists.



## 6.Settings

### 6.1Display Settings

 
Adjust screen brightness

1. On the application interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Display.
4. Click the brightness.
5. Popup Brightness Settings panel, drag to bright slider adjust bright degree.
6. Click sure.

Adjust screen sleep time

1. On the application interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Display.
4. Scroll down the screen, then click screen overtime.
5. Popup Screen sleep Time Settings, choose standby time you want the standby time.




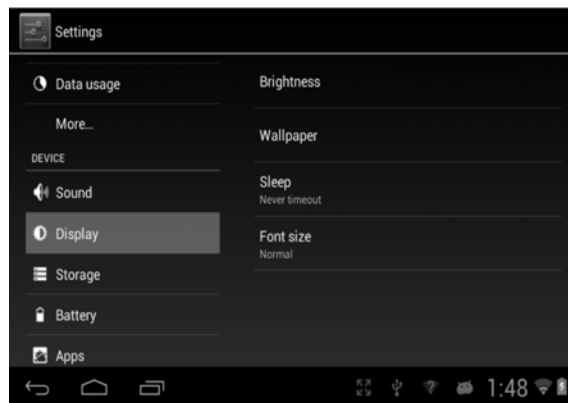

## 6.2 Date and time


According to preset, the system will automatically use date, time zone and time provided by network. If you automatically use time provided by the internet, you cannot manually adjust the date, time and time zone.

 1. On the application interface, press the menu button to popup setting menu.
2. Click Settings.
3. Scroll down the screen, then click the date and time setting.

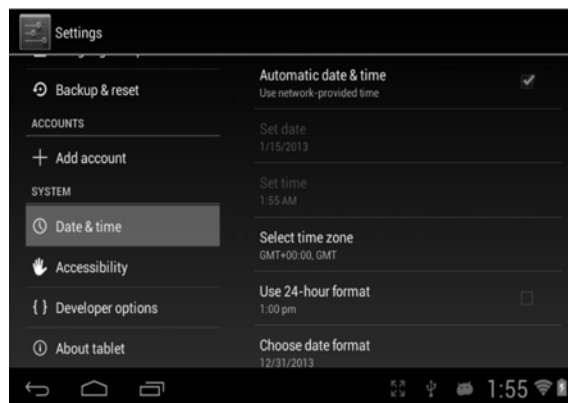

## 6.3 Set the language

 1. On the application interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click on language and keyboard.
4. Click to select language area, then choose words of your need. Scroll down the list to see more of the language.

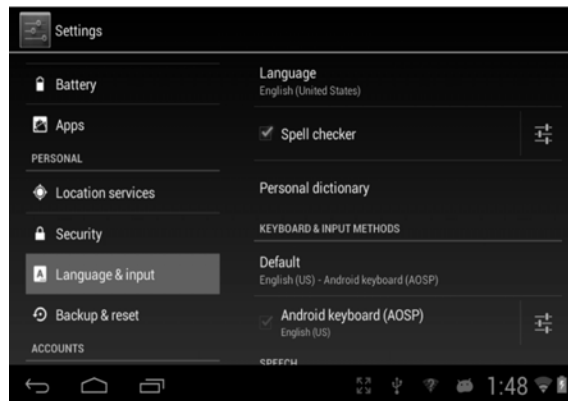

#### 6.4 WIFI connection

You can connect MID to Wi-Fi network, operation for connection:

1. In the application interface, click the menu button, then popup settings menu.
2. Click settings.
3. Click wireless and network.
4. Click Wi-Fi, then start Wi-Fi
5. Click Wi - Fi Settings, MID will automatically scan available Wi - Fi wireless networks.
6. Choose the Fi network which you want to connect. If it has add password, it will popup a input password window, then input relevant password.
7. Click on the link



## Specification

OS	Android 4.1
CPU	AM8726MX Dual-Core, ARM Cortex A9 family, CPU@1.0GHz (up to 1.5GHz) (Option)
Memory	1G DDR3
Storage	4GB
Display	7 inches digital panel
Resolution	1024x600
Touch Panel	Capacitive (G+G)
WIFI	802.11b/g/n
USB	1 x USB 2.0 OTG
TF Card	Up to 32GB
Camera	Front 30W / Back 200W
Earphone	3.5mm, Stereo
Power adapter	DC5V 1.5A
Battery	2800mAH, Li Polymer
Speaker	8Ω/1W
Size	193x123x11(mm)

Specifications are subject to change without notice.



This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved.



## FCC STATEMENT

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

