


封面 128克铜板纸



L1M
INSTRUCTION MANUAL

Welcome to use L1M wireless headset. Please read the instruction manual before using. This kind of headset was installed in the helmet. With wireless technology, it is design to help answering phone calls,controlling the playing music status and so on.

1.Button introduction

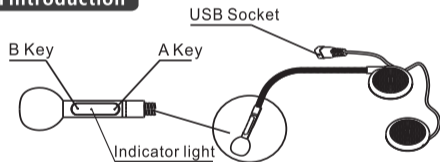

1

2.How to install

 


Stick to your earphones inside of the helmet

3.Paring

(1) After paired with your phone, L1M helps to answer phone calls, control the playing music status.

Activate your wireless to search for "L1M" on your phone and operate to pair with it (L1M should be turned on before this step).After connected successfully,the flashing blue and red light would change to 6s interval flashing blue light only. And there will be a short tone when connected or disconnected.



2

Priority : Phone calls>Music, when there is a coming phone call, the playing music would suspend. After phone dialogue, the music would resume to play automatically.

4. How to operate

1. Power on	Press and hold "A" button until hearing a voice prompt "Welcome to use FreedConn product"(about 3s). The blue & red light would flash alternatively (Without any operation for 5 minutes, it would shut down automatically.)
2. Power off	Press and hold "A" button until hearing a voice prompt "Power Off" (about 3 seconds). The red light would fade after 1s.
3. Answer the call	Without any operation for 10s, L1M would help to answer the coming phonecalls automatically under the pairing status. Once answering the call, you will hear a short tone "di" and the blue light would flash quickly.
4. Reject the call	Press and hold "A" button until hearing a short tone(it is about 2 seconds).

5. Terminate dialogue	Press "A" button for once and you will hear a short tone"di".
6. Voice dialling	Double press "A" button to make a call under the not occupied status.
7. Play / pause music	Press "A" button for once to play or pause music.
8. Next song	Press and hold "B" button for 2s to play next song. Press and hold "B" button until reaching your favourite song.
9. Up / low the volume	Press "B" button to increase the volume. The volume to the maximum will be a tone, continue to press the "B" button, the volume becomes the smallest, the cycle.
9. Chinese and English voice switching	In the absence of pairing with any device, double-click the B key.

11. Clear the pairing record

First press the "A" then press the "B" button for 2 seconds, until the red light flashes for 3 times, you have been successfully cleared the pairing record. (You could clear the pairing record when the music is not clear or not smooth to listen. Repair it with your phone to improve the voice quality).

5. Power indication

- (1) The blue light would flash every 6s when the power is full.
- (2) The red light would flash every 6s when the power is low and there will be a short tone every minute to remind you the low power status.
- (3) The red light keeps on status when it is charging.
- (4) The blue light keeps on after fully charged (about 2.5h).

5

Attention: the battery capacity is 250mAh and the standby time is 70h, which can work continually for 7h.

6. Maintenance

- (1) Don't keep L1M in the too hot or too cold place, the suitable temperature should be between -40°C and $+60^{\circ}\text{C}$.
- (2) Don't put L1M into fire, there is explosion danger.
- (3) Don't keep L1M close sharp objects.
- (4) Don't try to open L1M.
- (5) Keep L1M in a dry and cool place when not used. And for better use please charge it regularly.

6

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty Card

1
Year
Warranty

Model Number : L1M

Please keep your purchase receipt together with your warranty card & "invalid if removed" label

Name: _____

Address: _____



After sale service: service@fdcdz.com

Please affix a copy of invoice on the back of warranty card as a proof of purchase date.
If you find any problems during use of our product, please contact our after sale service.
Please make sure that you describe the problems clearly on warranty card so that we can handle them timely.

Failure Description: