



CRAIG[®]

STEREO HEADPHONE


With Bluetooth[®] Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CBH508X

Size: 148.5(W) x 210(H)mm (A5)





 
 
FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on the circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.



Location of Controls

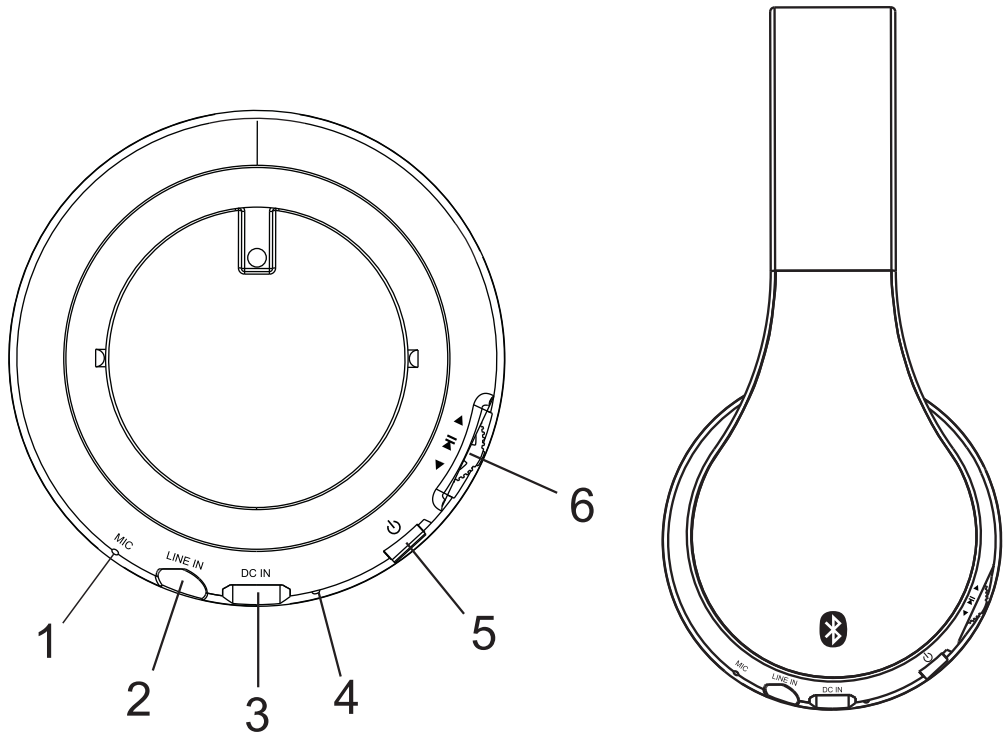 

- | | |
|---------------------|------------------|
| 1. MIC (Microphone) | 4. Indicators |
| 2. LINE IN Jack | 5. ⏻ Button |
| 3. DC IN Jack | 6. Toggle Switch |

Battery Recharge:

The unit has a built-in Li-ion rechargeable battery, recharge it before use or when the battery is consumed as follow:

1. Connect the small plug from the supplied USB Connection Cable to the DC IN Jack (Micro USB Port) on the unit.
2. Connect the other plug to the USB Port on the Computer or any USB Charger having DC 5V output (Computer and USB Charger not included).
3. During charging, the Red Charging Indicator will illuminate. When finished, it will turned off.

Notes: Your battery will last longer if you follow these simple guidelines for charging and storing it.

- A. Before first time use, charge the unit approximate 2 hours until the unit is fully charged.
- B. Recharge and store the device within the temperature range of 5°C~35°C (40°F~95°F).
- C. Do not overcharge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not replaceable.

Operation:

BT (BLUE TOOTH):

In first time use or re-pairing to a new BT Device, pairing it as below:

1. Press and hold the “⏻” Button on the unit approximate 1 second to power on the unit. The Blue Indicator will illuminate and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing as the on screen instructions on the external BT Device. After paired, the Blue Indicator will stop blinking.
3. Plays the music in the paired BT Device as usual.

Notes:

- When the external BT Device searched the unit, our model number “CBH508X” will appear on the display of external BT Device.
- Pairing code “0000” or “1234” may need to enter.

Normal operation after paired:

1. Press and hold the “⏻” Button on the unit approximate 1 second to power on the unit. The Blue Indicator will illuminate and blink.
2. Wait a few seconds until the unit auto paired to the external BT Device. The Blue Indicator will stop blinking.
3. Plays the music in the connected BT Device as usual.

4. During playback:

- Press the Toggle Switch to pause; press again to resume normal playback.
- Slide the Toggle Switch to front (or rear) and hold to adjust the volume level as desire.
- Slide the Toggle Switch to front (or rear) then release to skip tracks.

Repeat the same procedures until the desired tracks was selected and play.

5. If the unit is paired to a cell phone. When a call is incoming, press the Toggle Switch to hook off then speaker to the MIC (Microphone) to answer the phone. When finished, press the Toggle Switch to hook on then the unit will auto resume to playback.
6. To power off, press and hold the “⏻” Button approximate 3 seconds until the Red Indicator is illuminate and blink then release the button.

LINE IN:

Listen music from the external Audio Player as follows:

1. Connect one end of the supplied Audio Connection Cable to the LINE IN Jack on the unit.
2. Connect the other end to the Phones Jack; Line Out Jack or AUX Out Jack on the external Audio Player.
3. Press and hold the “⏻” Button on the unit approximate 1 second to power on the unit. The Blue Indicator will illuminate.
4. Plays the music on the external Audio Player as usual.
5. During playback, slide the Toggle Switch to front (or rear) and hold to adjust the volume level as desire.
(Make sure the volume level of the connected external Audio Player is set to high. Otherwise, sounds from this unit will weak.)
6. To power off, press and hold the “⏻” Button approximate 3 seconds until the Red Indicator is illuminate and blink then release the button.

IMPORTANT: If the Audio Connection Cable was inserted into the LINE IN Jack, the BT (Bluetooth) function will be auto turned off. Unplug the connection cable from the LINE IN Jack before use BT.

Troubleshooting:

| | | |
|--------------------|--|---|
| Can't be power on | The built-in battery was consumed. | Recharge the battery. |
| No sound | Volume was set to minimum level. | Slide the Toggle Switch to front (or rear) and hold to adjust the volume level as desire. |
| Sound distortion | Volume level too high. | Slide the Toggle Switch to front (or rear) and hold to adjust the volume level as desire. |
| BT not functioning | The External BT Device had not paired to the unit. | Paired the External BT Device to the unit as previous procedures. |
| | The External BT Device too far from the unit. | Place the External BT Device close to the unit. |

Specifications:

Power Source:.....Built-in DC \approx 3.7 V; 400 mA (1.48WH) rechargeable Li-ion battery, recharge by DC \approx 5V through Micro USB Port

Impedance of Earpiece:.....32 ohm, 25 mW x 2

Audio Power:.....22 mW per channel

BT Version: V4.1+EDR

BT Effective Range:.....32 Feet in open area

 
 
Accessories:

1 x User's Manual

1 x USB Connection Cable (For charging only)

1 x Audio Connection Cable with 3.5mm Stereo Plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE





Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

  This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email: service@craigelectronics.com