

75mm

7.SAFETY

- Do not use it at temperature over 167°F/75℃.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.

WARNING

1. This appliance can be used by children aged from 18 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

2. Children shall not play with the appliance.

3. Cleaning and user maintenance shall not be made by children without supervision.

4. The product must only be supplied at SELV.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


SHENZHEN S-HANDE TECHNOLOGY CO., LTD
WEB: WWW.SEXHANDE.COM
Address:2/F, Building 8, Xinxintian Industrial Park,
Xinsha Road, Shajing Street, Baoan District, Shenzhen, China
Made in China

1. SIZE

Vibration egg :

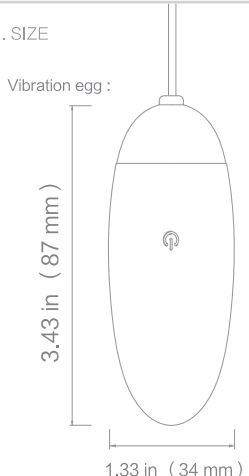


Remote:

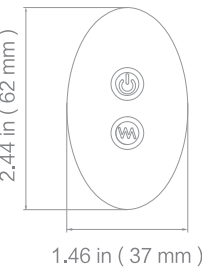 

QUICK START GUIDE


2. ON / OFF

Vibration egg :



Hold on 3s

Remote :

 


Hold on 3s


3.DISTANCE

Control Distance:

<10m

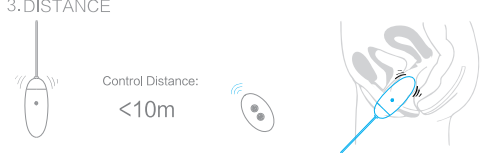

4.CHANGE PATTERN




9 PATTERNS

5.USB CHARGING

***WARNING: Please DO NOT use adaptor with ">5V" output**

 
***Please make sure your toy is fully charged while the first time**

Vibration egg :

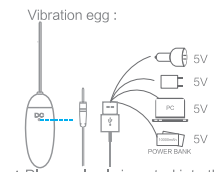

Remote:

 Please remove the plastic insulator before using it for the first time.

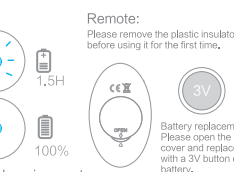

Battery replacement: Please open the back cover and replace with a 3V button cell battery.

★ Please slowly inserted into the DC charging port.

6.PRODUCT CLEANING

- Clean Please clean product with warm water or antibacterial soap.
- Wipe Dry the product with clean cloth or towels.
- Save Keep the product in a cool, dry and clean place.
- Attention Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

150mm