

M60

**USER MANUAL**

## Content

1	Foreword.....	4
1.1	Acknowledgements .....	4
1.2	Announcements .....	4
1.3	Safety tips .....	4
1.4	Abbreviations/terms .....	5
2	MID Brief Description .....	6
2.1	MID Graph .....	6
2.2	MID Parts introduction .....	7
2.3	MID Use and preparation .....	7
2.4	MID State and inform.....	7
3	Quick tart.....	9
3.1	Button function .....	9
3.2	Boot and shutdown .....	9
3.3	Screen of opening and closing.....	10
3.4	The use of touch screen.....	10
3.5	Page interface .....	11
3.6	Access to the application.....	12
3.7	Storage card.....	14
3.7	Input text .....	14
3.9	Use skills.....	16
4	Establish connections.....	16
4.1	WIFI connection .....	16
5	Communication.....	18
5.1	E-MAIL.....	18
6	Multimedia.....	19
6.1	Support the file format.....	20
6.2	Music.....	21
6.3	Video.....	21
6.4	Photo gallery .....	22
7	Internet.....	22
7.1	Browser.....	22
8	Other applications.....	24
8.1	Alarm clock .....	24
8.2	Calculator .....	24
8.3	File Manager .....	25
9	Basic Setup.....	27
9.1	Sound and Display .....	27

9.2 Safety and Position.....	28
9.3 SD Card and Storage .....	28
9.4 Date and time .....	29
9.5 Set the language .....	29
9.6 About the equipment .....	30
10 The installation of program.....	30
10.1 Installation .....	30
10.2 Uninstallation.....	31
11.2 Renew Default Factory Settings.....	31
12 Troubleshooting.....	33
Appendix 1.....	34

## **1 Foreword**

### **1.1 Acknowledgements**

Thank you for choosing our products. Products for MID(Mobile Internet

Device), This is a kind of mobile Internet equipment, delicate and cabinet, easy to carry. Equipped with a high resolution 7" LCD touch screen, can see high-definition video and images. Support to install multiple office, entertainment etc applications. The dazzle cruel interface can let you have new user experience.

This manual introduces the various functions, using skills and announcements.

Please read the manual carefully before using MID.

## **1.2 Announcements**

### **Maintenances**

- Please keep MID dry. Do not let equipment, battery charger contact water and vapour, or use wet hand to operate equipment or charger. Lest cause short-circuit, corrosion caused by equipment failure, and personnel.
- Don't make equipment, battery and charger strongly impact or vibration. Lest cause equipment, battery and charger fault, fire or explosion.
- Don't put this equipment, battery and charger in the too high or too low temperature region. Otherwise you may cause equipment, battery and charger fault, fire or explosion.
- Do not hit, throw, acupuncture the MID, and avoid drop, extrusion, bending MID.
- Do not unauthorized equipment and accessories, otherwise the equipment and accessories will not in the company's warranty scope.

## **1.3 Safety Tips**

Before you use the MID, please read this section information and let your child know these information. For detailed information, please refer to the safety guidelines and note.

- Do not use MID in driving, in order to prevent the safe driving.
- In medical sites, please comply with relevant provisions or regulations. Please close MID near the medical equipment area.
- Please close MID or open planes mode when you are boarding, to avoid wireless signals jamming aircraft control signal.
- Please close MID near the use of high precision electronic equipment, otherwise it may lead to electronic equipment disabled.
- Do not unauthorized to remove MID and accessories. Only authorized institutions can repair this MID.






 













- Please put MID away from magnetic equipment. The radiation of MID will erase information which is on magnetic storage device.。
- Please don't use MID in the high temperature and flammable areas (such as near gas station ).
- Please don't put MID and accessories in this place which children can touch it, please do not let the child use MID in unsupervised.
- Please abide by the relevant laws and regulations when you use the MID, and respect others lawful rights and privacy.
- Please don't use MID in the damp environment such as bathroom etc.And avoid the MID soaked or flushed by the liquid .

#### 1.4 Acronym/terms


Acronym/terms	Full name	Instruction
MID	Mobile Internet Device	Mobile Internet terminals
WIFI	Wireless Fidelity	Based on the IEEE 802.11B/G standard wireless LAN
TF	TransFlash	Also call : Micro SD

## 2 MID Brief Description

### 2.1 MID Graph

	New email		Mute
	New instant messaging		GPS opening and working
	New voice mail		Uploading/downloading
	Pending event		Download is completed
	Alarm opening		
	Music playing		
	Data synchronization		
	Insufficient SD card space		More
	WIFI service already connected ,network available		Battery changing sign
	Flight mode		Charging
			No SD card
	General notice (such as: synchronization error)		

**Process Manager symble**

1)When you use fingers or touching pen to pull down this symble  , then you can see the following pictures,you will know how many running applications.

2) Press “Process Manager”, enter the following picture:



### 3 Quick start

#### 3.1 Button function

Key functions illustration:

Power ON/OFF key	<ul style="list-style-type: none"> <li>● Long press this button for start</li> <li>● In power on condition, long press this button pop-up shutdown options.</li> <li>● In power on condition, press this button to turn off the screen</li> </ul>
Menu button	<ul style="list-style-type: none"> <li>● Press this button to open the interface menu</li> <li>● Press this button to unlock in the lock screen condition</li> </ul>
Back button	Press this button to back a previous operation procedure or previous operation interface.
Home button	<ul style="list-style-type: none"> <li>● Press this button one time can return to Desktop</li> <li>● Long press this button can see some application icon used recently.</li> </ul>

 
#### 3.2 Start and Shutdown

##### Start

After long pressing 2 seconds for the power button, you can see the boot

logo.

1 mins later,two kinds of desktop style will come out.

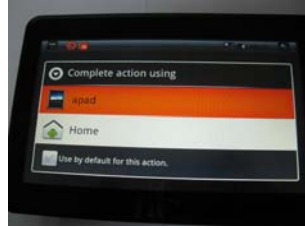

We suggest you choose “ apad”,bez we have install many application on destop

And also you can see 3D destop and 3D wallpaper when you enter “MENU”.

. Choose “Effects-Settings” to choose 3D effect,when you slide the homepage,you can feel 3D desktop effect.



### Shutdown

1. Long press the power button, then popup "shutdown" options.
2. Equipment options have silent mode, flight mode and shutdown.
3. Click the shutdown.

### 3.3 Screen of opening and closing

1) When you ignore MID some time, the display will be automatically closed to save the battery and sleeping condition.

Tip: if you need to find out how to configure screen closing time please refer to chapter 9.1.

2)In the screen opening condition, shortly press the power button, the screen can immediately closed to save the battery.

3)If screen is in the sleeping position, you can shortly press “Back key” to open screen and enter locked condition. Pull up "lock "icon and slide up for unlocking, and holding up " voice "icon and slide down for mute condition with finger or touching pen.

4) When it is locked condition, you can press “MENU” to unlock.





### **3.4 The use of touch screen**

MID operation mode

There are several ways you can browse screen , menu and application, etc on the MID.

#### **Click**

When you want to use the screen keyboard to input and choose applications etc on the home page, as long as you click a project with finger or touching pen .

#### **Press Long time**

If you want to open a available options (such as the text box or web link) or move shortcut and main program menu on the homepage as long as you long time press the items.

#### **Fast sliding or sliding**

Fast sliding or sliding said in his fingers or touching pen making rapid vertical or horizontal drag action.

#### **Drag**

Before you start to drag, you must use a finger or touching pen to press and put some pressure on, until touch to the position which you want, finger can loosen.

 
#### **Rotating**

For most picture , you can only turn to MID then screen will translate from lateral direction to straight . Such as in the input text, watch movies, etc.

### **3.5 Desktop interface**

The main menu screen will show all applications . You can use the

application, shortcut and customize your homepage interface wallpaper, etc.

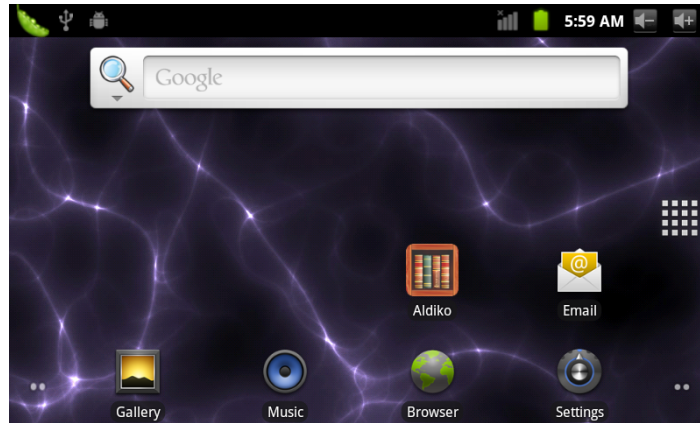

Tips: in any applications HOME key can be pressed returns to the home page.

### **More Extended Homescreen**

Desktop interface can be extended to screen width, to provide more space, let you can put new shortcut, small tools etc. Press blank place of desktop interface, then use touching pen to rapidly vertical slide which can skip to extend to the left or right of screen. Desktop have above 2 extended interface.

### **Customize home screen interface**

 
#### **New home screen item**

- 1 long time press on the popup menu in the blank area of the interface of the homescreen. .
- 2 During the popup menu, select the wanted item to add to a new homescreen interface.



### **Change desktop wallpaper**

1. In the homepage interface, according the menu button to popup menu, then click the wallpaper.
2. Click the picture or wallpaper to select pictures.

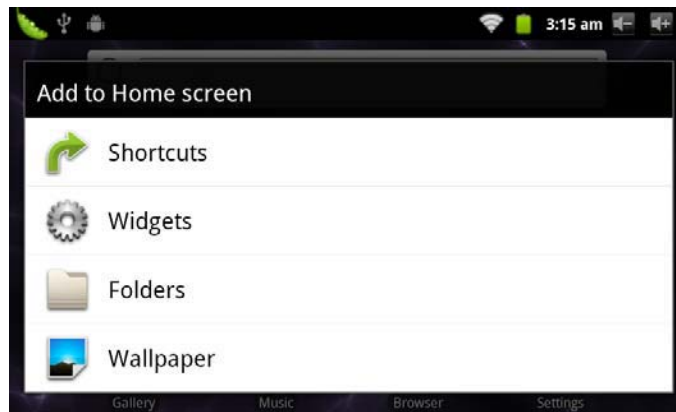


### Establish new folder

1. In the homepage interface, according to the menu button and click addition.
2. Click the folder, and new folder.
3. Click new folder of homepage interface to open it.
4. Click and hold the folder list of headlines to rename it.
5. Open the folder, click the application of marking, holding the application to drag folders, then may put in the folder.

### 3.6 Access to the application

How to access to MID application.

 1. Please click program label. “
2. Choose to visit the application.
3. If you want to quit program interface, press the return key to a page or press homepage key to directly returns home interface .

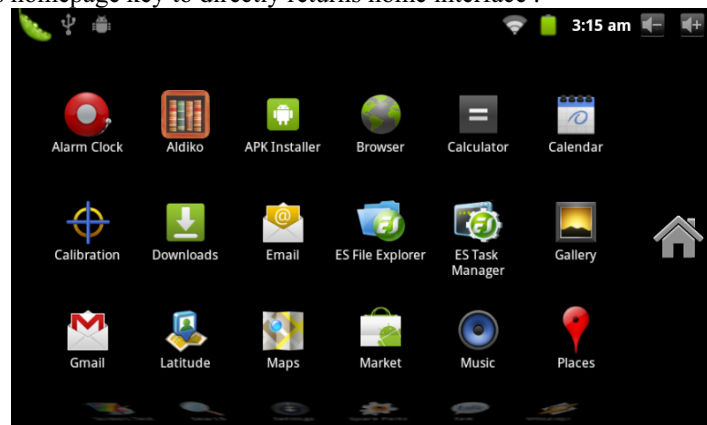

### 3.7 Storage card

Copy files to storage card

You can transfer file between MID and computer such as music and pictures, etc. Want to see the file, provided that you click file browser, then you can browse to the contents of the SD card.

Delete the file on the MID memory card.

1. Find the file you want to delete .
2. Hold the file which you need to delete , then it will popup the file menu .
3. Click "delete"

Remove memory card in the MID opening condition.

If you need to remove memory card in the MID opening condition, you must firstly unload memory card, lest memory card faultor damaged.

1. In the homepage interface, press the menu button and then click Settigs.
2. Drag down setting menu, and then click the SD card and equipment memory.
3. Click the "Unload SD card"

### **3.9 Input text**

Use the screen keyboard

When you start programs or select text edit box which need to input text or number ,it can appear screen keyboard.

Keyboard have optional input way below:

1. Android keyboard
2. Google pinyin input method

 
Select the input method which you want to use .

According to preinstall ,MID will display Android keyboard when you want to input word.


1. On the homepage interface, press menu button and then click "Settings".
2. Click the language and keyboard.
3. List all installed input method of MID in the text setup area.
4. Tick after the input method which you want.

Use and switch input method

1. On the text input interface, hold text edit box area until it popups "edit text menu ". then click the input method.
2. Select the input method which you want to use.

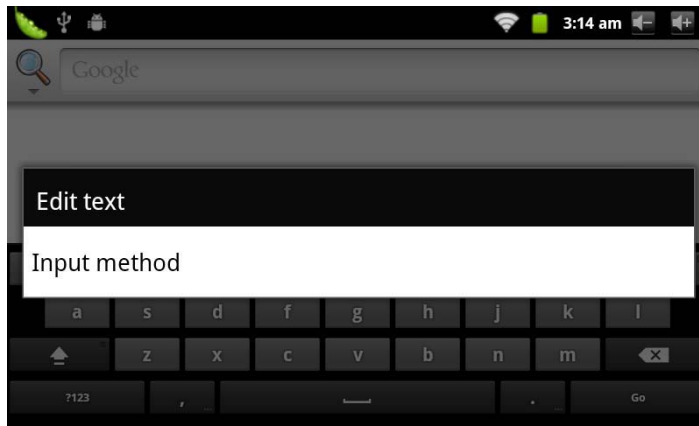

Use Android keyboard panel

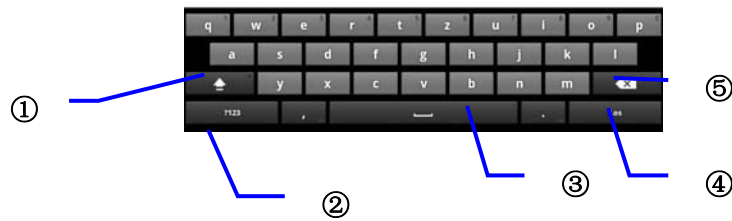 

1	Switch input case-sensitive
2	Switch text input mode and coincidence /digital input mode
3	"Click "can insert spaces
4	"Click "can perform "enter"
5	Delete the characters of the left cursor . Click and hold can delete all the characters of the left cursor.

### 3.10 Use skills

Open recently used applications

In any programming interface you can hold homepage keys, the screen will popup program window, window displays recently



used application.

#### **Add small tools on the table**

In the homepage interface, hold the blank area, popup menu, click the plugin, listing will list attached plugin of applications ,such as music, picture frame, clock, search, etc.

#### **Switch input method**

Hold the Chinese edit box of system, popup menu, click the input method.

#### **Quick close the program**

Press the back button back to superior interface ,or press homepage button back to the homepage interface.

 
## 4 Establish connections

### 4.1 WIFI connection

You can connect MID to Wi-Fi network, operation for connection:

1. In the homepage interface, click the menu button ,then popup settings menu.
2. Click settings.
3. Click wireless and network.

4. Click Wi-Fi, then start Wi-Fi
5. Click Wi - Fi Settings, MID will automatically scan available Wi - Fi wireless networks.
6. Choose the Fi network which you want to connect. if it has add password , it will popup a input password window, then input relevant password.
7. Click on the link

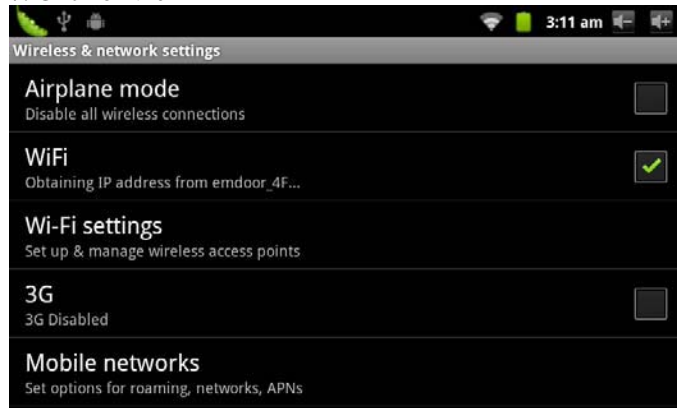

## 5 Communications

### 5.1 E-MAIL

#### E-mail Settings

E-mail applications accompany with email settings guide, it can add the common Web email service providers (e.g. Gmail, Yahoo, Hotmail and 163 etc manufacturers) external POP3 or IMAP email account.

 
Note: before the mail will be setted guide, please ensure that you already link the network.

#### Mailbox setting guide

1. Click the email icon , then it will appear mailbox setup guide to help you to set.
2. Click the next step button.
3. Enter your email account address and password.
4. Click the next button, and select your mailbox type : POP3 or IMAP.
5. Then click next button to check whether email server is available.



6. Input account name and to display the name , then click completion.
7. If the mail is available,it will automatically enter your inbox.

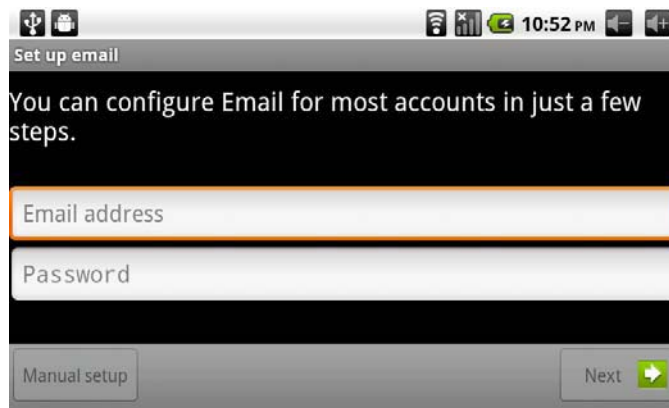

#### **Delete email accounts**

You can delete setted POP3 or IMAP email accountfrom your mobile phone

1. Click E-mail
2. Enter to your inbox
3. Press menu key
4. Click "account "
5. Press long time " account " which you want to delete.
6. click menu button, and click" delete account"
7. Click the" sure "can remove it.

#### **Send E-mail messages**

1. Click the E-mail, display your inbox.
2. Click the inbox to enter in, automatically refresh email, click to read.
3. Press the menu button,and popup menu.
4. Click "compose", enter to write a new mail interface
5. Input your E-mail address of the recipient in the recipient column .
6. Input theme and information content.
7. If you want to add attachments, press the menu button, and then popup menu options.
8. Click "add attachments"
9. Select attachments which you want to send (such as video, images, etc.)

10. Click "send E-mail" and then sent email out.

Note: If you have more than one account, and hope to send an email in one account, click that account title in advance before you click main mune key and write email.

## **6 Multimedia**

### **6.1 Support the file format**

Your MID can play the following formats .

Music file format

- ◆ MP3
- ◆ AAC(AAC、AAC+、AAC-LC)
- ◆ OGG
- ◆ MIDI
- ◆ WAV

Video format

- ◆ AVI(H.264、DivX、XviD)
- ◆ RM/RMVB
- ◆ MKV
- ◆ WMV
- ◆ MP4
- ◆ DAT
- ◆ VOB
- ◆ FLV

### **6.2 Music**

Your music is divided into four categories: artist, album, songs and playlist. Choose a classification to check list contents. If you enter a classification ,always choose until you have to play songs. For example, if you choose the artist category, you will see A to Z sequence of a list of names of art. If you choose a artist,the list will be presented artist album songs and lists.



Visit and broadcast music

1. Click the music.
2. Click songs, also can click artist, album or song list.
3. Choose one song to play.

Add song to the new playlists

1. Click the music.
2. Click the songs.
3. Hold the song which you want to add to playlists.
4. Popup music setting menu, click to add music to play lists.
5. Click the New.
- 6 Input name of playlist.
7. Click to save.
8. Click on a song, add this song as bell .

Delete the playlist

1. Click the music.
2. Click the songs.
3. Hold the song which you want to delete to playlists.
4. Popup music setting menu, click "delete " .

### 6.3 Video

Visit and play video file


1. Click on Video Player.
2. Enter into video files list in memory card.
3. Click the file you want to play.
4. (such as many players ) Choose corresponding players to play.
5. Enter into video images , began to play.

### 6.4 Photo gallery

Photo applications can be automatically search photos and video files on the SD card . And the images gallery will classify these phones and vedio documents. You can use a gallery applications to view and edit photos, put photos as desktop and watch vedio.

Check

 pictures

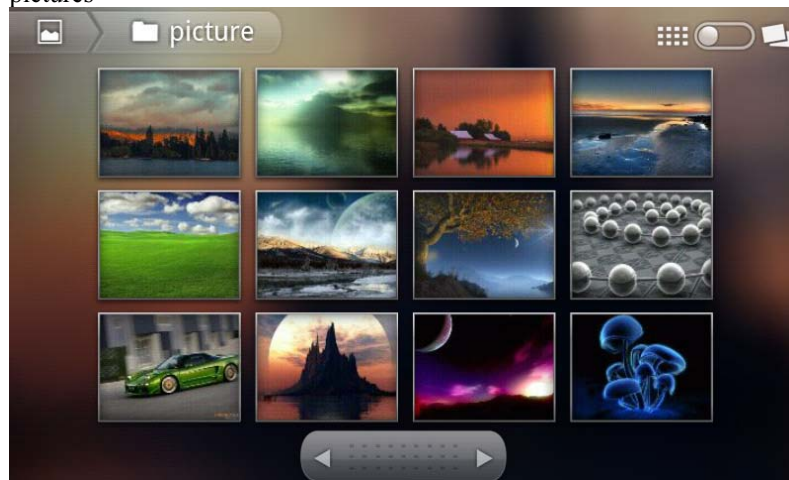

1. Click the folder you want to see to check included pictures .
2. Click pictures you want to see, the system will automatically check in full screen mode.
- 3.Touch screen,it will appear arrow around the picture, please click the arrow to see superior or next picture.
- 4.Touch screen, zoom-panel will appear in pictures below, you can magnify and narrow the pictures.

Skills: image browsing support automatically rotating function. When you spin MID ,the picture will automatically adjust direction of rotation.

Edit and set images

Press menu button to display option of menu in full screen mode, you can select the option to edit and setting up the picture according to your needs.

- Slide presentation

Press the menu button to show menu options. Then click slide presentation. All the pictures will be to slide folder broadcast to display.

- Sharing

 
- 1.Press the menu button to display menu option, and then click "share".
- 2.The picture will share with your friends via email attachment .

- Rotating

- 1.Press the menu button to display menu option, and then click "rotating".
2. Click the left or right rotation.

- Cutting

1. Press the menu button to display menu option, and then click “cutting”
2. Click on drag related region to adjust cutting device.
3. Click on cutting device to drag out from centre, to adjust cutting size.
4. Adjust the size you want, click save.
5. If you want to abandon cutting, click "give up"back to browse pictures.

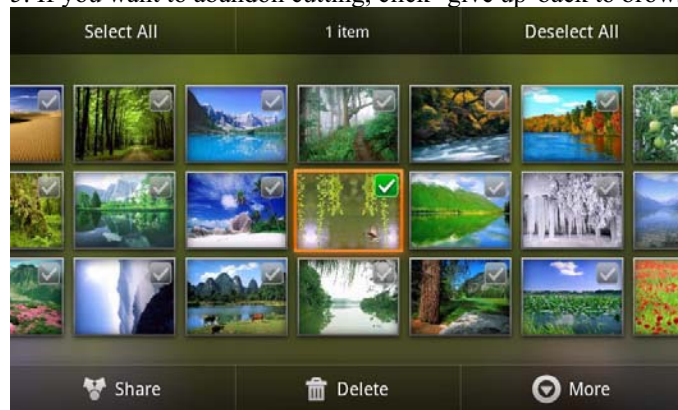

7 **Internet**

## 7.1 Browser

Enter into homepage

The browser always habitually open the last web users have browsed the web, the homepage will appear when it enters into the browser on boot.

Change your Home Page

1. Click on the browser.
2. Press the main menu, popup settings menu of browser.
3. Click more.
4. Click Settings.
5. Click Settings homepage.
6. Input website, and click "ensure".



Visit website

1. Click on the browser.
2. Press the main menu, popup settings menu of browser.
3. Click "start", popup the address bar, input url.
4. Click start in the soft keyboard.



**Browse website**

You can slide finger on screen to browse and check other part of webpage.

**Enlarge or shrink pages**

After opening webpage when you drag webpage, the browser below will appear enlarge and zoom-out button. you can click "enlarge" or "reduce" to browse webpage.

**Find the words in webpage**

1. When browsing the web, press menu button, popup menu options.
2. Click more.
3. Click on a page to check.
4. Enter your search projects.
5. When you input characters, words can change from white to green.
6. Click arrow on search column to move last or next one consistent supremacy.

**Management bookmarks****● Settings webpage bookmarks**

1. Go to a web page in the browsing interface.
2. Press menu button and click the bookmarks, then click addition bookmarks.
3. Edit bookmarks and click the sure.

**● Opening bookmarks**

1. Press the menu button and click the bookmarks in the browser interface.
2. Click the bookmarks which you want to use to open the webpage.

**● Editing bookmarks**

1. Press the menu button and click the bookmarks in the browser interface.
2. Click and hold bookmarks to open the menu options.
3. Click the edit bookmarks to edit it, then click sure.

**Use the browser window****● Open a new browser window**

1. Open the browser window, click the menu button and a new window.
2. Click the new window to open a new browser window.

**● Switch browser window**

1. In the browser window, press the menu button and click on the window.

2. Click window you want to open it.

 
- Set browser

In the browser interface, press the menu button and click more, then click Settings to set the browser.

## 8 Other applications

### 8.1 Alarm clock

1. Click the clock program.
2. Enter into programming interface such as figure 8-1.
3. There were pictures, music, alarm clock and page buttons.
4. Press the menu button, pop-up alarm setting menu.

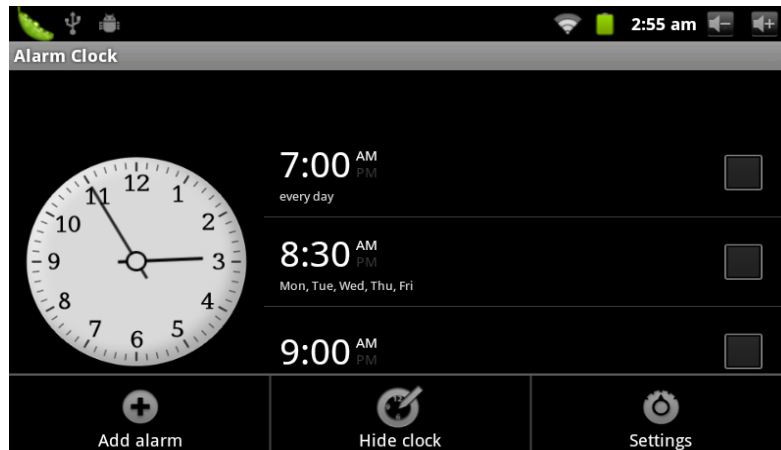

### 8.2 Calculator

 
1. Click the calculator.
2. Enter into the basic calculator panel.
3. Press the menu button , then click the advanced panel.
4. Touch panel digital or operators on the counter to calculate.

Skills: you can slide to switch basic panel and senior panel.

### 8.3 File Manager




Browse the file  
Sliding desktop, and find “ ES File Explore”.  
Then you can see the content of “ nand “ ,” SD card “

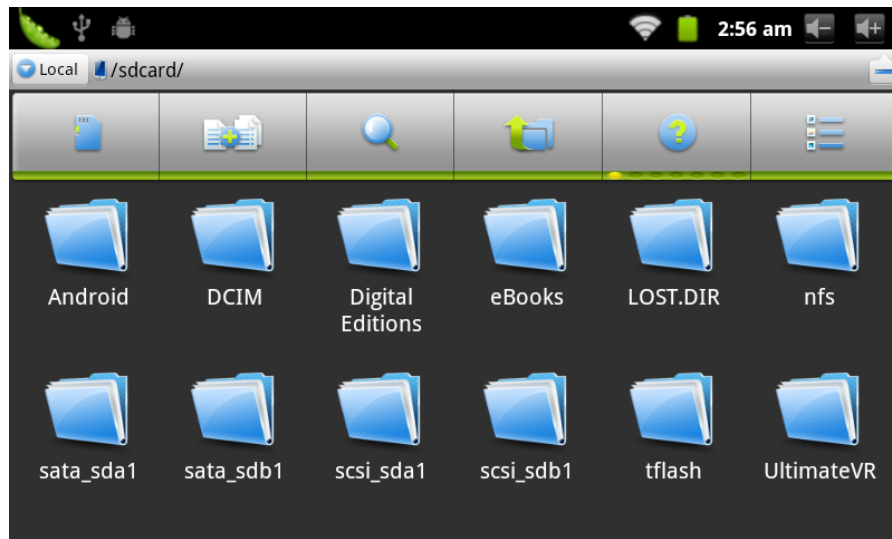


Pls enter the “Local “ button, then you can see “ LAN” ,” FTP”,” Bluetooth”(if have Bluetooth module build inside” to share the file information with other computers or MID.

 
Choose “LAN” , then enter “LAN Shares”

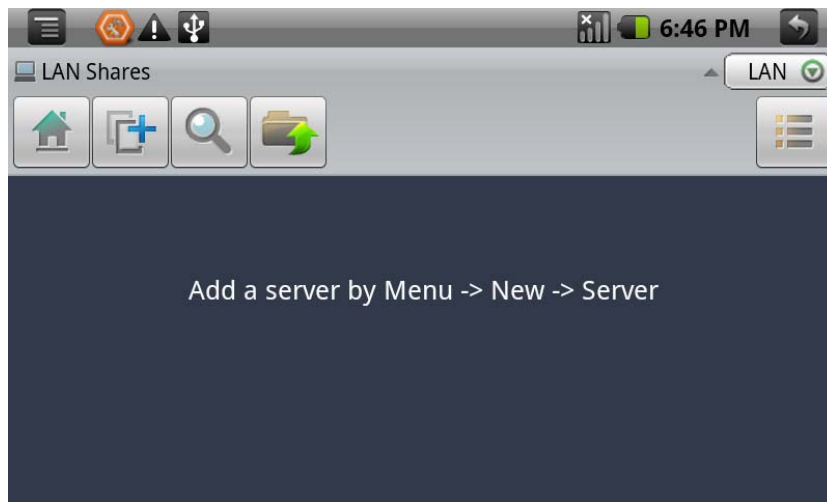

 Press "MENU" button, then display the following:

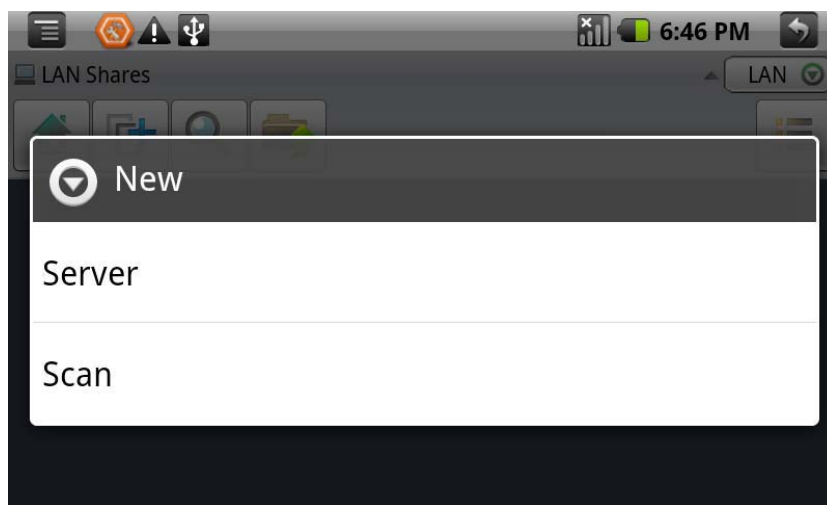

 Press IP server address, user name, password, then you can share information with other computer or MID.

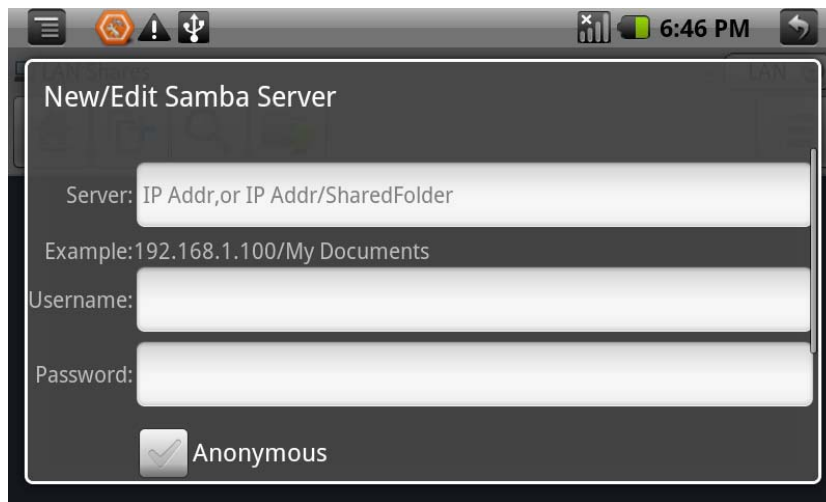

#### Cut and copy files

1. On the file browser, press operation documents with finger.
2. Popup operation menu , including copying, cutting, deleting, rename, new, setting of content and attributes.
3. Click " cut" or "copy" to cut and copy folders.
4. Click the folder you want to paste into, press the menu button to popup menu.
5. Click "operation" ,then click" paste".

#### Delete the file

1. Use fingers to hold the file you want to delete in the file browser.
2. Click "delete".
3. Click "sure" to delete files.

#### Establish folder

- 1 On the file browser, press the menu button to popup menu.
2. Click "new".
3. Click the folder.
4. Popup window, input new folder name in the text box.
5. Click "sure" to establish the folder.

#### Quick search

1. On the file browser, press the menu button to popup menu.
2. Click "new".
3. Click "search".
4. Popup search panel, input your search keywords.

5. Click on "sure", notice bar will display search progress bar.
6. After the completion of the search ,popup dialogue box to confirm whether need to show results.
7. Click "sure" to display search results.

## **9 Basic Setup**

### **9.1 Sound and Display**

#### Media volume Settings

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Sound and Display.
4. Click on Media Volume to control the volume of music and video.
5. Popup Volume Settings panel, then drag the progress bar to control.

#### Ring Settings

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Sound and Display.
4. Click the Ring Notice.
5. Popup ring menu, and select the bell ring you want to notice.
6. Also can click the ring volume to control the volume of bell ring.

#### Screen button sound

You can set MID to release sound when you use the soft keyboards or tickle screen .

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Sound and Display.
4. Click screen button sound cooperate sound to choose.

#### Display Settings

##### Adjust screen brightness

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Sound and Display.
4. Scroll down the screen, click the brightness.
5. Popup Brightness Settings panel, drag to bright slider adjust bright degree.

6. Click.

Adjust screen standby time

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click Sound and Display.
4. Scroll down the screen, then click screen standby.
5. Popup Screen Standby Time Settings, choose standby time you want the standby time.

## 9.2 Safety and Position

Set to unlock pattern

You can set up their unlock pattern (equivalent to password) to protect your MID privacy .

1. On the homepage interface, press the menu button to popup setting menu.
  2. Click Settings.
  3. Click on safety and position.
  4. Click "Settings to unlock pattern".
  5. Popup unlock pattern plate, pattern has nine contacts. With vertical and horizontal , or diagonal directions to connect four points at least . Fingers left screen after completing. The system will record your setting pattern.
  6. Click "Continue".
  7. See hints, draw a screen unlock pattern, and click confirm.
- Skills: if you don't want unlocked pattern to display on the screen in unlock, please remove using visible pattern checkbox.



## 9.3 TF Card and storage

Check TF card and MID available storage space

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click the TF card and MID storage.

4. Check the space available of TF card.
5. Check MID inner storage space.

#### Safely remove TF card

Safe removal can effectively protect TF card , increase service life of the TF card .

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click the TF card and memory of equipment.
4. Click the uninstall TF card.
5. Popup TF card.

### **9.4 Date and time**

According to preset, the system will automatically use date, time zone and time provided by network.

Note: if you automatically use time provided by the internet, you cannot set the date, time and time. and manually adjust the date, time zone and time.

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Scroll down the screen, then click the date and time setting.
4. Remove automatically checkbox.
5. Click the choice, then select time zone of the list . Scroll down the list to see more time zone.
6. Click date-setting ,then click upward or downward button to adjust the date and year, month, click Settings when completed.
7. Click time-setting. then click upward or downward button to adjust the hour and minute, click AM or PM to change morning or afternoon .then click Settings when completed.
8. Select checkboxes which is using 24 hours format to switch system between 12-hour and 24-hour .The selected format will also applied to the time format of the clock .
9. Click to select date format, and then choose to display the date format on the MID.

### **9.5 Set the language**

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click on language and keyboard.

4. Click to select language area, then choose words of your need. Scroll down the list to see more of the language.

## **9.6 About the equipment**

Check MID status

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click on the equipment.
4. Click the state. You can see the battery state ,the network state, network types and accumulative used time etc.

System updates

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click on the equipment.
4. Click system updates.
5. No update if window displays the latest version.
6. Click download if window indicates a new version .( Please confirm to have TF card on the equipment ,system download update package to TF card.)

Check system version

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click on the equipment.
4. Can check MID model ,firmware version, internal version etc.

## **10 The installation of program**

### **10.1 Installation**

Install the third-party applications

You can get the third party on the Internet for Android system, and install in MID automatically .Copy applications into SD card ,then insert into MID.

1. Click the professional edition of eoeApp installer , program automatically scan all applications in TF card.
2. hold the application you needed to install .
3. popup install option, click install the apk.
4. according to the installation guide to complete, and then operate.

Note: search files with the apk suffix for these third party programs which based on system in the Internet

## **10.2 Uninstallation**

Uninstall applications

1. On the homepage interface, press the menu button to popup setting menu.
2. Click Settings.
3. Click "application".
4. Click "management applications", list all installed application list in the system .
5. Click "unloading".
6. Click "sure" to finish unloading.

Skills:program manager that systems installed can realize unloading easily.Open the program manager and click the uninstall option .it will list application list which system has been installed.

## **11.2 Restore Defulted settings**

When your MID appear gross mistake or to forget unlocked password etc, you can restore to original status by restoring factory Settings. Recovery factory setting will cause all data to lost includes delete downloaded applications and user setting, so remember to backup your data.

1. If MID is on the shutdown status, press long time “**BACK**” key without loosen your hand, and press “**POWER ON/OFF**” key into the upgrade menu by another hand.

If MID is on the power on status, press long time “**BACK**” key without loosen your hand, and press “**RESET**” key one time into the upgrade menu by another hand.

2. Enter system upgrades picture, picture is the triangle with an exclamation point and android robot picture.
3. when MID come out triangle symbols, then click the “**BACK**” button.
4. Then MID System will enter another upgrade menu, recovery mode, provide six options to choice.
5. The first option is: restart the system. The second option is: system upgrade. The third option is: wipe data/factory reset. The four option is: erase



- caching data. The five option is: replace the first screen logo. The six option is: replace the second screen logo.
6. Then press “MENU” key and “HOME” key to move upward or downward , press “BACK” button to execute.
  7. Choose wipe data/factory reset options to operate,.
  8. Into confirmation interface, choose” yes” to restore factory Settings, choose “no” to exit this confirmation screen.



## 12 Troubleshooting

### 1. MID first start is slow

After MID system upgrades, install preloaded application software takes about 2-3 minutes while first start. Then will be faster.

### 2. 3G net signal is weak

- Be sure MID internal aerial is unblocked
- No signal if in weak signal or failure receive places

### 3. Can not connect with WIFI

- Be sure the wireless router is work
- Be sure there is some distance between MID and wireless router, and no wall or other obstacles
- Be sure user name and password are correct

### 4. Feels a bit hot

It is normal when many programs are in use, or the screen is in most brightness, or in charge.

### 5. The system in abnormal

Installing the 3th party program will maybe result in failure operation, press RESET (nearby power connector) to reset the system.

6. Unable setting Email or login program
  - Be sure the network is normal, can connect with Internet
  - Be sure Email setting is appropriate
  - Be sure system time is the same as the local

## Appendix 1 Specifications

### ◆ Product parameters

Category	Content	Description	
Basic parameters	MID model	M60	
	CPU model	Teleships 8902	
	CPU frequency	800 MH	
	DDR-RAM	256MB	
	NAND FLASH	4 GB	
	Operating system	Google Android 2.3.3	
	Internet access	WiFi wireless networks	
	Standard cell	Li-ion polymer battery, 4400mAh / 3.7 V	
	Power adapter	Input voltage AC run at 100V-240V ,and output voltage DC 5V , current 3A, frequency 50-60Hz .	
TF card	Maximum support 32G		
Product appearance	Appearance style	Straight	
	Body color	Black	
	Main screen	7.0 inch touch TFT LCD , 800x480 resolution	
	Product size	192mm*121mm*11mm	
	Products weight	285g	
Applications	Video playing	Support AVI, RMVB,MKV and FLV etc format ,support 1080P high-definition format	

	Music playing	Built-in music player, support MP3, MIDI and WAV format
	Game	Support third-party programs
	Input method	pinyin
	Image browsing	Support the images of BMP, JPG, TIF, PNG, GIF format etc browsing
	OFFICE	Support office (word, excel to read ), support PDF browsing

#### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.