

Chapter 3. Setting

3.1 Introduction

To view available options for PDT's setting, tap **Start > Settings**. Then, there are three items inside **Settings**: “**Control Panel**”, “**Network and Dial-up**” and “**Taskbar and Start**”.

3.2 Control Panel

To view the **Control Panel** and settings you can modify by tapping **Start > Settings > Control Panel**

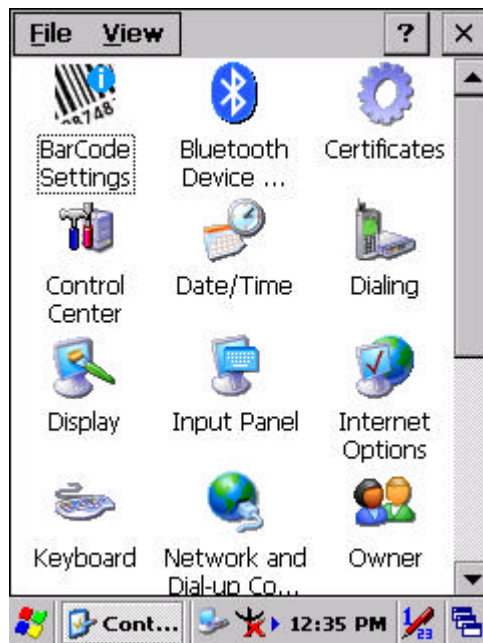


Figure 3-1 Control Panel

3.2.1 BarCode Setting

CAUTION : Please do not enter into any Barcode Application Program before settings completing this Barcode.



There are three Tabs for scanner configuration setting: “**Basic**” Tab, “**Code Configure**” Tab and “**Code ID**” Tab. In addition, there is “**BarCode Setup**” for the “Code Configure” Tab.

3.2.1.1 “Basic” Tab

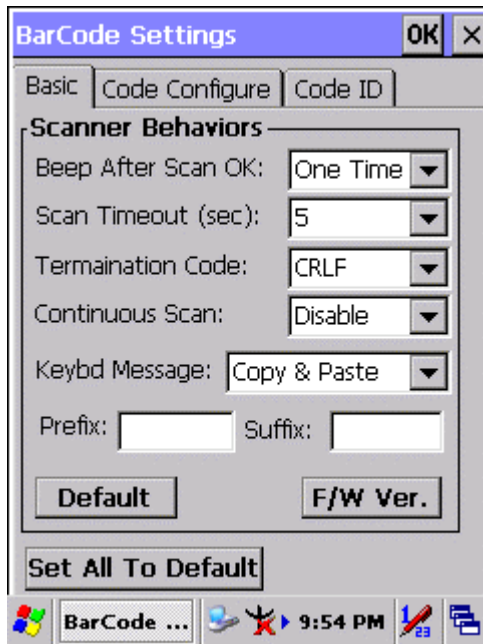


Figure 3-2 Basic Tab

Table 3-1 Basic Explaining

Field Name	Function Explaining	
Beep After Scan OK	None	After scanning the barcode, do not give out beep sound.
	<u>One Time</u>	After scanning the barcode, give out beep one time.

Field Name	Function Explaining	
	Two Times	After scanning the barcode, give out beep two times.
Scan Timeout (sec)	Select the scanning timeout duration (in seconds) from this pull-down list. <2 ~ 10 sec, <u>Default: 5</u> >	
Termination Code	None	After showing barcode, do not action.
	<u>CRLF</u>	After showing the barcode, jump to next row.
	Space	After showing the barcode, jump one unit.
	Tab	After showing the barcode, jump a section.
Continuous Scan	<u>Disable</u>	Disable this functionality.
	1 ~5 sec	Alternate second number of Continuous Scan.
Keybd Message	Select a method based upon the barcode scanning application you will use.	
	Type Writing	A unit continues a unit, fast showing barcode number.
	<u>Copy & Paste</u>	Once show barcode number
Prefix	Type the desired label prefix in this text box	
Suffix	Type the desired label suffix in this text box	
Default	Press “Default” button to reset all configuration setting of “Basic” Tab into default values.	
F/W ver.	Decoder firmware version.	
Set All To Default	Press “Set All To Default” button to reset all configuration setting of “Basic” Tab, “Code Configure” Tab, “Code ID” Tab and all barcode of “BarCode Setup” into default values.	