3.2.2.16 Code4

The barcode do not have setting.

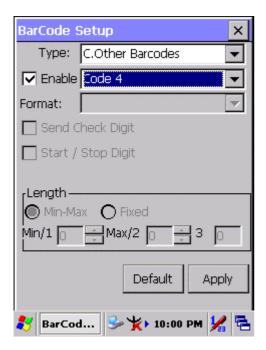


Figure 3-21 Code4

3.2.2.17 GTIN

The barcode do not have setting.

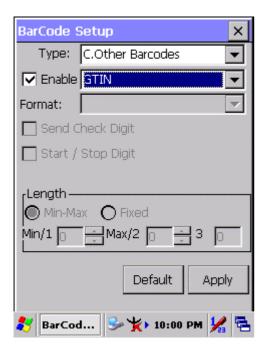


Figure 3-22 GTIN

3.2.2.18 Korea Code 3 of 5

The barcode do not have setting.

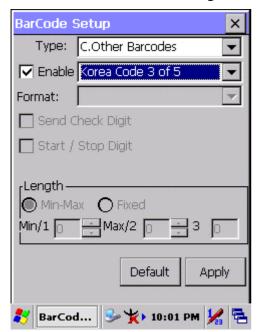


Figure 3-23 Korea Code 3 of 5

3.2.2.19 RSS

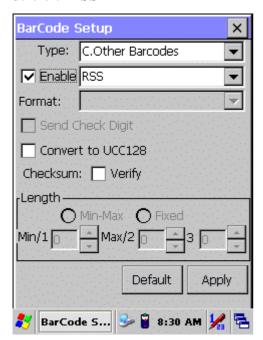


Figure 3-24 RSS

Table 3-19 **RSS Explaining**

Item	Explaining
☐ Convert to UCC128	The scanner will convert RSS to UCC128.
Checksum	Whether verify checksum by barcode.

3.2.3 Bluetooth Device Properties

Table 3-20 Bluetooth Device Properties

ICON	ITEM & FUNCTION	
	• "Scan Device" Tab (Figure 3-25) :	
*	✓ Tap the Scan Device button to initiate a scan for Bluetooth	
	hardware. The Bluetooth manager lists the Bluetooth devices	
	that it finds, see Figure 3-26. If Bluetooth hardware is not found	
	the Bluetooth Hardware Error window appears, see Figure	
	3-27 . Table 3-21 described the Bluetooth Icons.	
	✓ Double tap the device to connect to on the device list. The	
	Bluetooth Manager Authentication window appears. Tap No to	
	connect to the device without authentication, or tap Yes to	
	authenticate the device before connecting. (Figure 3-28)	
	✓ If the Yes button was selected in the Bluetooth Manager	
	Authentication window, the enter PIN windows appears. Enter a	
	PIN (between 1 and 16 characters) in the Enter PIN: text box,	
	and tap OK . The mobile computer sends the PIN request to the	
	device for bonding. (Figure 3-29)	
	✓ When prompted, the same PIN must be entered on the other	
	device. When the PIN is entered correctly on the other device,	
	the bonded icon appears on the device list. (Figure 3-30)	

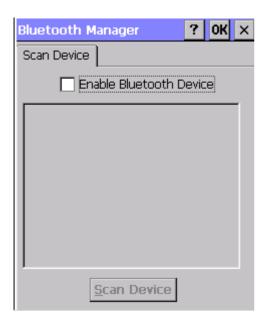


Figure 3-25 Bluetooth Manager Windows

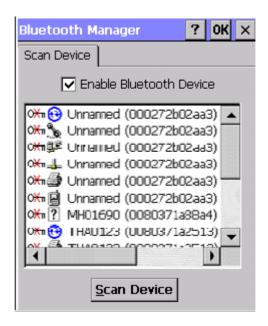


Figure 3-26 Bluetooth Manager Windows



Figure 3-27 Bluetooth Error Windows



Figure 3-28 Bluetooth Manager Windows



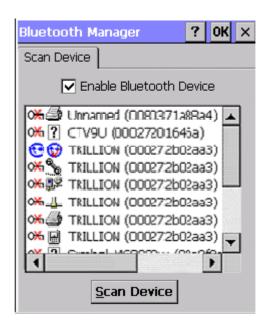


Figure 3-29 Bluetooth Enter PIN Windows

Figure 3-30 Bluetooth Manager Windows

Note: If the device to which the mobile computer is bonding does not appear in the list, ensure it is turned on, in discoverable mode, and within range (30 feet / 10 meters) of the mobile computer.

Table 3-21 Bluetooth Icon

	Icon	Description
?	Unknown device icon	Device is not defined
O X n	Locked icon	Device is locked and cannot be bonded to.
0-11	Not locked icon	Device is not locked and can be bonded to.
0	Bluetooth device icon	Bluetooth device
₩	Bonded device icon	Bonded Bluetooth device

	Icon	Description
	Mobile device icon	Device is a mobile device
9	Phone icon	Device is a phone.
4	Printer icon	Device is a printer
9 \$	Network icon	Device is a network.
4	Linked icon	Device is linked.

3.2.4 Certificates

Certificates are used by some applications for establishing trust and for secure communications.

Certificates are signed and issued by certificate authorities and are valid for a prescribed period of time. Windows CE manages multiple certificate stores.

Table 3-22 **Certificates**

ICON	ITEM & FUNCTION	
**	• "Store" Tab (Figure 3-31) :	
Certificates	 In the Stores tab, select the certificate store you wish to view or modify from the drop-down list (Figure 3-32). The "Trusted Authorities" store lists the top-level certificates for authorities you trust. (Figure 3-33, Figure 3-34) The "My Certificates" store contains your personal certificates, which you use to identify yourself. Intermediate certificate authorities that help establish a chain of 	
	trust are stored in the "Other Authorities" store. • "Store" Tab:	
	 ✓ To add a certificate or associated private key to the selected store, select "Import" (Figure 3-35). ✓ To view more details of the selected certificate, such as the expanded name or expiration date, choose "View". ✓ To delete the selected certificate from the store, choose "Remove". 	



Figure 3-31 Certificates



Figure 3-33 Certificates



Figure 3-35 **Certificates**



Figure 3-32 Certificates



Figure 3-34 Certificates

3.2.5 Control Center

The Control Center includes four AP, listed the following



Figure 3-36 Control Center

3.2.5.1 Information

Table 3-23 Information

ICON	ITEM & FUNCTION	
-	• "Information" Tab :	
other	✓ Provide Software version, MAC address, Bluetooth ID, Serial	
	No. and Configuration No.	

3.2.5.2 Brightness

Table 3-24 **Brightness**

ICON	I	TEM & FUNCTION
\	LCD Brightness Tune the LCD brightness by tapping right-arrow & left-arrow. Can also tune the LCD brightness by pressing right-direction key or left-direction key of keypad. Amounts 7 steps: Every step have corresponding picture of self.	
	1. 2. P	3. 4. Q
	Enable Keypad Brightness	Open keypad brightness or not.
	Backlight Timeout Save battery life by autor used.	matically turning off the backlight when not
	Battery Power, turn off backlight after	The table must disable when its item is not marked.
		The table has 15 seconds, 30 seconds, 1 minute, 2 minutes and 5 minutes.
	☐ AC Power, turn off backlight after	The table must disable when its item is not marked.
		The table has 15 seconds, 30 seconds, 1 minute, 2 minutes and 5 minutes.
	Dim backlight after 20 seconds of idleness.	Save battery life functionally of idleness mode, open it or not.