 


# PTP1 Quick Guide

Thank you for purchasing PTP1. This manual explains basic operations. Please see the PTP1 User's Guide for more details.

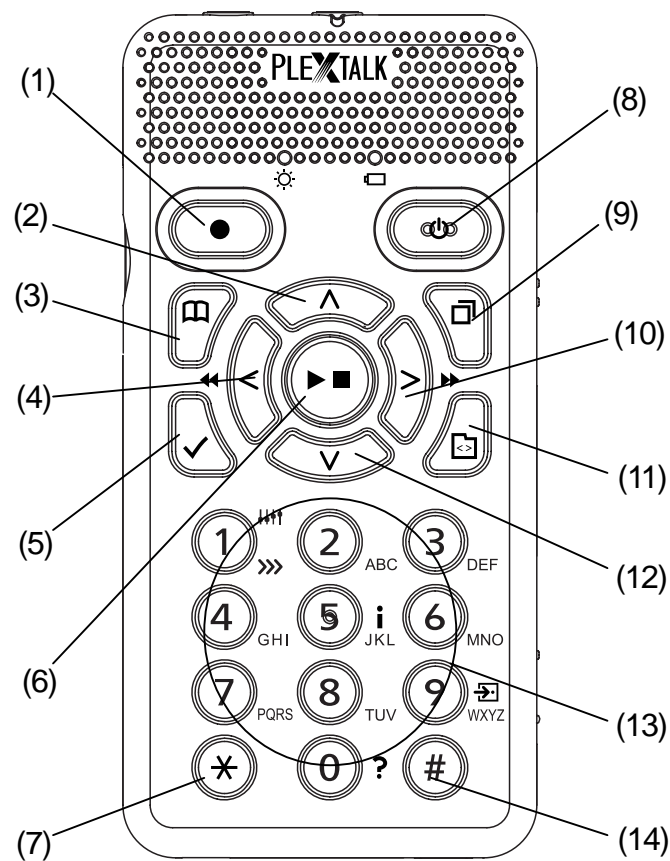

## Name of keys

- |                   |                 |
|-------------------|-----------------|
| (1) Recording key | (8) Power key   |
| (2) Up key        | (9) Menu key    |
| (3) Go to key     | (10) Right key  |
| (4) Left key      | (11) Title key  |
| (5) Bookmark key  | (12) Down key   |
| (6) Play/Stop key | (13) Number key |
| (7) * key         | (14) # key      |


## Setting up to get started

Take out from box and prepare to use.  
Prepare player, battery and power adapter.


Insert battery into player, and then plug in power adapter.

### Procedure



Turn player over. Make sure two small projections are up. Push square button which is bottom of player and put finger of another hand on two lines which are middle of player, then press by both hands and slide cover toward bottom side. Remove the cover completely.

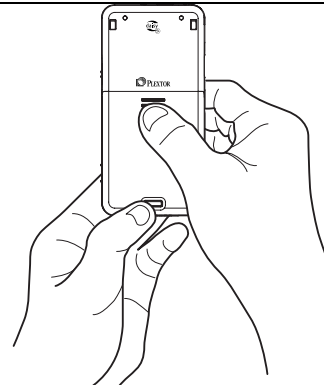


Have battery by left hand and make sure two projections are right side of battery and a small projection is bottom of left side.

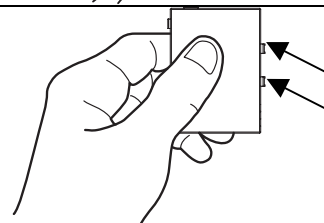


Put battery in player from right side. If you are aiming to insert battery from left side, battery hits a part of player and battery can not be inserted.

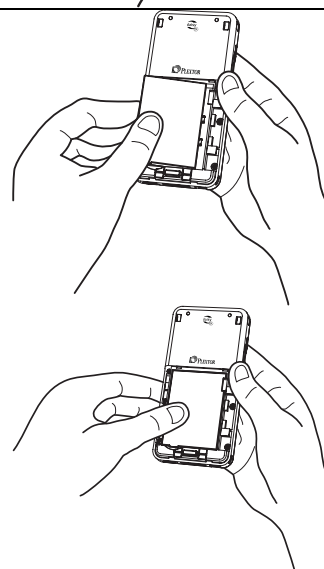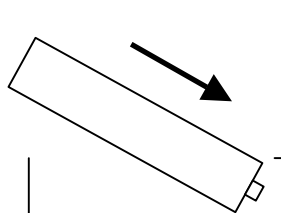

Close battery cover. Place cover about 5mm lower than closed position. Slide cover up. Make sure cover is automatically locked.

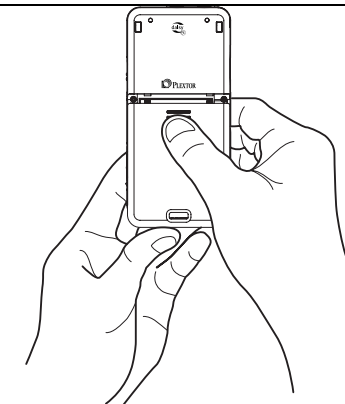

Turn player over, front side becomes up. Plug power adapter into connection which is located left of bottom side.

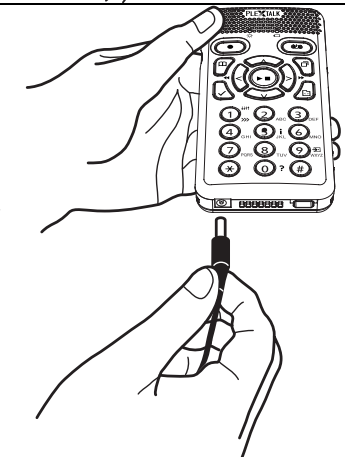


To remove battery, please refer to User's manual.

## Insert/Remove SD card


### <Insert SD card>

Insert SD card into card slot. Front of SD card has smooth surface and back has some slits at edge. Have SD card in hand and make sure cut corner is right bottom. Insert SD card to card slot which is located left side and push it completely.

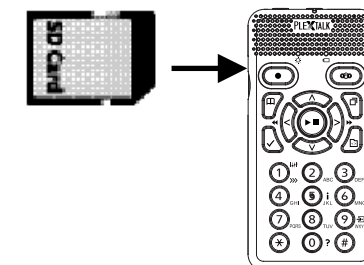

### <Remove SD card>

If SD card is pushed, card comes out a few millimeters. Pick it up and remove from player.

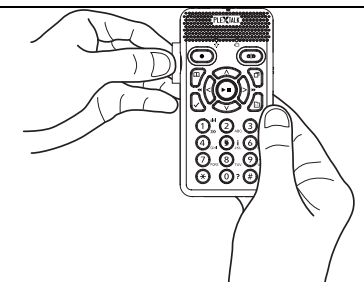

## Power ON/OFF

To turn on/off player, press and hold [Power key].

Procedure	
1	Press and hold [Power key] to turn on. (hold key 0.5 second or longer)
2	Press and hold [Power key] again to turn off. (hold key 1.5 seconds or longer)*

\*If key is released shorter than 1.5 seconds, it works as sleep timer. Please hold the key.

## Playback

Playback DAISY book, audio file, or text file in SD card. All contents are stored in SD card in this case.

Procedure	
1	Insert SD card and turn on.
2	Press [Title key] several times until "SD" is announced.
3	Select DAISY book, audio file or text file pressing [Right key] or [Left key].
4	Press [Play/Stop key] to start playback.
5	Press [Play/Stop key] again to stop playback.
6	Press and hold [Power key] to turn off.

## Recording

Record by built-in microphone.

Procedure	
1	Confirm SD card is inserted.
2	Press [Recording key]. Player becomes test recording mode.
3	Press [Recording key] to start recording.
4	Press [Recording key] to suspend recording.
5	Press [Recording key] again to resume recording.
6	Press [Play/Stop key] to stop recording.

## Moving

Move by fast forward/rewind

Procedure	
1	Select DAISY book.
2	Press [Play/Stop key] to start playback.
3	Press and hold [Right key] to fast forward or press and hold [Left key] to rewind. Player announces 5 seconds, 10 seconds, 20 seconds, 30 seconds, 1 minute, 5 minutes, 10 minutes, 20 minutes and so on. If the key is released earlier than 10 minutes, playback starts at the place key is released. If the key is released longer than 10 minutes, FF/REW continues and press [Play/Stop key] to stop.

Move by Up/Down keys

Procedure	
1	Select DAISY book.
2	Press [Play/Stop key] to start playback.
3	Select navigation level by using up/down key.
4	Press [Right key] to forward or [Left key] to back.

\*Navigation level of DAISY book is;

"Section (Level 1 to 6), group, page, phrase, bookmark"

Audio file;

"Album, track, bookmark"

Text file;

"Level(HTML only), Page, paragraph, line, sentence, word, character, bookmark"

Direct jump to page/heading

Example: Moving to page 20.


Procedure	
1	Select DAISY book.
2	Press [Go to key]*
3	Input page number by [2],[0] keys.
4	Press [Play/stop key] or [Down key] to jump page 20. Playback starts automatically.

\*To move to heading, press [Go to key] twice.


## Connect USB devices

To playback contents in USB flash or USB devices, use USB cable (short). Turn off player. Plug in smaller connection to player and plug in USB memory/devices to larger connection of USB cable. And then turn on player. Please confirm if "USB" announced when selecting media by [Title key].

<Connect USB flash>

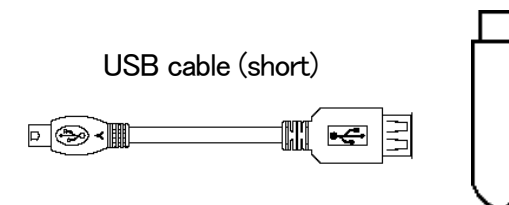


<Connect USB devices>

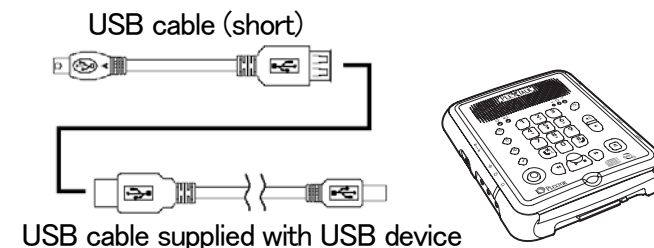

## Connect computer

Use USB cable (long) to connect computer. Data can be transferred from computer.

Turn off player and insert SD card, connect small connection of USB cable to player and connect larger connection to computer. And then turn on player. Data can be transferred from computer.

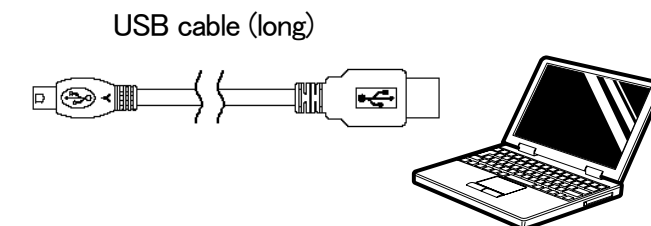

## IMPORTANT

### FCC NOTICE

---

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### IC NOTICE

---

This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Caution:

---

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Safety precautions

---

Incorrect use can result in serious injury or death, due to fire or electrical shock. Be sure to observe the following precautions.

#### ! DANGER

This symbol denotes that death or serious injury may directly result from improper use.

#### ! WARNING

This symbol denotes that death or serious injury may result from improper use.

#### ! CAUTION

This symbol denotes that bodily injury or damage to property may result from improper use.

(Emergency)

#### ! DANGER

If the equipment smokes or gives off a strange smell, immediately turn off the power, disconnect the power plug from the power outlet, remove the battery and contact your dealer. Be careful burn injury because the equipment and battery may still be high-temperature.

(Battery)

#### ! WARNING

If the battery pack leaks, immediately remove it from power outlet and fire, and contact your dealer. The vapors from leaking battery pack fluid may ignite or explode. If battery fluid gets into your eyes, wash them with water and consult a physician immediately. If the fluid of battery contacts your skin or clothes, immediately flush the contacted area thoroughly with clean water.

#### ! WARNING

Do not throw the equipment or battery pack into the fire. Do not put the equipment or battery pack into the microwave ovens or other heating appliance. Otherwise, it may cause fire, electric shock or malfunction.

#### ! WARNING

Do not give hard shock to it or drop it from high place. Otherwise, it may cause fire, electric shock or malfunction.

#### ! WARNING

If not using extended period, disconnect the power plug from the power outlet and remove the battery. Otherwise, it may cause the battery pack to leak.

(Do not insert foreign objects)

#### ! WARNING

Do not insert liquids or foreign objects. Do not allow liquids or foreign objects to come in contact with the PLEXTALK. Otherwise, it may cause fire, electric shock or malfunction. If liquids or foreign object should enter the PLEXTALK, turn off the power immediately, disconnect the power plug from the power outlet, remove the battery and contact your dealer.

Especially be careful the followings.

- Do not use in a bath room, in a rain or under moist conditions.
- Do not spill liquids into the equipment.
- When you clean the equipment, do not spill or spray the detergent liquid.
- Do not put a metal piece into the inside of SD card slot or battery housing.
- Do not use the SD card which is stuck with labels or stickers.

(Power)

#### ! WARNING

Only use the specified battery, specified AC adaptor and specified power cable that was supplied with your PLEXTALK. Otherwise, it may cause fire, electric shock or malfunction.

#### ! WARNING

Do not connect with the unspecified power source and voltage. Specification is AC100-240V 50/60Hz. Otherwise, it may cause fire, electric shock or malfunction.

#### ! WARNING

Do not insert or remove the power plug with wet hands. Otherwise electrical shock may occur.

#### ! WARNING

Do not damage the power cable. Do not remove the power cable with pulling the adapter cable or do not place heavy object on the adapter cable and power cable. If the cable get damaged, it may cause fire or electric shock.

#### ! WARNING

Make sure that the PLEXTALK, mains adapter and mains plug are securely connected. Otherwise, it may cause fire or electric shock.



**! WARNING**

Wipe off any dust that accumulates on the power plug regularly. When wiping, disconnect the power plug from the power outlet. Otherwise, it may cause fire or electric shock.

**! WARNING**

If thunder is coming, disconnect the power plug from the power outlet. When the lightning strikes, it may cause fire or electric shock.

(Repair)

**! WARNING**

Don't disassemble, repair or remodel the equipment. Otherwise, it may cause fire, electric shock or malfunction. Ask your dealer for the repair.

**! WARNING**

If the equipment broken down, turn off the power immediately and contact your dealer. It may cause fire or electric shock if you continue to use.

(Environment)

**! WARNING**

Do not use, store, or leave the equipment in high-temperature environment. Otherwise, it may cause fire, electric shock or malfunction.

Do not leave in areas under strong direct sunlight. Do not leave in sun-heated vehicle. Do not leave in hot areas such as near fire or appliance which emits high heat.

**! CAUTION**

Don't use the equipment in extremely humid, dusty or hot areas. Otherwise, it may cause malfunction.

(Electric wave / Electromagnetic wave)

**! WARNING**

Do not use the PLEXTALK near wearers of pacemaker.

**! WARNING**

If the medical facility or airplane has specified zones where use or possession of signals of mobile devices is prohibited, do not use the PLEXTALK.

**! CAUTION**

Do not use the PLEXTALK near machinery occurring with a strong electromagnetic wave.

(Adverse effect on human body)

**! CAUTION**

When you use the equipment for a long time or while you charge the equipment, the equipment might rise in temperature. Do not keep the equipment in touch with the same place of the skin for a long time because there is fear of the low temperature burn.

**! CAUTION**

The USB cable terminal has sharp edge. Be careful when you touch the sharp edge. It may cause injury.

(Cleaning)

**! WARNING**

Before cleaning, turn off the power and then remove the AC adaptor and the USB cable from the PLEXTALK. Otherwise, it may cause fire, electric shock or malfunction

**! WARNING**

Do not spray solvent directly onto the PLEXTALK. Otherwise, it may cause fire, electric shock or malfunction

**! CAUTION**

Wipe dust and dirt from the PLEXTALK with a soft cloth dampened slightly with a diluted neutral detergent, then wipe dry with a cloth. If you wipe the equipment with alcohol, paint thinner or benzine, the surface of the equipment may be worn or torn.

(Other malfunction factors)

**! CAUTION**

The PLEXTALK's SD card slot is only compatible with SD or SDHC cards. Inserting other memory card will cause malfunction.

**! CAUTION**

Insert the SD card in the right direction. Do not use excessive force. Otherwise, it may cause malfunction.

(Disposal)

**! WARNING**

Dispose the equipment and the battery pack following the disposal method which local government established.

### CE Warning

1. CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
2. Due to the used enclosure material, the product shall only be connected to a USB interface of version 2.0 or higher. The connection to so called power USB is prohibited.
3. Power is so low that no RF exposure calculation is needed.
4. The charger type is S012WV0500180, output voltage/current is 5Vdc/1.8A. The plug considered as disconnect device of adaptor.
5. The maximum operating ambient temperature of the equipment declared by the manufacturer is 0~50 °C.
6. When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with a temperature that ranges from 0~25°C.
7. Excessive sound pressure from earphones and headphones can cause hearing loss.



8. Hereby, Shinano Kenshi Co., Ltd. Corporation declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

**CE 0700**